

GROUP 70

COMPONENT
LOCATIONS

 
 
CONTENTS

FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR	70-2	RELAY	70-8
INSPECTION TERMINAL	70-3	SENSOR	70-9
GROUNDING	70-4	CONTROL UNIT	70-15
GROUNDING CABLE	70-7	SOLENOID AND SOLENOID VALVE	70-17
		OTHER DEVICES	70-19





FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR


M1701000100409

NAME	SYMBOL	NAME	SYMBOL
Fuses No.1 to 21 (Passenger compartment)	C	Fusible links No.1 to 5	B
Fuses No.6 to 25 (Engine compartment)	B	IOD or storage connector	B
Fusible link No.26	A		

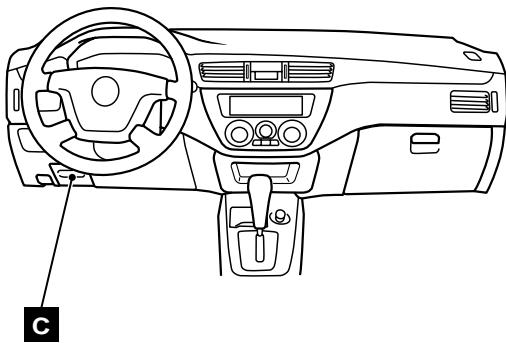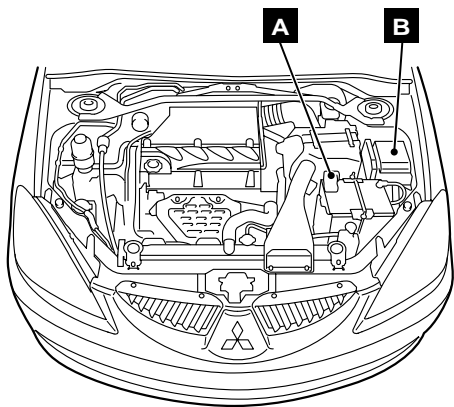

AC306547AB

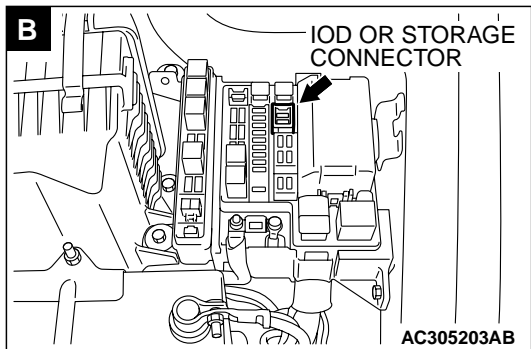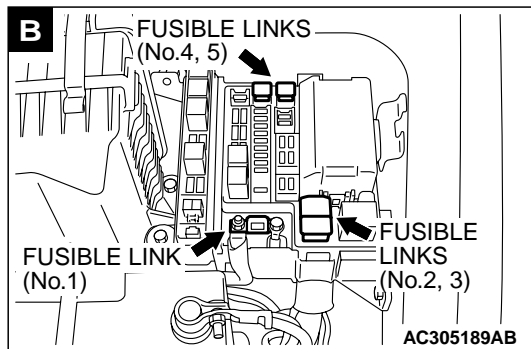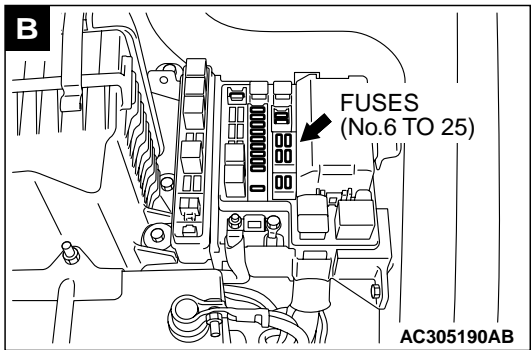   
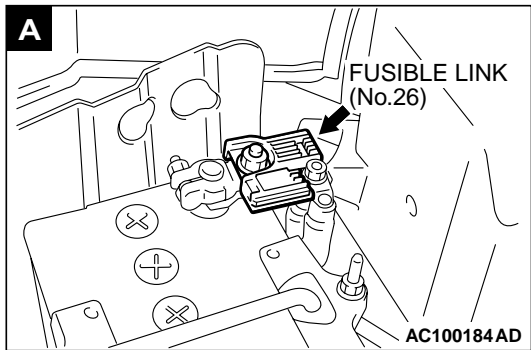 


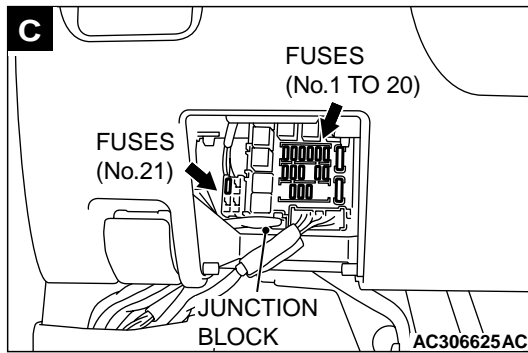 



INSPECTION TERMINAL

M1701000200376

NAME	SYMBOL	NAME	SYMBOL
Data link connector	B	Engine speed detection connector	A

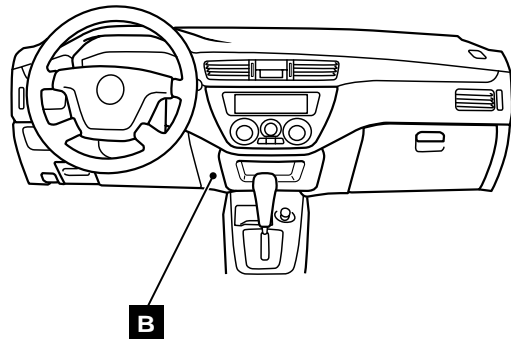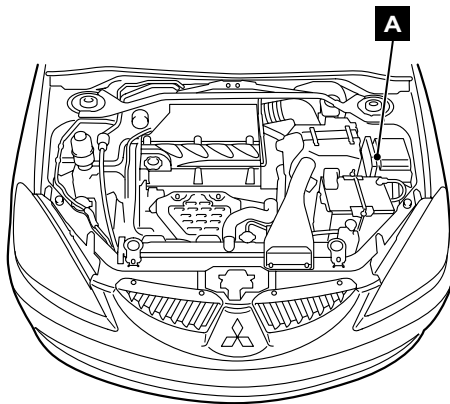  


AC306547AC

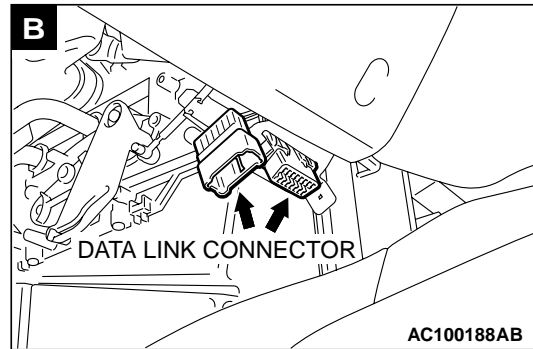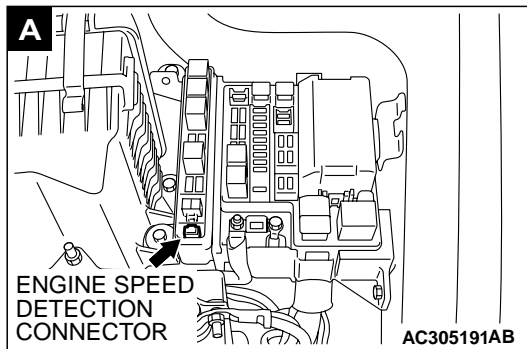  





GROUNDING








 
M1701000300395





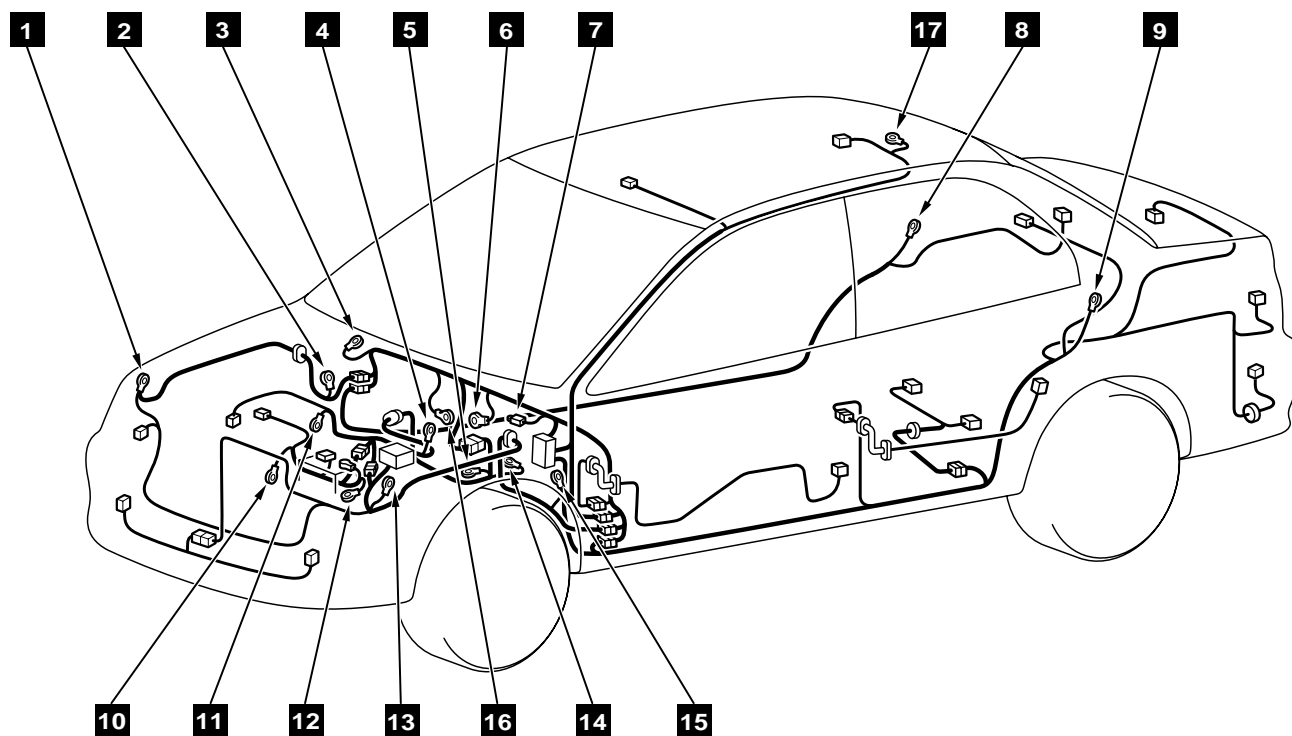


AC306137AC

                 NOTE: NUMBERS 1 TO 17 CORRESPOND TO THE BODY GROUND POINT NUMBERS IN CIRCUIT DIAGRAMS.

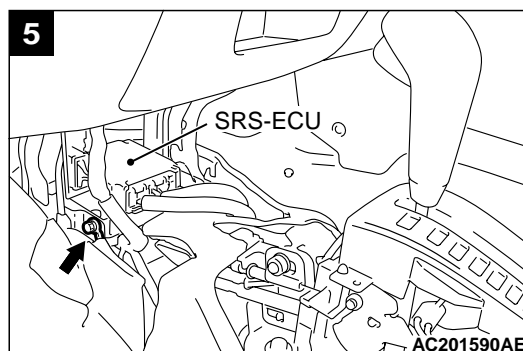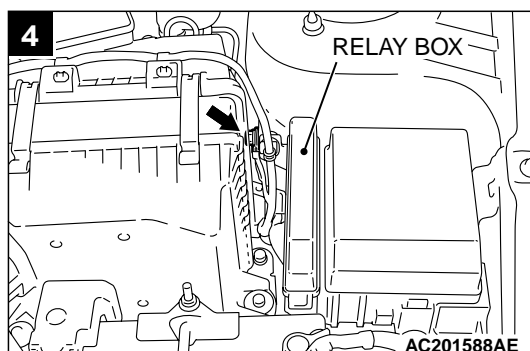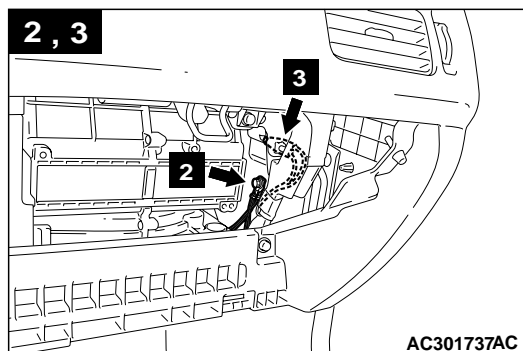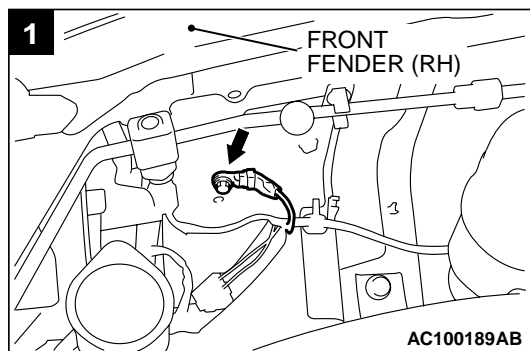


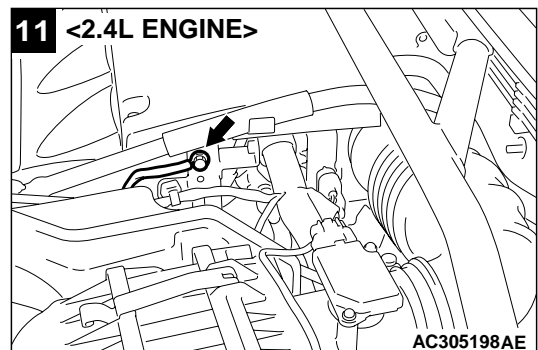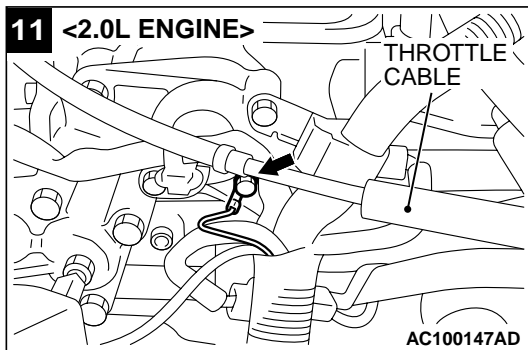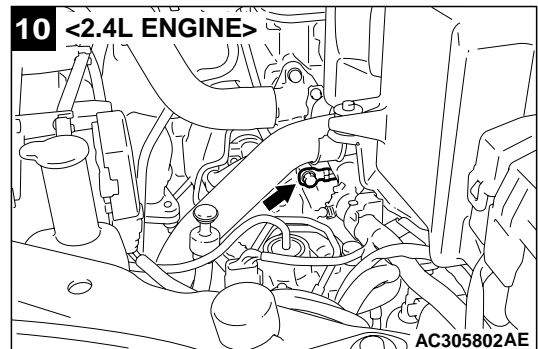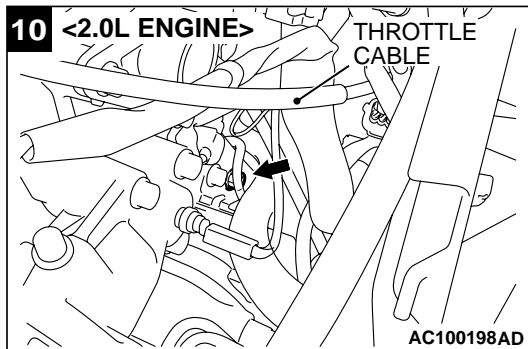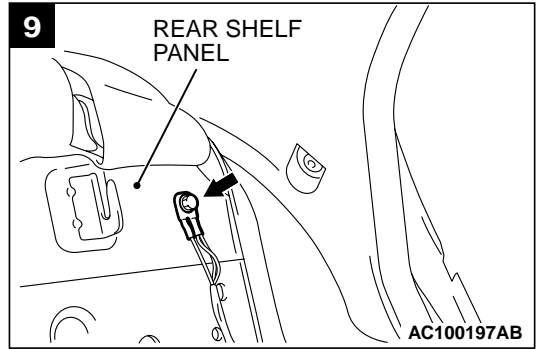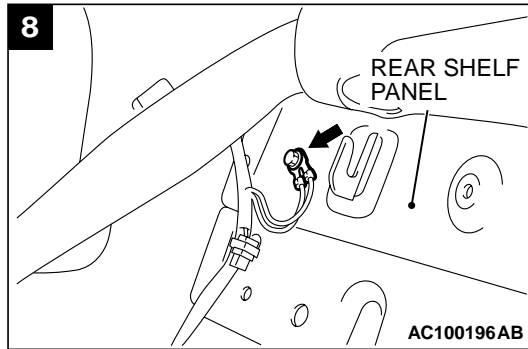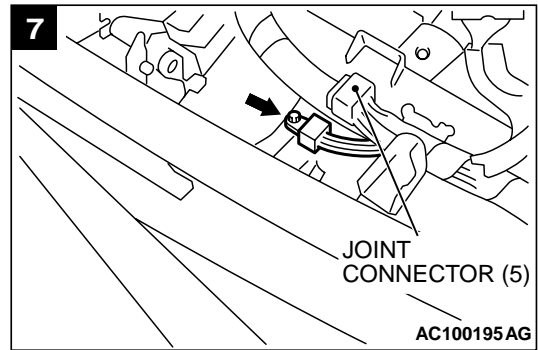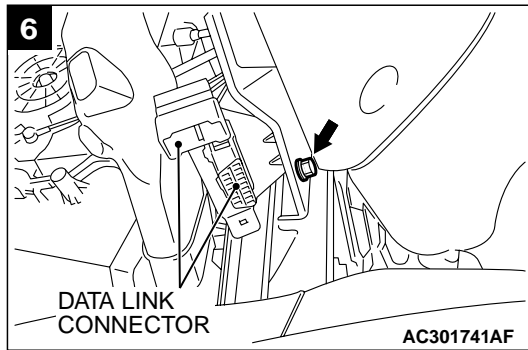

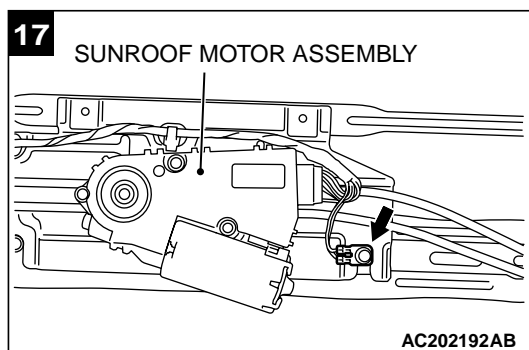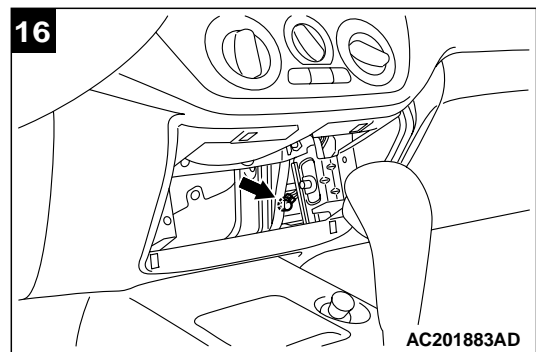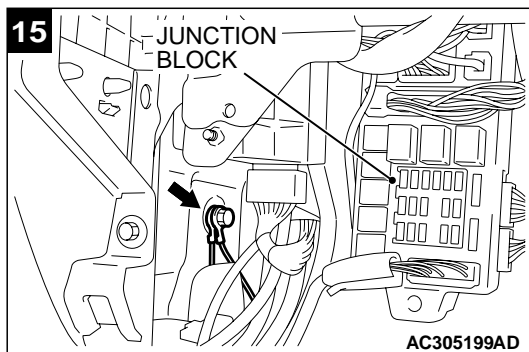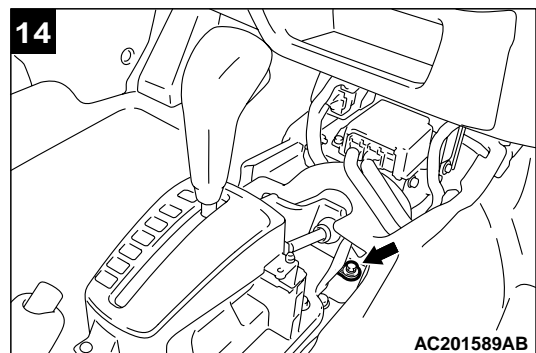
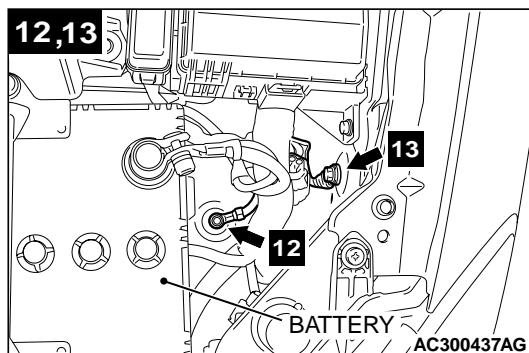


GROUNDING CABLE

 
M1701001000342

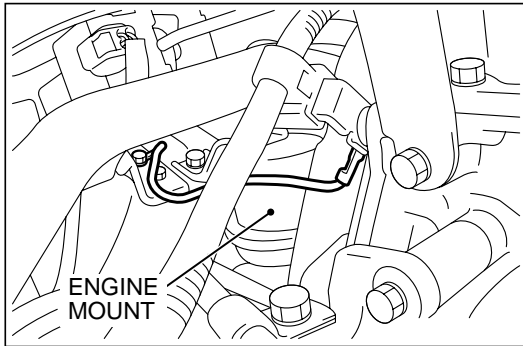

<2.0L ENGINE>

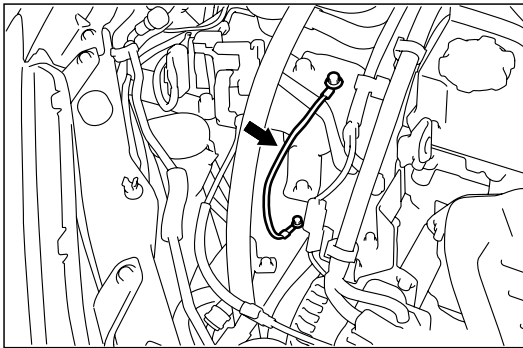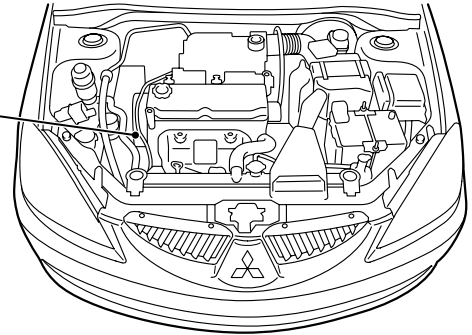  



<2.4L ENGINE>

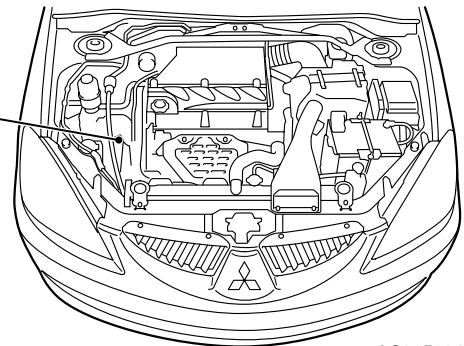 


RELAY

M1701000400400


NAME	SYMBOL	NAME	SYMBOL
ABS warning light relay	B	Fuel pump relay (1)	B
A/C compressor clutch relay	A	Fuel pump relay (2)	B
A/T control relay	A	Horn relay	A
Blower relay	B	MFI relay	A
Rear window defogger relay	B	Power window relay	B
Fan control relay	A	Starter relay <M/T>	A
Fog light relay	A	Throttle actuator control motor relay	A

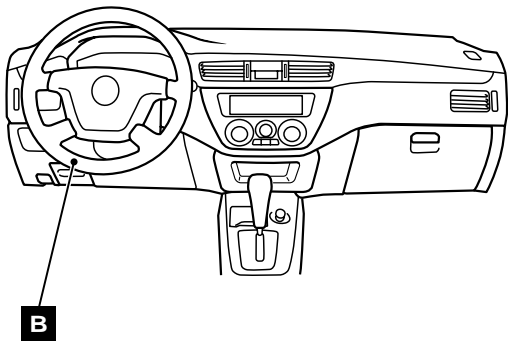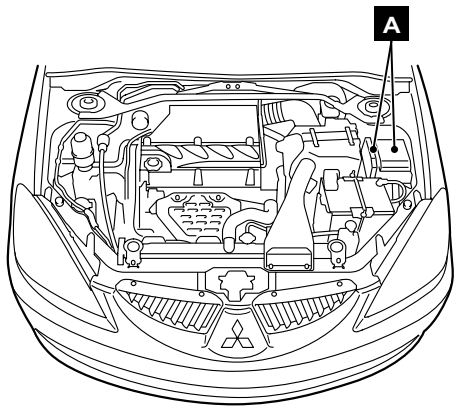  

AC306547AD

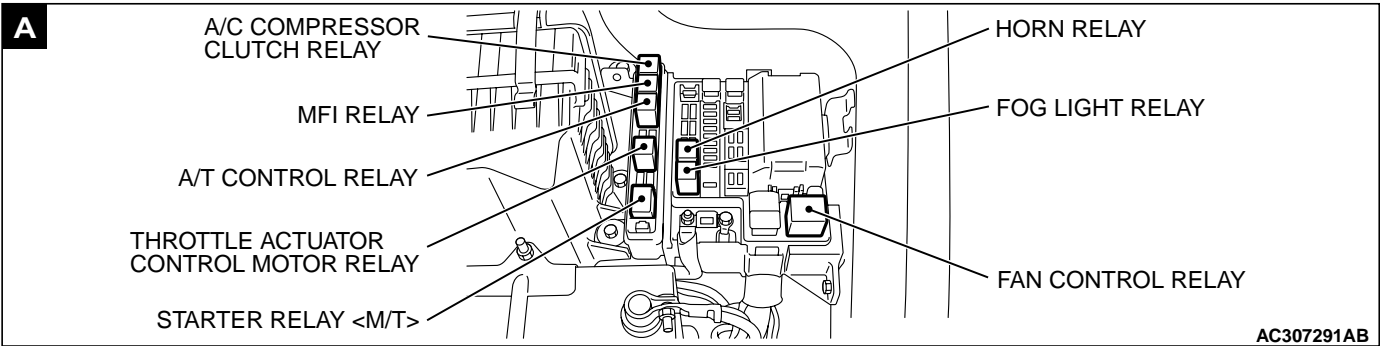 

AC307291AB


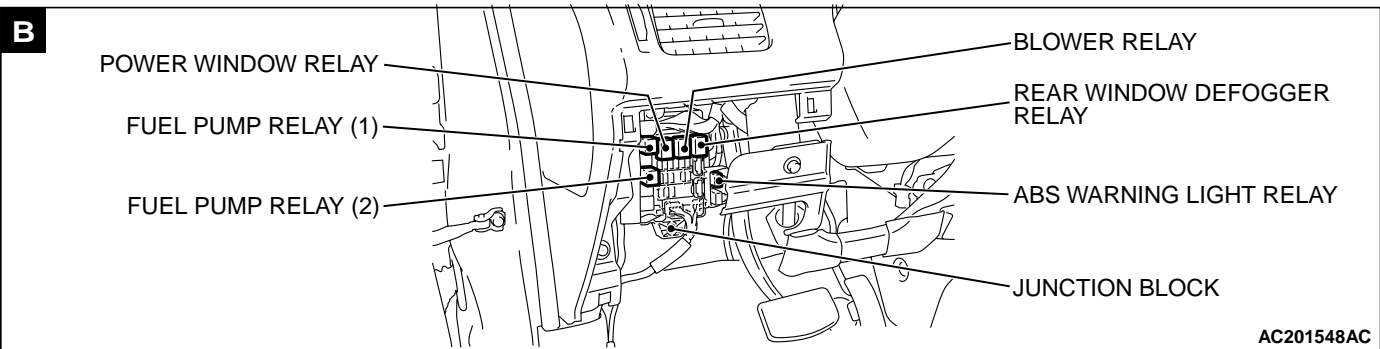 


AC201548AC


SENSOR

M1701000600448

NAME	SYMBOL	NAME	SYMBOL
Accelerator pedal position sensor <2.4L Engine>	E	Input shaft speed sensor <A/T>	L
Air thermo sensor	M	Knock sensor <2.0L Engine>	G
A/T control solenoid valve assembly (Incorporating transmission fluid temperature sensor)	K	Knock sensor <2.4L Engine>	R
Camshaft position sensor <2.0L Engine>	J	Manifold absolute pressure sensor	A
Camshaft position sensor <2.4L Engine>	I	Mass air flow sensor <2.4L Engine>	D
Crankshaft position sensor	F	Output shaft speed sensor <A/T>	L
Engine coolant temperature sensor	I	Side impact sensor <Side air bag>	T
Fuel level sensor (with temperature sensor)	S	Throttle position sensor	B
Fuel tank differential pressure sensor	S	Vehicle speed sensor <M/T>	C
Heated oxygen sensor (front) <2.0L Engine>	H	Volume air flow sensor <2.0L Engine>	D
Heated oxygen sensor (front) <2.4L Engine>	O	Wheel speed sensor (front) <ABS>	N
Heated oxygen sensor (rear) <2.0L Engine>	O	Wheel speed sensor (rear) <ABS>	Q
Heated oxygen sensor (rear) <2.4L Engine>	P		



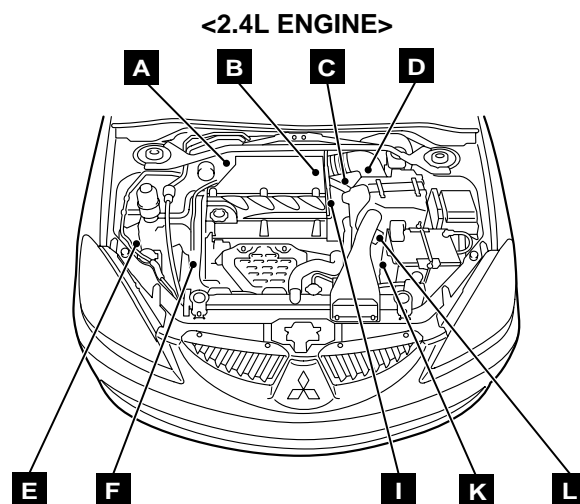 
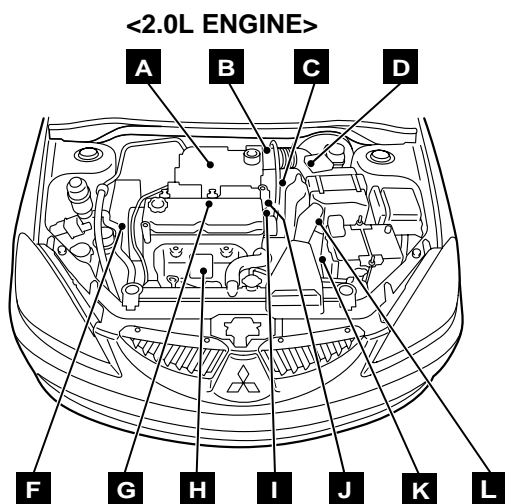 












AC307813AB






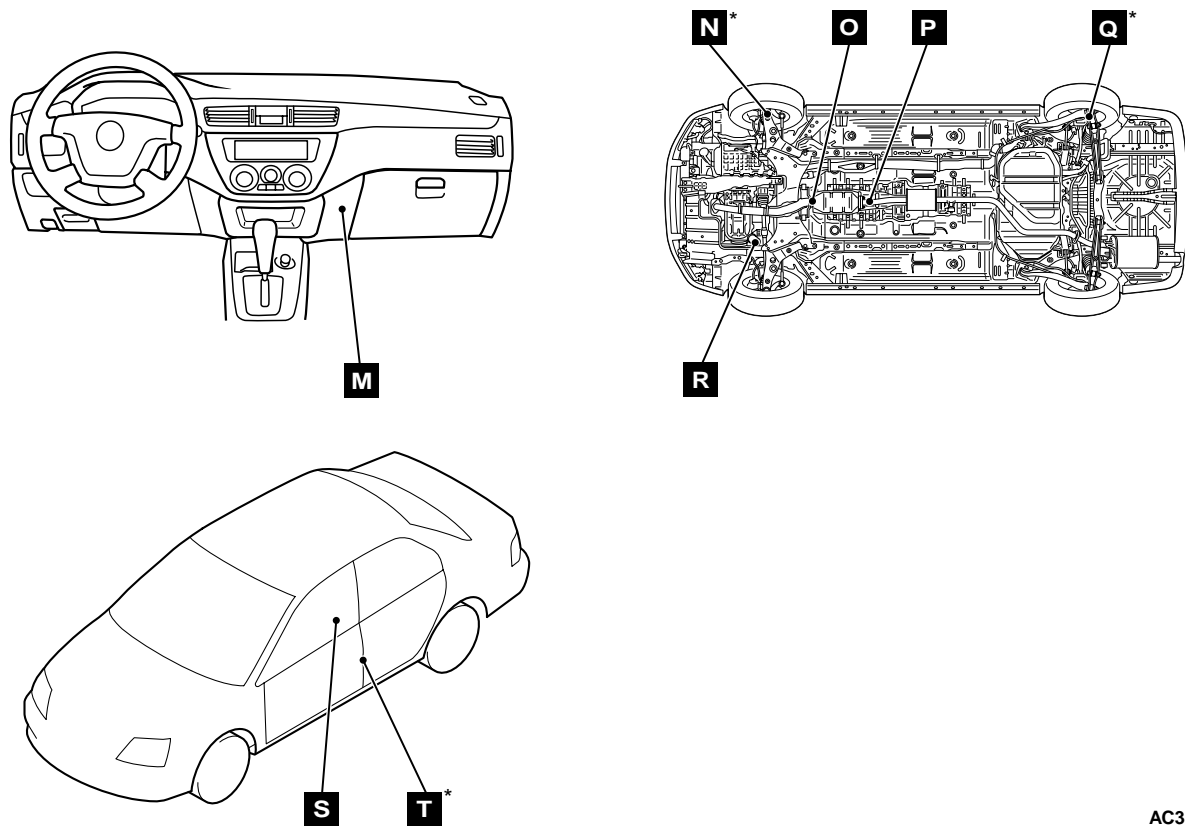 


AC307814AB

                   
 
NOTE: THE * SYMBOLS INDICATE ALSO EQUIPPED AT THE RIGHT SIDE.

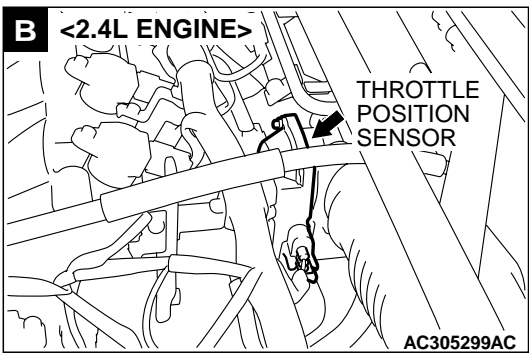
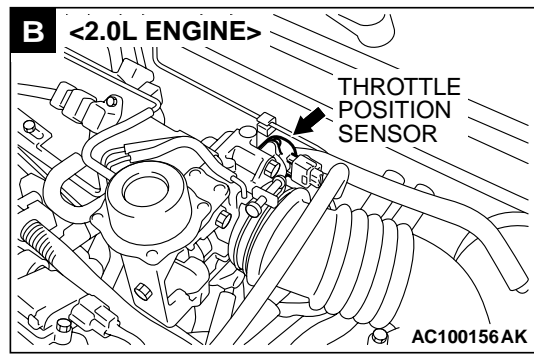
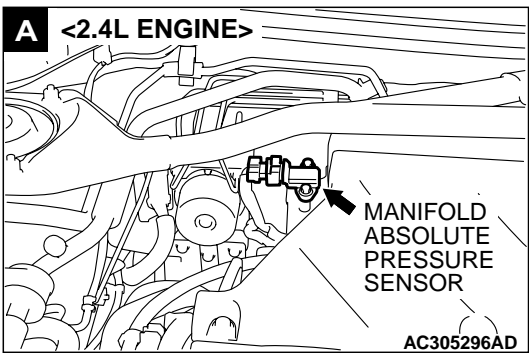
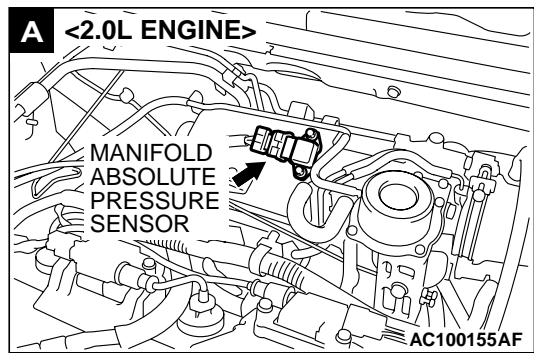


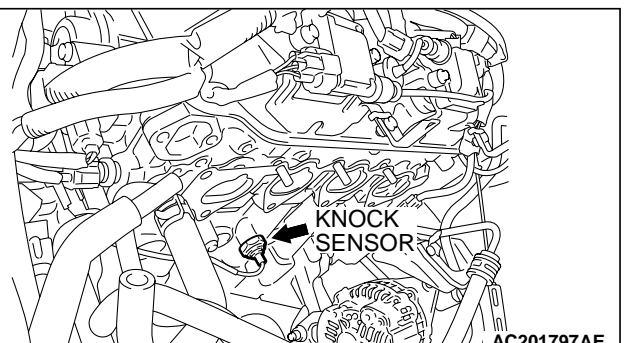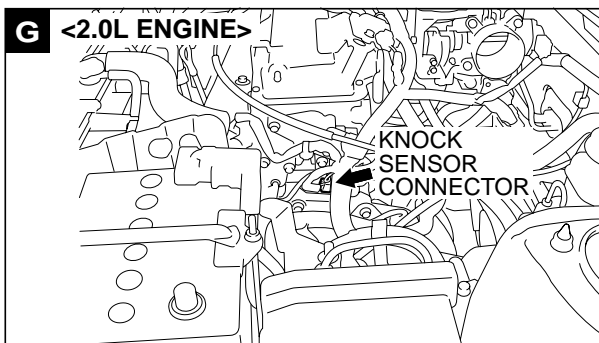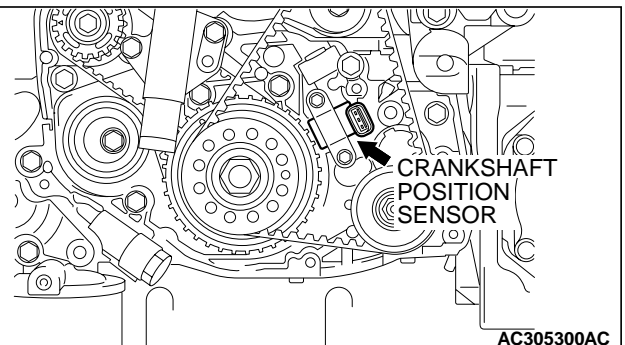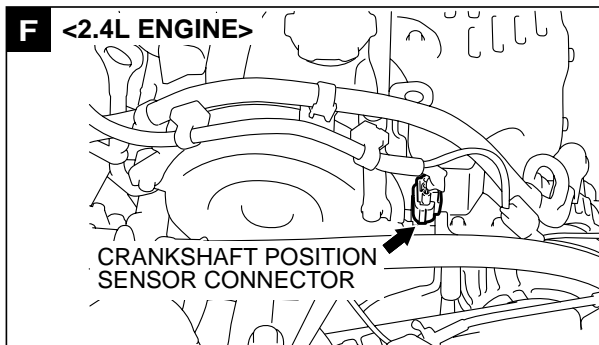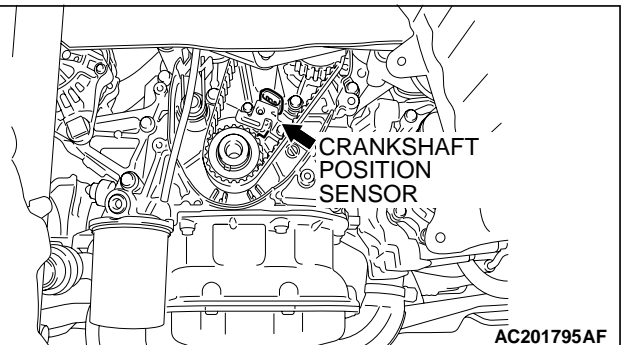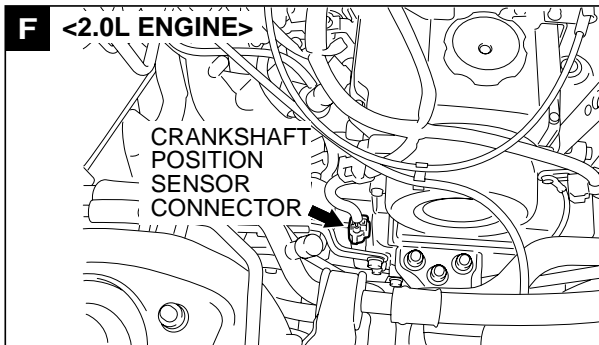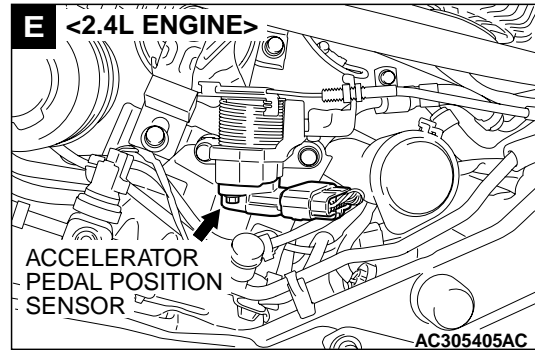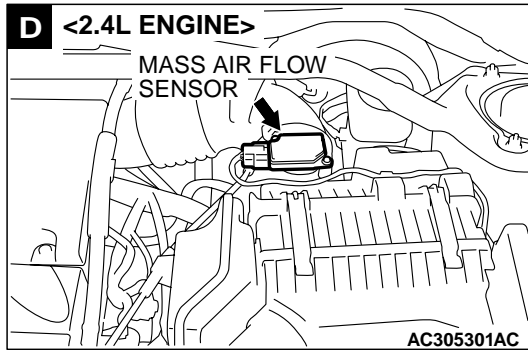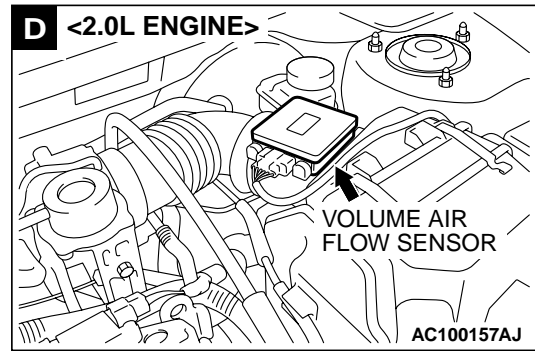
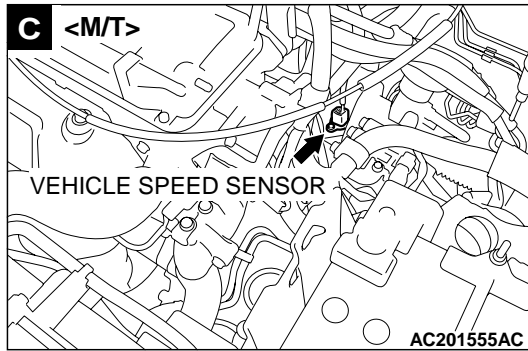


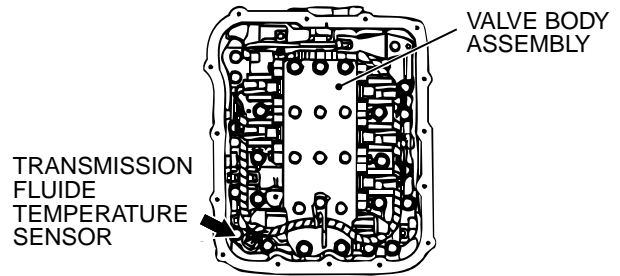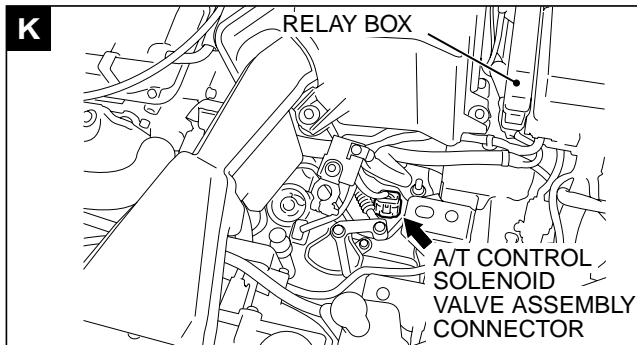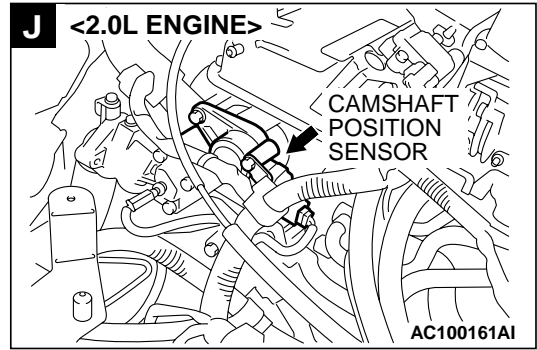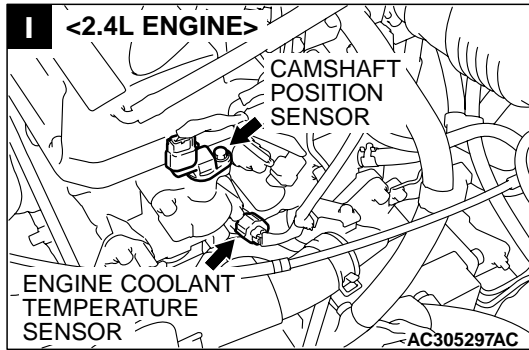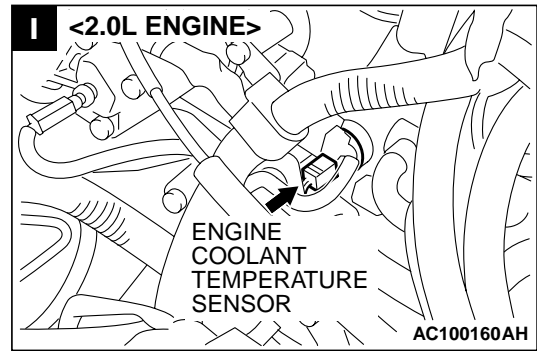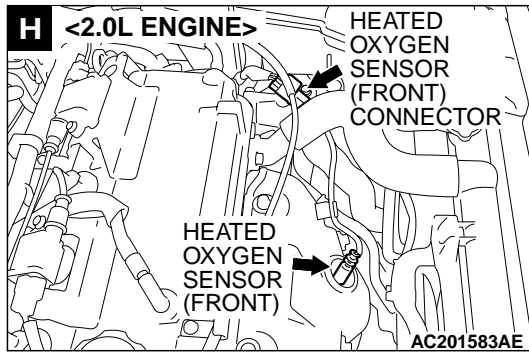

AC305914AD

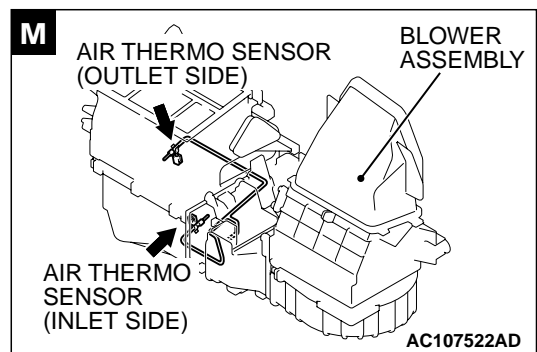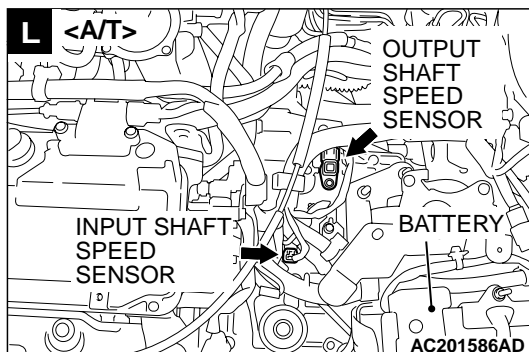  

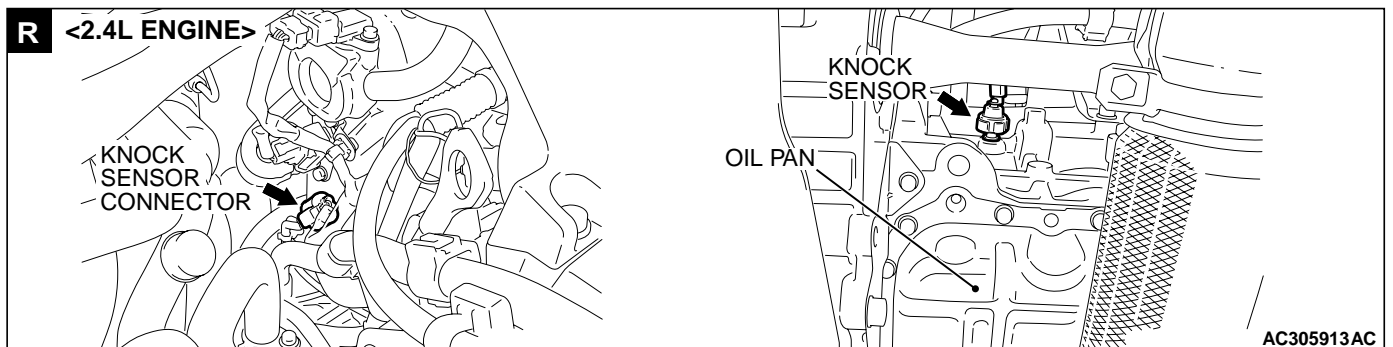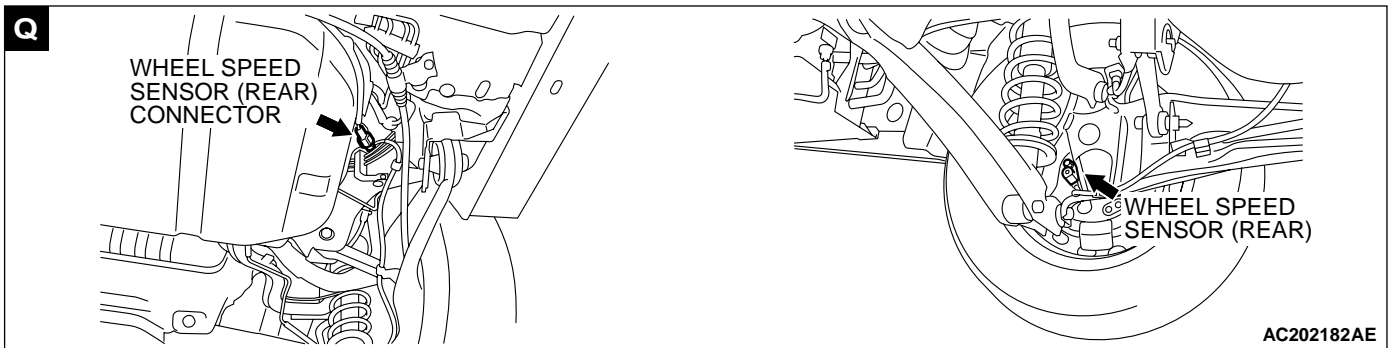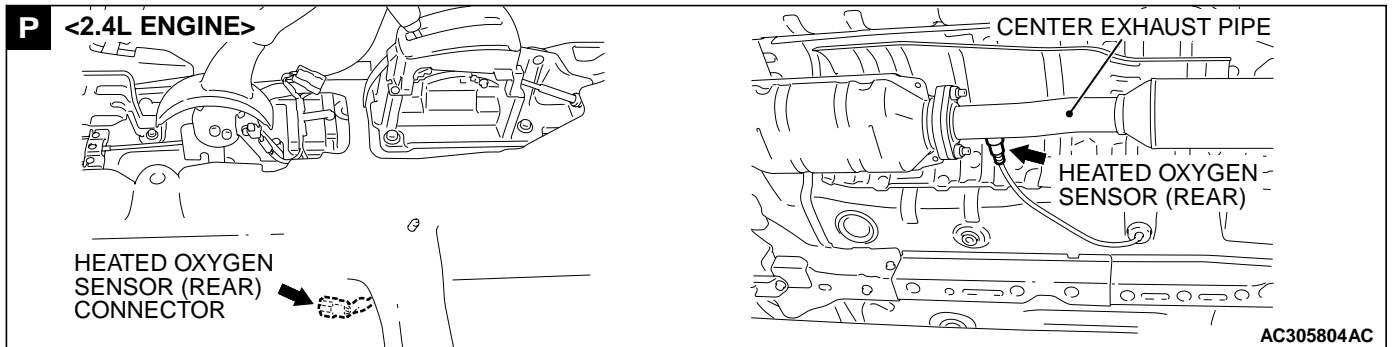   
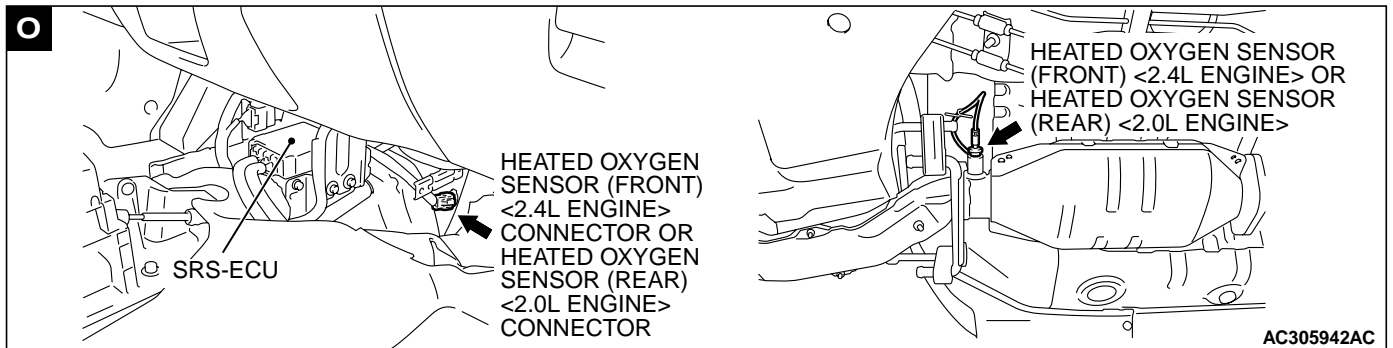 


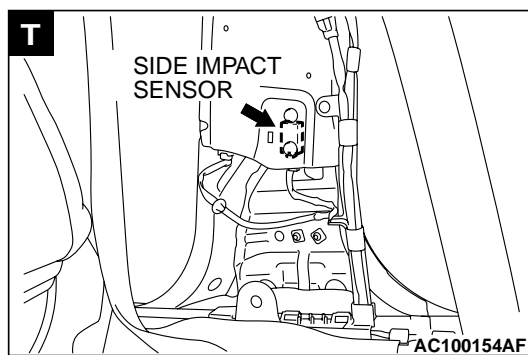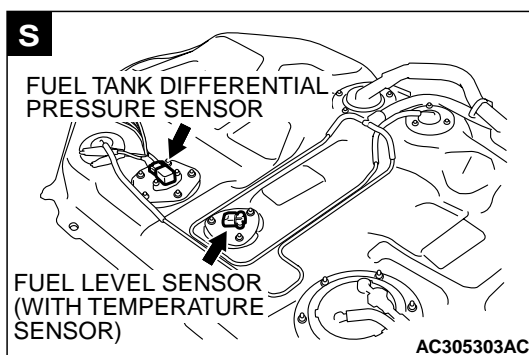  


CONTROL UNIT

M1701000700393


NAME	SYMBOL	NAME	SYMBOL
ABS-ECU	A	Fan control module	C
Auto-cruise control-ECU <2.0L Engine>	I	Front-ECU	B
A/C-ECU <Manual A/C>	E	Heater control unit <Heater>	E
Column switch (Incorporating column-ECU)	D	Powertrain control module <A/T>	H
Engine control module <M/T>	H	SRS-ECU	G
ETACS-ECU	F		

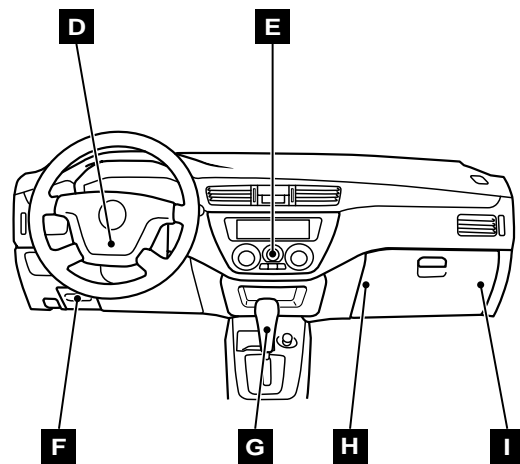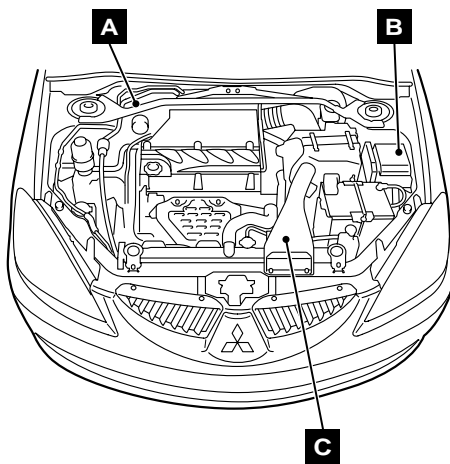  


AC306547AE

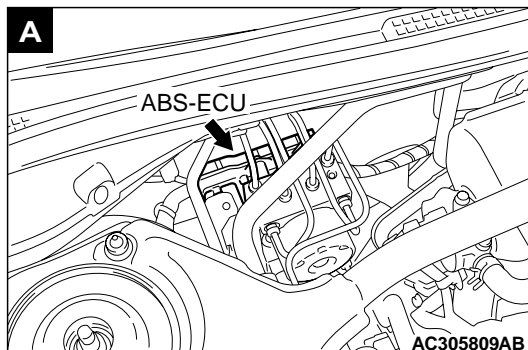 


AC305809AB

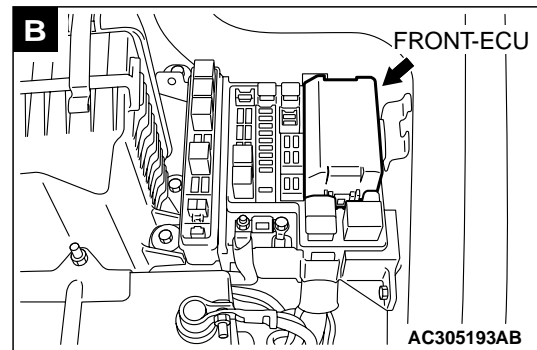 






AC305193AB

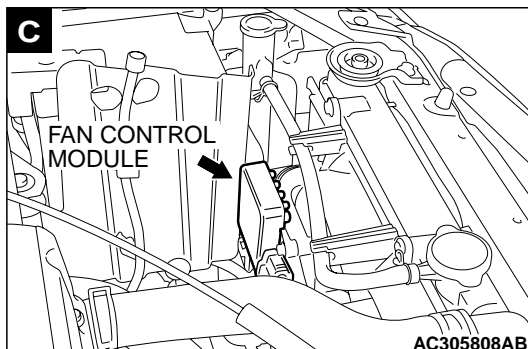 

AC305808AB

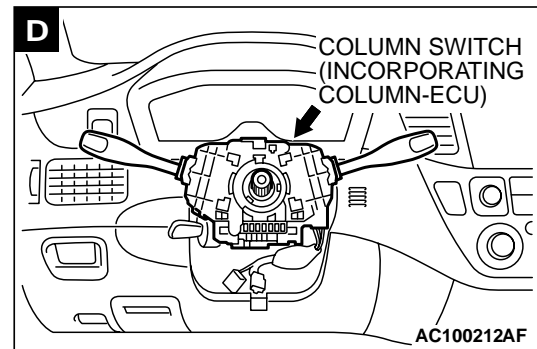 




AC100212AF

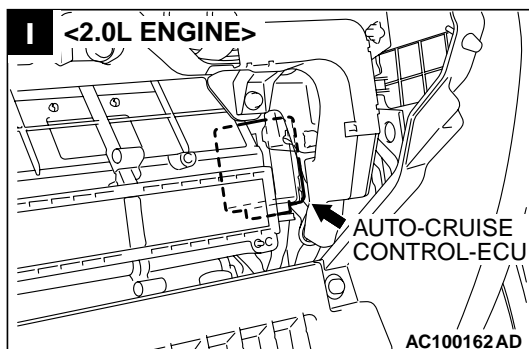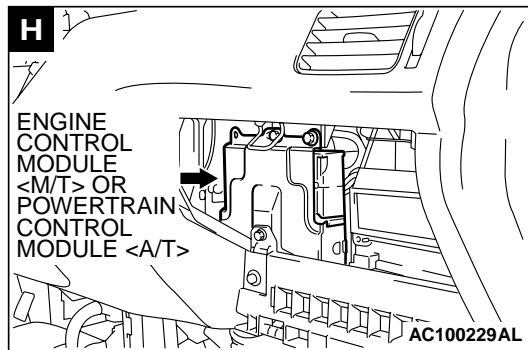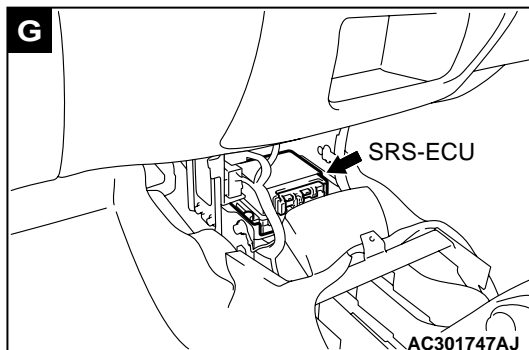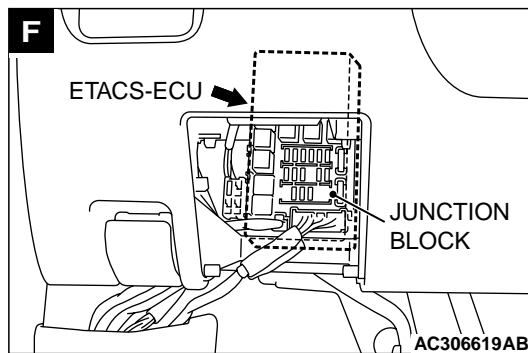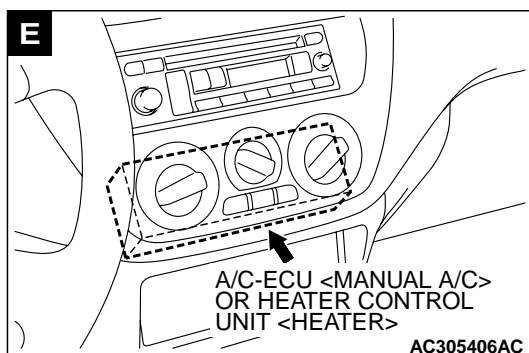     



SOLENOID AND SOLENOID VALVE







M1701000800408

NAME	SYMBOL	NAME	SYMBOL
A/T control solenoid valves	F	Evaporative emission purge solenoid valve <2.0L Engine>	D
Auto-cruise control vacuum pump (Incorporating control valve and release valve) <2.0L Engine>	A	Evaporative emission purge solenoid valve <2.4L Engine>	C
Engine oil control valve <2.4L Engine>	E	Evaporative emission ventilation solenoid valve	G
EGR solenoid valve <2.0L Engine>	D	Hydraulic unit (Incorporating ABS solenoid valve)	B

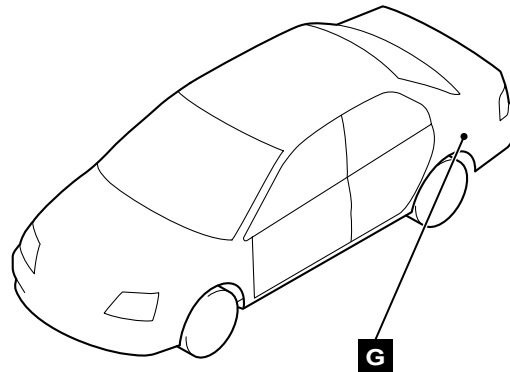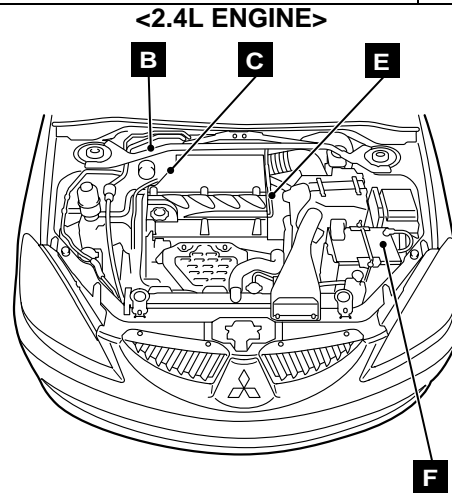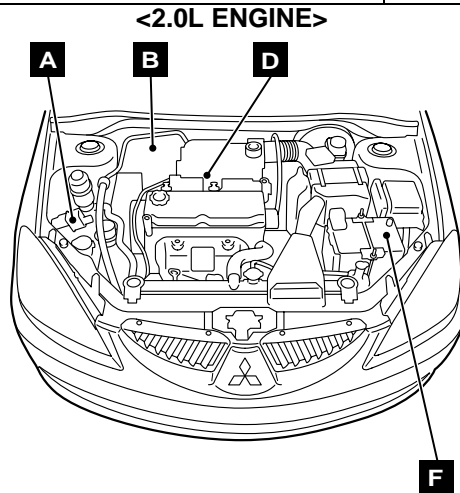   

AC306977AB

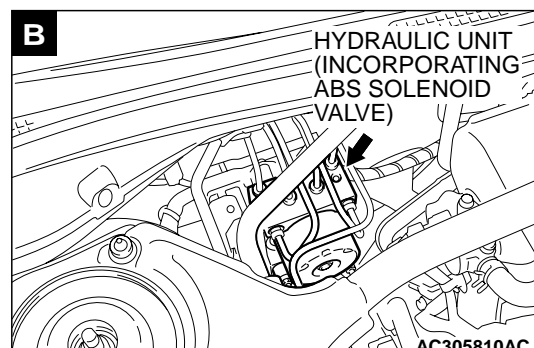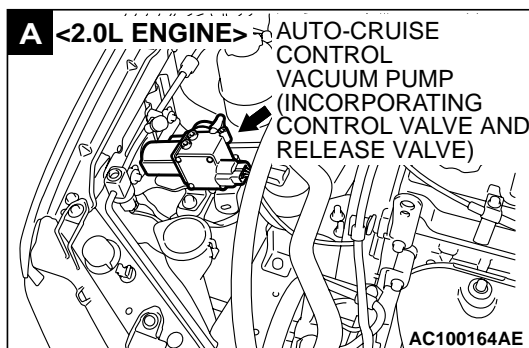  


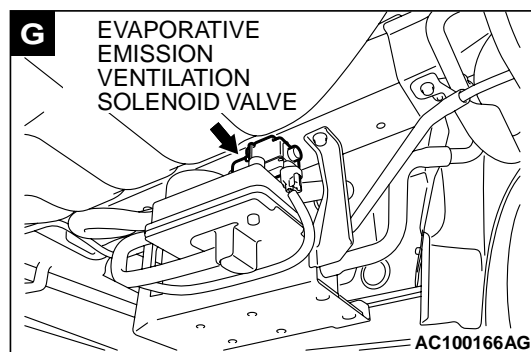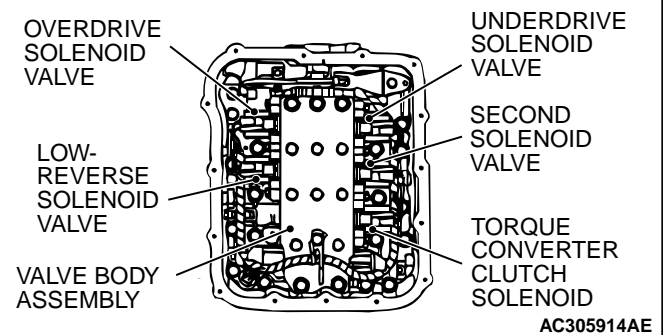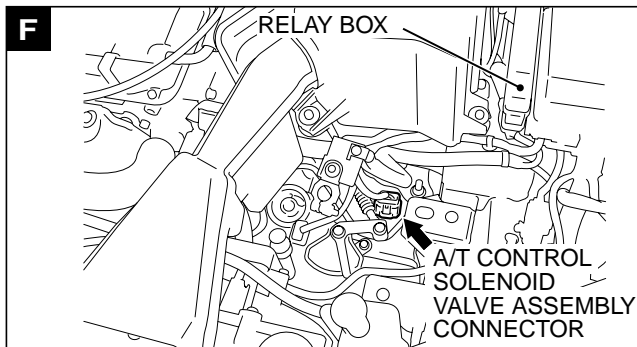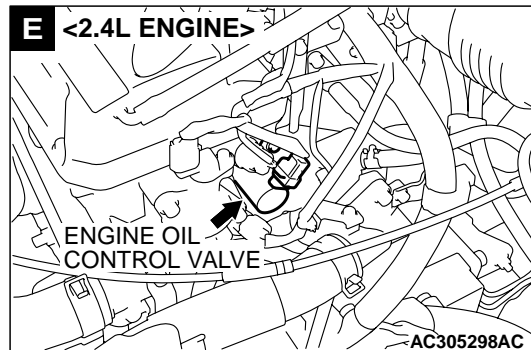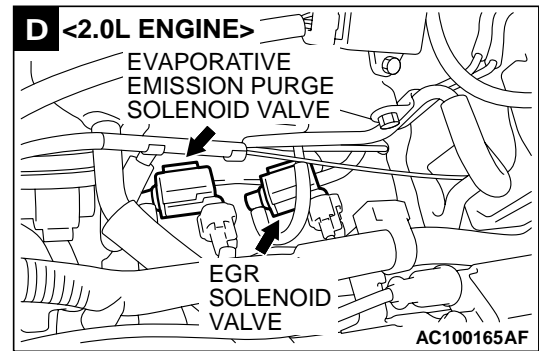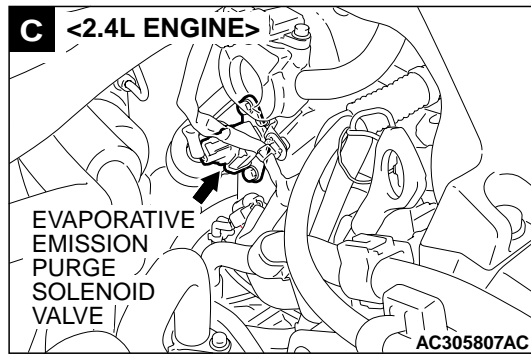      

OTHER DEVICES

M1701005600324

NAME	SYMBOL	NAME	SYMBOL
A/C refrigerant temperature switch	F	Idle air control motor <2.0L Engine>	D
Dual pressure switch	A	Power steering pressure switch <2.0L Engine>	E
Exhaust gas recirculation valve <2.4L Engine>	C	Power steering pressure switch <2.4L Engine>	B

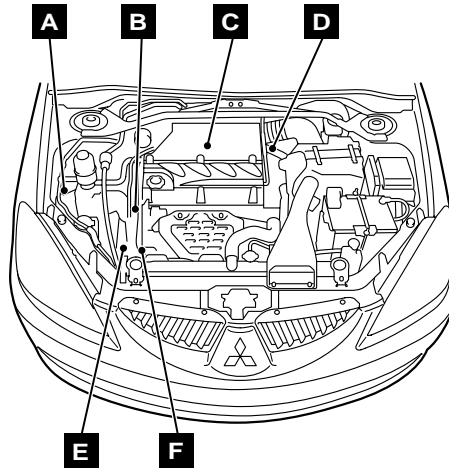 

AC304996AC

