

**A**

A/C Switch.....	55-105
A/T Control Component <2.0L> .....	23A-333
A/T Control Component <2.4L> .....	23B-321
A/T Faulty Operation Prevention Mechanism	
Diagnosis.....	23A-322
A/T Key Interlock and Shift Lock Mechanism .....	23A-349
ABS	
Actuator Test.....	35B-60
Circuit Diagram.....	90-208
ECU, Check at Terminal .....	35B-61
ABS Bleeding .....	35B-64
ABS Power Relay	
Check .....	35B-69
Accelerator Cable	
Check and Adjustment .....	17-6
Accelerator Pedal Position Sensor	
2.4L ENGINE.....	17-9
Check .....	13B-909
Accelerator Pedal Position Switch	
Check .....	13B-910
Adhesive	
Automatic Transaxle.....	23C-85
Body .....	42-79
Brakes (Basic) .....	35A-60
Engine <2.4L> .....	11C-64
Engine <2.0L> .....	11A-49
Engine Cooling .....	14-44
Engine Lubrication.....	12-8
Engine Overhaul <2.4L> .....	11D-72
Engine Overhaul <2.0L> .....	11B-58
Exterior .....	51-51
Fuel Supply.....	13C-15
Intake and Exhaust.....	15-17
Manual Transaxle Overhaul .....	22B-54
MFI <2.4L> .....	13B-921
MFI <2.0L> .....	13A-928
Rear Axle.....	27-12
Steering .....	37A-60
Adhesive Table .....	00-66
Adhesives	
Equipment .....	54A-126
Air Bag Module	
Disposal Procedures .....	52B-222
Air Bag Module(s).....	52B-205
Air Cleaner .....	15-4
Air Cleaner Element	
Replace .....	00-42
Air Conditioning	
Charging .....	55-99
Compressor Drive Belt Adjustment .....	55-99
Compressor Noise Check.....	55-102
Condenser and Condenser Fan Motor .....	55-123
ECU Terminal Check.....	55-97
Idle-up Operation Check.....	55-104
Manual, Circuit Diagram	
2.0L ENGINE.....	90-154
2.4L ENGINE .....	90-158
Performance Test .....	55-100
Pressure Switch Check .....	55-99
Receiver Drier Test.....	55-98
Refrigerant Leak Repair .....	55-101
Refrigerant Line .....	55-125
Sight Glass Refrigerant Level Test .....	55-98
Amplifier .....	54A-119
Antenna .....	54A-120
Anti-Lock Braking System (ABS)	
Diagnosis.....	35B-4

Audio System	
Circuit Diagram	
VEHICLES WITH AMPLIFIER .....	90-178
VEHICLES WITHOUT AMPLIFIER .....	90-174
Auto Adjuster	
Function Check.....	35A-33
Auto-cruise Control <2.0L> .....	17-120
Auto-cruise Control <2.4L> .....	17-204
Auto-cruise Control	
2.0L ENGINE .....	17-10
2.4L ENGINE .....	17-123
Auto-cruise Control Switch	
Check.....	17-201
Auto-cruise Control System	
Check at ECU Terminal .....	17-113
Circuit Diagram	
2.0L ENGINE-A/T .....	90-190
2.0L ENGINE-M/T .....	90-184
2.4L ENGINE-M/T .....	90-196
2.4L ENGINE-A/T .....	90-202
Component Check <2.4L> .....	17-202
Component Check <2.0L> .....	17-117
Diagnosis <2.4L> .....	17-125
Diagnosis <2.0L> .....	17-12
Main Switch Check .....	17-115
Trouble Code Diagnosis .....	17-13
Automatic Transaxle	
A/T Key Interlock and Shift Lock Mechanism <2.4L> ....	23B-338
A/T Key Interlock and Shift Lock Mechanism <2.0L> ....	23A-349
Adhesive .....	23C-85
Adjusting Plate, Snap Ring and Spacers .....	23C-83
Diagnosis.....	23A-11
Fluid Level Check .....	00-54
Key Interlock Mechanism Check <2.0L> .....	23A-344
Key Interlock Mechanism Check <2.4L> .....	23B-333
Sealant.....	23C-85
Shift Lock Mechanism Check <2.0L> .....	23A-345
Shift Lock Mechanism Check <2.4L> .....	23B-334
Transaxle Assembly.....	23A-351
Transaxle Control.....	23A-346
Valve Body Spring Identification .....	23C-82
Automatic Transaxle Control Component	
Check.....	23A-341
Automatic Transaxle Fluid	
Level Check .....	00-54
Auto-tensioner	
Check.....	11C-8

**B**

Backup Light	
Circuit Diagram .....	90-121
Ball Joint Dust Cover	
Inspection .....	34-8
Replacement <REAR> .....	34-23
Replacement <FRONT> .....	33A-16
Ball Joint Dust Cover Inspection	
Steering.....	37A-22
Ball Joint Dust Cover Replacement	
Steering.....	37A-45
Ball Joint Seals	
Check.....	00-59
Barometric Pressure Sensor	
Check.....	17-219
Basic Brake System	
Diagnosis .....	35A-4
Basic Idle Speed	
Adjustment.....	13A-903

		<b>C</b>	
Battery			
Charging .....	54A-5		
Check .....	54A-4		
Handling .....	00E-12		
Remedy for a Discharged Battery .....	35B-69		
Test .....	54A-6		
Belt			
Water Pump and Generator Drive Belt Check .....	00-45		
Belt, Timing			
Replace .....	00-44		
BJ Boot			
Replacement .....	26-34		
Bleeding			
Brakes (Basic) .....	35A-24		
Power Steering .....	37A-20		
Blower .....	55-110		
Blower Assembly .....	55-108		
Blower Motor			
Removal and Installation .....	55-111		
Blower Resistor			
Removal and Installation .....	55-111		
Body			
Adhesive .....	42-79		
Diagnosis .....	42-4		
Sealant .....	42-79		
Boots			
Driveshaft, Check .....	00-59		
Brake Booster .....	35A-36		
Brake Booster			
Operating Check .....	35A-22		
Removal and Installation .....	35A-36		
Brake Disc			
Pad Wear Check .....	00-58		
Runout Check and Correction .....	35A-30		
Thickness Check .....	35A-29		
Brake Drum			
Inside Diameter, Check .....	35A-32		
Brake Fluid Level Sensor Check .....	35A-25		
Brake Hoses			
Check .....	00-59		
Brake Lining			
Thickness, Check .....	35A-32		
Brake Lining and Brake Drum			
Contact, Check .....	35A-32		
Brake Pad			
Wear Check .....	00-58		
Brake Pedal .....	35A-34		
Brake Pedal			
Check and Adjustment .....	35A-20		
Removal and installation .....	35A-34		
Brake Rotor			
Disc, Check .....	35A-29		
Brake Warning Light			
Circuit Diagram .....	90-132		
Brakes (Basic)			
Adhesive .....	35A-60		
Sealant .....	35A-60		
Bumper			
Front .....	51-2		
Rear .....	51-5		
Cable			
Accelerator, Check and Adjustment .....	17-6		
Ignition, Replace			
2.0L ENGINE .....	00-44		
Camshaft .....	11C-27		
Camshaft			
Overhaul <2.0L> .....	11B-19		
Overhaul <2.4L> .....	11D-29		
Camshaft and Camshaft Oil Seal .....	11A-28		
Camshaft Position Sensor .....	16-51		
Camshaft Position Sensor			
2.0L ENGINE .....	16-51		
2.4L ENGINE .....	16-52		
Check .....	16-45		
Canister			
Evaporative Emission .....	17-230		
Catalytic Converter .....	17-231		
Centermember .....	32-7		
Central Door Locking System .....	54B-88		
Central Door Locking System			
Circuit Diagram			
VEHICLES WITH KEYLESS ENTRY SYSTEM .....	90-142		
VEHICLES WITHOUT KEYLESS ENTRY SYSTEM .....	90-138		
Diagnosis .....	42-23		
Centralized Junction			
Circuit Diagram .....	90-17		
Charging System .....	16-3		
Charging System			
Circuit Diagram			
2.0L ENGINE .....	90-36		
2.4L ENGINE .....	90-37		
Diagnosis .....	16-4		
Check Valve			
Operating Check .....	35A-23		
Cigarette Lighter .....	54A-74		
Cigarette Lighter			
Circuit Diagram .....	90-182		
Clearance Around Hood			
Adjustment .....	42-6		
Clock .....	54A-75		
Clock			
Circuit Diagram .....	90-181		
Clock Spring .....	52B-205		
Clutch .....	21B-2		
Clutch			
Diagnosis .....	21A-3		
Inspection .....	21B-5		
Clutch Bleeding .....	21A-9		
Clutch Control .....	21A-13		
Clutch Control			
Inspection .....	21A-14		
Clutch Housing .....	22B-43		
Clutch Housing			
Disassembly and Assembly .....	22B-43		
Clutch Master Cylinder			
Inspection .....	21A-15		
Clutch Pedal .....	21A-12		
Clutch Pedal			
Check and Adjustment .....	21A-8		
Inspection .....	21A-12		
Clutch Pedal Position Switch			
Check .....	21A-10		
Clutch Release Cylinder .....	21B-7		
Clutch Release Cylinder			
Inspection .....	21B-8		
Column Switch .....	54A-69		
Column Switch			
Removal and Installation .....	54A-70		

Combination Meters .....	54A-46	Engine <2.4L> .....	11C-3
Compression Pressure		Engine <2.0L> .....	11A-2
Check <2.0L> .....	11A-15	Engine Control System .....	17-4
Check <2.4L> .....	11C-15	Engine Cooling .....	14-4
Compressor (A/C)		Equipment <HORN> .....	54A-72
Noise Check .....	55-102	Equipment <REAR WINDOW DEFFOGER> .....	54A-123
Compressor Assembly .....	55-116	Equipment <COMBINATION METER> .....	54A-10
Connecting Rod		Equipment <IGNITION SWITCH> .....	54A-7
Overhaul <2.0L> .....	11B-38	Exterior .....	51-22
Overhaul <2.4L> .....	11D-51	Front Axle .....	26-3
Connector Inspection .....	00E-2	Front Suspension .....	33A-2
Control Housing .....	22B-40	Fuel Supply .....	13C-2
Control Housing		Heated Door Mirror	
Disassembly and Assembly .....	22B-40	Vehicles for CANADA .....	51-29
Control link .....	34-9	Intake and Exhaust .....	15-2
Control Relay		Keyless Entry System .....	42-59
Check <2.4L> .....	23B-330	Manual Transaxle .....	22A-5
Check <2.0L> .....	23A-341	Multiport Fuel Injection (MFI) <2.0L> .....	13A-6
Control Unit Location .....	70-15	Multiport Fuel Injection (MFI) <2.4L> .....	13B-6
Coolant		Parking Brake .....	36-2
Engine, Change .....	00-56	Power Steering .....	37A-4
Cooling System		Power Window .....	42-23
Circuit Diagram		Rear Axle .....	27-2
2.0L ENGINE .....	90-86	Rear Suspension .....	34-2
2.4L ENGINE .....	90-87	Seat Belt .....	52A-2
Crankcase Ventilation System		SRS Air Bag .....	52B-19
Check .....	17-212	Starting System .....	16-24
Crankshaft		Sunroof .....	42-69
Overhaul <2.0L> .....	11B-47	SWS .....	54B-7
Overhaul <2.4L> .....	11D-60	Tire .....	31-2
Crankshaft Front Oil Seal .....	11A-34	Trouble Code, ABS .....	35B-5
Crankshaft Oil Seal <2.0L> .....	11A-34	Trunk Lid .....	42-52
Crankshaft Oil Seal <2.4L> .....	11C-37	Wheel .....	31-2
Crankshaft Position Sensor .....	16-52	Window Glass .....	42-14
Crankshaft Position Sensor		Differential .....	22B-50
2.0L ENGINE .....	16-52	Differential	
2.4L ENGINE .....	16-53	Disassembly and Assembly	
Check <2.4L> .....	23B-329	F4A4B .....	23C-72
Check <2.0L> .....	23A-341	Disc Brake	
Check .....	17-228	Pad Wear Check .....	00-58
Crankshaft Pulley <2.0L> .....	11A-26	Disc Brake Assembly	
Crankshaft Pulley <2.4L> .....	11C-25	Front .....	35A-39
Crankshaft Rear Oil Seal .....	11A-36	Rear .....	35A-53
Crossmember .....	32-9	Disc Brake Pad	
Crossmember		Check and Adjustment .....	35A-25
Inspection .....	32-12	Disc Brake Rotor	
Cylinder Block		Check .....	35A-29
Overhaul <2.4L> .....	11D-60	Dome Light .....	54A-63
Overhaul <2.0L> .....	11B-47	Dome Light	
Cylinder Head		Circuit Diagram .....	90-112
Overhaul <2.4L> .....	11B-25	Door .....	42-35
Overhaul <2.0L> .....	11D-33	Door	
Cylinder Head Gasket <2.0L> .....	11A-38	Diagnosis .....	42-23
Cylinder Head Gasket <2.4L> .....	11C-41	Front and Rear, Fit Adjustment .....	42-30
		Glass and Regulator .....	42-43
		Handle and Latch .....	42-46
		Inside Handle Play Adjustment .....	42-34
		Mirror .....	51-29
		Opening Weather-strip .....	42-50
		Outside Handle Play Adjustment .....	42-34
		Switch Check .....	42-36
		Trim and Waterproof Film .....	42-37
		Door Trim .....	52A-14
		Door Trim	
		Removal and Installation .....	52A-14
		Drive Belt	
		Power Steering, Tension Check .....	37A-19
		Tension Check and Adjustment <2.0L> .....	11A-7
		Tension Check and Adjustment <2.4L> .....	11C-8
		Water Pump and Generator Drive Belt Check .....	00-45
		Drive Plate	

## D

Diagnosis	
A/T Faulty Operation Prevention Mechanism .....	23A-322
Anti-Lock Braking System (ABS) .....	35B-4
Auto-cruise Control System .....	17-12
Auto-cruise Control System .....	17-125
Automatic Transaxle .....	23A-11
Basic Brake System .....	35A-4
Body .....	42-4
Central Door Locking System .....	42-23
Charging System .....	16-4
Clutch .....	21A-3
Door .....	42-23
Emission Control System .....	17-205

Overhaul <2.0L> .....	11B-47
Overhaul <2.4L> .....	11D-60
Drive Shaft Oil Seal .....	23C-79
Drive Shaft Oil Seal Disassembly and Assembly .....	23C-79
Driveshaft	
BJ Boot Replacement .....	26-34
Front Axle .....	26-17
Driveshaft Boots	
Check .....	00-59
Drum	
Inspection .....	36-11

## E

ECU Terminal	
Check .....	54B-567
EGR	
Solenoid Check .....	13A-918
EGR solenoid	
Check .....	13A-918
EGR System .....	17-220
EGR System	
Check	
2.0L ENGINE .....	17-223
Port Vacuum Check	
2.0L ENGINE .....	17-225
Solenoid Check	
2.0L ENGINE .....	17-225
Valve Check	
2.0L ENGINE .....	17-224
EGR Valve	
Check .....	13B-914
Check	
2.4L ENGINE .....	17-226
Cleaning	
2.4L ENGINE .....	17-228
Electrical System	
Check .....	00E-12
Element, Air Cleaner	
Replace .....	00-42
Emission Control .....	17-205
Emission Control System	
Diagnosis .....	17-205
Emission Control System, Evaporative	
Check for Clogging .....	00-42
Check for Leaks .....	00-42
Engine	
Adhesive <2.4L> .....	11C-64
Adhesive <2.0L> .....	11A-49
Assembly <2.4L> .....	11C-17
Assembly <2.0L> .....	11A-20
Auto-tensioner .....	11C-8
Camshaft and Camshaft Oil Seal .....	11A-28
Compression Pressure <2.0L> .....	11A-15
Compression Pressure <2.4L> .....	11C-15
Crankshaft Front Oil Seal .....	11A-34
Crankshaft Oil Seal <2.4L> .....	11C-37
Crankshaft Oil Seal <2.0L> .....	11A-34
Crankshaft Rear Oil Seal .....	11A-36
Cylinder Head Gasket <2.4L> .....	11A-38
Cylinder Head Gasket <2.0L> .....	11C-41
Diagnosis <2.4L> .....	11C-3
Diagnosis <2.0L> .....	11A-2
Drive Belt <2.4L> .....	11C-8
Drive Belt <2.0L> .....	11A-7
Idle Mixture <2.4L> .....	11C-13
Idle Mixture <2.0L> .....	11A-13
Idle Speed <2.0L> .....	11A-14
Idle Speed <2.4L> .....	11C-14

Ignition Timing <2.4L> .....	11C-12
Ignition Timing <2.0L> .....	11A-12
Lash Adjuster .....	11A-17
Manifold Vacuum <2.0L> .....	11A-16
Manifold Vacuum <2.4L> .....	11C-16
Sealant <2.0L> .....	11A-49
Sealant <2.4L> .....	11C-64
Tightening Specification(s) .....	11C-62
Timing Belt <2.0L> .....	11A-45
Timing Belt <2.4L> .....	11C-48
Engine Control .....	17-4
Engine Control System	
Diagnosis .....	17-4
Engine Coolant	
Change .....	00-56
Concentration Check .....	14-27
Leak Check .....	14-24
Replacement .....	14-25
Engine Coolant Temperature Gauge Unit	
Check .....	54A-45
Engine Coolant Temperature Sensor	
Check <2.0L> .....	17-219
Check <2.4L> .....	17-228
Check <2.0L> .....	13A-911
Check <2.4L> .....	13B-908
Engine Cooling	
Adhesive .....	14-44
Diagnosis .....	14-4
Sealant .....	14-44
Engine Lubrication	
Adhesive .....	12-8
Sealant .....	12-8
Tightening Specification(s) .....	12-8
Engine Mounting .....	32-4
Engine Oil	
Change .....	00-51
Check .....	12-4
Replacement .....	12-4
Engine Oil Filter	
Change .....	00-52
Replacement .....	12-5
Engine Oil Pressure	
Check .....	12-7
Engine Overhaul	
Adhesive <2.0L> .....	11B-58
Adhesive <2.4L> .....	11D-72
Sealant <2.4L> .....	11D-72
Sealant <2.0L> .....	11B-58
Tightening Specification(s) <2.0L> .....	11B-54
Tightening Specification(s) <2.4L> .....	11D-67
Engine Roll Stopper .....	32-7
Equipment	
Adhesives .....	54A-126
Diagnosis <HORN> .....	54A-72
Diagnosis <IGNITION SWITCH> .....	54A-7
Diagnosis <REAR WINDOW DEFOGGER> .....	54A-123
Diagnosis <COMBINATION METER> .....	54A-10
Sealant .....	54A-126
ETACS	
Enabling/Disabling the Answerback Function .....	42-61
Evaporative Emission Canister .....	17-230
Evaporative Emission Canister	
Inspection .....	17-231
Evaporative Emission Control System .....	17-213
Evaporative Emission Control System	
Check for Clogging .....	00-42
Check for Leaks .....	00-42
Purge Solenoid Check .....	17-218

Evaporative Emission Purge Solenoid		Fuel Pump	
Check <2.0L> .....	13A-918	Connector Disconnection <2.4L> .....	13B-906
Check <2.4L> .....	13B-914	Connector Disconnection <2.0L> .....	13A-908
Evaporative Emission Ventilation Solenoid		Operation Check <2.4L> .....	13B-906
Check .....	17-220	Operation Check <FUEL SUPPLY> .....	13C-7
Check <2.0L> .....	13A-918	Operation Check <2.0L> .....	13A-909
Check <2.4L> .....	13B-914	Fuel Pump Module .....	13C-12
Evaporator Assembly .....	55-114	Fuel Pump Module	
Evaporator Unit .....	55-108	Replacement .....	13C-7
Exhaust Manifold .....	11B-15	Fuel Pump Relay	
Exhaust Manifold .....	15-11	Continuity Check <2.0L> .....	13B-907
Exhaust Manifold		Continuity Check <2.4L> .....	13A-910
Overhaul .....	11D-9	Fuel Pump System <2.0L> .....	13A-821
Exhaust Pipe .....	15-13	Fuel Pump System <2.4L> .....	13B-820
Exhaust System		Fuel Supply	
Check .....	00-66	Adhesive .....	13C-15
Exterior		Diagnosis .....	13C-2
Adhesive .....	51-51	Sealant .....	13C-15
Diagnosis .....	51-22	Fuel System	
Sealant .....	51-51	Check for Leaks .....	00-42
<b>F</b>		Fuel Tank .....	13C-9
Fan Control Module		Fuel Tank	
Check .....	14-27	Check for Leaks .....	00-42
Fan Control Relay		Fuel Tank Differential Pressure Sensor	
Continuity Check .....	14-28	Check .....	17-220
Fastener Tightening Specification(s) .....	34-23	Fuel Tank Filler Tube	
Fender .....	42-8	Check for Leaks .....	00-42
Filter		Fuel Tank Pressure Relief Valve .....	17-230
Engine Oil, Change .....	00-52	Fuel Tank Pressure Relief Valve	
Fixed SAS		Inspection .....	17-231
Adjustment .....	13A-903	Fuel Warning Light	
Flasher Timer .....	54B-374	Circuit Diagram .....	90-132
Fluid		Fuse	
Automatic Transaxle, Fluid Level Check .....	00-54	Check .....	00E-11
Flywheel		Fuses Location .....	70-2
Overhaul <2.0L> .....	11B-47	Fusible Links Location .....	70-2
Overhaul <2.4L> .....	11D-60	<b>G</b>	
Fog Light .....	54A-57	Garnishes .....	51-8
Fog Light <SWS> .....	54B-352	Gauge	
Fog Light		Circuit Diagram	
Aiming .....	54A-55	2.0L ENGINE .....	90-124
Circuit Diagram .....	90-108	2.4L ENGINE .....	90-128
Fog Light Switch .....	54A-58	Generator <2.0L> .....	11B-5
Front Axle		Generator <2.4L> .....	11D-6
Diagnosis .....	26-3	Generator	
Driveshaft .....	26-17	Assembly .....	16-16
Hub .....	26-9	Output Current Test .....	16-10
Front Axle Hub Assembly .....	26-9	Output Line Voltage Drop Test .....	16-8
Front Axle Hub Assembly		Regulated Voltage Test .....	16-12
Disassembly and Assembly .....	26-13	Glass Sliding Mechanism	
Inspection .....	26-12	Check and Adjustment .....	42-32
Front Floor Console .....	52A-8	Ground Location .....	70-4
Front Seat .....	52A-21	Grounding Location .....	70-7
Front Seat Belt .....	52A-28		
Front Side Marker Light .....	54A-49		
Front Suspension			
Diagnosis .....	33A-2		
Front Wheel Alignment			
Check and Adjustment .....	33A-7		
Fuel Filler Lid .....	42-11		
Fuel Gauge Unit			
Check .....	54A-44		
Fuel Hose			
Check for Condition .....	00-42		
Fuel Pipe			
Check for Leaks .....	00-42		
Fuel Pressure Test <2.4L> .....	13B-903		
Fuel Pressure Test <2.0L> .....	13A-905		

**H**

Hazard Warning Light		Ignition Key Reminder Warning Buzzer	
Circuit Diagram .....	90-116	Circuit Diagram .....	90-220
Hazard Warning Switch .....	54A-66	Ignition Switch .....	54A-8
Headlight <SWS> .....	54B-279	Ignition System <ENGINE> .....	11B-5
Headlight .....	54A-49	Ignition System <ELECTRICAL> .....	16-38
Headlight		Ignition System .....	11D-6
Aiming .....	54A-49	Ignition system	
Circuit Diagram .....	90-100	A/T <2.0L> .....	13A-841
Headlining .....	52A-19	A/T <2.4L> .....	13B-840
Heated Door Mirror		M/T <2.0L> .....	13A-834
Diagnosis		M/T <2.4L> .....	13B-833
Vehicles for CANADA .....	51-29	Ignition System	
Heater		Circuit Diagram	
Blower .....	55-111	2.0L ENGINE-A/T .....	90-33
Circuit Diagram .....	90-150	2.0L ENGINE-M/T .....	90-32
Resistor .....	55-111	2.4L ENGINE .....	90-34
Heater Control		Ignition Timing	
Disassembly and Assembly .....	55-107	Check <2.0L> .....	11A-12
Heater Control Assembly .....	55-105	Check <2.4L> .....	11C-12
Heater Core .....	55-108	Injector <2.4L> .....	13B-915
Heater Unit .....	55-108	Injector <2.0L> .....	13A-919
High-Mounted Stoplight .....	54A-63	Injector	
Hood .....	42-7	Check <2.4L> .....	13B-913
Hood		Check <2.0L> .....	13A-916
Aliment .....	42-6	Input Shaft .....	23C-58
Height Adjustment .....	42-6	Input Shaft .....	22B-17
Hood Striker		Input Shaft	
Alignment .....	42-6	Disassembly and Assembly .....	23C-58
Horn .....	54A-72	Inspection .....	22B-23
Horn		Inside Rear View Mirror .....	52A-20
Circuit Diagram .....	90-122	Inspection Terminal Location .....	70-3
Hose		Instrument Panel .....	52A-3
Vacuum, Routing .....	17-206	Instrument Panel Inspection .....	00E-7
Hoses		Intake Air Temperature Sensor	
Brake, Check .....	00-59	Check .....	17-219
Hub		Check <2.4L> .....	13B-908
Front Axle .....	26-9	Check <2.0L> .....	13A-911
Rear Axle .....	27-9	Intake and Exhaust	
Hub Bolt		Adhesive .....	15-17
Replacement .....	26-8	Diagnosis .....	15-2
Replacement		Sealant .....	15-17
VEHICLES WITH DISC BRAKE .....	27-8	Intake Manifold .....	15-6
VEHICLES WITH DRUM BRAKE .....	27-7	Intake Manifold .....	11B-15
Hub End Play		Interior Light .....	54B-416
Check .....	26-8	Interlock Switch	
Hydraulic Unit .....	35B-70	Check and Adjustment .....	21A-11
Hydraulic Unit Check		Operating Check .....	21A-10
ABS .....	35B-66	INVECS-II 4A/T	
		Circuit Diagram	
		2.0L ENGINE .....	90-88
		2.4L ENGINE .....	90-94

**I**

Idle Mixture	
Check <2.0L> .....	11A-13
Check <2.4L> .....	11C-13
Idle Speed	
Basic, Adjustment .....	13A-903
Check .....	11A-14
Check .....	11C-14
Idle Speed Control Motor	
Check .....	13A-916
Ignition Cable	
Replace	
2.0L ENGINE .....	00-44
Ignition Coil .....	16-50
Ignition Coil	
Check	
2.0L ENGINE .....	16-40
2.4L ENGINE .....	16-42

**J**

Joint Connector .....	90-12
Junction Block .....	90-10



**K**

Key Interlock Mechanism	
Check .....	23A-344
Check .....	23B-333
Keyless Entry System <SWS> .....	54B-169
Keyless Entry System .....	42-59
Keyless Entry System	
Diagnosis .....	42-59
Secret Code Registration .....	42-65
Transmitter Battery Replacement .....	42-61
Keyless Entry System Timer	
Lock Function Inspection .....	42-61
Knock Sensor .....	16-53

**L**

Lash Adjuster	
Check .....	11A-17
Leveling Valve	
Check .....	13C-8
License Plate Light .....	54A-66
Lighting Monitor Buzzer	
Circuit Diagram .....	90-218
Lighting System	
Diagnosis<FOG LIGHT> .....	54A-54
Diagnosis <HAZARD WARNING LIGHT SWITCH> .....	54A-66
Diagnosis <DOME LIGHT> .....	54A-63
Diagnosis <REAR COMBINATION LIGHT> .....	54A-61
Lower Arm <REAR> .....	34-9
Lower Arm <FRONT> .....	33A-14
Lower Arm	
Inspection .....	33A-15
Lower Arm Ball Joint	
End Play Check .....	33A-8
Lower Arm Bushing	
Replacement <FRONT> .....	33A-16
Replacement <REAR> .....	34-11
Lower Arm Pillow Ball Bushing	
End Play Check	
EXCEPT VEHICLES WITH 14-INCH WHEELS .....	34-8
Low-Reverse Brake .....	23C-67
Low-Reverse Brake	
Disassembly and Assembly .....	23C-67
Luggage Compartment Light	
Circuit Diagram .....	90-112
Luminous Intensity	
Measurement .....	54A-51

**M**

Main Muffler .....	15-13
Maintenance	
Air Cleaner Element .....	00-42
Automatic Transaxle Fluid .....	00-54
Ball Joint and Steering Linkage Seals .....	00-59
Brake Hoses .....	00-59
Disc Brake Pads .....	00-58
Drive Belt .....	00-45
Driveshaft Boots .....	00-59
Electrical System .....	00E-12
Engine Coolant .....	00-56
Engine Oil .....	00-51
Engine Oil Filter .....	00-52
Evaporative Emission Control System .....	00-42
Exhaust System .....	00-66
Fuel Hose .....	00-42
Fuel System .....	00-42
Ignition Cable	
2.0L ENGINE .....	00-44

Spark Plug .....	00-43
SRS .....	00-60
Timing Belt .....	00-44
Manifold Vacuum	
Check <2.4L> .....	11C-16
Check <2.0L> .....	11A-16
Manual A/C	
Diagnosis .....	55-5
Manual Transaxle	
Diagnosis .....	22A-5
Manual Transaxle (Transmission)	
Oil Level Check .....	00-53
Manual Transaxle Overhaul	
Adhesive .....	22B-54
Sealant .....	22B-54
Mark .....	51-26
Mass Airflow Sensor	
Check	
2.4L ENGINE .....	17-228
2.4L ENGINE .....	17-219
Master Cylinder .....	35A-36
Master Cylinder	
Function Check .....	35A-33
Master Cylinder Assembly .....	35A-36
Master Cylinder Assembly	
Disassembly and Assembly .....	35A-38
Inspection .....	35A-39
Meter	
Circuit Diagram	
2.0L ENGINE .....	90-124
2.4L ENGINE .....	90-128
MFI	
Adhesive <2.4L> .....	13B-921
Adhesive <2.0L> .....	13A-928
Sealant <2.4L> .....	13B-921
Sealant <2.0L> .....	13A-928
Tightening Specification(s) <2.4L> .....	13B-920
Tightening Specification(s) <2.0L> .....	13A-927
MFI System	
Circuit Diagram	
2.0L ENGINE-M/T .....	90-38
2.0L ENGINE-A/T .....	90-50
2.4L ENGINE-A/T .....	90-74
2.4L ENGINE-M/T .....	90-62
Mirror	
Door .....	51-46
Remote Controlled, Circuit Diagram .....	90-172
Module	
Fuel Pump .....	13C-12
Moldings .....	51-8
Mounting	
Engine .....	32-4
Transaxle .....	32-5
Multipoint Fuel Injection	
Diagnosis <2.4L> .....	13B-6
Diagnosis <2.0L> .....	13A-6
Multipoint Fuel Injection Relay	
Continuity Check <2.0L> .....	13A-910
Continuity Check <2.4L> .....	13B-907

**O**

Oil		Circuit Diagram .....	90-22
Engine, Change .....	00-51	Power Steering	
Engine, Check .....	12-4	Bleeding .....	37A-20
Engine, Replacement .....	12-4	Diagnosis .....	37A-4
Oil Cooler		Drive Belt Tension Check .....	37A-19
Flow Check <2.0L> .....	23A-338	Fluid Level Check .....	37A-19
Flow Check <2.4L> .....	23B-327	Fluid Replacement .....	37A-19
Oil Filter		Hoses .....	37A-52
Engine, Replacement .....	12-5	Oil Pump Assembly .....	37A-46
Oil Pan <2.4L> .....	11C-34	Oil Pump Pressure Test .....	37A-21
Oil Pan <2.0L> .....	11A-31	Pressure Switch Check .....	37A-22
Oil Pan		Power Steering Diagnosis .....	37A-4
Inspection .....	11C-36	Power Steering Gear Box .....	37A-30
Overhaul <2.4L> .....	11D-40	Power Steering Linkage .....	37A-30
Overhaul <2.0L> .....	11B-33	Power Steering Oil Pump Assembly	
Oil Pressure		Inspection .....	37A-48
Engine, Check .....	12-7	Power Window	
Oil Pump .....	23C-57	Check .....	42-33
Oil Pump		Circuit Breaker Inspection .....	42-33
Disassembly and Assembly .....	23C-57	Circuit Diagram .....	90-134
Overhaul <2.0L> .....	11B-33	Diagnosis .....	42-23
Overhaul <2.4L> .....	11D-40	Operating Current Check .....	42-32
Power Steering .....	37A-46	Relay Check .....	42-33
Power Steering, Pressure Test .....	37A-21	Switch Continuity Check .....	42-42
Oil Seal		Timer Function Check .....	42-32
Crankshaft <2.0L> .....	11A-34	Power Windows .....	54B-117
Crankshaft <2.4L> .....	11C-37	Printed-Heater Lines	
Crankshaft Front .....	11A-34	Check .....	54A-123
Crankshaft Rear .....	11A-36	Proportioning Valve	
Oil Warning Light		Function Test .....	35A-23
Circuit Diagram .....	90-132	Purge Control System	
Output Shaft <M/T> .....	22B-25	Check .....	17-216
Output Shaft <A/T> .....	23C-69		
Output Shaft			
Disassembly and Assembly .....	23C-69		
Inspection .....	22B-33		
Overdrive Clutch .....	23C-61		
Overdrive Clutch			
Disassembly and Assembly .....	23C-61		
Oxygen Sensor			
Check <2.4L> .....	13B-910		
Check <2.0L> .....	13A-913		

**P**

Parking Brake			
Cable .....	36-8		
Diagnosis .....	36-2		
Lever .....	36-7		
Lever Stroke Check and Adjustment .....	36-4		
Lining and Drum			
VEHICLES WITH REAR DISC BRAKE .....	36-9		
Lining Running-in			
VEHICLES WITH REAR DISC BRAKES .....	36-5		
Switch Check .....	36-6		
Parking Brake Lining			
Inspection .....	36-11		
PCV (Positive Crankcase Ventilation) System .....	17-210		
PCV (Positive Crankcase Ventilation) System			
Valve Check .....	17-212		
Piston			
Overhaul <2.0L> .....	11B-38		
Overhaul <2.4L> .....	11D-51		
Planetary Gear .....	23C-65		
Planetary Gear			
Disassembly and Assembly .....	23C-65		
Position Light .....	54A-49		
Power Distribution System			

**R**

Radiator .....	14-29		
Radiator Cap			
Pressure Check .....	14-24		
Radiator Fan Motor			
Check .....	14-28		
Rear Axle			
Adhesive .....	27-12		
Diagnosis .....	27-2		
Hub .....	27-9		
Sealant .....	27-12		
Wheel Bearing End Play Check			
VEHICLES WITH DISC BRAKE .....	27-5		
VEHICLES WITH DRUM BRAKE .....	27-5		
Rear Combination Light .....	54A-62		
Rear Drum Brake .....	35A-48		
Rear Drum Brake Linings			
Wear and Leaks Check .....	00-58		
Rear Drum Brake Wheel Cylinder Assembly			
Disassembly and Assembly .....	35A-51		
Inspection .....	35A-52		
Rear Floor Console .....	52A-9		
Rear Hub Rotary-Sliding Resistance			
Check			
VEHICLES WITH DISC BRAKE .....	27-6		
VEHICLES WITH DRUM BRAKE .....	27-6		
Rear Seat .....	52A-23		
Rear Seat Belt .....	52A-29		
Rear Spoiler .....	51-14		
Rear Suspension			
Diagnosis .....	34-2		
Rear Washer .....	54B-243		
Rear Wheel Alignment			
Check and Adjustment .....	34-6		
Rear Wheel Cylinder			
Wear and Leaks Check .....	00-58		



Rear Window Defogger .....	54A-123	Selector Lever .....	23A-348
Rear Window Defogger Circuit Diagram .....	90-169	Selector Lever .....	23B-337
Rear Window Defogger Switch .....	54A-124	Selector Lever Operation Check .....	23B-332
Rear Window Glass .....	42-20	Operation Check .....	23A-343
Rear Wiper .....	54B-243	Sensor	
Rear Wiper and Washer		Accelerator Pedal Position	
Inspection .....	51-25	2.4L ENGINE .....	17-9
Receiver Drier Test (A/C) .....	55-98	Accelerator Pedal Position, Check .....	13B-909
Relay		Barometric Pressure, Check .....	17-219
Check .....	00E-10	Camshaft Position .....	16-51
Relay Location .....	70-8	Camshaft Position	
Replaceable Bulb		2.0L ENGINE .....	16-51
Replacement .....	54A-51	2.4L ENGINE .....	16-52
Resistive Cord		Camshaft Position, Check .....	16-45
Inspection		Crankangle, Check .....	16-45
2.0L ENGINE .....	16-43	Crankshaft Position .....	16-52
Reverse Clutch .....	23C-61	Crankshaft Position	
Reverse Clutch		2.0L ENGINE .....	16-52
Disassembly and Assembly .....	23C-61	2.4L ENGINE .....	16-53
Reverse Idler Gear .....	22B-36	Crankshaft Position, Check <2.4L> .....	23B-329
Rheostat .....	54A-68	Crankshaft Position, Check <2.0L> .....	23A-341
Rheostat		Engine Coolant Temperature, Check <2.4L> .....	13B-908
Circuit Diagram .....	90-229	Engine Coolant Temperature, Check <2.0L> .....	13A-911
RKE (Keyless Entry System) .....	42-59	Fuel Tank Differential Pressure, Check .....	17-220
RKE (Keyless Entry System)		Intake Air Temperature, Check <2.4L> .....	13B-908
Secret Code Registration .....	42-65	Intake Air Temperature, Check <2.0L> .....	13A-911
Transmitter Battery Replacement .....	42-61	Knock .....	16-53
Rocker Arm		Oxygen, Check <2.4L> .....	13B-910
Overhaul <2.4L> .....	11D-29	Oxygen, Check <2.0L> .....	13A-913
Overhaul <2.0L> .....	11B-19	Throttle Position, Adjustment .....	13A-901
Roof Lid Glass		Throttle Position, Check .....	13A-912
Operation Check .....	42-71	Transmission Fluid Temperature, Check <2.0L> .....	23A-341
		Transmission Fluid Temperature, Check <2.4L> .....	23B-330
		Volume Air Flow, Check	
		2.0L ENGINE .....	17-219
		2.4L ENGINE .....	17-228
		Wheel Speed .....	35B-72
		Wheel Speed, Output Voltage Check .....	35B-64
		Sensor Location .....	70-9
		Shift Lever Assembly .....	22A-15
		Shift Lever Assembly	
		Disassembly and Assembly .....	22A-15
		Shift Lock Mechanism	
		Check <2.0L> .....	23A-345
		Check <2.4L> .....	23B-334
		Shock Absorber .....	34-16
		Shock Absorber Assembly	
		Disassembly and Assembly .....	34-18
		Side Air Dam .....	51-12
		Side Impact Sensor .....	52B-215
		Side Turn Signal Light .....	54A-59
		Sight Glass (Refrigerant Level Test) .....	55-98
		Snap Rings	
		Adjustment .....	22B-55
		Solenoid	
		EGR, Check .....	13A-918
		EGR, Check	
		2.0L ENGINE .....	17-225
		Evaporative Emission Purge, Check <2.0L> .....	13A-918
		Evaporative Emission Purge, Check <2.4L> .....	13B-914
		Evaporative Emission Ventilation, Check <2.4L> .....	13B-914
		Evaporative Emission Ventilation, Check <2.0L> .....	13A-918
		Solenoid Location .....	70-17
		Solenoid Valve	
		Check <2.0L> .....	23A-342
		Check <2.4L> .....	23B-331
		Solenoid Valve Location .....	70-17

## S

## Sealant

Automatic Transaxle .....	23C-85
Body .....	42-79
Brakes (Basic) .....	35A-60
Engine <2.4L> .....	11C-64
Engine <2.0L> .....	11A-49
Engine Cooling .....	14-44
Engine Lubrication .....	12-8
Engine Overhaul <2.4L> .....	11D-72
Engine Overhaul <2.0L> .....	11B-58
Equipment .....	54A-126
Exterior .....	51-51
Fuel Supply .....	13C-15
Intake and Exhaust .....	15-17
Manual Transaxle Overhaul .....	22B-54
MFI <2.4L> .....	13B-921
MFI <2.0L> .....	13A-928
Rear Axle .....	27-12
Steering .....	37A-60
Sealant Table .....	00-66
Seat Belt	
Diagnosis .....	52A-2
Seat Belt Pre-Tensioner	
Disposal Procedures .....	52B-222
Seat Belt Warning Light .....	54B-266
Seat Belt Warning Light	
Circuit Diagram .....	90-222
Seat Belts With Pre-Tensioner .....	52B-218
Seat Belts With Pre-Tensioner	
Check .....	52B-221
Second Brake .....	23C-68
Second Brake	
Disassembly and Assembly .....	23C-68
Select Lever .....	22B-38

## TSB Revision

Wheel and Tire .....	31-8	Trunk Lid Latch	
Tightening Torque .....	00-33	Inspection .....	42-59
Timing Belt <2.0L> .....	11A-45	Trunk Lid Striker	
Timing Belt <2.4L> .....	11C-48	Adjustment .....	42-55
Timing Belt		Turn Signal Light	
Overhaul <2.0L> .....	11B-7	Circuit Diagram .....	90-116
Overhaul <2.4L> .....	11D-10		
Replace .....	00-44		
Tension Adjustment .....	11A-17		
Tire .....	31-7		
Tire			
Diagnosis .....	31-2		
Inflation Pressure Check .....	31-7		
Rotation .....	00-66		
Wear Check .....	31-7		
Tone Alarm .....	54B-69		
Torque Converter			
Stall Test <2.0L> .....	23A-22		
Stall Test <2.4L> .....	23B-23		
Trailing Arm .....	34-12		
Trailing Arm			
Bushing, Replacement .....	34-14		
Transaxle .....	23C-9		
Transaxle			
Automatic, Fluid Level Check .....	00-54		
Control .....	23A-346		
Disassembly and Assembly .....	23C-9		
Transaxle (Transmission) .....	22B-7		
Transaxle (Transmission) Mounting			
Inspection .....	32-6		
Transaxle Assembly .....	22A-16		
Transaxle Control <A/T> .....	23A-346		
Transaxle Control <M/T> .....	22A-12		
Transaxle Control Cable			
Adjustment <2.0L> .....	23A-345		
Adjustment <2.4L> .....	23B-334		
Transaxle Mounting .....	32-5		
Transaxle Oil			
Level Check .....	22A-11		
Replacement .....	22A-11		
Transmission Case .....	22B-47		
Transmission Fluid			
Change <2.4L> .....	23B-324		
Change <2.0L> .....	23A-335		
Check <2.0L> .....	23A-334		
Check <2.4L> .....	23B-322		
Transmission Fluid Temperature Sensor			
Check <2.4L> .....	23B-330		
Check <2.0L> .....	23A-341		
Transmission range switch			
A/T <2.4L> .....	13B-840		
A/T <2.0L> .....	13A-841		
Transmission Range Switch			
Adjustment <2.0L> .....	23A-340		
Adjustment <2.4L> .....	23B-328		
Check <2.4L> .....	23B-330		
Check <2.0L> .....	23A-341		
Check <2.0L> .....	23A-339		
Check <2.4L> .....	23B-328		
Transmission Range Switch Control Cable			
Adjustment <2.0L> .....	23A-340		
Adjustment <2.4L> .....	23B-328		
Trims .....	52A-12		
Trouble Code, ABS			
Diagnosis .....	35B-5		
Trunk Lid .....	42-52		
Trunk Lid			
Adjustment .....	42-54		
Clearance Adjustment .....	42-55		
Diagnosis .....	42-52		
Height Adjustment .....	42-55		

## U

Underdrive Clutch .....	23C-58
Underdrive Clutch	
Disassembly and Assembly .....	23C-58
Upper Arm .....	34-9

## V

Vacuum Check	
EGR Port	
2.0L ENGINE .....	17-225
Vacuum Circuit Diagram .....	17-208
Vacuum Control Valve	
Check	
2.0L ENGINE .....	17-224
Vacuum Hose	
Check .....	17-209
Vacuum Hose Routing .....	17-206
Vacuum Hoses .....	17-206
Valve	
Clearance check and adjust .....	11C-10
EGR System, Check	
2.0L ENGINE .....	17-224
Fuel Tank Pressure Relief .....	17-230
Proportioning, Function Test .....	35A-23
Vacuum Control, Check	
2.0L ENGINE .....	17-224
Valve Body .....	23C-75
Valve Body	
Disassembly and Assembly .....	23C-75
Valve Stem Seal .....	11C-27
Vehicle Identification .....	00-16
Vehicle Identification Code Plate .....	00-18
Ventilators .....	55-127
Volume Air Flow Sensor	
Check	
2.0L ENGINE .....	17-219
2.4L ENGINE .....	17-228

**W**

Water Hose .....	14-38
Water Pipe.....	14-38
Water Pump.....	14-35
Wheel .....	31-7
Wheel	
Balance Accuracy .....	31-3
Diagnosis.....	31-2
Runout Check.....	31-7
Wheel Bearing End Play Check	
VEHICLES WITH DISC BRAKE .....	27-5
VEHICLES WITH DRUM BRAKE.....	27-5
Wheel Cylinder Assembly	
Rear Drum Brake, Disassembly and Assembly.....	35A-51
Rear Drum Brake, Inspection .....	35A-52
Wheel Speed Sensor.....	35B-72
Wheel Speed Sensor	
Output Voltage Check.....	35B-64
Wind Noise	
How to Locate.....	42-27
Window Glass .....	42-12
Window Glass	
Diagnosis.....	42-14
Door, Adjustment .....	42-31
Runchannel .....	42-50
Windshield.....	42-15
Windshield	
Wiper and Washer .....	51-15
Windshield Washer.....	54B-203
Windshield Wiper .....	54B-203
Windshield Wiper and Washer	
Circuit Diagram.....	90-162
Wiper and Washer	
Rear.....	51-22
Rear, Circuit Diagram .....	90-166
Windshie.....	51-17