# Standard Test Method for Evaluation of Automotive Engine Oils in the Sequence IIIF, Spark-Ignition Engine<sup>1</sup>

This standard is issued under the fixed designation D6984; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon  $(\varepsilon)$  indicates an editorial change since the last revision or reapproval.

#### INTRODUCTION

Portions of this test method are written for use by laboratories that make use of ASTM Test Monitoring Center (TMC)<sup>2</sup> services (see Annex A1).

The TMC provides reference oils, and engineering and statistical services to laboratories that desire to produce test results that are statistically similar to those produced by laboratories previously calibrated by the TMC.

In general, the Test Purchaser decides if a calibrated test stand is to be used. Organizations such as the American Chemistry Council require that a laboratory utilize the TMC services as part of their test registration process. In addition, the American Petroleum Institute and the Gear Lubricant Review Committee of the Lubricant Review Institute (SAE International) require that a laboratory use the TMC services in seeking qualification of oils against their specifications.

The advantage of using the TMC services to calibrate test stands is that the test laboratory (and hence the Test Purchaser) has an assurance that the test stand was operating at the proper level of test severity. It should also be borne in mind that results obtained in a non-calibrated test stand may not be the same as those obtained in a test stand participating in the ASTM TMC services process.

Laboratories that choose not to use the TMC services may simply disregard these portions.

#### 1. Scope\*

1.1 This test method covers an engine test procedure for evaluating automotive engine oils for certain high-temperature performance characteristics, including oil thickening, varnish deposition, oil consumption, as well as engine wear. Such oils include both single viscosity grade and multiviscosity grade oils that are used in both spark-ignition, gasoline-fueled engines, as well as in diesel engines.

Note 1—Companion test methods used to evaluate engine oil performance for specification requirements are discussed in SAE J304.

1.2 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard.

- 1.2.1 *Exceptions*—The values stated in inches for ring gap measurements are to be regarded as standard, and where there is no direct SI equivalent such as screw threads, National Pipe Threads/diameters, tubing size, or single source supply equipment specifications.
- 1.3 This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory requirements prior to use.
  - 1.4 This test method is arranged as follows:

Subject	Section
Scope	1
Referenced Documents	2
Terminology	3
Summary of Test Method	4
Significance and Use	5
Apparatus	6
Laboratory	6.1
Drawings	6.2
Specified Equipment	6.3
Test Engine	6.4
Engine Parts	6.4.1
Engine Speed and Torque Control	6.5
Sequence IIIF Fluid Conditioning Module	6.6
Engine Cooling System	6.6.1
Flushing Tank	6.7
Coolant Mixing Tank	6.8

<sup>&</sup>lt;sup>1</sup> This test method is under the jurisdiction of ASTM Committee D02 on Petroleum Products, Liquid Fuels, and Lubricants and is the direct responsibility of Subcommittee D02.B0.01 on Passenger Car Engine Oils.

Current edition approved Oct. 1, 2015. Published October 2015. Originally approved in 2003. Last previous edition approved in 2015 as D6984-15. DOI: 10.1520/D6984-15A.

<sup>&</sup>lt;sup>2</sup> Until the next revision of this test method, the ASTM Test Monitoring Center will update changes in the test method by means of information letters. Information letters may be obtained from the ASTM Test Monitoring Center, 6555 Penn Avenue, Pittsburgh, PA 15206-4489. Attention: Administrator. www.astmtmc.cmu.edu. This edition incorporates revisions contained in all information letters through 15–1.

# 15a D6984 – 15a

Subject	Section	Subject	Section
Condenser Cooling Systems	6.9	Engine Oil Pump Priming	9.50
Engine Oil-Cooling System	6.10	Calibration	10
Fuel System	6.11	Laboratory and Engine Test Stand Calibration	10.1
Induction Air Supply Humidity, Temperature, and Pressure		Testing of Reference Oils	10.2
Temperature Measurement	6.13	Reference Oil Test Frequency	10.3
Thermocouple Location	6.13.1	Evaluation of Reference Oil Test Results	10.4
Air-to-Fuel Ratio Determination	6.14	Status of Non-Reference Oil Tests Relative to Reference	10.5
Injector Flow Testing	6.14.1	Oil Test	
Exhaust and Exhaust Back Pressure Systems	6.15	Status of Test Stands Used for Non-Standard Tests	10.6
Blowby Flow Rate Measurement	6.16	Data Acquisition and Control	10.7
Pressure Measurement and Pressure Sensor Location	6.17	Sample Rate	10.7.1
Reagents and Materials	7	Measurement Accuracy	10.7.2
Test Fuel	7.1	Temperature	10.7.3
Engine and Condenser Coolant	7.2	Pressure	10.7.4
Coolant Additive	7.3	Flow	10.7.5
Coolant Preparation	7.4	Speed	10.7.6
Pre-Test Cleaning Materials	7.5	Mass	10.7.7
Sealing and Anti-seize Compounds	7.6	Measurement Resolution	10.7.8
Test Oil Sample Requirements	8	System Time Response	10.7.9
Preparation of Apparatus	9	Quality Index	10.7.10
Condenser Cleaning	9.1	Engine Operating Procedure	11
Intake Manifold Cleaning	9.3	Dipstick and Hole Plug	11.1
Cleaning of Engine Parts (other than the block and heads		Dipstick Hole O-ring	11.2
Engine Block Cleaning	9.5	Engine Start-up and Shutdown Procedures	11.3
Cylinder Head Cleaning	9.6	Start-up	11.4
Engine Build-up Procedure	9.7	Scheduled Shutdown	11.5
General Information	9.7.1	Non-Scheduled Shutdowns	11.6
Special Parts	9.7.2	Oil Sampling	11.7
Hardware Information	9.7.3	Oil Leveling	11.8
Fastener Torque Specifications and Torquing	9.7.4	Air-to-Fuel-Ratio Measurement and Control	11.9
Procedures	0.0	Air-to-Fuel Ratio Verification	11.10
Parts Replacement	9.8	Blowby Flow Rate Measurement	11.11
Engine Block Preparation	9.9	NO <sub>x</sub> Determinations	11.12
Piston Fitting and Numbering	9.10	Data Recording	11.13
Piston Ring Fitting	9.10.1	Initial Run (10 min)	11.14
Pre-Test Camshaft and Lifter Measurements	9.11 9.12	Engine Oil Quality Testing (80 h)	11.15 11.16
Camshaft Bearing Installation		Test Termination	
Camshaft Installation	9.13	Determination of Test Results	12
Main Bearings	9.14	Engine Disassembly	12.2
Crankshaft Installation	9.14.1 9.14.2	Preparation of Parts for Rating of Sticking, Deposits,	12.3
Main Bearing Cap Installation	9.14.2	and Plugging Piston Deposit Ratings	12.4
Crankshaft Sprocket	9.15		12.4
Camshaft Sprocket and Timing Chain	9.10	Post-Test Camshaft and Lifter Wear Measurements	12.5
Crankshaft End Play		End-of Test Used Oil Sample Testing	12.0
Piston Pin Installation	9.18 9.18.1	Viscosity Test Testing Oil Samples for Wear Metals	12.7
Piston Installation Harmonic Balancer	9.18.1	·	12.0
	9.20	Blowby Flow Rate Measurements Oil Consumption Computation	12.3
Connecting Rod Bearings Engine Front Cover	9.20	Photographs of Test Parts	12.10
Coolant Inlet Adapter	9.22	Retention of Representative Test Parts	12.11
·	9.23		12.12
Oil Dipstick Hole		Severity Adjustments  Determination of Operational Validity	12.13
Oil Pan Cylinder Head Assembly	9.24 9.25	Determination of Operational Validity Report	13
Adjustment of Valve Spring Forces	9.26	Report Forms	13.1
Cylinder Head Installation	9.27	Precision of Reported Units	13.4
Hydraulic Valve Lifters	9.28	Deviations from Test Operational Limits	13.4
Pushrods	9.29	Precision and Bias	14
Valve Train Loading	9.30	Keywords	15
Intake Manifold	9.31	Annexes	15
Rocker Covers	9.32	ASTM Test Monitoring Center: Organization	Annex A1
Water Inlet Adapter	9.33	ASTM Test Monitoring Center: Organization  ASTM Test Monitoring Center: Calibration Procedures	Annex A2
Condenser	9.34	ASTM Test Monitoring Center: Cambration Procedures  ASTM Test Monitoring Center: Maintenance Activities	Annex A3
Coolant Outlet Adapter	9.35	ASTM Test Monitoring Center: Maintenance Activities  ASTM Test Monitoring Center: Related Information	Annex A4
·	9.36	Sequence IIIF Test Parts Replacement Guidelines	Annex A5
External Oil Cooling System Oil Sample Valve	9.37	Sequence IIIF Determination Volume of Engine Oil in Pan	Annex A6
Ignition System	9.38	Sequence IIIF Test Fuel Analysis	Annex A7
Throttle Body	9.39	Sequence IIIF Test Report Forms and Data Dictionary	Annex A8
· ·		· · · · · · · · · · · · · · · · · · ·	Annex A9
Accessory Drive Units  Exhaust Manifolds, Water-Cooled	9.40	Sequence IIIF Test Air-to-Fuel Ratio Control Flow Chart	
Exhaust Manifolds, Water-Cooled	9.41 9.42	Sequence IIIF Test Set Points and Control States	Annex A1
Engine Flywheel  Pressure Checking of Engine Coolent System		Sequence IIIF Quality Index Upper and Lower Values	Annex A1
Pressure Checking of Engine Coolant System	9.43	Sequence IIIF Engine Oil Level Worksheet	Annex A13
Lifting of Assembled Engines  Mounting the Engine on the Test Stand	9.44	Engine Build Worksheets	Annex A1
Mounting the Engine on the Test Stand  External Cooling System Cleaning	9.45	Blowby Flow Rate Determination	
External Cooling System Cleaning	9.46	Safety Precautions	Annex A1
Engine Coolant Jacket Cleaning (Flushing)	9.47	Sequence IIIF Blueprint Listing Fluid Conditioning Module Components	Annex A1
Coolant Charging	9.48	Fluid Conditioning Module Components  Engine Oil Cooling System Configuration	Annex A13
Test Oil Charging	9.49	Engine Oil Cooling System Configuration	ATTITIES A D

Subject
Guidelines For Hardware Subject To First In – First Out
Criteria

Appendixes
Sequence IIIFHD Test Procedure
Sequence IIIFVIS Test Procedure

Appendix X1
Appendix X2

Annex A19

Section

#### 2. Referenced Documents

2.1 ASTM Standards:<sup>3</sup>

D86 Test Method for Distillation of Petroleum Products at Atmospheric Pressure

D130 Test Method for Corrosiveness to Copper from Petroleum Products by Copper Strip Test

D235 Specification for Mineral Spirits (Petroleum Spirits) (Hydrocarbon Dry Cleaning Solvent)

D240 Test Method for Heat of Combustion of Liquid Hydrocarbon Fuels by Bomb Calorimeter

D323 Test Method for Vapor Pressure of Petroleum Products (Reid Method)

D381 Test Method for Gum Content in Fuels by Jet Evaporation

D445 Test Method for Kinematic Viscosity of Transparent and Opaque Liquids (and Calculation of Dynamic Viscosity)

D525 Test Method for Oxidation Stability of Gasoline (Induction Period Method)

D1319 Test Method for Hydrocarbon Types in Liquid Petroleum Products by Fluorescent Indicator Adsorption

D2699 Test Method for Research Octane Number of Spark-Ignition Engine Fuel

D2700 Test Method for Motor Octane Number of Spark-Ignition Engine Fuel

D3231 Test Method for Phosphorus in Gasoline

D3237 Test Method for Lead in Gasoline by Atomic Absorption Spectroscopy

D3338 Test Method for Estimation of Net Heat of Combustion of Aviation Fuels

D3343 Test Method for Estimation of Hydrogen Content of Aviation Fuels

D4052 Test Method for Density, Relative Density, and API Gravity of Liquids by Digital Density Meter

D4175 Terminology Relating to Petroleum, Petroleum Products, and Lubricants

D4485 Specification for Performance of Active API Service Category Engine Oils

D4684 Test Method for Determination of Yield Stress and Apparent Viscosity of Engine Oils at Low Temperature

D4815 Test Method for Determination of MTBE, ETBE, TAME, DIPE, tertiary-Amyl Alcohol and C<sub>1</sub> to C<sub>4</sub> Alcohols in Gasoline by Gas Chromatography

D5185 Test Method for Multielement Determination of Used and Unused Lubricating Oils and Base Oils by Inductively Coupled Plasma Atomic Emission Spectrometry (ICP-AES)

D5191 Test Method for Vapor Pressure of Petroleum Products (Mini Method)

D5293 Test Method for Apparent Viscosity of Engine Oils and Base Stocks Between -10 °C and -35 °C Using Cold-Cranking Simulator

D5452 Test Method for Particulate Contamination in Aviation Fuels by Laboratory Filtration

D5453 Test Method for Determination of Total Sulfur in Light Hydrocarbons, Spark Ignition Engine Fuel, Diesel Engine Fuel, and Engine Oil by Ultraviolet Fluorescence

D5862 Test Method for Evaluation of Engine Oils in Two-Stroke Cycle Turbo-Supercharged 6V92TA Diesel Engine (Withdrawn 2009)<sup>4</sup>

D6557 Test Method for Evaluation of Rust Preventive Characteristics of Automotive Engine Oils

D6593 Test Method for Evaluation of Automotive Engine
Oils for Inhibition of Deposit Formation in a SparkIgnition Internal Combustion Engine Fueled with Gasoline and Operated Under Low-Temperature, Light-Duty
Conditions

D6750 Test Methods for Evaluation of Engine Oils in a High-Speed, Single-Cylinder Diesel Engine—1K Procedure (0.4 % Fuel Sulfur) and 1N Procedure (0.04 % Fuel Sulfur)

D7320 Test Method for Evaluation of Automotive Engine Oils in the Sequence IIIG, Spark-Ignition Engine

D7422 Test Method for Evaluation of Diesel Engine Oils in T-12 Exhaust Gas Recirculation Diesel Engine

E29 Practice for Using Significant Digits in Test Data to Determine Conformance with Specifications

E191 Specification for Apparatus For Microdetermination of Carbon and Hydrogen in Organic and Organo-Metallic Compounds

E608/E608M Specification for Mineral-Insulated, Metal-Sheathed Base Metal Thermocouples

E1119 Specification for Industrial Grade Ethylene Glycol G40 Terminology Relating to Wear and Erosion

IEEE/ASTM SI-10 Standard for Use of the International System of Units (SI): The Modern Metric System

2.2 Military Specification:<sup>5</sup>

MIL-PRF-2104 Lubricating Oil, Internal Combustion Engine, Tactical Service

2.3 SAE Standards:<sup>6</sup>

J183 Engine Oil Performance and Engine Service Classification (Other Than "Energy-Conserving")

J300 Engine Oil Viscosity Classification \*HS-23/00\*

J304 Engine Oil Tests

<sup>&</sup>lt;sup>3</sup> For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

<sup>&</sup>lt;sup>4</sup>The last approved version of this historical standard is referenced on www.astm.org.

<sup>&</sup>lt;sup>5</sup> Available from Standardization Documents Order Desk, DODSSP, Bldg. 4, Section D, 700 Robbins Ave., Philadelphia, PA 19111-5098.

<sup>&</sup>lt;sup>6</sup> Available from Society of Automotive Engineers, 400 Commonwealth Dr., Warrendale, PA 15096-0001. These standards are not available separately. Order either SAE Handbook Vol. 3, or SAE Fuels and Lubricants Standards Manual HS-23.

2.4 Other ASTM Document:<sup>7</sup>

ASTM Deposit Rating Manual 20 (Formerly CRC Manual 20)

#### 3. Terminology

- 3.1 Definitions:
- 3.1.1 *blowby, n—in internal combustion engines*, that portion of the combustion products and unburned air/fuel mixture that leaks past piston rings into the engine crankcase during operation.
- 3.1.2 BTDC (before top dead center), n—used with the degree symbol to indicate the angular position of the crankshaft relative to its position at the point of uppermost travel of the piston in the cylinder.
- 3.1.3 *calibrate*, *v*—to determine the indication or output of a device (e.g., thermometer, manometer, engine) with respect to that of a standard.
- 3.1.4 *clogging*, *n*—the restriction of a flow path due to the accumulation of material along the flow path boundaries.

D417

- 3.1.5 cold-stuck piston ring, n—in internal combustion engines, a piston ring that is stuck when the piston and ring are at room temperature, but inspection shows that it was free during engine operation.
- 3.1.5.1 *Discussion*—A cold-stuck piston ring cannot be moved with moderate finger pressure. It is characterized by a polished face over its entire circumference, indicating essentially no blowby passed over the ring face during engine operation.

  D4175
- 3.1.6 *correction factor*, *n*—a mathematical adjustment to a test result to compensate for industry-wide shifts in severity.

D417

- 3.1.7 *corrosion*, *n*—the chemical or electrochemical reaction between a material, usually a metal surface, and its environment that can produce a deterioration of the material and its properties.

  D6557
- 3.1.8 *debris, n—in internal combustion engines*, solid contaminant materials unintentionally introduced into the engine or resulting from wear.

  D5862
- 3.1.9 *engine oil*, *n*—a liquid that reduces friction or wear, or both, between the moving parts within an engine; removes heat, particularly from the underside of pistons; and serves as a combustion gas sealant for piston rings.
- 3.1.9.1 *Discussion*—It may contain additives to enhance certain properties. Inhibition of engine rusting, deposit formation, valve train wear, oil oxidation, and foaming are examples.

  D6750
- 3.1.10 *EWMA*, *n*—abbreviation for exponentially-weighted moving average. **D4175**
- 3.1.11 free piston ring, n—in internal combustion engines, a piston ring that will fall in its groove under the force of its own weight when the piston, with the ring in a horizontal plane, is turned 90° (putting the ring in a vertical plane).

  D5862
- <sup>7</sup> For Stock #TMCMNL20, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org.

- 3.1.11.1 *Discussion*—In the determination of this condition, the ring may be touched slightly to overcome static friction.
- 3.1.12 hot-stuck piston ring, n—in internal combustion engines, a piston ring that is stuck when the piston and ring are at room temperature, and inspection shows that it was stuck during engine operation.
- 3.1.12.1 *Discussion*—The portion of the ring that is stuck cannot be moved with moderate finger pressure. A hot-stuck piston ring is characterized by varnish or carbon across some portion of its face, indicating that portion of the ring was not contacting the cylinder wall during engine operation. **D4175**
- 3.1.13 *lubricant test monitoring system (LTMS)*, *n*—an analytical system in which ASTM calibration test data are used to manage lubricant test precision and severity (bias). **D4175**
- 3.1.14 *LTMS date*, *n*—the date the test was completed unless a different date is assigned by the TMC. **D4175**
- 3.1.15 *LTMS time*, n—the time the test was completed unless a different time is assigned by the TMC. **D4175**
- 3.1.16 *lubricant*, *n*—any material interposed between two surfaces that reduces the friction or wear, or both, between them.

  D5862
- 3.1.17 *lubricating oil, n*—a liquid lubricant, usually comprising several ingredients, including a major portion of base oil and minor portions of various additives. **D4175**
- 3.1.18 material safety data sheet, (MSDS), n—a fact sheet summarizing information about material identification; hazardous ingredients; health, physical, and fire hazards; first aid; chemical reactivities and incompatibilities; spill, leak, and disposal procedures; and protective measures required for safe handling and storage. http://www.msdssearch.com
- 3.1.19 non-compounded engine oil, n—a lubricating oil having a viscosity within the range of viscosities of oils normally used in engines, and that may contain anti-foam agents or pour depressants, or both, but not other additives.
- 3.1.19.1 *Discussion*—In this test method non-compounded oil is also known as build-up oil. **D4175**
- 3.1.20 *non-reference oil, n*—any oil, other than a reference oil; such as a research formulation, commercial oil, or candidate oil.

  D4175
- 3.1.21 *oxidation*, *n*—*of engine oil*, the reaction of the oil with an electron acceptor, generally oxygen, that can produce deleterious acidic or resinous materials often manifested as sludge formation, varnish formation, viscosity increase, or corrosion, or a combination thereof.
- 3.1.22 *quality index (QI), n*—a mathematical formula that uses data from controlled parameters to calculate a value indicative of control performance. **D4175**
- 3.1.23 *reference oil, n*—an oil of known performance characteristics, used as a basis for comparison.
- 3.1.23.1 *Discussion*—Reference oils are used to calibrate testing facilities, to compare the performance of other oils, or to evaluate other materials (such as seals) that interact with oils.

  D4175
- 3.1.24 *rust* (*coatings*), *n*—*of iron or its alloys*, a corrosion product consisting of hydrated iron oxides, usually reddish in color but can also be brown-to-black.

- 3.1.25 SA, n—abbreviation for severity adjustment.
- 3.1.26 *scoring*, *n*—*in tribology*, a severe form of wear characterized by the formation of extensive grooves and scratches in the direction of sliding.

  G40
- 3.1.27 *scuffing*, *n*—*in lubrication*, damage caused by instantaneous localized welding between surfaces in relative motion that does not result in immobilization of the parts.

  D6593
- 3.1.28 *test oil, n*—any oil subjected to evaluation in an established procedure.

  D6557
- 3.1.28.1 *Discussion*—It can be any oil selected by the laboratory conducting the test. It could be an experimental product or a commercially available oil. Often, it is an oil that is a candidate for approval against engine oil specifications (such as manufacturers' or military specifications, and so forth).
- 3.1.29 *test procedure*, *n*—one where test parameters, apparatus, apparatus preparation, and measurements are principal items specified.
- 3.1.30 *used oil, n*—any oil that has been in a piece of equipment (for example, an engine, gearbox, transformer, or turbine), whether operated or not.

  D4175
- 3.1.31 *varnish*, *n*—*in internal combustion engines*, a hard, dry, generally lustrous deposit that can be removed by solvents, but not by wiping with a cloth.

  D4175
- 3.1.32 *wear, n*—the loss of material from a surface, generally occurring between two surfaces in relative motion, and resulting from mechanical or chemical action or a combination of both.

  D7422
  - 3.2 Definitions of Terms Specific to This Standard:
- 3.2.1 *build-up oil*, *n*—EF-411, non-compounded, ISO VG 32 (SAE 10) oil used in lubricating some of the Sequence IIIF parts during engine assembly.
- 3.2.2 *calibrated test stand, n*—a test stand on which Sequence IIIF engine oil tests are conducted within the lubricant test monitoring system as administered by the TMC. (See 10.1).
- 3.2.3 central parts distributor (CPD), n—the manufacturer and supplier of many of the parts and fixtures used in this test method.
- 3.2.3.1 *Discussion*—Because of the need for rigorous inspection and control of many of the parts used in this test method, and because of the need for careful manufacture of special parts and fixtures used, companies having the capabilities to provide the needed services have been selected as the official suppliers for the Sequence IIIF test method. These companies work closely with the original parts suppliers, with the Test Procedure Developer,<sup>8</sup> and with the ASTM groups associated with the test method to help ensure that the equipment and materials used in the method function satisfactorily.
- 3.2.4 *critical parts (CP), n*—those components used in the test which are known to affect test severity.
- <sup>8</sup> General Motors Corp., Research and Developmental Ctr., Mail Code 480-106-160, Sequence IIIF Test Coordinator, 30500 Mound Rd., Box 9055, Warren, MI 48090–9055.

- 3.2.4.1 *Discussion*—Critical parts shall be obtained from the Central Parts Distributor or Special Parts Supplier, who will identify them with either a serial number or a batch/lot control number.
- 3.2.5 EOT time (end of test time), n—Twenty minutes after the engine reaches 80 test h of operation, which allows 90 s for ramp-down, a 15-min wait for oil to drain into the sump, and allows the operator 3.5 min to measure oil level.
- 3.2.6 non-production parts (NP), n—components used in the test, which are available only through the Central Parts Distributor, Special Parts Supplier, or the Test Procedure Developer.
- 3.2.7 participating laboratory, n—a laboratory equipped to conduct Sequence IIIF tests, which conducts reference oil tests in cooperation with the TMC, in order to have calibrated test stands available for non-reference oil testing.
- 3.2.8 pinched piston ring, n—an installed piston ring which will not move in its groove under moderate finger pressure, but which has a polished face over its entire circumference indicating that it was free during engine operation. The ring may be restricted over varying degrees of its circumference.
- 3.2.9 reference oil test, n—a standard Sequence IIIF engine oil test of a reference oil designated by the TMC.
- 3.2.10 service parts operations parts (SPO), n—these test components are obtained from Service Parts Operations, a division of General Motors Corp.
- 3.2.11 *sluggish piston ring, n*—an installed piston ring which offers resistance to movement in its groove, but can be pressed into or out of the groove under moderate finger pressure; when so moved, it does not spring back (one that is neither free nor stuck).
- 3.2.12 *special parts supplier (SPS)*, *n*—the manufacturer and supplier of many of the parts and fixtures used in this test method.
- 3.2.13 *special test parts (stp), n*—parts that do not meet all the definitions of critical parts, non-production parts, or SPO parts, but shall be obtained from the Special Parts Supplier.
- 3.2.14 *standard test, (valid test), n*—an operationally valid, full-length Sequence IIIF test conducted on a calibrated test stand in accordance with the conditions listed in this test method.
- 3.2.15 *stuck piston ring, n*—one that is either partially or completely bound in its groove and cannot be readily moved with moderate finger pressure.
- 3.2.16 *test full mark*, *n*—the oil level established after the 10-min initial run-in.
- 3.2.17 *test procedure developer, n*—the group or agency which developed the Sequence IIIF test procedure before its standardization by ASTM, and which continues to be involved with the test in respect to modifications in the test method, development of Information Letters, supply of test parts, and so forth.
- 3.2.17.1 *Discussion*—In the case of the Sequence IIIF test, the Test Procedure Developer is General Motors Research and Development Center.



- 3.2.18 *test stand, n*—a suitable foundation (such as a bedplate) to which is mounted a dynamometer, and which is equipped with a suitable data acquisition system, fluids process control system, supplies of electricity, compressed air, and so forth, to provide a means for mounting and operating an engine in order to conduct a Sequence IIIF engine oil test.
- 3.2.19 *test start*, *n*—introduction of test oil into the engine after the final assembly and mounting in the test stand.
- 3.2.20 test start time, n—the time that test oil was introduced into the engine on the test stand.

#### 4. Summary of Test Method

- 4.1 A 3800 Series II V-6 test engine block, with a displacement of 3.8 L, is solvent-cleaned, measured, and rebuilt using new parts installed as specified in this test method.
- 4.2 The engine is installed on a test stand equipped with an appropriate data acquisition system, the required fluids process control system, and all necessary accessories for controlling speed, torque, and various other operating parameters.
  - 4.3 The engine is charged with the test oil.
- 4.4 The engine is operated for an initial run-in period of 10 min to check all test stand operating systems and to establish a zero hour oil level reading and initial oil viscosity sample.
- 4.5 Following the initial run-in of 10 min and oil level determination, the engine is operated under non-cyclic, moderately high speed, torque, and temperature conditions for 80 h, in 10 h segments.
- 4.6 The initial oil level in the oil pan is determined after the initial run-in of 10 min, and subsequent oil level calculations are determined during the oil leveling period at the end of each 10 h segment.
- 4.7 Used oil samples are taken after the initial run-in of 10 min and after each 10 h test segment; kinematic viscosity at 40 °C is determined for each of the ten samples; the percentage change in viscosity of the nine latter samples is determined relative to the viscosity of the first used oil sample (10 min initial run-in).
- 4.8 At the conclusion of the test, the engine is disassembled and the parts are visually rated to determine the extent of deposits formed. In addition, wear measurements are obtained.

#### 5. Significance and Use

- 5.1 This test method was developed to evaluate automotive engine oils for protection against oil thickening and engine wear during moderately high-speed, high-temperature service.
- 5.2 The increase in oil viscosity obtained in this test method indicates the tendency of an oil to thicken because of oxidation. In automotive service, such thickening can cause oil pump starvation and resultant catastrophic engine failures.
- 5.3 The deposit ratings for an oil indicate the tendency for the formation of deposits throughout the engine, including those that can cause sticking of the piston rings in their grooves. This can be involved in the loss of compression pressures in the engine.

- 5.4 The camshaft and lifter wear values obtained in this test method provide a measure of the anti-wear quality of an oil under conditions of high unit pressure mechanical contact.
- 5.5 The test method was developed to correlate with oils of known good and poor protection against oil thickening and engine wear. Specially formulated oils that produce less than desirable results with unleaded fuels were also used during the development of this test method.
- 5.6 The Sequence IIIF engine oil test has replaced the Sequence IIIE test and can be used in specifications and classifications of engine lubricating oils, such as:
  - 5.6.1 Specification D4485,
  - 5.6.2 Military Specification MIL-PRF-2104, and
  - 5.6.3 SAE Classification J183.

#### 6. Apparatus

- 6.1 *Laboratory*—Observe the following laboratory conditions to ensure good control of test operations and good repeatability:
- 6.1.1 Maintain the ambient laboratory atmosphere relatively free of dirt, dust, and other contaminants.
- 6.1.2 Control the temperature of the room in which parts measurements are made so that the temperature for after-test measurements is within a range of  $\pm$  3 °C relative to the temperature for the before-test measurements. If difficulties with parts fits are encountered, consider the effects of temperature coefficient of expansion. (See 6.2.)
- 6.1.3 Filter the air in the engine build-up area, and control its temperature and humidity to prevent accumulation of dirt or rust on engine parts.
- 6.1.4 If an engine is assembled in an area of controlled environment and moved to a non-controlled area, provide suitable protection of the engine so that moist air cannot enter the engine and promote rusting before the test.
- 6.1.5 Do not permit air from fans or ventilation systems to blow directly on an engine mounted on a test stand during test operation.
- 6.2 *Drawings*—Obtain the equipment drawings referenced in Annex A16 of this test method from the TMC. Because the drawings may not be to scale or may not contain dimensions when using them to fabricate special parts, do not use a dimensionless drawing as a pattern. Drawings supplied with dimensions are considered to be correct when the temperature of the equipment is 22  $^{\circ}$ C  $\pm$  3  $^{\circ}$ C, unless otherwise specified.
- 6.3 Specified Equipment—Use the equipment specified in the procedure whenever possible. Substitution of equivalent equipment is allowed, but only after equivalency has been proven to the satisfaction of the TMC, the Test Procedure Developer, and the ASTM Sequence IIIF Surveillance Panel.
- 6.3.1 Do not use heat lamps or fans directed at the engine, and do not use insulation on the engine for oil or coolant temperature control.
- Note 2—For operator safety and the protection of test components, the use of shielding and insulation on the exhaust system may be incorporated downstream of the oxygen sensor elbow.
- 6.4 *Test Engine*—The test engine is based on a 1996-97 L36 3800 Series II V-6 engine with a displacement of 3.8 L and a

9.0:1 compression ratio, equipped with a production fuel injection system, a retrofit flat-tappet valvetrain, and a special Powertrain control module (PCM) for test specific dynamometer operation. Rebuild the engine as specified in this test method.

Note 3—Complete test engines are not available for purchase. Test engines can be rebuilt using parts and test kits. See Sequence IIIF Engine Assembly Manual<sup>2</sup>; see Annex A5 and Annex A16 for listings of parts and related equipment.

- 6.4.1 *Engine Parts*—Use the engine parts specified in the Sequence IIIF Engine Assembly Manual.
- 6.4.1.1 Use all engine parts as received from the supplier, Central Parts Distributor, Special Parts Supplier, or original equipment manufacturer, unless modifications are specified in this test method or the Sequence IIIF Engine Assembly Manual.
- 6.4.1.2 Do not divert any parts obtained for use in Sequence IIIF testing to other applications.
- 6.4.1.3 Before disposing of any Sequence IIIF engine parts, destroy or otherwise render them useless for automotive engine applications.
- 6.4.1.4 Use the components listed in Annex A19 on a first in first out basis. Specific guidelines are also listed in Annex A19.
- 6.5 Engine Speed and Torque Control—Use dynamometer speed and torque control systems that are capable of controlling the speed and torque as specified in Section 11 of this procedure.
- 6.6 Sequence IIIF Fluid Conditioning Module—Use the Kundinger Fluid Conditioning Module<sup>9</sup> to control the following parameters: engine coolant, condenser coolant, oil cooler coolant, exhaust manifold coolant, and the test fuel supply. The system incorporates the following features: pumps, flow meters, flow control and three-way control valves, external heating and cooling systems, pressure regulator, and low-point drains. The system integrates with the test stand data acquisition and control computer for process control. If a laboratory wishes to build its own Fluid Conditioning Module, a list of suitable equipment can be found in Annex A17.
- 6.6.1 Engine Cooling System—The fluid conditioning module system supplies non-pressurized coolant at a flow rate of 160 L/min and controls temperature at 122 °C at the engine coolant outlet. The system incorporates the following features: pump, vortex-type flow meter, flow control and three-way control valves, external heating and cooling systems, and low-point drains. The system integrates with the test stand data acquisition and control computer for process control and maintains the specified engine coolant temperature and flow. The system should be flushed with clean water at least once each reference period.
- 6.7 Flushing Tank—Use a flushing tank such as that shown in drawings RX-116924-C, RX-117230-E, and RX-117231-C<sup>2</sup>

<sup>9</sup> A suitable Fluid Conditioning Module is available from Kundinger Fluid Controls, 171 Harmon Rd., Auburn Hills, MI 48326.

to circulate the cleaning agents. Use plumbing materials that are impervious to the acidic cleaning agents (stainless steel is satisfactory).

- 6.8 Coolant Mixing Tank—Use a mixing tank such as that shown in drawing RX-117350-D<sup>2</sup> to premix the engine coolant.
- 6.9 Condenser Cooling System—Contained in the fluid conditioning module, supplies non-pressurized coolant at a flow rate of  $10 \, \text{L/min} \pm 2 \, \text{L/min}$  and temperature controlled at  $40\,^{\circ}\text{C}$  (see Annex A11) at the condenser outlet. The system incorporates the following features: condenser heat exchanger, BX-212-1 or OHT3F-075- $1^{11,10}$  condenser adapter fitting, pump, magnetic-type flow meter, flow control and three-way control valves, external heating and cooling systems, and low-point drains. The system integrates with the test stand data acquisition and control computer for process control and maintains the specified coolant temperature and flow.
- 6.10 Engine Oil-Cooling System—The system consists of an oil filter adapter, engine-mounted oil cooler, gaskets as specified in the Engine Assembly Manual, Section 8-Sheet 3 and 3a and a shell-and-tube heat exchanger. The engine oil-cooling system uses engine coolant pumped from the Fluid Conditioning Module through a three-way control valve to the oil cooler circuit which contains a heat exchanger prior to the enginemounted oil cooler. To maintain the specified oil temperature of 155 °C at the oil filter adapter, the three-way control valve varies the coolant flow as necessary through the oil cooler circuit. The heat exchanger in the oil cooler coolant circuit is a tube-and-shell style and uses process water as the cooling media (see Fig. A18.1). When testing high oxidation-sensitive oils, the oil cooling system may go into a bypass mode, causing the engine-mounted oil cooler to be by-passed. In this condition, the TMC may allow engineering judgment for the oil temperature Quality Index on reference oil tests.
  - 6.10.1 Replace the oil cooler after every test.
  - 6.10.2 Do not use cuprous lines or fittings in the oil system.
  - 6.10.3 Do not use magnetic plugs in the oil system.
- 6.10.4 Use suitable hose and fittings when plumbing the oil-cooling system.
- 6.10.5 The oil cooler, oil filter, or both can be replaced once each test if the oil filter pressure differential during test operations is greater than 100 kPa, if bypass operation is detected or if the oil pressure delta slowly climbs as test hours are accumulated and decreases by more than 10 kPa in less than 1 min.
- 6.10.5.1 Replacement of the oil cooler, oil filter, or both may be performed only once per test (that is, if a filter is replaced at 30 h, the cooler cannot be replaced at 50 h).
- 6.10.5.2 If the oil filter is replaced during the test, drain any oil contained in the old oil filter into the new oil filter before installing it on the test engine.

<sup>&</sup>lt;sup>11</sup> The sole source of supply of the apparatus known to the committee at this time is OH Technologies Inc. P.O. Box 5039, Mentor, OH 44061-5039.

<sup>&</sup>lt;sup>10</sup> If you are aware of alternative suppliers, please provide this information to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, <sup>1</sup> which you may attend.

- 6.10.5.3 No new test oil may be added to the engine as a result of oil filter or oil cooler replacement. Consider as oil consumption any oil lost as a result of oil filter or oil cooler replacement.
- 6.10.5.4 If the oil cooler, oil filter, or both are replaced during a test, place a note in the test report detailing what components were replaced and when they were replaced.
- 6.11 Fuel System—Contained in the Fluid Conditioning Module is a pressurized, recirculating fuel system, including a pressure regulator to provide 377.5 kPa  $\pm$  12.5 kPa fuel pressure. The system should be switched off so no fuel pressure is present at the injector rail during engine shutdowns.
- 6.12 Induction Air Supply Humidity, Temperature, and Pressure—Maintain the throttle body intake air at a moisture content of 11.4 g/kg  $\pm$  0.7 g/kg of dry air, a dry bulb temperature of 27 °C  $\pm$  2 °C, and a static pressure of 0.050 kPa (see Annex A10). Measure temperature and pressure at the inlet air adapter.
- 6.13 Temperature Measurement—Use 1.6 mm or 3.2 mm metal-sheathed, Specification E608/E608M, iron-constantan (Type J) thermocouples for temperature measurements. Use the shortest possible thermocouples to meet the insertion depth requirements listed in this test method and minimize exposed thermocouple sheathing.
- 6.13.1 *Thermocouple Location*—Locate the sensing tip of all thermocouples in the center of the stream of the medium involved, unless otherwise specified.
- 6.13.1.1 *Oil Filter Adapter*—Install the thermocouple in the tapped hole in the oil filter adapter as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 3.
- 6.13.1.2 *Oil Pan (Sump)*—Install the thermocouple in the oil sump drain plug OHT3F-063-1 with the tip extending 19 mm to 25 mm beyond the end of the sump drain plug.
- 6.13.1.3 *Engine Coolant In*—Install the thermocouple in the coolant inlet adapter OHT3F-031-1 with the sensing tip centered in the coolant flow.
- 6.13.1.4 *Engine Coolant Out*—Install the thermocouple for the coolant outlet OHT3F-034-1 with the sensing tip centered in the coolant flow.
- 6.13.1.5 *Condenser Coolant Out*—Locate the thermocouple in the coolant-out fitting in the condenser with the sensing tip centered in the coolant flow.
- 6.13.1.6 *Blowby Gas*—Install the thermocouple at the outlet of the condenser with the sensing tip centered in the blowby gas flow.
- 6.13.1.7 *Fuel*—Install the thermocouple in the fuel rail fittings on the inlet side of the fuel rail.
- 6.13.1.8 *Inlet Air*—Install the thermocouple in the inlet air adapter, as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 4.
- 6.14 Air-to-Fuel Ratio Determination—Determine the engine air-to-fuel ratio (AFR) by measuring the CO, CO<sub>2</sub>, and O<sub>2</sub> components of the exhaust gas sample with electronic exhaust gas analysis equipment. When using electronic exhaust gas analyzers, exercise particular care to dry the exhaust gas sample prior to introducing it into the analyzer. Take the

- exhaust gas samples from the exhaust manifold exit flanges. (See Annex A9 and Sequence IIIF Engine Assembly Manual, Section 8-Sheet 1.)
- 6.14.1 *Injector Flow Testing*—Flow test the fuel injectors before each test according to the following procedure:
  - 6.14.1.1 Use aliphatic naphtha as the calibration fluid.
  - 6.14.1.2 Apply 276 kPa to the fuel rail.
  - 6.14.1.3 Continuously apply 13 V to the injector solenoid.
- 6.14.1.4 Allow the injector to spray into a graduated cylinder capable of holding at least 250 mL.
- 6.14.1.5 Volume-check all injectors for 60 s and note the volume produced by each injector.
- 6.14.1.6 Observe the spray pattern that each injector produces; if the injector has a straight stream or dribbles, it should be discarded.
- 6.14.1.7 The six injectors that are to be installed on an engine fuel rail shall produce volumes that are within 5 mL of each other
- 6.14.2 Remove the solvent that is remaining in the injector from the flow check using compressed air.
  - 6.15 Exhaust and Exhaust Back Pressure Systems:
- 6.15.1 Exhaust Manifolds and Pipes—Install water-cooled exhaust manifolds and stainless runners as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 2.
- 6.15.2 Water-Jacketed Exhaust Pipes—For safety, water-jacketed exhaust pipes or external water spray systems are allowed only when introduced beyond the Y pipe and after the system drops below the bedplate or enters the overhead loft.
- 6.15.3 Exhaust Sample Lines—Install exhaust sample lines in the two exhaust manifold exit flanges. Both left and right banks should use the same sample line location (inboard or outboard), as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 1. Use good laboratory practice to ensure that water does not accumulate in the lines during engine operation.
- 6.15.4 Back-Pressure Lines—Install exhaust-backpressure lines in the two exhaust manifold exit flanges. Both left and right banks should use the same backpressure measurement location (inboard or outboard), as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 1. Use good laboratory practice to ensure that water does not accumulate in the lines during engine operation.
- 6.16 Blowby Flow Rate Measurement—Use the sharp-edge orifice meter, part number RX-116169-A1, revision N, to measure engine blowby flow rates. (See 11.11.)
- 6.17 Pressure Measurement and Pressure Sensor Location—Use electronic pressure transducers located as indicated in this test method.
- 6.17.1 *Intake Manifold Vacuum*—Use a transducer having a range of 0 kPa to 100 kPa. Connect the transducer to the vacuum outlet located on the intake plenum main vacuum port. Tee the transducer, manifold absolute pressure sensor, and fuel rail pressure regulator all together from the main port.
- 6.17.2 *Engine Oil Gallery Pressure*—Use a transducer having a range of 0 kPa to 700 kPa. Connect the transducer to the location shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 3 (OUT Port, oil to block).

- 6.17.3 *Oil Pump Outlet Pressure*—Use a transducer having a range of 0 kPa to 700 kPa. Connect the transducer to the location shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 3 (IN Port, oil to filter).
- 6.17.4 Exhaust Back Pressure—Use a transducer having a range of 0 kPa to 10 kPa. Attach the line to the exhaust end plate as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 1.
- 6.17.5 *Inlet Air Pressure*—Use a transducer having a range of 125 Pa. Connect the transducer to the air inlet adapter as shown in the Sequence IIIF Engine Assembly Manual, Section 8-Sheet 4.
- 6.17.6 *Crankcase Pressure*—Use a transducer having a range of -125 Pa to +125 Pa. Connect the transducer to the front of the lower intake manifold as shown in the Sequence IIIF Engine Assembly Manual, Section 6-Sheet 7.
- 6.18 *PCV Plug*—Block off the positive crankcase ventilation system during testing using a dummy PCV valve, part number OHT3F-002-1, as shown in the Sequence IIIF Engine Assembly Manual, Section 6-Sheet 11.
- 6.19 *Parts Modifications*—Modify the following parts according to the instructions listed in the Sequence IIIF Engine Assembly Manual:
  - 6.19.1 Throttle Body, Section 7-Sheet 5.
  - 6.19.2 Intake Manifold, Section 6-Sheet 7.
  - 6.19.3 Engine Block, Section 1-Sheet 2.

#### 7. Reagents and Materials

- 7.1 *Test Fuel*—Use only EEE unleaded fuel<sup>12,10</sup> (**Warning**—Flammable. Health hazard) (see Annex A7, Fig. A7.1), observing the following:
- 7.1.1 Make certain that all tanks used for transportation and storage are clean before filling with test fuel.
- 7.1.2 Verify that at least 2000 L of test fuel (**Warning**—Flammable. Health hazard) is available for use before initiating a test.
- 7.1.3 Analyze quarterly the contents of each storage tank that contains fuel used for qualified Sequence IIIF tests to ensure the fuel has not deteriorated or been contaminated in storage. Analyze the fuel for Distillation, Gravity, RVP, Sulfur, and Gums. Send the results from these analyses to the TMC for inclusion in the Sequence III Test Fuel database.
- 7.2 Engine and Condenser Coolant—Use ethylene glycol meeting Specification E1119 for industrial grade ethylene glycol (Warning—Combustible. Health hazard).
- 7.3 Coolant Additive—Use Nacool 2000 or Pencool 2000 coolant additive<sup>13,10</sup> for the engine and condenser coolant (**Warning** —Combustible. Health hazard. See appropriate MSDS).
- 7.4 *Coolant Preparation*—Prepare the coolant blend for the engine coolant system, and for the oil cooler and condenser coolant system, in the following manner:
- <sup>12</sup> The sole source of supply of the apparatus known to the committee at this time is Haltermann Products, 3520 Okemos Rd., Suite 6-176, Okemos, MI.
- <sup>13</sup> The sole source of supply of the apparatus known to the committee at this time is Penray Companies, Inc., 1801 Estes Ave, Elk Grove, IL 60007.

- 7.4.1 Do not apply heat either during, or following, the coolant preparation.
- 7.4.2 Use a container of a size adequate to hold the entire coolant blend required by both systems. See drawing RX-117350-D<sup>2</sup> for an example of a suitable container.
- 7.4.3 Add the required amount of glycol (**Warning**—Combustible. Health hazard) to the container.
- 7.4.4 Add the required amount of additive concentrate to the container to achieve a concentration of 15.625 mL/L of coolant additive–to–glycol (**Warning**—See appropriate MSDS).
  - 7.4.5 Mix the blend in the container for 30 min.
- 7.4.6 Add the blend to the engine coolant system and the condenser coolant system.
- 7.5 *Pre-Test Cleaning Materials*—Use the cleaning materials (**Warning**—See appropriate MSDS) specified in the following list for cleaning of parts to be used in the test. Do not use unapproved substitutes (See Note 4).

Note 4—Only these specific materials and sources have been found satisfactory. If chemicals other than these are proposed for use, equivalency shall be proven and approval obtained from the TMC.

- 7.5.1 Use Penmul L460 as the parts cleaning agent<sup>14,10</sup> (**Warning**—Corrosive. Health hazard.).
- 7.5.2 Solvent—Use only mineral spirits meeting the requirements of Specification D235, Type II, Class C for Aromatic Content (0 vol % to 2 vol %), Flash Point (61 °C, min) and Color (not darker than +25 on Saybolt Scale or 25 on Pt-Co Scale). (Warning—Combustible. Health hazard.) Obtain a Certificate of Analysis for each batch of solvent from the supplier.
- 7.5.3 Sequence IIIF Test component cleaner, a mixture (by mass) of:
- 94 parts oxalic acid<sup>15,10</sup> (**Warning**—Corrosive. Health hazard.), and
- 6 parts dispersant<sup>16,10</sup> (**Warning**—Corrosive. Health hazard.).
- Note 5—If permitted by the hazardous materials disposal practices in a laboratory, sodium carbonate can be used to neutralize the oxalic acid in used Sequence IIIF Test component cleaner.
- 7.5.4 Use NAT-50 or PDN-50 soap<sup>17,10</sup> in automatic parts washers to clean Sequence IIIF engine parts or solution  $7^{18,10}$  and solution  $8^{18,10}$  if using the ultrasonic cleaner. (See 9.5.)
- 7.6 Sealing and Anti-seize Compounds—Use the sealing compounds specified in the following list.

<sup>&</sup>lt;sup>14</sup> The sole source of supply of Penmul L 460 known to the committee at this time is Penetone Corp. 74 Hudson Ave., Tenafly, NJ 07670.

<sup>&</sup>lt;sup>15</sup> The sole source of supply of the oxalic acid (55 lb bags) and sodium carbonate (50 lb bags) known to the committee at this time is Ashland Chemical Co., P.O. Box 391, Ashland, KY 41114.

<sup>&</sup>lt;sup>16</sup> The sole source of supply of Petro Dispersant No. 425 Powder (50 lb bags) known to the committee at this time is Witco Corp., 3230 Brookfield, Houston, TX 77045.

<sup>&</sup>lt;sup>17</sup> The sole source of supply of the soap for the parts washing machine known to the committee at this time is Better Engineering Mfg., Inc., 8361 Town Center Ct., Baltimore, MD 21236.

<sup>&</sup>lt;sup>18</sup> The sole source of supply of the product known to the committee at this time is Purvis Industries, 10500 North Stemmons Freeway, Dallas, TX 75220.

- 7.6.1 Use Permatex No. 2 non-hardening sealer as the sealing compound for cylinder head bolts. 19
- 7.6.2 Use Perfect Seal Number 4 brush-type sealing compound as the sealing compound for front and rear cover gaskets. <sup>20,10</sup>
- 7.6.3 Use only GM Autocare Assembly Adhesive,<sup>21</sup> part number 12346141, Dow RTV Grade 3154 sealer,<sup>22</sup> or Prematex Ultra Black Sealer,<sup>23</sup> part number 24105, on the oil pan gasket and intake manifold gasket only. (See Sequence IIIF Engine Assembly Manual, Section 4-Sheet 13 and Section 6-Sheet 6.)
- 7.6.4 Polytetrafluoroethylene tape may be used, provided it does not come into contact with engine oil.

#### 8. Test Oil Sample Requirements

- 8.1 Selection—The supplier of the test oil sample shall determine that the test oil sample is representative of the lubricant formulation to be evaluated and that it is not contaminated.
- 8.2 *Quantity*—The supplier shall provide 15 L of the test oil sample.

Note 6—A Sequence IIIF test can be conducted with as little as 12 L of test oil, provided that no spillage or leakage occur during test preparation. The greater quantity is specified to accommodate minor spillage and leakage.

8.3 *Storage Prior to Test*—The test laboratory shall store the test oil sample in a covered building to prevent contamination by rainwater.

#### 9. Preparation of Apparatus

- 9.1 Condenser Cleaning—Immediately after completing a Sequence IIIF test, remove the stainless steel condenser assembly, disassemble it, and soak it in parts cleaning agent. After the soaking, clean the inside of the tube with parts cleaning agent and a non-cuprous bristle brush. Rinse both the blowby gas and coolant sides of the condenser with clean solvent.
- 9.1.1 After ten tests, or more frequently if film is present, clean the coolant side of the condenser by flushing it for one-half hour with a water solution of 20 g/L of Sequence IIIF test component cleaner (see 7.4). Rinse it thoroughly with tap water at  $60\,^{\circ}\text{C}$ .
- 9.2 After cleaning the coolant side of the condenser, pressure check it for leaks using air at 70 kPa.
- 9.3 *Intake Manifold Cleaning*—Clean the intake manifold with solvent.
- 9.4 *Cleaning of Engine Parts*—Clean all engine parts (other than the block and heads; see 9.5 and 9.6) thoroughly prior to engine assembly. Degrease them first, and then brush them
- $^{19}$  Permatex No. 2 non-hardening sealer is available through local distributors of Permatex products.
- <sup>20</sup> The sole source of supply of Perfect Seal No. 4 Brush-Type Sealing Compound, part GM3D (16 oz container) known to the committee at this time is P.O.B. Sealants Inc., 11102 Kenwood Rd. Cincinnati, OH 45242.
  - <sup>21</sup> GM Autocare Assembly Adhesive is available from local GM dealers.
  - <sup>22</sup> Dow RTV Grade 3154 sealer is available from commercial sources.
  - <sup>23</sup> Permatex Ultra Black Sealer is available from commercial sources.

- with parts cleaning agent. Immediately remove the cleaner by spraying with hot tap water. Blow-dry the parts with clean, dry shop air and immediately coat them with a 50/50 mixture of build-up oil and solvent.
- 9.4.1 Clean the connecting rods by soaking in solvent for a minimum of 2 h. Spray the rods with a 50/50 mixture of solvent and EF-411.
- 9.5 *Engine Block Cleaning*—Clean the block according to the following:
- 9.5.1 Remove the debris in the head bolt and main bearing-cap bolt holes using class 2B bottoming taps of the appropriate sizes.
- 9.5.2 Physically remove from the water jacket all sand and slag deposits, and any other debris using a sharp-ended drill rod or a long straight slot screwdriver.
- 9.5.2.1 Check the camshaft tunnel for sharp edges on the front of each bore and along the cross-drilled oil gallery inside each bearing bore. Deburr as necessary. See the Sequence IIIF Engine Assembly Manual, Section 1-Sheet 2.
- 9.5.3 Thoroughly clean the block prior to honing as follows: In the case of a block used in a previous test, remove the crankshaft, main bearings, and bearing caps. In addition, remove all bushings, bearings, and oil gallery plugs prior to cleaning. With either a new or a used block, prevent cleaner or oil from entering the engine coolant passages. (See Sequence IIIF Engine Assembly Manual, Section 1-Sheet 5.)
- 9.5.3.1 Clean the block in a heated bath or temperature-controlled automated parts washer or ultrasonic cleaner before and after honing. Follow these suggested guidelines to ensure there is no rusting of the engine block after this process:
  - If Using a Heated Bath or an Automated Parts Washer:
- (1) Use only NAT-50 or PDN-50 soap at a concentration of 0.73 kg of soap per 380 L of water. Change the soap and water solution at least every 25 h of use.
- (2) Control the soap-and-water temperature at  $60 \,^{\circ}\text{C} \pm 10 \,^{\circ}\text{C}$ .
  - (3) Use only fresh tap water in the bath.
- (4) Prior to installing the engine in the parts washer, ensure that all coolant passages are blocked off to prevent cleaning solutions from entering the passages.
- (5) Run the block through the cleaning cycle for a period of 30 min to 40 min.
- (6) After the cycle is complete, immediately remove the block from the washer and spray it down with degreasing solvent.
  - (7) Wipe cylinder bores out with a lint free towel.
- (8) Spray engine block with a mixture of 50:50 build-up oil and degreasing solvent.
- (9) Do not remove the paint dot from the crankcase area of the block.
- (10) Allow the block to cool to room temperature before honing the block.
  - If Using the Ultrasonic Cleaner Parts Washer:
- (1) Based on bath volume, use solution 7 at a ratio of 132.5 mL (4.48 oz) per 3.785 L (1 gal) of water plus solution B at a ratio of 11 mL (0.38 oz) per 3.785 L (1 gal) of water.
  - (2) Use only fresh tap water in the bath.

- (3) Control the solution-in-water temperature to 65 °C  $\pm$  5 °C.
- (4) Prior to installing the engine in the ultrasound cleaner, ensure that all coolant passages are blocked off to prevent cleaning solutions from entering the passages.
- (5) Run the block through the cleaning cycle for a period of 60 min.
- (6) After the cycle is complete, immediately remove the block from the washer and thoroughly spray down the block with hot water.
- (7) Replace the mixture of the two solutions-in-water with a new mixture at least after every 25 h of use.
- (8) Spray engine block with a 50:50 mixture of build-up oil and degreasing solvent.
- (9) Do not remove the paint dot from the crankcase area of the block.
- (10) Allow the block to cool to room temperature before honing the block.
- 9.5.3.2 See the Sequence IIIF Engine Assembly Manual, Section 2 for the honing procedure.
- 9.5.3.3 After honing the cylinder walls, clean the engine block again according to 9.5.3 and spray the engine block (including all oil galleries) first with solvent followed by a 50:50 mixture of solvent and build-up oil. Using this 50:50 mixture, wipe out the cylinder bores with clean cloth towels until all honing residue has been removed.
- 9.5.3.4 Air dry the engine block, using clean dry shop air, and coat the cylinder walls with build-up oil using soft, lint-free, clean cloths.
- 9.6 *Cylinder Head Cleaning*—Clean the cylinder heads according to the following:
- 9.6.1 Explore all accessible water passages with a flexible probe to detect any material that would interfere with coolant flow.
- 9.6.2 Using a 10 mm wire brush, extending two-thirds the length of the cylinder head from freeze plug hole to freeze plug hole, clean all core sand and casting slag from the cylinder heads to ensure unrestrained coolant flow.
- 9.6.3 Clean the cylinder heads according to the recommended engine block cleaning procedure (see 9.5.3.1) or clean with solvent. Spray the heads with a 50/50 mixture of solvent and EF-411. When cleaning the heads, do not remove the paint dot.
- 9.7 Engine Build-up Procedure—Laboratories should design and maintain engine-build data sheets in a format compatible with Microsoft Excel and record data for cylinder bore measurements, piston and ring sizing data, valve train spring force calibrations, camshaft and lifter measurements, and all critical part identification information. This data shall be available to the TMC and the Test Procedure Developer for investigative studies, as deemed necessary for hardware investigations during times of industry severity shifts or other problems.
- 9.7.1 General Information—Use only the listed service parts, special test parts, and special build-up procedures specific to this test as outlined in this test method and the Sequence IIIF Engine Assembly Manual. (See 6.4.) Make and record measurements, specified in this test method, of the

- cylinders, pistons, rings, valve train, cam, and lifters. These measurements will provide evidence of conformance to the specifications of the test method, and will provide baselines for determining engine wear that occurs during a Sequence IIIF test.
- 9.7.2 Special Parts—Use the special parts listed in the Sequence IIIF Engine Assembly Manual, Sections 8, 9, 10, and 11.
- 9.7.2.1 Hardened Valve Seat Heads—Cylinder heads with hardened seats, part number 24502260S, can be used for non-reference oil tests once an acceptable reference oil test has been completed in the laboratory. These heads can also be reused, provided an acceptable reference oil test has been obtained with the reused heads and the criteria in section 5a of the assembly manual has been met. Once a laboratory has obtained acceptable reference oil results on both new and reused 24502260S heads, the laboratory can use either new or reused heads for any tests. When a test is conducted on an acceptable reused cylinder head with part number 24502260S, thereafter, append an "X" to the part number reported in the test report, where "X" is the number of tests the head has been used
- 9.7.3 *Hardware Information*—Complete Form 12, Hardware Information, in standardized report form set (see Annex A8).
- 9.7.4 Fastener Torque Specifications and Torquing Procedures—Use the following specifications and torquing procedures when installing bolts in the engine:
- 9.7.4.1 Main Bearing Cap Bolts—Do not use air tools on bolts to seat the main bearing caps in the engine block. Use a rubber or plastic mallet to seat the main bearing caps to avoid misalignment and potential damage to the engine block. Apply build-up oil to the threads and to the surfaces of the bolts that contact the main bearing caps. In order to prevent hydraulic lock, do not apply oil to the tapped holes in the cylinder block. Install the bolts finger-tight and tighten them further with the SPS Torque Sensor I torque wrench<sup>24,10</sup> or Ingersoll-Rand ETW-E180<sup>25,10</sup> only, working from the center out in a crisscross pattern. See the Sequence IIIF Engine Assembly Manual for torquing instructions. (See Section 1-Sheet 6 for honing and Section 3-Sheet 6 for final assembly.)
- 9.7.4.2 *Cylinder Head Bolts*—Install the cylinder head bolts, GM Part No. 25527831 (long) and 25533811 (short), that are of special design for yield applications using the SPS Torque Sensor I or Ingersoll-Rand ETW-E180 torque wrench. See the Sequence IIIF Engine Assembly Manual for installation instructions. Replace the bolts after each test. (See Section 1-Sheet 7 for honing and Section 5 Sheet 3 for final assembly.)
- 9.7.4.3 *Torques for Miscellaneous Bolts, Studs, and Nuts*—Use the torques for miscellaneous bolts, studs, and nuts given in the Sequence IIIF Engine Assembly Manual.
- 9.8 *Parts Replacement*—See 9.8.1 for information regarding parts. Replace test parts as follows:

<sup>&</sup>lt;sup>24</sup> Available from Sunnen Products Co., 7910 Manchester Ave, St. Louis, MO 63143.

<sup>&</sup>lt;sup>25</sup> Available from Ingersoll-Rand Assembly Solutions, 510 Hester Drive, White House, TN 37188.

- 9.8.1 Install the new parts listed in Annex A5 (Table A5.1) for each test.
- 9.8.2 Install the new parts listed in Annex A5 (Table A5.2) only if the used part is no longer suitable for test purposes.
- 9.9 Engine Block Preparation—Prepare the engine block as follows:
- 9.9.1 Install new engine block freeze plugs; use a driver to facilitate this replacement.
- 9.9.2 Install the main bearing caps, without the bearings in place. Tighten the retaining bolts using the procedure in 9.7.4.1.
- 9.9.3 To prevent entry of honing fluid into the coolant passages of the engine block, cover and seal the coolant inlet passages and freeze plug openings. Close the petcocks if previously installed; if not, install ½ in. NPT pipe plugs.
- 9.9.4 With a 300 mm smoothing file, deburr the surfaces of the block that mate with the cylinder heads to ensure adequate gasket seating.
- 9.9.5 Use the honing torque plates B-H-J GM 3.8L/3E-R-s\_t-HT<sup>26,10</sup> to pre-stress the engine block for honing. Install the torque plates with the proper hardened washers (supplied with the honing torque plates), single washers on top row and double washers on bottom row, to establish proper bolt depth. Clean the threaded bores for the cylinder head attachment bolts using a bottoming tap before each installation of the torque plates. The torque plates require the use of new head gaskets, SPO Part No. 24503801 left head and 24503802 right head, along with cylinder head, torque-to-yield fasteners, SPO Part No. 25527831 (long). Clean all sealing and thread locking compounds from the fasteners for the torque plate installation. Coat each fastener with build-up oil and see Section 1-Sheet 7 of the Sequence IIIF Engine Assembly Manual for installation instructions.
- 9.9.6 Use only the CV-616 honing machine to hone the cylinder walls. See the Sequence IIIF Engine Assembly Manual, Section 2, for all of the proper setup and operational procedures for each specific run on the Sequence IIIF engine block.
- 9.9.7 Replace the honing fluid, filters, and fiber mats used in the honing machine after every 15 h of honing machine operation. Use the honing machine hour meter to determine hours of operation. See the Sequence IIIF Engine Assembly Manual, Section 2-Sheet 8.
- 9.9.8 The flow rate of the honing lubricant should be approximately 7 L/min. In addition, do not introduce solvents into the honing fluid or use them to clean the honing stones or guides. Use only honing fluid to clean honing stones or guides.
- 9.9.9 Hone the cylinder walls without the main bearings in place, but with all bearing caps installed.
- 9.9.10 Clean the engine block following honing according to 9.5.3.1.
- 9.9.10.1 Allow cylinder block to cool for a minimum of 10 min before taking final bore measurements.

- 9.9.11 If desired, check the main bearing bore clearances using a mandrel, part BX-398-1, according to the following procedure:
- 9.9.11.1 Starting from the front of the block, slide the mandrel through all four main bearing bores. If excessive resistance is encountered while inserting the mandrel, remove the mandrel from the engine block and inspect the main bearing bores for burrs, nicks, dirt, alignment problems, or any abnormalities.
- 9.9.11.2 Carefully remove any nicks, burrs, scratches, or dirt with 400-grit paper or a fine stone. Then use a clean shop towel with mineral spirits to wipe the affected surfaces. Reinstall the mandrel to ensure that it can freely pass through all four main bearing bores. If the mandrel will not clear the bores after completing the above steps, do not use this block. Notify the Test Procedure Developer of the problem.
- 9.9.11.3 After honing, repeat the above procedure prior to final engine build. The mandrel is an alignment and clearance gauge only, not an assembly tool. The mandrel should not be in the bores when installing the main bearing caps or torquing the main bearing bolts.
- 9.10 Piston Fitting and Numbering—Fit the pistons to the cylinders according to recommendations listed in the Sequence IIIF Engine Assembly Manual for the run sequence of the block. Use only the specified code pistons for each run sequence. Number the pistons with odd numbers in the left bank from front to rear and with even numbers in the right bank from front to rear.
- 9.10.1 *Piston Ring Fitting*—Pre-size the rings for each run and check the ring gaps in the cylinder bore for each test.
- 9.10.1.1 Prior to checking the piston ring gaps, remove any paint marks on the rings using acetone and a soft cloth, followed by a mineral spirits rinse.
- 9.10.1.2 The top ring gap shall be 0.042 in.  $\pm$  0.002 in. (1.067 mm  $\pm$  0.051 mm). The bottom ring gap shall be 0.038 in.  $\pm$  0.002 in. (0.965 mm  $\pm$  0.051 mm). The top ring gap shall be larger than the bottom ring gap and the difference between the two ring gaps shall be between 0.003 in. and 0.006 in. (0.076 mm and 0.152 mm). If the ring gap difference is below 0.003 in. (0.076 mm), contact the Test Procedure Developer. Check the ring gap with a Starrett Ring Taper Gage No.  $270^{27}$  with the ring positioned in the cylinder bore using a piston ring depth gauge (drawing RX-118602-B<sup>2</sup>). Position the rings 0.932 in. (23.67 mm) below the cylinder-block deck surface during gap measurement.
- 9.10.1.3 Record the top and bottom ring gaps on Form 12, Hardware Information, in the standardized report form set (see Annex A8). Record and report ring gaps in mils (1 mil = 0.001 in. = 0.0254 mm).
- 9.11 Pre-Test Camshaft and Lifter Measurements—Measure the camshaft lobe height and lifter lengths, prior to engine assembly, according to the following procedure:
- 9.11.1 Remove camshaft and lifters from laboratory inventory.

<sup>&</sup>lt;sup>26</sup> The sole source of supply of the apparatus known to the committee at this time is B-H-J Products Inc., 37530 Enterprise Ct., Newark, CA 94560.

<sup>&</sup>lt;sup>27</sup> A Starrett Ring Taper Gage No. 270 has been found suitable and is available from commercial sources.

- 9.11.2 Remove camshaft and lifters from original container and packaging and set container and packaging aside for later use. Clean camshaft with degreasing solvent. Do not clean the lifters; wipe the lifters with a clean cloth or towel.
- 9.11.3 Make the camshaft measurement using Mitutoyo Snap Gauge, model 201-152, and a Mitutoyo Digital Indicator, model 543-252B, to measure the camshaft lobes. Make the lifter measurement with a digital indicator equipped with a Mitutoyo 4.3 mm flat tip, model 131-259 mounted in a indicator stand. Equip the indicator stand with a V-block that is rigidly mounted to the base and locates the lifter with its center axis in line with the digital indicator. Store the camshaft and lifters in a temperature-controlled room, before making dimensional measurements, for at least 90 min to ensure temperature stabilization.
- 9.11.3.1 Use dimensional measuring equipment accurate to 0.01 mm. Before each measurement session, use standards traceable to the National Institute of Standards and Technology, to ensure measuring equipment accuracy. Include standards having length values within 1.3 mm of the typical lifter and lobe measurement taken. Use the same equipment and standards post-test measuring as were used for pre-test measuring. If a calibration shift between the pre-test and post-test measurements is detected, evaluate the shift to determine the effect on the wear measurement. Record the results of the evaluation and any corrective action taken.
- 9.11.4 With the camshaft positioned in a set of V-blocks, remove any burrs around the outer edge of the camshaft thrust surface, if necessary. Thoroughly clean the camshaft with degreasing solvent to remove all rust preventative coatings and blow-dry it with clean, dry shop air.
- 9.11.5 Measure the maximum pre-test dimension of each camshaft lobe, transverse to the camshaft axis to the nearest 0.001 mm. This dimension is at the rear edge of all lobe positions (lobes are numbered from the front to the rear of the camshaft). Record the measurements and temperature at the time of measurement on internal laboratory forms. (See 9.7.) After measuring, coat the camshaft with build-up oil. Return the camshaft to its original packaging and container until installed in the engine.
- 9.11.6 Measure the pre-test length of the lifters at the center of the lifter foot to the nearest 0.001 mm. Record the measurements and temperature at time of measurement on internal laboratory forms. (See 9.7.)
- 9.11.7 Record the unique serial number for each lifter on internal laboratory forms. (See 9.7.) Do not use electromechanical scribing devices. Do not place any marks on the lifter body or foot. Return the lifters to their original packaging until installed in the engine.
- 9.12 Camshaft Bearing Installation—The camshaft tunnel is specially processed and uses oversize bearings provided through the CPD. Install the camshaft bearings according to the Sequence IIIF Engine Assembly Manual, Section 3-Sheet 3. Always inspect the lifter and main bearing oil galleries for splintered babbitt materials that might have been shaved from the outside diameter of the bearings during installation. Remove any materials from the oil galleries with clean dry shop air.

- 9.13 Camshaft Installation—Install the camshaft according to the Sequence IIIF Engine Assembly Manual, Section 3-Sheet 11:
- 9.13.1 Coat the camshaft lobes and journals with a light film of test oil.
- Note 7—Camshafts should not sit dry inside the engine block waiting for final assembly more than 24 h.
- 9.13.2 Install the camshaft in the engine block, exercising care to avoid damage to the lobes, journals, and bearings.
- 9.13.3 *Installation of Camshaft Thrust Plate*—Lubricate the thrust plate with build-up oil and install the thrust plate to the front of the engine using new Torx fasteners.
- 9.14 Main Bearings—Verify that the main bearing bore areas in the engine block and bearing caps are clean. Install new main bearings, part no. OHT3F-042-2, in the engine block and main bearing caps, and lightly oil the bearing surfaces with build-up oil. Use new main bearing cap bolts for each Sequence IIIF test engine build.
  - 9.14.1 Crankshaft Installation—Install the crankshaft.
- 9.14.2 *Main Bearing Cap Installation*—Install the main bearing caps using new bolts for each test. Do not remove the phosphate coating from the bolts. Do not use air tools on the main bearing cap bolts to seat the caps. Install the bolts finger-tight, and tighten them according to the procedure in 9.7.4.1. Use the main bearings as received.
- 9.15 *Crankshaft Sprocket*—Install a matched set two-piece crankshaft sprocket, part no. OHT3F-036-1.
- 9.16 *Camshaft Sprocket, and Timing Chain*—Install a new camshaft sprocket and timing chain.
- 9.17 *Crankshaft Endplay*—Measure the crankshaft endplay. It should be between 0.076 mm and 0.279 mm.
- 9.18 *Piston Pin Installation*—Install new piston pins and retainers for each test. Clean piston pins using a clean lint-free cloth and oil with build-up oil. The piston pins are full floating and held in place by two retainers.
- 9.18.1 *Piston Installation*—Clean pistons using solvent and air dry. Wipe the pistons with a lint-free cloth prior to installation.
- 9.18.2 Use a piston ring expander to install the pre-gapped piston rings (see 9.10.1) on the pistons.
- 9.18.3 Position the ring end gaps as shown in the Sequence IIIF Engine Assembly Manual, Section 3-Sheet 8.
- 9.18.4 Coat the cylinder walls with build-up oil and wipe them with a clean, lint-free soft cloth, repeating the process until clean; apply a final coat of build-up oil before installing the piston assembly.
  - 9.18.5 Coat the pistons and rings with build-up oil.
- 9.18.6 Install the pistons in the cylinders, using a ring compressor tool.<sup>28</sup>
- 9.19 *Harmonic Balancer*—Deburr the harmonic balancer keyway slot and the slot on the crankshaft with a mill file. Do not install the balancer until after performing the oil pump priming operation in the test stand just prior to test start.

 $<sup>^{\</sup>rm 28}$  Ring compressor tools are available from automotive tools suppliers.

Note 8—To make the balancer a slip-fit, remove the rolled edge on the inside diameter of the balancer until the balancer slips easily over the crankshaft


- 9.20 Connecting Rod Bearings—Clean the bearings using a clean, lint-free cloth and oil with build-up oil prior to installation. Use new connecting rod bearings, part no. OHT3F-042-2, for each test, furnished as part of the engine bearing kit.
- 9.20.1 Install the bearings in the connecting rods, and install the bearing caps with the rods in place on the crankshaft.
- 9.20.1.1 Tighten the connecting rod bolts according to the specifications listed in the Sequence IIIF Engine Assembly Manual. Determine the torque specifications for the connecting rod bolts by the type of connecting rod: cast or powdered metal.
- 9.21 Engine Front Cover—Use a new front cover with each new engine block or if the oil pump gerotor housing is worn.
- 9.21.1 Install new oil pump gears or a new front cover and new gears, as deemed necessary, according to the Sequence IIIF Engine Assembly Manual inspection requirements Section 4-Sheet 2.
  - 9.21.2 Install a new oil pump relief valve and spring.
- 9.21.3 Ensure the oil pump relief valve moves freely inside its bore in the front cover. Check the oil-pump-relief-valve clearance according to the Sequence IIIF Engine Assembly Manual, Section 4-Sheet 4.
- 9.21.4 Bolt the front cover and oil pump assembly to the engine block.
- 9.21.5 Inspect the oil pickup tube and screen assembly for cleanliness; install using a new gasket.
- 9.22 *Coolant Inlet Adapter*—Replace the water pump with a coolant inlet adapter, as shown in drawing OHT3F-031-1.
- 9.23 Oil Dipstick Hole—Plug the oil dipstick hole with a hole-plug (Part No. OHT3F-065-2). To determine the oil level at the appropriate time during a test, temporarily remove this plug and insert the calibrated dipstick (Part No. OHT3F-064-2).
- 9.24 *Oil Pan*—Install the oil pan, part no. OHT3F-073-1, on the engine block, using a new gasket. Do not use magnetic drain plugs in the pan.

Note 9—Ensure the cut out area of the windage tray/oil pan gasket does not interfere with the oil dipstick and modify if necessary.

- 9.25 *Cylinder Head Assembly*—Prepare the cylinder heads according to the following procedure:
  - 9.25.1 Install new cup-type freeze plugs.
- 9.25.2 Deburr all surfaces of the cylinder heads that mate with the engine block and the manifolds with a 300 mm smooth file to ensure satisfactory gasket seating.
- 9.25.3 Thoroughly clean the cylinder heads according to 9.6 and air blow them dry prior to final assembly. (**Warning**—For technical use only.)
- 9.25.4 Coat the valve stems and valve guides with build-up oil.
- 9.25.5 Install the valves and lightly lap them, if desired. Clean the cylinder heads after lapping to ensure that no lapping compound remains on any parts. Install the valves in the location where lapped for final assembly.

- 9.25.6 Install new valve stem seals over the valve stems onto the valve guides. Exercise extreme care when installing the seals in order to avoid either cutting the seals or positioning them incorrectly on the guides, thereby helping to preclude high oil consumption. See Sequence IIIF Engine Assembly Manual, Section 5-Sheet 1.
- 9.25.7 Install new valve springs, part no. OHT3F-059-5 (color code yellow). Place the smaller diameter end of the spring against the retainer. Do not remove the factory paint dot from the valve spring.
  - 9.25.8 Install valve retainers and keepers.
- 9.26 Adjustment of Valve Spring Forces—Adjust the force of each valve spring according to the following procedure:
- 9.26.1 Before and after using the valve spring load measurement apparatus (such as Part No. BX-310-2), calibrate the load cell using the following technique. Use dead weights to produce the specified force of  $801\ N$ .
- 9.26.1.1 Load Cell to Load Cell Technique—Affix load cell weight adapter plate (see Fig. 1) to calibration load cell. Zero the calibration load cell. Individually place calibrated dead weights onto calibration load cell. Verify that each dead weight indicates the appropriate load on calibration transducer readout. Repeat the calibration of the calibration load cell. The two consecutive readings shall agree within  $\pm 0.23$  kg; if not, inspect the load cell and replace as necessary. Align calibration load cell beneath apparatus load cell. Place the air cylinder ram on the calibration load cell. Set the apparatus load cell to read the value of the calibration load cell. Apply air pressure to the aligned load cells. Vary air pressure to give several different loads, including 82 kg. Determine that both calibration and apparatus transducer readouts indicate the same value, if not, adjust the apparatus load cell. Repeat the calibration of the valve-spring load-measurement apparatus. The two readings shall agree within  $\pm$  0.23 kg; if not, inspect the apparatus load cell and replace if necessary. Retain data obtained during each calibration.
- 9.26.2 Install a cylinder head in the holding fixture. The holding fixture shall position the cylinder head such that the valve is directly in line with the air cylinder-loading unit and no side loading of the valve takes place.
- 9.26.3 Install Zeroing fixture, part no. D4031, to cylinder head. Zeroing fixture, part no. D4031, is part of the valvespring load-measurement apparatus, part no. BX-310-2.
- 9.26.4 Place the air cylinder-loading unit over a valve and check for proper alignment of the valve tip with the loading unit.
- 9.26.5 Position the dial indicator and its foot on the zeroing fixture to facilitate accurate measurement of valve stem axial movement.
- 9.26.6 Rapidly apply and release the air pressure three times to ensure free travel of the piston rod; adjust the air pressure to obtain a valve deflection reading of 9.5 mm, if necessary.
- 9.26.7 If the readings are not within the specifications of  $801 \text{ N} \pm 22 \text{ N}$  force as shown by the load cell indicator, add or remove shims, or interchange parts as necessary.
  - 9.26.8 Repeat steps 9.26.2 through 9.26.7.
- 9.27 Cylinder Head Installation—Use new head gaskets for each application. Do not us any sealers on the cylinder head



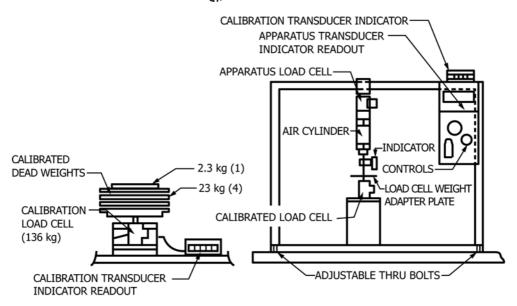

CALIBRATION LOAD CELL APPARATUS LOAD CELL
FIG. 1 Load Cell-to-Load Cell Calibration Method Diagram

gaskets. Use new fasteners for each application. Before using the fasteners for cylinder head attachment, remove all pre-coat sealers. Remove thread locking compounds from the threads and underside of the bolt head with a wire wheel or brush. Do not use chemical cleaners to remove these coatings. Coat the threads and underside of the bolt head using non-hardening pliable sealing compound. Tighten the fasteners according to the guidelines in the Sequence IIIF Engine Assembly Manual, Section 5-Sheet 3.

- 9.28 Hydraulic Valve Lifters—Do not open the hydraulic lifter to expose any part of the internal parts. Do not remove the factory-installed leak down oil. Do not use electro-mechanical or chemical means to etch identification numbers on the hydraulic lifters.
- 9.28.1 Prior to installation, clean the lifter body and foot using a clean cloth dampened with aliphatic naphtha. Do not submerse or spray the hydraulic lifter. Gently wipe the lifter body with the naphtha-dampened cloth and dry using a clean, dry cloth or terry towel.
- 9.28.2 Install the test lifters in the test engine, coating each lifter foot with test oil before installation into the lifter bore. Rotate the engine crankshaft slowly for 720° while ensuring that the lifters follow the cam lobe profile. Remove each lifter and once again coat the lifter foot with test oil. Reinstall the lifter into the engine block with the ground flat on the lifter body facing inboard toward the center of the engine. See the Sequence IIIF Engine Assembly Manual, Section 6-Sheet 1.
- 9.28.2.1 Use 118 mL of test oil to lubricate the camshaft and lifters during engine assembly. Pour any remaining oil into the lifter valley of the engine after this process is complete.
- 9.29 *Pushrods*—Clean the pushrods with solvent and air blow them dry prior to installation; make certain that the oil passages are open. Wipe the pushrods with a lint-free cloth prior to installation. Lubricate the ball ends of the pushrods

with buildup oil and install the pushrods. See the Sequence IIIF Engine Assembly Manual, Section 6-Sheet 2.

- 9.30 Valve Train Loading—Install the rocker arm pivot retainer and the precision roller rockers and torque the rocker arm pedestal bolts according to the Sequence IIIF Engine Assembly Manual, Section 6-Sheet 4. Rocker arm pivot retainers can be used for up to six tests before being replaced.
- 9.30.1 Once the valve train is loaded, do not rotate the engine until using the dynamometer air starter system at the start of test.
- 9.31 *Intake Manifold*—Modify the intake manifold as shown in the Sequence IIIF Engine Assembly Manual, Section 6-Sheet 7.
  - 9.31.1 Plug the EGR port using part no. OHT3-024-1.
- 9.31.2 Install the positive crankcase ventilation valve, replacement plug (part no. OHT3F-002-1) in the intake manifold plenum.
- 9.32 *Rocker Covers*—Install two left-side rocker covers part no. 25534751 on the cylinder heads.
- 9.33 *Water Inlet Adapter*—Install a water inlet adapter made according to drawing OHT3F-034-1.
- 9.34 *Condenser*—Install a condenser mounting bracket, part no.OHT3F-041-1, and condenser, part no. BX-212-1 or OHT3F-075-1, with an adapter, part no. OHT3F-040-1, on the front of the engine using flexible hose to connect the adapter to the rocker cover bushings, part no. OHT3F-028-1.
- 9.35 *Coolant Outlet Adapter*—Replace the thermostat housing with a coolant outlet adapter, part no. OHT3F-034-1.
- 9.36 External Oil Cooling System—Install the external oil cooling system as follows:

- 9.36.1 Install the Oil Filter Housing Assembly, part number OHT3G-080-1, on the engine front cover. Refer to Section 4 Sheet 4 of the Sequence IIIF Engine Assembly Manual.
- 9.36.2 Install an Oil Cooler, part number OHT3F-030-2, using Connector part number OHT3F-039-3, as shown in the Sequence IIIF Engine Assembly Manual section 8 sheet 3.
- 9.36.3 Install an Oil Filter Adapter Fitting, part number OHT3F-043-2, and an Oil Filter Adapter, part number OHT3F-035-2, as shown in the Sequence IIIF Engine Assembly Manual section 8 sheet 3.
- 9.36.4 Install the Bypass Valve Assembly Housing, part number OHT3F-084-1, on the Oil Filter Engine Adapter, as shown in the Sequence IIIF Engine Assembly Manual section 8 sheet 3b.
- 9.36.5 Install a thermocouple in the External Bypass System to detect operation in bypass mode. Note if bypass is detected during a test in the comments section of the test report. No reporting of this temperature data is required.
- 9.37 Oil Sample Valve—Install suitable plumbing to the oil pressure fitting located in the oil filter adapter to permit the removal of oil samples. Select the plumbing to minimize the added volume.
- 9.38 *Ignition System*—Install ignition system components according to the following instructions:
- 9.38.1 Use high-energy ignition wires which are resistant to moisture and high temperatures.<sup>29</sup>
- 9.38.2 Use an original equipment manufacturer coil pack mounted on the front engine mount according to drawing OHT3F-026-1.
- 9.38.3 Use new spark plugs, R42LTSM. Adjust the gaps with a wire gauge to 1.14 mm. Install a set of plugs prior to test start-up.
- 9.39 *Throttle Body*—Modify a production throttle body according to the drawing in the Sequence IIIF Engine Assembly Manual, Section 7-Sheet 5.
- 9.39.1 Install the throttle body onto the plenum and attach the throttle body adapter, part no. OHT3F-001-2.
- 9.40 Accessory Drive Units—Do not use any accessory drive units, such as alternators, generators, fuel pumps, power steering units, air pumps, and so forth.
- 9.41 Exhaust Manifolds, Water-Cooled—Prepare two water-cooled exhaust manifolds, part no. OHT3F-003-1, and install one on each of the two cylinder heads using transition adapters, part no. OHT3F-004-1, according to the following instructions:
- 9.41.1 Deburr all the surfaces of the exhaust manifolds that mate with the cylinder heads with a 300 mm smooth-cut file to ensure proper gasket seating.
- 9.41.2 Attach the exhaust manifolds to the heads using stainless steel studs ( $\frac{3}{8}$ -16 by  $\frac{3}{8}$ -24 by  $\frac{1}{2}$  in.), stainless steel 3/8-24 nuts, and shielded exhaust gaskets, part no. OHT3F-018-1 or GM 24506009.
- 9.41.3 Ensure that there are no leaks between the manifold assembly components that might allow outside air to enter the exhaust system through scavenging upstream of the  $O_2$  sensor.
- <sup>29</sup> High-performance ignition wires are commonly available at automotive supply stores.

- 9.42 Engine Flywheel—Install the flywheel and drive shaft plate assembly, OHT3F-020-2.
- 9.43 Pressure Checking of Engine Coolant System—If desired, pressure-check the engine coolant system after assembly and before installation of the engine on the test stand, according to the following procedure:
- 9.43.1 Block all coolant outlets, and install the necessary fittings on the coolant inlet to permit pressurizing the coolant system with air, and sealing it.
- 9.43.2 Pressurize the coolant system with air to 100 kPa, and seal it. Monitor the pressure for 10 min. Take no corrective action if the reduction in pressure is less than 3.4 kPa in 10 min. If larger changes in pressure occur, re-torque all appropriate bolts and replace gaskets, seals, and components (including the cylinder heads and the intake manifold) as necessary. Repeat the pressure checking.
- 9.44 *Lifting of Assembled Engines*—Lift the assembled engines with a suitable lift chain.<sup>30</sup>
- 9.45 Mounting the Engine on the Test Stand—Mount the engine on the test stand according to the following:
- 9.45.1 Use OHT3F-026 front and OHT3F-025 rear engine mounts.
- 9.45.2 Mount the engine in such a manner that the intake plenum mounting flange-to-intake manifold interface is horizontal.
- 9.45.3 Install an engine flywheel guard, safety housing, and air starter mounting assembly (part of OHT3F-025).
- 9.45.4 Connect the engine to the dynamometer with a flywheel-to-driveshaft coupling adapter (part of OHT3F-020-1) and a driveshaft.<sup>31</sup>
- 9.45.5 Install a coolant drain valve in the middle of each side of the block, in the ½-in. NPT hole. The use of street ells and petcocks are satisfactory. Petcocks shall remain as installed for the remainder of the test.
- 9.46 External Cooling System Cleaning—Clean the external cooling system of either a new or used test stand, or a new flushing tank assembly. Clean the used test stand system periodically, typically before a reference test. Use the following procedure:
- 9.46.1 Prepare a cleaning mixture in the flushing tank (drawing RX-116924- $C^2$ ) by mixing 19.0 g/L Sequence IIIF test component cleaner (**Warning**—Corrosive. Health hazard.) (see 7.4) with water. Heat the mixture to 60 °C  $\pm$  2.8 °C.
- 9.46.2 Circulate the mixture at 160 L/min flow rate for 30 min.
- 9.46.3 Immediately following step 9.46.2, thoroughly flush all system components with water at 60 °C  $\pm$  2.8 °C.
- 9.46.4 Ensure to drain all low points in the system after cleaning.
- 9.47 Engine Coolant Jacket Cleaning (Flushing)—After installing the engine on the test stand, chemically clean the engine coolant jacket to ensure the proper rate of heat transfer to the jacket coolant, according to the following procedure:

 $<sup>^{\</sup>rm 30}$  Engine lift chains are commercially available from automotive or industrial tool supplier.

<sup>&</sup>lt;sup>31</sup> Driveshaft may be obtained from commercial sources.

- 9.47.1 Connect the flushing tank to the engine so that the cleaning solutions enter at the coolant outlet adapter and exit at the front of the engine block (reverse flow only for flushing) through the water inlet adapter.
- 9.47.2 Connect the coolant outlet hose located at the front of the engine intake manifold to the flush cart return for this procedure.
- 9.47.3 For the following segments of this cleaning procedure, minimize the elapsed time between steps in order to avoid rusting of the coolant jacket.
- 9.47.4 Remove the oil pan drain plug. Open the engine block petcocks and pass hot water (60 °C to 70 °C) through the engine coolant jacket for 2 min. Check for coolant leaks around the intake manifold, front cover, rear cover, and oil pan drain plug. If coolant is leaking, take appropriate steps to stop the leak. If no leaking is evident, close the petcocks and fill the flushing tank and engine block with water to provide a total volume of 38 L to 45 L.
- 9.47.5 Energize the flushing tank heaters. Circulate water through the engine at a flow rate of 115 L/min to 130 L/min through the engine until the temperature of the water flowing out of the engine reaches 70 °C  $\pm$  3.0 °C. Isolate the engine from the flush cart.
- 9.47.6 While the flush cart is isolated from the engine with water still circulating, add 19 g/L Sequence IIIF test component cleaner (see 7.4) to the water in the flushing tank. Continue to circulate the mixture in the flush cart for (3 min to 5 min.
- 9.47.7 Circulate the mixture through the engine for 30 min. 9.47.8 Stop the circulation pump, open the engine block petcocks, and drain the contents of the engine and flushing tank into a suitable container (see Note 10).

Note 10—Before disposal, the drained material should be neutralized according to applicable local and federal hazardous material guidelines.

- 9.47.9 Close the engine block petcocks and flow hot tap water through the engine into a suitable container for 2 min to 5 min, until the pH of the water flowing out of the engine is neutral. Use water at a temperature of 60 °C to 70 °C. Maintain a flow rate of 76 L/min to 95 L/min.
- 9.47.10 Immediately after neutralizing the engine block in 9.47.9, open the block petcocks and drain all flush water.
- 9.47.11 Connect the engine to the external engine cooling system.
  - 9.47.12 Immediately charge the engine jacket with coolant.
- 9.48 *Coolant Charging*—Charge the engine jacket with the specified coolant (see 7.4) according to the following procedure:
- 9.48.1 To preclude contamination of the coolant system with water, install low-point drains and eliminate all traps in the system. Drain all water in the system.
- 9.48.2 Use a charging adapter installed between the external cooling system and the engine.
- 9.48.3 Completely fill the engine jacket and cooling system with coolant (see 7.4). Fill the engine coolant jacket before filling the condenser system.
- 9.48.4 Charge the condenser coolant system immediately after charging the engine cooling system.

- 9.48.5 Operate the circulating pumps to aid in the removal of air and consequently decrease the time to achieve clarity of the coolant. During this period, operate any proportioning valves in the coolant system several times.
- 9.48.6 Until the test is started, circulate the coolant at a temperature of 48.9 °C  $\pm$  2.8 °C and a flow rate of 160 L/min. Start the test no later than 6 h after step 9.48.5.
- 9.49 *Test Oil Charging*—Charge the engine with the test oil as follows:
  - 9.49.1 Install a new oil filter OHT3G-057-3.
- 9.49.2 Measure the initial fill of 5.50 L of fresh test oil using a flask calibrated to Class A standards.<sup>32</sup>
- 9.49.3 Add the initial fill of 5.50 L of fresh test oil through the rocker-cover oil-fill cap.
- 9.50 *Engine Oil Pump Priming*—Prime the engine oil pump according to the following instructions:
- 9.50.1 With the harmonic balancer and front half of the oil pump drive gear OHT3F-036-1 removed, use a suitable high torque drill motor and oil pump drive tool OHT3F-038-1 rotating the gerotor oil pump in a clockwise direction (viewed from the front of the engine) for 2 min after indication of oil pressure.
- 9.50.2 Replace the front half of the oil pump drive gear and the harmonic balancer and torque the harmonic balancer to  $150 \text{ N} \cdot \text{m} + 76^{\circ}$ .
- 9.50.3 Connect the crankcase pressure line and oil sample valve fittings in preparation for testing, and proceed with the initial run (see 11.14).

#### 10. Calibration

- 10.1 Laboratory and Engine Test Stand Calibration—To maintain testing laboratory and engine test stand calibration status for Sequence IIIF engine oil testing, follow the procedures given in 12.13 and Annex A1 Annex A4.
- Note 11—Paragraph 12.13 and Annex A1 Annex A4 describe the involvement of the TMC in respect to calibration procedures and acceptance criteria for a testing laboratory and a test stand, and the issuance of Information Letters and memoranda affecting the test method.
- 10.2 *Testing of Reference Oils*—Periodically conduct tests on reference oils according to the following:
- 10.2.1 Conduct reference oil tests on each calibrated test stand within a laboratory according to TMC guidelines.
- 10.2.2 Obtain reference oils directly from the TMC. These oils are formulated or selected to represent specific chemical types or performance levels, or both. They are usually supplied directly to a testing laboratory under code numbers to ensure that the laboratory is not influenced by prior knowledge of acceptable results in assessing the test results. The TMC will determine which specific reference oil the laboratory shall test.
- 10.2.3 Assign a stand test number to each Sequence IIIF test. The number shall include the stand number, the number of Sequence IIIF tests conducted on the stand since the last reference oil test was conducted (0 to 15), and a sequential laboratory test number based on the starting date of the test. For example, 60-03-785 defines a Sequence IIIF test on stand

 $<sup>^{32}</sup>$  A 6000 mL Erlenmeyer Flask, part number OHT3G-086-1, has been found suitable and is available from the Central Parts Distributor.

number 60, which is the third non-reference oil test run on stand 60 since successful completion of a reference oil test, and was the 785th Sequence IIIF test in the laboratory. The only exception to this format is that the sequential laboratory test number shall have the letter A appended for the first rerun, B for the second, and so forth, for invalid or unacceptable reference oil tests.

- 10.3 Reference Oil Test Frequency—Conduct reference oil tests according to the following frequency requirements:
- 10.3.1 For a given, calibrated test stand, conduct an acceptable reference oil test after no more than 15 test starts have been conducted, or after 120 days have elapsed, whichever occurs first.
- 10.3.2 After starting a laboratory reference oil test, non-reference oil tests may be started on any other calibrated test stand.
- 10.3.3 Reference oil test frequency may be adjusted due to the following reasons:
- 10.3.3.1 *Procedural Deviations*—On occasions when a laboratory becomes aware of a significant deviation from the test method, such as might arise during an in-house review or a TMC inspection, the laboratory and the TMC shall agree on an appropriate course of action to remedy the deviation. This action may include the shortening of existing reference oil calibration periods.
- 10.3.3.2 Parts and Fuel Shortages—Under special circumstances, such as industry-wide parts or fuel shortages, the surveillance panel may direct the TMC to extend the time intervals between reference oil tests. These extensions shall not exceed one regular calibration period.
- 10.3.3.3 Reference Oil Test Data Flow—To ensure continuous severity and precision monitoring, calibration tests are conducted periodically throughout the year. There may be occasions when laboratories conduct a large portion of calibration tests in a short period of time. This could result in an unacceptably large time frame when very few calibration tests are conducted. The TMC can shorten or extend calibration periods as needed to provide a consistent flow of reference oil test data. Adjustments to calibration periods are made such that laboratories incur no net loss (or gain) in calibration status.
- 10.3.3.4 Special Use of the Reference Oil Calibration System—The surveillance panel has the option to use the reference oil system to evaluate changes that have potential impact on test severity and precision. This option is only taken when a program of donated tests is not feasible. The surveillance panel and the TMC shall develop a detailed plan for the test program. This plan requires all reference oil tests in the program to be completed as close to the same time as possible, so that no laboratory/stand calibration is left in an excessively long pending status. In order to maintain the integrity of the reference oil monitoring system, each reference oil test is conducted so as to be interpretable for stand calibration. To facilitate the required test scheduling, the surveillance panel may direct the TMC to lengthen and shorten reference oil calibration periods within laboratories such that the laboratories incur no net loss (or gain) in calibration status.
- 10.3.4 *Donated Reference Oil Test Programs*—The Surveillance Panel is charged with maintaining effective reference oil

test severity and precision monitoring. During times of new parts, introductions, new or re-blended reference oil additions, and procedural revisions, it may be necessary to evaluate the possible effects on severity and precision levels. The surveillance panel may choose to conduct a program of donated reference oil tests in those laboratories participating in the monitoring system, in order to quantify the effect of a particular change on severity and precision. Typically, the surveillance panel requests its panel members to volunteer enough reference oil test results to create a robust data set. Broad laboratory participation is needed to provide a representative sampling of the industry. To ensure the quality of the data obtained, donated tests are conducted on calibrated test stands. The surveillance panel shall arrange an appropriate number of donated tests and ensure completion of the test program in a timely manner.

- 10.4 Evaluation of Reference Oil Test Results—The TMC evaluates the reference-oil test results for both operational validity and statistical acceptability. The TMC may consult with the Test Procedure Developer and test laboratory in case of difficulty, as follows:
- 10.4.1 Immediately upon receipt of the reference-oil test results from the test laboratory, the TMC evaluates the laboratories' decision on operational validity. For operationally valid tests, the TMC then evaluates the pass/fail parameters according to the Sequence IIIF Lubricant Test Monitoring System (TMC Memorandum 94-200). If the test is judged acceptable, the reference oil code will be disclosed by the TMC to the test laboratory. The TMC conveys to the test laboratory its preliminary findings based on the limited information available to them.
- 10.4.2 Subsequently, upon receipt of the information detailed in 11.4.4, the TMC reviews all reference-oil test results and reports to determine final test acceptability.
- 10.4.3 In the event the reference oil test is unacceptable, the test laboratory shall provide an explanation of the problem relating to the failure. If the problem is not obvious, all test-related equipment shall be re-checked. Following this re-check, the TMC assigns another reference oil for testing by the laboratory.
- 10.4.4 The TMC decides, with consultation as needed with industry experts (testing laboratories, Test Procedure Developer, members of the ASTM Technical Guidance Committee and of the Surveillance Panel, and so forth), whether the reason for any failure of a reference oil test is a false alarm, testing stand, testing laboratory, or industry-related problem. The Sequence IIIF Surveillance Panel shall adjudicate all industry problems.
- 10.5 Status of Non-Reference Oil Tests Relative to Reference Oil Tests—Non-reference oil tests may proceed within a given laboratory during reference oil testing based upon the following:
- 10.5.1 During the time of conducting a reference oil test on one test stand, non-reference oil tests may be conducted on other previously calibrated stands. If the reference oil test is acceptable to the TMC, consider that the non-reference oil tests have been run in a satisfactorily calibrated laboratory.
- 10.5.2 If a reference oil test is unacceptable, and it is determined that the problem is isolated to an individual test

stand, consider that other test stands remain calibrated, and testing of non-reference oils may proceed on those other stands.

10.5.3 If a reference oil test is unacceptable, and it is determined that the problem is laboratory related, consider non-reference tests running during the problem period invalid unless there is specific evidence to the contrary for each test.

10.6 Status of Test Stands Used for Non-Standard Tests—If a non-standard test is conducted on a previously calibrated test stand, conduct a reference oil test on that stand to demonstrate that it continues to be calibrated, prior to running standard tests.

10.7 Data Acquisition and Control—The Sequence IIIF test requires the use of computerized data acquisition and control for all measured and controlled parameters outlined in this procedure. The system chosen by individual testing laboratories shall be capable of integrating with the Sequence IIIF process controller for many of these operations. The system shall also be capable of meeting or exceeding certain test specific performance requirements for maximum allowable response times and minimum allowable sample rates. In addition to the aforementioned requirements, the system shall also be capable of data logging to test specific archival files for each test parameter at minimum allowable record intervals; that is, no greater than two-minute intervals between successive logs for each parameter. See the Data Acquisition and Control Automation II Task Force Report (DACA II)<sup>2</sup> and additional requirements as outlined in this procedure.

10.7.1 *Sample Rate*—The preferred sample rate is 100 Hz with the minimum allowable sample rate for the Sequence IIIF data acquisition and control system set at 1 Hz.

10.7.2 Measurement Accuracy—All measurement devices used for sensing speed, mass, flow, pressure, and temperature shall meet the minimum requirements as outlined in the DACA II report and also conform to total system response requirements as outlined by the TMC. The following is a list of minimum requirements for Sequence IIIF testing:

10.7.3 *Temperature*—Use only Specification E608/E608M, iron-constantan (Type J) thermocouples with an accuracy of  $\pm$  0.5 °C over a range of 0 °C to 200 °C.

10.7.4 *Pressure*—For pressures >6.9 kPa, use only measuring devices with an accuracy of  $\pm$  0.2 % of full scale for capacitive systems and  $\pm$  0.25 % of full scale for strain-type systems. For pressures <6.9 kPa, use only devices with an accuracy of  $\pm$  15 Pa for capacitive systems and  $\pm$  14 Pa for strain-type systems.

10.7.5 Flow—For systems incorporating vortex shedding measuring (liquid) use  $\pm$  0.75 % of reading; for vortex shedding measuring (gas) use  $\pm$  3.0 % of full scale; for magnetic measurements use  $\pm$  1.0 % of reading; for Coriolis measurements use  $\pm$  0.75 % of reading.

10.7.6 *Speed*—For speeds measured by frequency, use + 1 r/min.

10.7.7 *Mass*—For masses measured by strain gauge, use  $\pm$  0.25 % of full scale.

10.7.8 Measurement Resolution—The minimum resolution for all parameters shall be at least one-fourth the required system accuracy for that parameter; that is, if a test procedure

requires an accuracy of 1.0 units, then the minimum resolution for that parameter = 0.25 unit.

10.7.9 System Time Response—Total system time response is the time required for the complete data acquisition system including all filtering, transducer lines, and surge tanks to measure a step change input for a given parameter. System response times should be determined by measuring the time required to reach a certain percentage of an imposed step change. For first order systems, use the time to 63.2 % of the imposed step change; for moving average systems use the time to 45.4 % of the imposed step change.

10.7.9.1 See the TMC System Time Response Measurement Guidelines<sup>2</sup> for methods of imposing step changes for calibration of Sequence IIIF test stands.

10.7.9.2 See Annex A11 for maximum allowable system time responses for the data acquisition system.

10.7.10 *Quality Index*—Use of the quality index method of measuring the control capability of the test stand is required for certain parameters. The following formula should be used and a minimum of 2400 data records are required for the final, end-of-test values:

$$QI = 1 - \frac{1}{n} \sum \left( \frac{U + L - 2X_i}{U - L} \right)^2 \tag{1}$$

where:

QI = quality index,

 $X_i$  = recorded test measurement parameter,

 $\dot{U}$  = upper specification limit for that parameter,

L = lower specification limit for that parameter, and

N = total number of data points taken as determined from test length and procedural specified sampling rate.

10.7.10.1 The upper and lower values used for QI calculations for the required parameters are listed in Annex A11.

10.7.11 Calibrate the stand instrumentation used for data acquisition and control, on all controlled and non-controlled parameters (see Annex A10), prior to every reference-oil test sequence, with the following exception:

Note 12—A stand can be IIIF calibrated in accordance with this test method and IIIG calibrated in accordance with Test Method D7320. A stand that was IIIF or IIIG calibrated within the previous year can be calibrated as both a IIIF and IIIG stand. If the stand was not IIIF or IIIG calibrated within the past year, follow the LTMS guidelines for new stand requirements to obtain IIIF or IIIG calibration.

10.7.11.1 If a test stand is calibrated in both the IIIF and IIIG test methods, conduct stand instrumentation calibrations as defined in 10.7.11 every 15 test starts.

10.7.11.2 Calibrate the intake air-humidity system every six months, at a minimum.

## 11. Engine Operating Procedure

11.1 Dipstick and Hole Plug—Remove the calibrated dipstick and close off the dipstick hole in the block with the required plug, for all engine operations. See the Sequence IIIF Engine Assembly Manual, Section 1-Sheet 2.

11.2 *Dipstick Hole O-ring*—Periodically replace the O-ring on the dipstick hole plug, part no. 2-106, to ensure a good seal between the plug and the engine block.

- 11.3 Engine Start-up and Shutdown Procedures—Start and stop Sequence IIIF engines according to the following procedures and the test states and set points listed in Annex A10.
- 11.4 *Start-up*—Use the following procedure in starting Sequence IIIF engines:
- 11.4.1 Supply 13 V to 15 V dc power to the Powertrain control module, fuel pump, and all AFR control units for a minimum of 30 s before cranking engine to ensure all systems are prepared for closed loop AFR control. The lambda sensors are pre-heated and ready for closed-loop control when the AFR readings are over 20:1 prior to engine start.
- 11.4.2 Simultaneously, start the coolant flowing through the exhaust manifolds.
- 11.4.3 If the engine fails to start after 5 s, determine the problem and take corrective action before any further attempts are made. Make a log entry of any failed attempt and any corrective action in the test report.
- 11.4.4 After starting the engine, verify that oil pressure is adequate, and the speed is set to 1500 r/min and the power to 6.34 kW.
- 11.5 *Scheduled Shutdown*—Use the following procedure in stopping Sequence IIIF engines:
- 11.5.1 Reduce the engine speed and power to 1500 r/min and 6.34 kW with a linear ramp-down over 30 s (if applicable). Within 90 s, remove the required 472 mL oil purge sample and analysis sample (see 11.7) from the engine oil sampling valve and adjust all temperatures for engine shutdown.
- 11.5.1.1 Prior to shutdown on the initial run and at the end of test, add the 472 mL purge back to the engine.
- 11.5.1.2 Prior to shutdown on all oil levels except the initial and the end of test, add the 472 mL of new oil, plus an additional 59 mL of new oil to the engine prior to shutdown.
- 11.5.2 Turn off power to the Powertrain control module (PCM).
- 11.5.3 With the engine stopped, halt the coolant flow through the exhaust manifolds and continue with the oil sampling and leveling procedure (see 11.7 through 11.8.7).
- 11.6 Non-Scheduled Shutdowns—For any non-scheduled shutdowns, record in detail the time of test, the reasons for the shutdown, and any other pertinent observations. Include this record in the test note section of the final test report.
- 11.7 Oil Sampling—With the engine running at 1500 r/min, remove all oil samples from the engine oil sampling valve according to the following instructions:
- 11.7.1 Before taking the samples in each of the following steps, first remove a 472 mL purge sample or leveling sample; then remove the oil sample of the specified volume.
- 11.7.2 Take a 236 mL analysis sample at the end of the initial run (identified as the initial sample) and at the end of the 80 h test.
- 11.7.3 Take a 59 mL sample at the end of every 10 h during the test, except at the end of the 80th hour when taking a 236 mL end-of-test sample.
- 11.8 *Oil Leveling*—Determine the oil level in the crankcase according to the following instructions:
- 11.8.1 Determine the oil level after the 10 min initial run and after each 10 h of test.

- 11.8.2 Stop the engine according to the procedure in 11.5 for 15 min to allow the oil to return to the crankcase.
- 11.8.3 During the 20 min oil-leveling period, maintain the condenser temperature at 40  $^{\circ}$ C and the engine coolant temperature at 49  $^{\circ}$ C.
- 11.8.4 Determine the oil level after the 15 min period, in mm, using the calibrated dipstick (see Annex A6).
- 11.8.5 Following the initial run, record the oil level on Fig. A12.1, according to 11.8.4. Use this level as the full mark for the test. Enter (zero) 0 mL as the computed oil level on Fig. A12.1.
- 11.8.6 After each 10 h of the 80 h test, except at the end of test, add 59 mL of new oil to replace the sample taken; also add 472 mL of new oil to the engine.
- 11.8.7 After each 10 h of the 80 h test, except at the end of test, add oil to the crankcase from the 472 mL leveling sample to bring the oil level, as nearly as possible, back to that following the initial run. At the end of test, return the entire 472 mL purge sample to the engine. Discard any excess leveling sample. Record the results on Fig. A12.1.
- 11.9 Air-to-Fuel Ratio Measurement and Control—Measure the air-to-fuel ratio using the lambda sensors throughout the test. Control the air-to-fuel ratio using the lambda sensor output as feedback for the Powertrain control module. (See Annex A9.)
- 11.10 Air-to-Fuel Ratio Verification—Air-to-fuel ratio measurements made by the lambda sensors may be verified using exhaust gas analysis or real-time feedback systems, or both. Calibrate real time sensors per the manufacturer's recommendation at least every 6 months. If a real time system allows for percent O<sub>2</sub>, compensation, perform the calculation. When using gas analysis, verify according to the following:
- 11.10.1 By means of exhaust gas analysis, measure the volume percent of  $CO_2$ , CO, and  $O_2$ , using an electronic gas analyzer.
- 11.10.2 Use either Fig. A9.2 or Fig. A9.3, constructed for the Sequence IIIF fuel, with the  $CO_2$ , CO, and  $O_2$  values to determine the air-to-fuel ratio.
- 11.10.3 For air-to-fuel ratios greater than 15:1 (lean), when the analysis shows a CO concentration in the exhaust gas, correct the analysis as follows:
- 11.10.3.1 Determine the corrected  $O_2$  using this relationship:
  - corrected  $O_2$  = observed percent  $O_2$  0.5 (observed percent CO) (2)
- 11.10.3.2 Determine the corrected  $CO_2$  using this relationship:
  - corrected  $CO_2$  = observed percent  $CO_2$  + observed percent CO (3)
- 11.10.3.3 In either Fig. A9.2 or Fig. A9.3, enter the corrected  $O_2$  and  $CO_2$  values to determine the air-to-fuel ratios for the two gases, that shall agree within 0.5 air-to-fuel ratio.
- 11.10.4 Measure the air-to-fuel ratio using exhaust gas analysis during the first hour of the test to ensure that the lambda sensors are functioning properly.
- 11.10.5 Measure the air-to-fuel ratio using exhaust gas analysis during test hours 7, 39, and 79, of the test to ensure that the lambda sensors are functioning properly.

- 11.11 Blowby Flow Rate Measurement—Measure the engine blowby flow rate according to the following instructions, and within 15 min of the end of test hours: 1, 6, 11, 16, 21, 26, 31, 36, 41, 46, 51, 56, 61, 66, 71, 76, and 79.
  - 11.11.1 Observe the following requirements:
- 11.11.2 Measure the blowby flow rate at the condenser outlet.
- 11.11.3 Seal (verify) the dipstick hole during engine operation using the dipstick-hole plug.
- 11.11.4 Orient the blowby meter horizontally during measurements
- 11.11.5 Direct the blowby gas into a suitable vent hood at all times, other than when the blowby flow rate is being measured. Do not allow the vent system to create a draw on the crankcase.
- 11.11.6 Connect a surge tank, drawing RX-117431C,<sup>2</sup> to the condenser.
- 11.11.7 Connect the blowby flow-rate meter to the surge tank.
- 11.11.8 When permanently installed, blowby meters are not used but portable cart applications are allowed. However, position the cart near the testing area for a sufficient timeperiod to ensure temperature stabilization of the system components prior to taking any blowby measurements.
- Note 13—Temperature stabilization is necessary to reduce condensation precipitation of the blowby gases. The moisture content of blowby gases is generally between 17 g/kg and 20 g/kg. Correction factors are based on this and other average gas-analysis data of the blowby gases. Therefore, it is important that the blowby gases being measured at the orifice plate be as close in molecular composition and temperature as possible to the blowby gases exiting the condenser.
- 11.11.9 Do not evacuate or direct the exhaust line for the engine blowby gas being measured toward any low pressure evacuation systems.
- 11.11.10 Select an orifice size such that the observed blowby flow,  $\Delta P$ , lies in the midrange of the calibration curve. Record the orifice size used.
  - 11.11.11 Control the crankcase pressure at 0 Pa  $\pm$  12.4 Pa.
- 11.11.12 To ensure flow stability, maintain blowby gas flow through the orifice meter for 2 min or more, prior to taking the actual readings. Due to the relatively low flow rates, allow time for the engine blowby gas to fill the system and further enhance temperature stabilization.
- 11.11.13 Record the uncorrected blowby flow rate in litres per minute and correct it for an atmospheric pressure of 100 kPa and a temperature of 37.8 °C, using the correction factors given in Fig. A14.1.
- 11.11.14 Alternatively, use the following equation, on which Table A10.1 is based, to correct the blowby flow rate:

$$CF_{si} = \left(3.1002 \left(\frac{Pkpa}{273.15 + t \,{}^{\circ}C}\right)\right) 0.5$$
 (4)

where:

 $CF_{si}$  = corrected Blowby Flow Rate, L/min,

Pkpa = blowby Pressure, kPa, and

 $t^{\circ}C$  = temperature, °C

- 11.11.15 Disconnect the surge tank from the condenser.
- 11.12  $NO_x$  Determinations—The measurement of  $NO_x$  is not required. If desired, measure  $NO_x$  concentrations using

- suitable exhaust gas analysis equipment at 19 h and 49 h and record the data in the report form set.
- 11.13 *Data Recording*—Record data at a minimum of every 2 min for all parameters listed in Table A10.1.
- 11.14 *Initial Run (10 min)*—After charging with the test oil and priming the engine, conduct the 10 min initial run.
- 11.14.1 Start the engine (see 11.4). Begin timing the 10 min initial run.
  - 11.14.2 Maintain the ignition voltage between 13 V to 15 V.
- 11.14.3 Make certain that coolant is flowing through the water-cooled exhaust manifolds.
- 11.14.4 Control the coolant jacket at  $50.0\,^{\circ}\text{C} \pm 2.0\,^{\circ}\text{C}$ , and the condenser coolant temperature at  $40.0\,^{\circ}\text{C} \pm 2.0\,^{\circ}\text{C}$  during the initial run. Run the temperature control valve for the oil cooler wide open to obtain maximum cooling during the initial run.
- 11.14.5 Operate the engine at 1500 r/min, 6.34 kW for 10 min; check for leaks.
- 11.14.6 Ten minutes after the start of the initial run, and just prior to stopping the engine, remove a 472 mL purge sample; then take the initial, 236 mL, oil sample.
  - 11.14.7 Stop the engine (see 11.5).
- 11.14.8 Follow 11.7 and 11.8 to determine the oil level after drain-down, in mm; record the value on Fig. A12.1. Use this level as the full mark for the test.
- 11.15 Engine Oil Quality Testing (80 h)—After completing all phases of the initial run, conduct the 80 h engine oil quality evaluation portion of the test, according to the following procedure:
  - 11.15.1 Start the engine (see 11.4).
- 11.15.2 Ensure the throttle body humidified air inlet supply to the engine is connected.
  - 11.15.3 Maintain the ignition voltage between 13 V to 15 V.
- 11.15.4 Operate the engine under the test conditions listed in Annex A10.
- 11.15.5 For each 10 h segment of the 80 h engine oil quality testing, test time is counted from the moment when all the test conditions listed in A7 are reached and stabilized. Start calculating QI values when temperatures are stable or when test state warm up times are exceeded. (See Annex A10.) If engine is shut down for any reason except oil leveling, start counting down time. Maximum allowable down time for the IIIF test is 24 h.
- 11.15.6 Every 10 h, conduct the oil sampling and oil leveling according to 11.5 and 11.6. (See Fig. A12.1.) Record the time when the final (80 h) leveling is completed; be aware that completion of most of the engine disassembly takes place within 12 h of this time. (See 12.2.1.)
  - 11.16 *Test Termination*—Terminate the test as follows:
- 11.16.1 Terminate the test at the completion of the 80 h engine oil quality testing, following the taking of the purge and analysis samples and completion of the end of test oil leveling procedure. Record the end-of-test time after the final, engine oil level procedure.
  - 11.16.1.1 Drain the oil sump.
  - 11.16.1.2 Drain the condenser cooling system.
  - 11.16.1.3 Drain the engine coolant.

11.16.1.4 Remove the engine from the test stand, and transport it to the engine disassembly area for determination of test results.

#### 12. Determination of Test Results

- 12.1 This section describes techniques used to evaluate oil performance with respect to oxidation (viscosity increase), wear (camshaft and lifter), piston deposits, ring sticking, and oil consumption.
- 12.2 Engine Disassembly—Disassemble the engine, according to the following instructions, in preparation for inspection, rating, and measurement:
- 12.2.1 Plan the disassembly so that the parts to be rated for sticking, deposits, and plugging (pistons and rings) are removed from the engine within 12 h of the completion of the oil level.
- 12.2.2 Remove the components from the top of the engine in order to gain access to the cylinder bores.
- 12.2.3 Remove the carbon deposits from the top portion of the cylinder walls, above the top compression ring travel, before removing the pistons from the engine.
  - 12.2.4 Disassemble the remainder of the engine.
- 12.3 Preparation of Parts for Rating of Sticking, Deposits, and Plugging—Prepare the specified parts for rating according to the following instructions:
- 12.3.1 Check all piston rings for freedom of movement in the grooves when removing the pistons from the engine. (See 12.4.1 through 12.4.1.1.)
- 12.3.1.1 Determine which rings are hot-stuck or cold-stuck (see 3.1.12 and 3.1.5, respectively, for definitions of hot-stuck and cold-stuck rings) and record the piston number and ring identification (for example, piston No. 3, top ring) for such rings on Form 8 in standardized report form set (see Annex A8). Record the total number of hot-stuck rings on Form 4 in the standardized report form set (see Annex A8).
- 12.3.2 At time of disassembly, remove all piston rings that are free. Leave any stuck rings (includes pinched rings; see 3.2.8) in place. Apply a rating of 100 % heavy carbon in the groove to any piston groove that cannot be rated, due to the presence of a stuck ring.
- 12.3.3 If the piston deposits cannot be rated immediately after the pistons are removed from the engine, store the pistons in a desiccator for no longer than 72 h from end of test before rating. Do not wipe the pistons before storing them. (See 12.4.)
- 12.4 *Piston Deposit Ratings*—Rate the pistons for piston skirt varnish as well as deposits on the ring lands, under-crown area, and in the ring grooves.
- 12.4.1 Gently wipe off excess oil from the piston skirts with a soft cloth.
- 12.4.1.1 Do not apply any chemicals or build-up oil to the pistons prior to rating them for deposits.
- 12.4.2 Rate each piston top groove, second groove, oil ring groove, second land, and undercrown area (where the horizontal and vertical planes meet) for deposits using ASTM Deposit Rating Manual 20 rating techniques and breakdown methods. Carbon deposit ratings consist of only two levels: Heavy (0.00 merit value) or Light (0.75 merit value).

- 12.4.2.1 The undercrown area to be rated is defined as the area on the undercrown of the piston that is demarcated by casting lines on the piston itself, which resembles a common adhesive bandage. Rate only the area on the underside of the piston crown. Do not rate any parts of the inside surfaces of the piston skirts as part of the undercrown rating.
- 12.4.2.2 Report any unusual deposits observed in the comments section of Form 9 in standardized report form set (see Annex A8).
- 12.4.3 If multiple ratings for deposits are deemed necessary of a given part or parts, consensus rating may be used according to the following:
- 12.4.3.1 The raters shall be from the laboratory in question; no outside raters may be used unless requested and directed through the Sequence IIIF Surveillance Panel.
  - 12.4.3.2 No averaging of ratings is permitted.
- 12.4.3.3 Report only one rating value, which is agreed to by
- 12.4.3.4 All raters of Sequence IIIF engine pistons shall attend an ASTM Light Duty Deposit Rating Workshop every 12 months  $\pm$  30 days and produce data that meet the TMC definitions of Blue, Red, or White for piston deposits. If a rater is unable to meet this requirement, the rater can continue to rate Sequence IIIF pistons after the completion of the workshop for a grace period of 45 days and can follow the procedure described in 12.4.3.5 to generate data that meet the TMC definitions of Blue, Red, or White.
- 12.4.3.5 A rater who is unable to meet the requirement in 12.4.3.4 can schedule a visit to the TMC to generate data on ASTM Light Duty Deposit Rating Workshop pistons and receive an assessment of rating performance compared to data collected at recent workshops. Visits to the TMC will be scheduled based on availability of parts.
- 12.4.3.6 The TMC selects a minimum of six pistons from a collection of workshop parts for the rater to rate piston deposits. The TMC provides rating booths and lights, but the rater is responsible for providing any necessary rating aids. The TMC analyzes the data and determine if the requirement in 12.4.3.4 has been met. If the requirement in 12.4.3.4 has not been met, any time remaining in the 45 day grace period is forfeited.
- 12.4.3.7 A second attempt to generate rating data at the TMC is permitted only after the rater receives training from an experienced industry rater. The experienced industry rater shall verify to the TMC, in writing, that the rater training has taken place. No more than two attempts are permitted between ASTM Light Duty Rating Workshops.
- 12.4.4 Average each individual piston (thrust side and anti-thrust side) for inclusion in the weighted piston deposit (WPD) results.
- 12.4.5 Calculate the average of the six oil ring land (land three) ratings and record this as the average oil ring land deposits on Form 8 and on Form 4 in standardized report form set (see Annex A8).
- 12.4.6 Weighted Piston Deposit Rating (WPD)—This weighted piston rating is comprised of skirt varnish, top groove, second groove, oil ring groove, under-crown, second land, and third land.

12.4.6.1 Calculate the WPD result for each individual piston using the following weighting factors:

Piston under-crown	10 %
Second land	15 %
Third land (ORLD)	30 %
Piston skirts (APV)	10 %
Top groove	5 %
Second groove	10 %
Oil ring groove	20 %

- 12.4.6.2 Calculate the WPD result for each piston by multiplying the rated result for each piston part by the weighting factor in 12.4.6.1 (in decimal form) to determine a weighted rating for that piston part. The WPD result is the sum of the weighted ratings for the individual piston parts.
- 12.4.6.3 The WPD result for the test is calculated by a simple average of the six individual piston WPD ratings.
- 12.5 Post-Test Camshaft and Lifter Wear Measurements—Measure the wear of the camshaft lobes and lifters to the nearest 0.001 mm. Refer to Practice E29 for any needed rounding; use the rounding-off method. Proceed according to the following procedure:
- 12.5.1 Clean the camshaft lobes and lifters with solvent; blow-dry them with clean, dry shop air.
- 12.5.2 Store the camshaft and lifters in a temperature-controlled room for at least 90 min before making dimensional measurements, to ensure temperature stabilization. The temperature of the post-test measurement room shall be within 3 °C of the temperature of the pre-test measurement room.
- 12.5.3 Use dimensional measuring equipment accurate to 0.01 mm (0.0004 in.). Before each measurement session, use standards traceable to the National Institute of Standards and Technology (NIST), to ensure measuring equipment accuracy. Include standards having length values within 1.3 mm of the typical lifter and lobe measurements taken. Use the same equipment and standards for post-test measuring as were used for pre-test measuring. If a calibration shift between pre-test and post-test measurements is detected, evaluate the shift to determine its effect on the wear measurements. Record the results of the evaluation and any corrective action taken.
- 12.5.4 The same person shall measure the camshaft and the lifters used in a given test, if the measurement equipment utilized is operator-sensitive (that is, if the micrometer has operator-determined spindle pressure).
- 12.5.5 When measuring the camshaft and the lifters, take precautions to prevent any influence of body heat on the measurements
- 12.5.6 Measure the maximum dimension of each camshaft lobe, transverse to the camshaft axis. This dimension is at the rear edge of all lobes (lobes are numbered from the front to the rear of the camshaft).
- 12.5.7 Measure the length of the lifters at the center of the lifter foot.
- 12.5.8 Calculate the wear for each camshaft lobe and lifter by subtracting the after-test measurement from the before-test measurement.
- 12.5.8.1 Due to varnish accumulations on camshaft lobes of high wear resistant oils, post-test measurements may indicate a larger numeric value than pre-test measurements. In this situation, the end of test calculation equates to a negative value.

- All negative values shall be overridden and entered as 0.000 mm wear for all calculations when determining post-test results.
- 12.5.9 Calculate the cam-plus-lifter wear by adding the values obtained in 12.5.8. Record the results on Form 7, Valve Lifter and Camshaft Wear Results, in standardized report form set (see Annex A8). Store the cam and lifters, the method and length of time for storage are left up to the laboratory.
- 12.5.10 Determine the maximum, minimum, and average camshaft-lobe, valve-lifter, and cam-plus-lifter wear. Record the values on Form 7 in standardized report form set (see Annex A8).
- 12.5.11 Calculate the screened average cam-plus-lifter wear by determining which positions in the engine have the maximum and minimum cam-plus-lifter wear results. Exclude these two positions from the calculation and then calculate the screened average cam-plus-lifter wear based on the remaining ten positions in the engine. Record these results on Forms 4 and 7 in the standard report form set (see Annex A8).
- 12.6 End-of-Test Used Oil Sample Testing—Conduct a cold-cranking simulator test (Test Method D5293) and a mini rotary viscometer test (Test Method D4684) on the end-of-test (EOT) used oil sample with the exceptions that follow.
- 12.6.1 Run a cold-cranking simulator (CCS) test (Test Method D5293) on the end-of-test (80 h) drain at successively higher temperatures until you obtain a passing result using the table shown in SAE J300. Consider the W-grade corresponding to the temperature required for a passing result as the used oil, passing viscosity grade. One grade less than the new oil viscosity grade is suggested as a starting point. Report the results on Form 6 in the standardized report form set (see Annex A8).
- 12.6.2 Run the mini rotary viscometer test (Test Method D4684), MRV-TP1, at the recommended temperature (based on the passing used oil CCS result) using the table shown in SAE J300. Report the end-of-test mini rotary viscometer test results as MRV Temperature in degrees Celsius as follows.
- 12.6.2.1 If a yield stress greater than 35 Pa is obtained at the designated temperature, report the yield stress in pascals and note the apparent viscosity as not measured (NM)
- 12.6.2.2 If a yield stress exceeding 35 Pa is not obtained at the designated temperature, report the yield stress <35 to indicate that the yield stress did not exceed 35 Pa. Record the apparent viscosity in pascal seconds. Report the results on Form 6 in the standardized report form set (see Annex A8).
- 12.6.3 If the percent viscosity increase for the kinematic viscosity at EOT is higher than 500 % (see 12.7), the cold-cranking simulator and mini rotary viscometer tests are not required. A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the CCS and MRV were not run, and enter not measured (NM) in the standardized report form set (see Annex A8).
- 12.6.4 If the test oil is a straight-grade oil, the cold-cranking simulator and mini rotary viscometer tests are not required. A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the CCS and MRV were not run, and enter not measured (NM) in the standardized report form set (see Annex A8).

- 12.6.5 If the end-of-test used oil sample fails the cold cranking simulator test at -10  $^{\circ}\text{C}$ , the mini rotary viscometer (MRV) test is not required. A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the MRV was not run because the EOT drain did not meet the CCS requirements -10  $^{\circ}\text{C}$ . Enter not measured (NM) in the standardized report form set (see Annex A8) for the MRV measurement.
- 12.7 *Viscosity Test*—Determine the viscosity of a sample of the fresh test oil and of the nine test samples by analysis according to the following instructions:
  - 12.7.1 Do not filter the samples.
  - 12.7.2 Use Test Method D445.
- 12.7.3 Use either the cannon-fenske routine viscometer of the Ostwald type for transparent liquids or the Cannon-Fenske opaque viscometer of the reverse-flow type for transparent and opaque liquids.
  - 12.7.4 Conduct the measurement at 40 °C.
  - 12.7.5 Record the results on Form 6.
- 12.7.6 Critically examine the relationship of the viscosity of the initial oil sample to that of the new oil. The viscosity of the initial sample can legitimately be as much as 10 mm²/s less than that of the new oil, because of permanent shearing effects. If the difference is greater than 10 mm²/s, explore possible causes such as failure to purge the oil sample line [removing the 473 mL purge sample] prior to withdrawing the 237 mL analysis sample, or an excessive amount of built-up oil in the system.
- 12.7.7 Calculate the change in viscosity (in millimetres squared per second) from the value for the initial sample, for the last eight samples. Record the changes on Form 6 in standardized report form set (see Annex A8). Record the final percent viscosity increase on Form 4 in standardized report form set (see Annex A8).
- 12.7.8 Calculation instructions for special cases related to percent viscosity increase:
- 12.7.8.1 Instructions for calculating and reporting results if the final original units result on Form 4 (see Annex A8) for percent viscosity increase is zero or negative.
- 12.7.8.2 The minimum result that will be considered for the percent viscosity increase is 0.1 %. Substitute 0.1 % for the original unit result and complete the calculations on Form 4 (see Annex A8). A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the original units result has been modified for a special case.
- 12.7.8.3 Instructions for calculating and reporting results of the viscosity result on Form 6 (see Annex A8) for viscosity increase data is "too viscous to measure (TVTM)."
- 12.7.8.4 The maximum kinematic viscosity result reported will be 8000 mm²/s using either equipment noted in 12.7.3, with a tube size of 500 or less. If the measured viscosity is 8000 mm²/s using tube size 500, this will be considered the maximum reportable viscosity. Report 8000 mm²/s on Form 6 (see Annex A8) for entry in the column listed as viscosity and use this value for the calculating change and percent. (This will provide consistent TVTM data for reporting purposes and it also expands the maximum viscosity to fill the space allowed by the Data Dictionary.)

12.7.8.5 Complete the calculations on Form 4 (see Annex A8) for percent viscosity increase using the percent value for the final drain from Form 6 except that the severity adjustment (SA) displayed and used for percent viscosity increase calculations will be set to zero (0). A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the SA has been modified for a special case.

12.7.9 For the calculations listed in the following sections 12.7.10, 12.7.10.1, 12.7.10.2, 12.7.10.3, 12.7.10.4, and 12.7.10.5, the minimum result that will be considered for the percent viscosity increase is 0.1 %. When negative or zero percent viscosity increase results are encountered, substitute 0.1 % for the original unit result and complete the calculations. A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the percent viscosity result used for interpolation has been modified for a special case.

12.7.10 Determine the slope of percent viscosity increase beginning at the interval of 30 h to 40 h and continuing to calculate at 10 h intervals using the following equation:

$$Slope_{t} = \left(\frac{\sqrt{PVIS_{t}} - \sqrt{PVIS_{t-10}}}{10}\right)$$
 (5)

where:

t = time in hours (40, 50, 60, 70, 80), and PVIS = Percent Viscosity Increase at denoted hour.

12.7.10.1 If a reference oil test obtains an end of test percent viscosity increase results of 275 % or greater, convert to Hours to 275 % Viscosity Increase by following Method 1:

(1) Determine the distance in hours from where 275 % viscosity increase occurs to the previous 10 h interval:

$$Distance = \left(\frac{\sqrt{275} \% - \sqrt{PVIS_{t-10}}}{Slope_t}\right)$$
 (6)

where:

t = the 10 h increment hour that is greater than where the 275 % Viscosity Increase occurs or hour 80 if the 275 % Viscosity Increase occurs at end of test.

(2) Calculate Hours to 275 % Viscosity Increase as:

Hours to 275 % Viscosity Increase = (t - 10) + Distance (7)

where:

t-10 < the hour where 275 % Viscosity Increase occurred  $\leq t$ .

12.7.10.2 If a reference oil test obtains a  $Slope_t < 0.000$  before 70 h, convert to Hours to 275 % Viscosity Increase using the following Method 2 unless Method 1 criteria is met:

Hours to 275 %Viscosity Increase =

$$\left(\frac{\sqrt{275} \% - \sqrt{PVIS_{80}}}{r}\right) + 80 \tag{8}$$

where:

r = the larger of  $Slope_{80}$  or 0.42.

12.7.10.3 If a reference oil test obtains a  $Slope_{80} < 0.000$ , convert Hours to 275 % Viscosity Increase using the following Method 3 unless Method 1 criteria is met:

(1) Determine the test hours for bottom out slope of -0.15 using the following:



Additional Hours (AH) = 
$$\frac{-0.15 - r}{-0.015}$$
 (9)

where:

r = the larger of -0.15 or  $Slope_{80}$ .

(2) Determine percent viscosity increase at the bottom out point:

$$\sqrt{PVIS_{BottomOut}} = \sqrt{PVIS_{80}} + (AH \cdot -0.15)$$
 (10)  
(3) Calculate Hours to 275 % Viscosity Increase as fol-

lows:

Hours to 275 % Viscosity Increase =

$$\left(\frac{\sqrt{275} \% - \sqrt{PVIS_{BottomOut}}}{0.42}\right) + 80 + AH \qquad (11)$$

12.7.10.4 If a reference oil test does not have a negative percent viscosity increase slope ( $Slope_t < 0.000$ ) during any interval (30 to 40, 40 to 50, 50 to 60, 60 to 70, and 70 to 80), convert Hours to 275 % Viscosity Increase using the following Method 4 unless Method 1 criteria is met:

(1) Estimate the slope for 80 h to 90 h as follows:

$$Slope_{qq} = (0.0408 \cdot ln (r)) + 0.1022$$
 (12)

where:

ln() = the natural log, and

= the larger of 0.002 or  $Slope_{80}$ .

(2) Calculate the Square Root Percent Viscosity Increase at 90 h using the following:

$$\sqrt{PVIS}_{90} = \left(\sqrt{PVIS}_{80}\right) + 10 \cdot Slope_{90} \tag{13}$$

(3) Determine additional hours to bottom out using the following:

Additional Hours (AH) = 
$$\frac{-0.15 - r}{-0.015}$$
 (14)

where:

r = the larger of -0.15 or  $Slope_{90}$ .

(4) Calculate new percent viscosity increase at bottom out:

$$\sqrt{PVIS_{BottomOut}} = \sqrt{PVIS_{90}} + (AH \cdot -0.15)$$
 (15)  
(5) Calculate Hours to 275 % Viscosity Increase as fol-

lows:

Hours to 275 % Viscosity Increase =

$$\left(\frac{\sqrt{275} \quad \% - \sqrt{PVIS_{BottomOut}}}{0.42}\right) + 90 + \text{AH}$$
 (16)

12.7.10.5 For reference oil tests completing on or after June 13, 2010 using reference oil 433–1, adjust the Hours to 275 % Viscosity Increase result that was calculated by the above sections by adding 10 h.

12.7.10.6 For non-reference oil tests, adjust results by performing the following steps and utilizing an industry correction factor of 10 h:

(1) Determine the interpolation point in hours for EOT viscosity increase:

Interpolation Point in Hours (IPH) = Test Length - Hours to 275 % Viscosity Increase Industry Correction Factor - Lab SA for Hours to 275 % Viscosity Increase

Interpolation Point in Hours (IPH) = 80 - 10 - Lab SA

- (2) Find t, where  $t-10 < IPH \le t$ , for example, if IPH in 12.7.10.6(1) is 64.7 h, then t = 70 h and t-10 is 60 h.
- (3) Calculate Final Corrected Percent Viscosity Increase by interpolation as follows:

$$PVIS_{Final} = \left(x \cdot \sqrt{PVIS_{t-10}} + y \cdot \sqrt{PVIS_{t}}\right)^{2} \tag{17}$$

where:

x = (t-IPH)/10, and y = 1-x and  $t-10 < IPH \le t$ .

12.8 Testing Oil Samples for Wear Metals-Use Test Method D5185 to perform inductively coupled plasma optical emission spectrometry (ICP) analysis on the initial and all 10 h oil samples for iron, copper, and lead concentrations in the oil. Report the results of the ICP analysis on these three metals on Form 6 (see Annex A8).

12.9 Blowby Flow Rate Measurements-Plot blowby flow rate measurements on Form 10 in standardized report form set (see Annex A8).

12.10 Oil Consumption Computation—Compute the oil consumption for the test as follows:

12.10.1 See Note 1 of Fig. A12.1 for the oil-consumption calculation equation.

12.10.2 Determine the total fresh oil added to the engine during the initial oil leveling run and 10 h test periods in Fig. A12.1. Enter the total in the end-of-test total column on Fig. A12.1 in position a.

12.10.3 Determine the total amount of oil discarded during the 80 h test periods in Fig. A12.1. Enter the total in the end-of-test total column on Fig. A12.1 in position b.

12.10.4 Determine the computed oil level in millilitres at the end of the test in Fig. A12.1. The computed oil level is found by subtracting 708 mL from the oil level as measured on the dipstick, to account for samples not returned (236 mL oil sample and 472 mL of new oil) to the engine as in previous shutdowns. Enter the number in the end-of-test total column on Fig. A12.1 in position c.

12.10.5 Add the values determined in 12.10.2 and 12.10.4, and subtract the value determined in 12.10.3. Subtract 236 mL (the final oil sample, which is not replaced with new oil) from the value computed above. Enter the remainder, which is the amount of oil consumed in the test, in the blank for total oil consumption in the Fig. A12.1.

12.10.6 For non-reference oils, evaluate the oil consumption result based upon the following guidelines:

12.10.6.1 For oils with a stated Noack volatility that is nominally 15 % or less, the test results are considered noninterpretable for purposes of multiple test acceptance limits (MTAC) if the oil consumption exceeds 5.2 L.

- 12.10.6.2 For oils with a stated Noack volatility that exceeds 15 %, the test results are considered non-interpretable for purposes of MTAC, if the oil consumption exceeds 6.5 L.
- 12.11 *Photographs of Test Parts*—Take color photographs of the test parts for inclusion in the test report as follows:
  - 12.11.1 Photograph pistons after completing all ratings.
- 12.11.2 Do not coat the pistons with build-up oil (for preservation) before the photographs are taken. Do not reinstall piston rings.
- 12.11.3 Photograph all six piston thrust sides in one shot. Piston labels are not required. (See 12.11.7.)
- 12.11.4 Photograph all six piston anti-thrust sides in one shot. Piston labels are not required. (See 12.11.7.)
- 12.11.5 Size the final piston photographs for inclusion in the test report so that the overall piston height is not less than 50 mm, but small enough that three photographs can be mounted in a column on the 280 mm dimension of a 220 mm by 280 mm sheet of paper.
- 12.11.6 Assemble the photographs on two pages, with the thrust side photographs on one page, and the anti-thrust photographs on the other page.
- 12.11.7 Mount the photographs on each of the two pages with the reciprocating axes of the pistons parallel to the 280 mm dimension of the page. Arrange the photographs in two vertical columns of three each, with the No. 1 piston in the upper left corner of the page, No. 2 piston in the upper right corner, No. 3 piston in the center of the left column, and so forth.
- 12.12 *Retention of Representative Test Parts*—Retain for at least six months all camshafts and lifters.
- 12.13 Severity Adjustments—Calculate SA for results of non-reference engine oil tests. Use the control chart technique (see 12.13.1) for determining the laboratory bias for percent viscosity increase, piston skirt varnish, and WPD. Enter the adjustments on Form 4 in standardized report form set (see Annex A8).
- 12.13.1 The document, "The Lubricant Test Monitoring System," contains information on the Sequence IIIF Test Control Chart Technique For Developing And Applying Severity Adjustments (SA). A printed copy can be obtained from the TMC<sup>2</sup> or it can be downloaded from the internet website.<sup>2</sup>
- 12.14 *Determination of Operational Validity*—Determine and document the operational validity of every Sequence IIIF test conducted, according to the following:
- 12.14.1 Complete the report forms to substantiate that the test stand, engine build-up, installation of the engine on the test stand, and the test operation conformed to the procedures specified in this test method.
- 12.14.2 Inspect the test records for instances of downtime (excluding the initial oil level run of the test), and record any such instances on Form 13 in standardized report form set (see Annex A8). Enter the total downtime on Form 13, Downtime and Outlier Report Form, in standardized report form set (see Annex A8). When performing each 20 h oil level adjustment, identify as downtime any time in excess of 55 min from the time when the engine ramps down until the test is back on test operating conditions. Enter the total downtime on Form 13,

Downtime and Outlier Report Form, in standardized report form set (see Annex A8). If the total downtime exceeds 24 h, note on Form 1 in standardized report form set (see Annex A8) that the test is invalid.

12.14.3 If the end of test quality-index value is below 0.000, conduct an engineering review of the test operations. The test laboratory shall conduct the engineering review of reference oil tests, and report its findings to the TMC. If needed, additional industry experts may be consulted. Document the results of the engineering review.

#### 13. Report

- 13.1 For reference oil results, use the standardized report form set available from the ASTM TMC and data dictionary for reporting test results and for summarizing operational data.
- 13.1.1 Fill out the report forms according to the formats shown in the data dictionary.
- 13.1.2 Transmit results to the TMC within 5 working days of test completion.
- 13.1.3 Transmit the results electronically as described in the ASTM Data Communications Committee Test Report Transmission Model (Section 2—Flat File Transmission Format) available from the ASTM TMC. Upload files via the TMC's website.
- 13.2 Report all reference oil test results, whether aborted, invalidated, or successfully completed, to the TMC.
- 13.3 *Deviations from Test Operational Limits*—Report all deviations from specified test operational limits.
- 13.4 Precision of Reported Units—Use the Practice E29 rounding-off method for critical pass/fail test result data. Report the data to the same precision as indicated in data dictionary.
- 13.5 In the space provided, note the time, date, test hour, and duration of any shutdown or off-test condition. Document the outcome of all prior reference oil tests from the current calibration sequence that were operationally or statistically invalid.
- 13.6 If a calibration period is extended beyond the normal calibration period length, make a note in the comment section and attach a written confirmation of the granted extension from the TMC to the test report. List the outcomes of previous runs that may need to be considered as part of the extension in the comment section.

#### 14. Precision and Bias

- 14.1 *Precision*—Test precision is established based on reference oil test results (for operationally valid tests) monitored by the TMC. Table 1 summarizes reference oil precision of the test based on results obtained with TMC Reference Oils 1006, 1006-2, 433, 433-1, 1008, and 1008-1. (Values are valid as of May 1, 2003. Contact the TMC for current precision values.)
- 14.1.1 *Intermediate Precision Conditions*—Conditions where test results are obtained with the same test method using the same test oil, with changing conditions such as operators, measuring equipment, test stands, test engines, and time.
- 14.1.1.1 Intermediate Precision Limit (i.p.)—The difference between two results obtained under intermediate precision

TABLE 1 Test Precision<sup>A</sup>

Test Result <sup>B</sup>	Intermediat	Intermediate Precision <sup>C</sup>		ucibility <sup>D</sup>
	S <sub>i.p.</sub> E	i.p.	$S_R^E$	R
PVIS <sup>F</sup>	0.025592	0.071657	0.026201	0.073363
WPD	0.567	1.588	0.612	1.714
APV	0.229	0.641	0.241	0.675
PV60 <sup>F</sup>	0.252450	0.070686	0.275182	0.770510
Hours <sup>G</sup>	7.197	20.152	7.436	20.821

 $<sup>^{</sup>A}$  Based on results obtained on ASTM Reference Oils 1006-2, 1008-1, and 433–1, and 433–2 from Aug. 16, 2001 to July 6, 2015.  $^{\mathcal{B}}$ 

PVIS = Percent viscosity increase at 80 h, in transformed units.

The results transformed using the transformation: 1/√PVIS.

WPD = Weighted Piston Denosits in merits

WPD = Weighted Piston Deposits, in merits.APV = Average piston skirt varnish, in merits.

PV60 = Percent viscosity increase at 60 h, in transformed units.

The results transformed using the transformation: In(PV60).

 $^{\rm G}$  Hours to 275 % viscosity increase, based on results obtained on ASTM Reference Oils 433–1 and 433–2 from Aug. 16, 2001 to July 6, 2015.

conditions that would, in the long run, in the normal and correct conduct of the test method, exceed the values in Table 1 in only one case in twenty. When only a single test result is available, the Intermediate Precision Limit can be used to

calculate a range (test result  $\pm$  Intermediate Precision Limit) outside of which a second test would be expected to fall about one time in twenty.

Note 14—"Intermediate precision" is the appropriate term for this test method, rather than "repeatability," which defines more rigorous within-laboratory conditions.

- 14.1.2 *Reproducibility Conditions*—Conditions where test results are obtained with the same test method using the same test oil in different laboratories with different operators using different equipment.
- 14.1.2.1 Reproducibility Limit (R)—The difference between two results obtained under reproducibility conditions that would, in the long run, in the normal and correct conduct of the test method, exceed the values in Table 1 in only one case in twenty. When only a single test result is available, the Reproducibility Limit can be used to calculate a range (test result  $\pm$  Reproducibility Limit) outside of which a second test would be expected to fall about one time in twenty.
- 14.2 *Bias*—Bias is determined by applying an accepted statistical technique to reference oil test results and when a significant bias is determined, a SA is permitted for non-reference oil test results.

#### 15. Keywords

15.1 cam and lifter wear; deposits; engine oil; engine wear; high-temperature performance; oil consumption; oil thickening; oil viscosity; oxidation resistance; Sequence IIIF test; spark-ignition automotive engine; varnish; varnish deposition

#### **ANNEXES**

(Mandatory Information)

#### A1. ASTM TEST MONITORING CENTER ORGANIZATION

A1.1 Nature and Functions of the ASTM Test Monitoring Center (TMC)—The TMC is a non profit organization located in Pittsburgh, Pennsylvania and is staffed to: administer engineering studies; conduct laboratory inspections; perform statistical analyses of reference oil test data; blend, store, and ship reference oils; and provide the associated administrative functions to maintain the referencing calibration program for various lubricant tests as directed by ASTM Subcommittee D02.B0 and the ASTM Executive Committee. The TMC coordinates its activities with the test sponsors, the test developers, the surveillance panels, and the testing laboratories. Contact TMC through the TMC Director at:

ASTM Test Monitoring Center 6555 Penn Avenue Pittsburgh, PA 15206-4489 www.astmtmc.cmu.edu

- A1.2 Rules of Operation of the ASTM TMC—The TMC operates in accordance with the ASTM Charter, the ASTM Bylaws, the Regulations Governing ASTM Technical Committees, the Bylaws Governing ASTM Committee D02, and the Rules and Regulations Governing the ASTM Test Monitoring System.
- A1.3 Management of the ASTM TMC—The management of the Test Monitoring System is vested in the Executive Committee elected by Subcommittee D02.B0. The Executive Committee selects the TMC Director who is responsible for directing the activities of the TMC.
- A1.4 Operating Income of the ASTM TMC—The TMC operating income is obtained from fees levied on the reference oils supplied and on the calibration tests conducted. Fee schedules are established by the Executive Committee and reviewed by Subcommittee D02.B0.

<sup>&</sup>lt;sup>C</sup> See 14.1.1.

<sup>&</sup>lt;sup>D</sup> See 14.1.2.

Es = standard deviation.

F This parameter is transformed, using the transformation in Footnote B. When comparing two test results on this parameter, first apply the transformation to each test result. Compare the absolute difference between the transformed results with the appropriate (intermediate precision or reproducibility) precision limit.

#### A2. ASTM TEST MONITORING CENTER: CALIBRATION PROCEDURES

- A2.1 Reference Oils—These oils are formulated or selected to represent specific chemical, or performance levels, or both. They are usually supplied directly to a testing laboratory under code numbers to ensure that the laboratory is not influenced by prior knowledge of acceptable results in assessing test results. The TMC determines the specific reference oil the laboratory shall test.
- A2.1.1 Reference Oil Data Reporting—Test laboratories that receive reference oils for stand calibration shall submit data to the TMC on every sample of reference oil they receive. If a shipment contains any missing or damaged samples, the laboratory shall notify the TMC immediately.

#### A2.2 Calibration Testing:

- A2.2.1 Full scale calibration testing shall be conducted at regular intervals. These full scale tests are conducted using coded reference oils supplied by the TMC. It is a laboratory's responsibility to keep the onsite reference oil inventory at or above the minimum level specified by the TMC test engineers.
- A2.2.2 Test Stands Used for Non Standard Tests—If a non standard test is conducted on a previously calibrated test stand, the laboratory shall conduct a reference oil test on that stand to demonstrate that it continues to be calibrated, prior to running standard tests.
- A2.3 Reference Oil Storage—Store reference oils under cover in locations where the ambient temperature is between -10 °C and +50 °C.

- A2.4 Analysis of Reference Oil—Unless specifically authorized by the TMC, do not analyze TMC reference oils, either physically or chemically. Do not resell ASTM reference oils or supply them to other laboratories without the approval of the TMC. The reference oils are supplied only for the intended purpose of obtaining calibration under the ASTM Test Monitoring System. Any unauthorized use is strictly forbidden. The testing laboratory tacitly agrees to use the TMC reference oils exclusively in accordance with the TMC's published Policies for Use and Analysis of ASTM Reference Oils, and to run and report the reference oil test results according to TMC guidelines. Additional policies for the use and analysis of ASTM Reference Oils are available from the TMC.
- A2.5 Conducting a Reference Oil Test—When laboratory personnel are ready to run a reference calibration test, they shall request an oil code via the TMC website.
- A2.6 Reporting Reference Oil Test Results—Upon completion of the reference oil test, the test laboratory transmits the data electronically to the TMC, as described in Section 13. The TMC reviews the data and contacts the laboratory engineer to report the laboratory's calibration status. All reference oil test results, whether aborted, invalidated, or successfully completed, shall be reported to the TMC.
- A2.6.1 All deviations from the specified test method shall be reported.

#### A3. ASTM TEST MONITORING CENTER: MAINTENANCE ACTIVITIES

- A3.1 Special Reference Oil Tests—To ensure continuous severity and precision monitoring, calibration tests are conducted periodically throughout the year. Occasionally, the majority or even all of the industry's test stands will conduct calibration tests at roughly the same time. This could result in an unacceptably large time frame when very few calibration tests are conducted. The TMC can shorten or extend calibration periods as needed to provide a consistent flow of reference oil test data. Adjustments to calibration periods are made such that laboratories incur no net loss or gain in calibration status.
- A3.2 Special Use of the Reference Oil Calibration System—The surveillance panel has the option to use the reference oil system to evaluate changes that have potential impact on test severity and precision. This option is only taken when a program of donated tests is not feasible. The surveillance panel and the TMC shall develop a detailed plan for the test program. This plan requires all reference oil tests in the program to be completed as close to the same time as possible, so that no laboratory/stand calibration status is left pending for an excessive length of time. In order to maintain the integrity of the
- reference oil monitoring system, each reference oil test is conducted so as to be interpretable for stand calibration. To facilitate the required test scheduling, the surveillance panel may direct the TMC to lengthen and shorten reference oil calibration periods within laboratories such that the laboratories incur no net loss or gain in calibration status. To ensure accurate stand, or laboratory, or both severity assessments, conduct non reference oil tests the same as reference oil tests.
- A3.3 Donated Reference Oil Test Programs—The surveillance panel is charged with maintaining effective reference oil test severity and precision monitoring. During times of new parts introductions, new or re blended reference oil additions, and procedural revisions, it may be necessary to evaluate the possible effects on severity and precision levels. The surveillance panel may choose to conduct a program of donated reference oil tests in those laboratories participating in the monitoring system, in order to quantify the effect of a particular change on severity and precision. Typically, the surveillance panel requests its panel members to volunteer enough reference oil test results to create a robust data set. Broad laboratory



participation is needed to provide a representative sampling of the industry. To ensure the quality of the data obtained, donated tests are conducted on calibrated test stands. The surveillance panel shall arrange an appropriate number of donated tests and ensure completion of the test program in a timely manner.

A3.4 Intervals Between Reference Oil Tests—Under special circumstances, such as extended downtime caused by industry wide parts or fuel shortages, the TMC may extend the intervals between reference oil tests. Such extensions shall not exceed one regular calibration period.

A3.5 Introducing New Reference Oils—Reference oils produce various results. When new reference oils are selected, participating laboratories will be requested to conduct their share of tests to enable the TMC to recommend industry test targets. ASTM surveillance panels require a minimum number of tests to establish the industry test targets for new reference oils.

A3.6 TMC Information Letters—Occasionally it is necessary to revise the test method, and notify the test laboratories of the change, prior to consideration of the revision by Subcommittee D02.B0. In such a case, the TMC issues an Information Letter. Information Letters are balloted semi annually by Subcommittee D02.B0, and subsequently by D02. By this means, the Society due process procedures are applied to these Information Letters.

A3.6.1 Issuing Authority—The authority to issue an Information Letter differs according to its nature. In the case of an Information Letter concerning a part number change which does not affect test results, the TMC is authorized to issue such a letter. Long term studies by the surveillance panel to improve the test procedure through improved operation and hardware control may result in the issuance of an Information Letter. If obvious procedural items affecting test results need immediate attention, the test sponsor and the TMC issue an Information Letter and present the background and data supporting that action to the surveillance panel for approval prior to the semiannual Subcommittee D02.B0 meeting.

A3.7 TMC Memoranda—In addition to the Information Letters, supplementary memoranda are issued. These are developed by the TMC and distributed to the appropriate surveillance panel and participating laboratories. They convey such information as batch approvals for test parts or materials, clarification of the test procedure, notes and suggestions of the collection and analysis of special data that the TMC may request, or for any other pertinent matters having no direct effect on the test performance, results, or precision and bias.

#### A4. ASTM TEST MONITORING CENTER: RELATED INFORMATION

A4.1 New Laboratories—Laboratories wishing to become part of the ASTM Test Monitoring System will be requested to conduct reference oil tests to ensure that the laboratory is using the proper testing techniques. Information concerning fees, laboratory inspection, reagents, testing practices, appropriate committee membership, and rater training can be obtained by contacting the TMC Director.

A4.2 Information Letters: COTCO Approval—Authority for the issuance of Information Letters was given by the committee on Technical Committee Operations in 1984, as

follows: "COTCO recognizes that D02 has a unique and complex situation. The use of Information Letters is approved providing each letter contains a disclaimer to the affect that such has not obtained ASTM consensus. These Information Letters should be moved to such consensus as rapidly as possible."

A4.3 *Precision Data*—The TMC determines the precision of test methods by analyzing results of calibration tests conducted on reference oils. Precision data are updated regularly. Current precision data can be obtained from the TMC.



# A5. SEQUENCE HIF TEST PARTS REPLACEMENT GUIDELINES

A5.1 Tables A5.1 and A5.2 list the parts to be replaced every test and as necessary, respectively. Also for every test, replace all parts not listed in Tables A5.1 and A5.2.

# TABLE A5.1 Parts to be Replaced Every Test

Part No.	TABLE A5.1 Parts to be Replaced	Every lest
Bearing, kit, engine         OHT3F-042-2           Kit includes:         3F042-01           Bearing, connecting rod, kit, upper and lower, OH-106         3F042-02           assy         Main bearing kit, OH101 assy, includes:           Bearing, balance shaft front (part of 24502388)         SKF6205-22NRLIEM           Bearing, main, lower, No.1 and 3         OH-102           Bearing, main, lower, Ro.4         OH-102           Bearing, main, lower, flange, No. 2         OH-104           Bearing, and mushing, positions 1 and 4         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-10           Bolt, camshaft sprocket         24501366           Bolt, cylinder head, long         25527831           Bolt, cylinder head, short         28533811 or           Bolt, grear cover housing         2450396           Bolt, proker arm, special test         2450397           Bolt, recker arm, special test         3F-08-02           Bolt, rocker arm, special test         0H173F-036-02           Bolt, recker arm, special test         0H173F-036-02           Bolt, recker arm, special test         0H173F-036-02           Bolt, reprota	Part Description	
Kit includes: Bearing, connecting rod, kit, upper and lower, OH-106 assy Main bearing kit, OH101 assy, includes: Bearing, balance shaft front (part of 24502388) Bearing, main, lower, No.1 and 3 Bearing, main, lower, No.2 Bearing, amin, upper, flange, No. 2 Bearing, cam bushing, positions 1 and 4 Bearing, cam bushing, positions 2 and 3 Bolt, camshaft sprocket Bolt, cylinder head, long Bolt, cylinder head, short  Bolt, flywheel Bolt, cylinder head, short  Bolt, flywheel Bolt, cylinder head, short  Bolt, rear cover housing Bolt, rear cover housing Bolt, rear cover housing Bolt, rocker arm, special test Bolf, special test, including manganese-phosphate coating Cap, valve spring retainer Camshaft, special test, including manganese-phosphate coating Cap, valve spring retainer Chain, timing Coler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, front cover Gasket, oil pan Gasket, oil pan Gasket, oil pan Gasket, valer outlet Gasket, roor cover Gasket, water outlet Gasket, roor cover Gasket, water outlet Gasket, valer outlet Gasket, oil pan Gasket, oil pan Gasket, oil pan Gasket, roser over outle Plug, cylinder head core hole Plug, cylinder head core hole Plug, cylinder head		
Bearing, connecting rod, kit, upper and lower, OH-106 assy   Main bearing kit, OH101 assy, includes:   SF042-02   Bearing, balance shaft front (part of 24502388)   SKF6205-2ZNRJEM   Bearing, main, lower, No.1 and 3   OH-102   OH-103   OH-104   Dearing, main, lower, Riange, No.2   OH-104   OH-104   Dearing, main, upper, flange, No.2   OH-104   Dearing, main, upper, flange, No.2   OH-105   Dearing, cam bushing, positions 1 and 4   SF028-09   Bearing, cam bushing, positions 2 and 3   SF028-10   Bolt, cylinder head, long   25527831   Bolt, cylinder head, long   25527831   Bolt, cylinder head, short   25533811 or   2850592   Bolt, main cap, side   Dearing, cam, special test   24503956   Bolt, main cap, side   24505576   Bolt, rear cover housing   24503576   Bolt, rear cover housing   24503970   Bolt, cover arm, special test   3F-058-02   Bolt, special test, including manganese-phosphate coating   Cap, valve spring retainer   2450468   Closer, including manganese-phosphate coating   Cole, roli, nickel plated, bypass closed   DHT3F-030-2   Damper, timing chain (includes bolt, retaining ring)   24503893   Ting)   Cole, roli, nickel plated, bypass closed   DHT3F-030-2   Damper, timing chain (includes bolt, retaining ring)   24503893   Ting)   Cap, seek, cylinder head, left   24503802   Gasket, cylinder head, left   24503802   Gasket, cylinder head, left   24503802   Gasket, oil filter adapter   25534742   25534742   25534742   25534742   25534742   25534742   2553616   DHT3F-053-1		OHT3F-042-2
OH-106 assy  Main bearing kit, OH101 assy, includes:  Bearing, balance shaft front (part of 24502388) Bearing, bain, lower, No.1 and 3 Bearing, main, lower, No.2 Bearing, main, lower, Ro.2 Bearing, main, lower, Ro.2 Bearing, cam bushing, positions 1 and 4 Bearing, cam bushing, positions 1 and 4 Bearing, cam bushing, positions 2 and 3 Bolt, camshaft sprocket Bolt, cylinder head, long Bolt, cylinder head, short  Bolt, flywheel Bolt, main cap, side Bolt, main cap, side Bolt, rear cover housing Bolt, rear cover housing Cap, valve spring retainer Chain, timing Clip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket, cylinder head, left Gasket, cylinder head, left Gasket, oil sucion tube Gasket, oil sucion tube Gasket, oil sucion tube Gasket, rore cover housing Gasket, rore cover casket, water outlet Gasket, water outlet Gasket, water outlet Gasket, rore cover casket, vilinder Gasket, rore housing Gasket, rore cover Gasket, water outlet Gasket, rore cover Gasket, valve stem keeper Lifter, test ACI w/ flat (25338738A) Pin, piston, run s, engine set Plug, cylinder head core hole Quition, piston, run 1, engine set OHT3F-051-RUN4		05040.04
Main bearing kit, OH101 assy, includes: Bearing, balance shaft front (part of 24502388) Bearing, main, lower, No.1 and 3 Bearing, main, lower, No.1 and 3 Bearing, main, lower, Ro.2 Bearing, main, lower, flange, No. 2 Bearing, main, lower, flange, No. 2 Bearing, main, upper, flange, No. 2 Bearing, amin, upper, flange, No. 2 Bearing, cam bushing, positions 1 and 4 Bearing, cam bushing, positions 2 and 3 Bolt, camshaft sprocket Bolt, cylinder head, long Bolt, cylinder head, short Bolt, flywheel Bolt, rear cover housing Bolt, main cap Bolt, main cap Bolt, main cap Bolt, main cap Bolt, rear cover housing Bolt, rocker arm, special test Bolt, ore special test Bolt, ore special test Bolt, ore fly flywheel Bolt, rear cover housing Bolt, rocker arm, special test Bolt, pretainer Camshaft, special test, including manganese-phosphate coating Cap, valve spring retainer Chain, timing Clip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Basket, cylinder head, left Gasket, cylinder head, left Gasket, cylinder head, left Gasket, oil filter adapter Gasket, oil filter adapter Gasket, oil filter adapter Gasket, in glan Gasket, ront cover Gasket, oil pan Gasket, ront cover Gasket, oil pan Gasket, rown wist, pkg, of 6 Plug, cylinder head core hole Plug, cylinder head co		3F042-01
Main bearing, kit, OH101 assy, includes:         3F042-02           Bearing, balance shaft front (part of 24502388)         SKF6205-22NRJEM           Bearing, main, lower, No.1 and 3         OH-102           Bearing, main, lower, Ro.2         OH-104           Bearing, main, lower, Range, No.2         OH-105           Bearing, cam bushing, positions 1 and 4         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-10           Bolt, camshaft sprocket         24501366           Bolt, cylinder head, short         25533811 or           Bolt, cylinder head, short         25533811 or           Bolt, flywheel         24503056           Bolt, main cap         24503056           Bolt, main cap, side         24503970           Bolt, rear cover housing         2450257           Camshaft, special test         0H73F-08-0           Boll/screw, thrust plate retainer         25519242           Camshaft, special test		
Bearing, balance shaft front (part of 24502388)         SKF6205-2ZNRJEM           Bearing, main, lower, No.1 and 3         OH-102           Bearing, main, lower, Ro.4         OH-103           Bearing, main, upper, flange, No. 2         OH-104           Bearing, amin, upper, flange, No. 2         OH-105           Bearing, cam bushing, positions 1 and 4         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-10           Bolt, carshaft sprocket         24501366           Bolt, cylinder head, long         25533811 or           Beating, cam bushing, positions 2 and 3         3F028-10           Bolt, cylinder head, short         28593831 or           Bolt, cylinder head, short         28593831 or           Bolt, cylinder head, short         28593970           Bolt, fiywheel         24503092           Bolt, rocker arm, special test         24503956           Bolt, rear cover housing         24503970           Bolt, rocker arm, special test         3F-058-02           Bolt/screw, thrust plate retainer         225519242           Camshaft, special test         3F-058-02           Bolt/screw, thrust plate retainer         24502257           Chain, timing         2450468           Clip, retainer, piston pin         0H73F-036-	•	3F042-02
Bearing, main, lower, No.1 and 3         OH-102           Bearing, main, lower, No.4         OH-103           Bearing, main, lower, flange, No.2         OH-104           Bearing, main, lower, flange, No.2         OH-105           Bearing, cam bushing, positions 1 and 4         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-10           Bolt, cylinder head, long         25527831           Bolt, cylinder head, short         25533811 or           Bolt, flywheel         24503092           Bolt, main cap         24503576           Bolt, main cap, side         24503576           Bolt, main cap, side         24503970           Bolt, rear cover housing         24503970           Bolt, rear cover housing         24503970           Bolt, rocker arm, special test         3F-058-02           Boll/Screw, thrust plate retainer         25519242           Camshaft, special test, including manganese-phosphate coating         24502257           Can, it iming         24502257           Chain, timing         24502257           Chain, timing         24502256           Clip, retainer, piston pin         OHT3F-030-2           Coler, oli, nickel plated, bypass closed         OHT3F-030-2           Damper, timing chain (includes bolt		
Bearing, main, lower, No.4         OH-103           Bearing, main, lower, flange, No.2         OH-104           Bearing, main, upper, flange, No. 2         OH-105           Bearing, cam bushing, positions 1 and 4         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-09           Bolt, camshaft sprocket         24501366           Bolt, cylinder head, short         2553381           Bolt, cylinder head, short         24503056           Bolt, flander head, short         24503056           Bolt, main cap         24503056           Bolt, main cap, side         24503076           Bolt, recover housing         24503970           Bolt, recker arm, special test         3F-058-02           Bolt/screw, thrust plate retainer         225519242           Camshaft, special test, special test, including manganese-phosphate coating         0HT3F-008-6           Cap, valve spring retainer         24502257           Chain, timing         24504668           Clip, retainer, piston pin         0HT3F-008-6           Coler, oil, nickel plated, bypass closed         0HT3F-012-1           Cooler, oil, nickel plated, bypass closed         0HT3F-039-2           Damper, timing chain (includes bolt, retai		
Bearing, main, lower, flange, No. 2         OH-104           Bearing, main, upper, flange, No. 2         OH-105           Bearing, cam bushing, positions 1 and 4         3F028-09           Bearing, cam bushing, positions 2 and 3         3F028-10           Bolt, cambalfs sprocket         24501366           Bolt, cylinder head, short         25533811           Bolt, cylinder head, short         2450397           Bolt, flywheel         24505092           Bolt, main cap         24503096           Bolt, main cap, side         24503970           Bolt, rear cover housing         24503970           Bolt, rear cover housing         24503970           Bolt, rocker arm, special test         3F-058-02           Bolt/screw, thrust plate retainer         25519242           Camshaft, special test, including manganese-phosphate coating         24502257           Can, valve spring retainer         24502257           Chain, timing         24504668           Olip, retainer, piston pin         OHT3F-030-2           Coler, oil, nickel plated, bypass closed         OHT3F-030-2           Damper, timing chain (includes bolt, retaining ring)         24503802           Filter, Pro Tec         Gasket, cylinder head, left         24503802           Gasket, cylinder head, left	•	
Bearing, cam bushing, positions 1 and 4         3FO28-09           Bearing, cam bushing, positions 2 and 3         3F028-10           Bolt, cylinder head, long         25527831           Bolt, cylinder head, short         25533811 or           88891770         88891770           Bolt, rylinder head, short         24505092           Bolt, main cap         24503056           Bolt, main cap, side         24503976           Bolt, main cap, side         24503970           Bolt, rocker arm, special test         3F-058-02           Bolt/screw, thrust plate retainer         25519242           Camshaft, special test, including manganese-phosphate coating         0HT3F-008-6           Cap, valve spring retainer         24502257           Chain, timing         24504668           Clip, retainer, piston pin         0HT3F-012-1           Cooler, oil, nickel plated, bypass closed         0HT3F-012-1           Cooler, oil, nickel plated, bypass closed         0HT3F-057-3           Basket kit, intake manifold lower         89017399 or           Gasket, cylinder head, left         24503801           Gasket, oil filter adapter         24503802           Gasket, oil filter adapter         25534742           Gasket, oil suction tube         24501259 or	Bearing, main, lower, flange, No.2	OH-104
Bearing		OH-105
Bolt, cylinder head, long         24501366           Bolt, cylinder head, short         25527831           Bolt, tylinder head, short         285533811 or 88891770           Bolt, flywheel         24505092           Bolt, main cap         24503056           Bolt, main cap, side         24503970           Bolt, rocker arm, special test         3F-058-02           Bolt/screw, thrust plate retainer         25519242           Camshaft, special test, special test, special test, including manganese-phosphate coating         OHT3F-08-6           Camshaft, special test, special test, including manganese-phosphate coating         OHT3F-08-6           Chain, timing         24504668           Clip, retainer, piston pin         OHT3F-030-2           Cooler, oil, nickel plated, bypass closed         OHT3F-030-2           Damper, timing chain (includes bolt, retaining ring)         24503893           Filter, Pro Tec         OHT3F-057-3           Gasket kit, intake manifold lower         89017316           Gasket, cylinder head, left         24503802           Gasket, cylinder head, right         245003802           Gasket, oil filter adapter         25534742           Gasket, oil filter adapter         25534742           Gasket, oil filter adapter         255304742           Gasket		3F028-09
Bolt, cylinder head, long		
Bolt, cylinder head, short		
Bolt, flywheel 24505092 Bolt, main cap 24503056 Bolt, main cap 24503056 Bolt, main cap 24503970 Bolt, rear cover housing 24503970 Bolt/screw, thrust plate retainer 25519242 Camshaft, special test, OHT3F-008-6 including manganese-phosphate coating Cap, valve spring retainer 24502257 Chain, timing 24504668 Clip, retainer, piston pin OHT3F-012-1 Cooler, oil, nickel plated, bypass closed OHT3F-030-2 Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec OHT3F-057-3 Gasket kit, intake manifold lower 89017399 or 89017816 Gasket, cylinder head, left 24503802 Gasket, cylinder head, left 24503801 Gasket, front cover 12587003 Gasket, front cover 12587003 Gasket, oil suction tube 24501259 or 12581570 Gasket, oil suction tube 24501259 or 12581570 Gasket, rear cover housing 24507388 Gasket, rear cover housing 24507388 Gasket, rear cover housing 24507388 Gasket, rear cover bousing 24502433 Gasket, water outlet 24502260B or 24502260CF  Rey, camshaft sprocket 24500618 Key, valve stem keeper 1016634 Lifter, test ACI w/ flat (25338738A) OHT3F-029-3 Din, piston wrist, pkg, of 6 OHT3F-054-1 Piston, test, runs 1 and 2, grade 12 OHT3F-054-1 Piston, test, runs 3 and 4, grade 34 OHT3F-054-1 Piston, test, runs 3 and 6, grade 56 OHT3F-055-1 Plug, engine block core hole 24500260 Plug, oylinder head cup 24502260 Plug, engine block, oil gallery 3835577 Plug, engine block, oil gallery		
Bolt, flywheel   24505092   Bolt, main cap   24503056   Bolt, main cap, side   24503056   Bolt, main cap, side   24503970   Bolt, rear cover housing   24503970   Bolt, rear cover housing   24503970   Bolt, rocker arm, special test   3F-058-02   Bolt/screw, thrust plate retainer   25519242   Camshaft, special test, including manganese-phosphate coating   Cap, valve spring retainer   24502257   Chain, timing   24504668   Clip, retainer, piston pin   COoler, oil, nickel plated, bypass closed   OHT3F-012-1   Cooler, oil, nickel plated, bypass closed   OHT3F-012-1   Cooler, oil, nickel plated, bypass closed   OHT3F-057-3   Gasket kit, intake manifold lower   B9017399 or B9	Boit, cylinder nead, short	
Bolt, main cap         24503056           Bolt, main cap, side         24505576           Bolt, rear cover housing         24503970           Bolt, rocker arm, special test         3F-058-02           Bolt/screw, thrust plate retainer         25519242           Camshaft, special test, including manganese-phosphate coating         0H73F-008-6           Camshaft, special test, including manganese-phosphate coating         24502257           Chain, timing         24504668           Clip, retainer, piston pin         0H73F-012-1           Cooler, oil, nickel plated, bypass closed         0H73F-030-2           Damper, timing chain (includes bolt, retaining ring)         24503893           Filter, Pro Tec         0H73F-057-3           Gasket kit, intake manifold lower         89017399 or           Gasket, cylinder head, left         24503802           Gasket, cylinder head, left         24503801           Gasket, front cover         12587003           Gasket, oil filter adapter         25534742           Gasket, oil suction tube         24501259 or           12581570         24501259 or           Gasket, vacter cover housing         24507388           Gasket, water outlet         245022608           Key, camshaft sprockt         24502260B or	Polt flywbool	
Bolt, main cap, side		
Bolt, rear cover housing   24503970   Bolt, rocker arm, special test   3F.058-02   Solt/screw, thrust plate retainer   25519242   Camshaft, special test, including manganese-phosphate coating   Cap, valve spring retainer   24504668   Clip, retainer, piston pin   OHT3F-012-1   Cooler, oil, nickel plated, bypass closed   Damper, timing chain (includes bolt, retaining ring)   Filter, Pro Tec   Gasket kit, intake manifold lower   89017399 or 12587003   Casket, cylinder head, right   24503802   Casket, cylinder head, right   24503801   Casket, oil suction tube   24501259 or 12587003   Casket, oil suction tube   24501259 or 12581570   Casket, oil suction tube   24501259 or 12581570   Casket, rear cover housing   24507388   Casket, water outlet   24502260B or 2450260B or 24502260B or	· · · · · · · · · · · · · · · · · · ·	
Bolt, rocker arm, special test Bolt/screw, thrust plate retainer Camshaft, special test, including manganese-phosphate coating Cap, valve spring retainer Chain, timing Cip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, oil suction tube Gasket, oil suction tube Gasket, oil suction tube Gasket, rear cover housing Gasket, water outlet Gasket, water outlet Gasket, water pump Head, cylinder He	The state of the s	
Bolt/screw, thrust plate retainer Camshaft, special test, Including manganese-phosphate coating Cap, valve spring retainer Chain, timing Cilip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, oil filter adapter Gasket, oil suction tube Casket, oil suction tube Casket, rear cover housing Gasket, rear cover housing Gasket, water outlet Gasket, water outlet Gasket, water pump Head, cylinder Head, cylinder Head, cylinder Head, cylinder Lifter, test ACI w/ flat (25338738A) Pin, piston wrist, pkg. of 6 Piston, test, runs 5 and 6, grade 56 Plug, engine block, core hole Plug, engine block core hole Plug, cylinder head cup Plug, engine block core hole Plug, cylinder head cup Plug, engine block, oil gallery Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 Retainer clip, piston, run 1, engine set Hea. ring, piston, run 5, engine Set OHT3F-052-RUN6 Hea. ring, piston, run 5, engine Set OHT3F-052-RUN6		
Camshaft, special test, including manganese-phosphate coating Cap, valve spring retainer Chain, timing Cip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, oil filter adapter Gasket, oil filter adapter Gasket, oil suction tube Casket, rocker cover Gasket, water pump Head, cylinder Head,		25519242
Cap, valve spring retainer Chain, timing Clip, retainer, piston pin Clip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, oil filter adapter Gasket, oil suction tube Gasket, oil suction tube Gasket, rear cover housing Gasket, rear cover housing Gasket, water outlet Gasket, water outlet Gasket, water bump Head, cylinder Gasket, oil suction tube Gasket, rear cover housing Gasket, rear cover housing Gasket, rear cover housing Gasket, rear cover housing Gasket, water outlet Gasket, valve stem keeper Lifter, test ACI w' flat (25338738A) Pin, piston wrist, pkg. of 6 Piston, test, runs 1 and 2, grade 12 Piston, test, runs 3 and 4, grade 34 Piston, test, runs 3 and 4, grade 34 Piston, test, runs 3 and 4, grade 34 Pilug, engine block core hole Plug, cylinder head cup Pushrod, special length, pkg. of 12 Retainer clip, piston, run 1, engine set OHT3F-050-RUN1 1 ea. ring, piston, run 2, engine set OHT3F-051-RUN3 1 ea. ring, piston, run 5, engine Set OHT3F-052-RUN6		OHT3F-008-6
Chain, timing Cip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, oil filter adapter Gasket, oil filter adapter Gasket, oil suction tube Gasket, oil suction tube Gasket, rear cover housing Gasket, rocker cover Gasket, water outlet Gasket, water pump Head, cylinder Casket, water bump Head, cylinder Flead, rocker cover Gasket, water outlet Gasket, water outlet Casket, water outlet Casket, water pump Casket, water outlet Casket, water Casket, voler Casket, vater Casket, voler Casket, vater Casket, vater Casket, vater Caske	including manganese-phosphate coating	
Clip, retainer, piston pin Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, cylinder head, right Gasket, oil pan Gasket, oil filter adapter Gasket, oil pan Gasket, oil suction tube  Gasket, oil suction tube  Gasket, rear cover housing Gasket, rocker cover Gasket, water outlet Gasket, water pump Head, cylinder Head, cylinder  Key, camshaft sprocket Key, valve stem keeper Lifter, test ACI w/ flat (25338738A) Piston, test, runs 1 and 2, grade 12 Piston, test, runs 3 and 4, grade 34 Piston, test, runs 5 and 6, grade 56 Plug, cylinder head cup Plug, engine block, oil gallery Plug, engine block core hole Plug, cylinder piston pin pkg. of 12 Retainer clip, piston, run 1, engine set 1 ea. ring, piston, run 2, engine Set OHT3F-052-RUN6		24502257
Cooler, oil, nickel plated, bypass closed Damper, timing chain (includes bolt, retaining ring) Filter, Pro Tec Gasket kit, intake manifold lower Gasket, cylinder head, left Gasket, cylinder head, right Gasket, cylinder head, right Gasket, cil filter adapter Gasket, oil filter adapter Gasket, oil suction tube Gasket, rear cover housing Gasket, rear cover housing Gasket, water outlet Gasket, water pump Head, cylinder Casket, water pump Casket, valve stem keeper Casket, valve stem		
Damper, timing chain (includes bolt, retaining ring)         24503893           Filter, Pro Tec         OHT3F-057-3           Gasket kit, intake manifold lower         89017399 or 89017816           Gasket, cylinder head, left         24503802           Gasket, ground rover         12587003           Gasket, oil filter adapter         25534742           Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or 12581570           Gasket, rear cover housing         24507388           Gasket, rocker cover         25532619           Gasket, water pump         24501259           Head, cylinder         245022608           Key, camshaft sprocket         245022608 or 245022608 or 245022608           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-03-1           Piston, test, runs 1 and 2, grade 12         OHT3F-055-1           Pitate, camshaft thrust, 1520 in. thickness         OHT3F-055-1           Plug, engine block core hole         24500867           Plug, cylinder head core         24500262           Plug, engine block, oil gallery         3835577		
ring) Filter, Pro Tec Gasket kit, intake manifold lower  Gasket, cylinder head, left Gasket, cylinder head, right Gasket, cylinder head, right Gasket, oil filter adapter Gasket, oil gan Gasket, oil pan Gasket, oil pan Gasket, oil suction tube Casket, oil suction tube Casket, rear cover housing Gasket, rear cover housing Casket, rear cover housing Casket, rear cover housing Casket, rocker cover Casket, water outlet Casket, water outlet Casket, water outlet Casket, water pump Casket, valore pump Casket, oil pand Casket, roil pump Casket, oil pand Casket, valore pand Casket, valore pand Casket, oil pand Casket, valore pand Casket, oil pand Casket, valore pand Casket, valore pand Casket, oil pand Casket, valore pand Casket, oil pand Casket, valora Casket, oil pand Casket, oil pand Casket, valora Casket, oil pand Casket, oil pand Casket, valora Casket, oil pand Casonasa Casket, oil pand Casket, oil pand Casket, oil pand Casona		
Filter, Pro Tec Gasket kit, intake manifold lower Bay017399 or Bay017316 Gasket, cylinder head, left Casket, cylinder head, right Casket, cylinder head, right Casket, cylinder head, right Casket, front cover Casket, oil filter adapter Casket, oil suction tube Casket, oil suction tube Casket, oil suction tube Casket, rear cover housing Casket, rear cover housing Casket, rear cover housing Casket, water outlet Casket, water outlet Casket, water pump Casket, water Casket, water Casket,		24303093
Gasket kit, intake manifold lower         89017399 or 89017816           Gasket, cylinder head, left         24503802           Gasket, cylinder head, right         24503801           Gasket, front cover         12587003           Gasket, oil filter adapter         25534742           Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or 12581570           Gasket, rear cover housing         24501259 or 12581570           Gasket, water outlet         24507388           Gasket, water outlet         24502433           Gasket, water pump         24501260B or 24502260B or 24502260B or 24502260B or 24502260B or 24502260B or 24502260B or 245002618           Key, camshaft sprocket         24500618           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-014-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, gigniton spark         NGK TR6           Plugn, i		OHT3F-057-3
Gasket, cylinder head, right         24503802           Gasket, cylinder head, right         24503801           Gasket, front cover         12587003           Gasket, oil filter adapter         25534742           Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or           Gasket, oil suction tube         24507388           Gasket, rear cover housing         24507388           Gasket, water outlet         24502433           Gasket, water pump         24501265           Head, cylinder         24502260B or           Key, camshaft sprocket         24502260B or           Key, camshaft sprocket         24502260S^A           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-014-1           Piston, test, runs 3 and 4, grade 34         OHT3F-053-1           Piston, test, runs 5 and 6, grade 56         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plug, engine block core hole         2450266           Plug, engine block core hole         2450266           Plug, engine block, oil gallery </td <td>,</td> <td></td>	,	
Gasket, cylinder head, right         24503801           Gasket, front cover         12587003           Gasket, oil filter adapter         25534742           Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or           Gasket, rear cover housing         24507388           Gasket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24501565           Head, cylinder         24502260B or           24502260B or         24502260B or           24502260S <sup>A</sup> Key, camshaft sprocket         24500618           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-014-1           Piston, test, runs 3 and 4, grade 34         OHT3F-053-1           Piston, test, runs 5 and 6, grade 56         OHT3F-054-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-055-1           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, gengine block, oil gallery         3835577           Plug, ig		89017816
Gasket, front cover         12587003           Gasket, oil filter adapter         25534742           Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or           Gasket, rear cover housing         24507388           Gasket, rear cover desket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24502260B or           Head, cylinder         24502260B or           Key, camshaft sprocket         24500260B or           Key, camshaft sprocket         24500260B or           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-03-1           Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-055-1           Plug, engine block core hole         24500266           Plug, cylinder head core hole         3835577           Plug, ginition spark         NGK TR6           Plughrod, s	Gasket, cylinder head, left	24503802
Gasket, oil filter adapter         25534742           Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or           Gasket, rear cover housing         24507388           Gasket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24502260B or           Head, cylinder         24502260B or           Key, camshaft sprocket         245002608 or           Key, camshaft sprocket         245002608 or           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-029-3           Pin, piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-055-1           Piston, test, runs 5 and 6, grade 56         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plug, engine block core hole         24500867           Plug, engine block core hole         3835577           Plug, cylinder head cup         24502262           Plug, ignition spark         NGK TR6           Plugn, ignition spark         NGK TR6           Plugn, oil relief         2553		24503801
Gasket, oil pan         OHT3G-093-1           Gasket, oil suction tube         24501259 or           Gasket, rear cover housing         24507388           Gasket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24501565           Head, cylinder         24502260B or           24502260SA         Key, camshaft sprocket           Key, camshaft sprocket         24500618           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-029-3           Pin, piston, test, runs 1 and 2, grade 12         OHT3F-029-3           Pin, piston, test, runs 3 and 4, grade 34         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-051-1           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, engine block, oil gallery         3835577           Plug, ignition spark         NGK TR6           Plung	· · · · · · · · · · · · · · · · · · ·	
Gasket, oil suction tube         24501259 or 12581570           Gasket, rear cover housing         24507388           Gasket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24501565           Head, cylinder         245022608 or 245022608 or 245022608 or 245022608 dr           Key, camshaft sprocket         24500618           Key, valve stem keeper         1016634           Lifter, test ACI w flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-055-1           Plug, engine block core hole         24500266           Plug, cylinder head core hole         3835577           Plug, cylinder head core hole         3835577           Plug, ignition spark         NGK TR6           Plunger, oil relief         2530949           Pushrod, special length, pkg. of 12         OHT3F-050-RUN1           1 ea. ring, piston, run 1, engine set         OHT3F-050-RUN2           1 ea. ring, piston, run 3, engine Set		
12581570	·	
Gasket, rear cover housing         24507388           Gasket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24501565           Head, cylinder         24502260B or 24502260B or 24502260S <sup>4</sup> Key, camshaft sprocket         24500260S <sup>4</sup> Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-053-1           Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 5 and 6, grade 34         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-054-1           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, cylinder head cup         24502262           Plug, engine block, oil gallery         3835577           Plug, ignition spark         NGK TR6           Plunger, oil relief         25530949           Pushrod, special length, pkg. of 12         OHT3F-007-1           Retainer clip, piston pin pkg. of 12         OHT3F-050-RUN1           1 ea. ring, piston, run 1, engine set         OHT3F-051-RUN3 <td>Gasket, oil suction tube</td> <td></td>	Gasket, oil suction tube	
Gasket, rocker cover         25532619           Gasket, water outlet         24502433           Gasket, water pump         24501565           Head, cylinder         24502260B or           Key, camshaft sprocket         24500260S <sup>4</sup> Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-055-1           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, engine block, oil gallery         3835577           Plug, ignition spark         NGK TR6           Plunger, oil relief         25530949           Pushrod, special length, pkg. of 12         OHT3F-007-1           Retainer clip, piston pin pkg. of 12         OHT3F-050-RUN1           1 ea. ring, piston, run 1, engine set         OHT3F-050-RUN1           1 ea. ring, piston, run 3, engine Set         OHT3F-051-RUN4           1 ea. ring, piston, run 4, engine Set <td< td=""><td>Gasket rear cover housing</td><td></td></td<>	Gasket rear cover housing	
Gasket, water outlet         24502433           Gasket, water pump         24501565           Head, cylinder         24502260B or           Key, camshaft sprocket         24500260S <sup>A</sup> Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-055-1           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, engine block, oil gallery         383597           Pushrod, special length, pkg. of 12         OHT3F-007-1           Retainer clip, piston pin pkg. of 12         OHT3F-050-RUN1           1 ea. ring, piston, run 1, engine set		
Head, cylinder         24502260B or 24502260S <sup>4</sup> Key, camshaft sprocket         24500618           Key, valve stem keeper         1016634           Lifter, test ACI w/ flat (25338738A)         OHT3F-029-3           Pin, piston wrist, pkg. of 6         OHT3F-014-1           Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 5 and 6, grade 56         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-011-2           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, cylinder head cup         24502262           Plug, engine block, oil gallery         3835577           Plug, ignition spark         NGK TR6           Plunger, oil relief         25530949           Pushrod, special length, pkg. of 12         OHT3F-007-1           Retainer clip, piston pin pkg. of 12         OHT3F-007-1           1 ea. ring, piston, run 1, engine set         OHT3F-050-RUN1           1 ea. ring, piston, run 2, engine Set         OHT3F-051-RUN3           1 ea. ring, piston, run 4, engine Set         OHT3F-051-RUN4           1 ea. ring, piston, run 5, engine Set         OHT3F-052-RUN5           <	· · · · · · · · · · · · · · · · · · ·	24502433
Key, camshaft sprocket       24502260S <sup>A</sup> Key, valve stem keeper       1016634         Lifter, test ACI w/ flat (25338738A)       OHT3F-029-3         Pin, piston wrist, pkg. of 6       OHT3F-014-1         Piston, test, runs 1 and 2, grade 12       OHT3F-053-1         Piston, test, runs 3 and 4, grade 34       OHT3F-054-1         Piston, test, runs 5 and 6, grade 56       OHT3F-055-1         Plate, camshaft thrust, .1520 in. thickness       OHT3F-011-2         Plug, engine block core hole       24500867         Plug, cylinder head core hole       3835577         Plug, cylinder head cup       24502262         Plug, engine block, oil gallery       3835577         Plug, ignition spark       NGK TR6         Plunger, oil relief       25530949         Pushrod, special length, pkg. of 12       OHT3F-007-1         Retainer clip, piston pin pkg. of 12       OHT3F-012-1         1 ea. ring, piston, run 1, engine set       OHT3F-050-RUN1         1 ea. ring, piston, run 2, engine set       OHT3F-051-RUN3         1 ea. ring, piston, run 4, engine Set       OHT3F-051-RUN4         1 ea. ring, piston, run 5, engine Set       OHT3F-052-RUN5         1 ea. ring, piston, run 6, engine Set       OHT3F-052-RUN6	Gasket, water pump	24501565
Key, camshaft sprocket       24500618         Key, valve stem keeper       1016634         Lifter, test ACI w/ flat (25338738A)       OHT3F-029-3         Pin, piston wrist, pkg. of 6       OHT3F-014-1         Piston, test, runs 1 and 2, grade 12       OHT3F-053-1         Piston, test, runs 3 and 4, grade 34       OHT3F-054-1         Piston, test, runs 5 and 6, grade 56       OHT3F-055-1         Plate, camshaft thrust, .1520 in. thickness       OHT3F-011-2         Plug, engine block core hole       24500867         Plug, cylinder head cup       24502262         Plug, engine block, oil gallery       3835577         Plug, engine block, oil gallery       3835577         Plug, ignition spark       NGK TR6         Plunger, oil relief       25530949         Pushrod, special length, pkg. of 12       OHT3F-007-1         Retainer clip, piston pin pkg. of 12       OHT3F-012-1         1 ea. ring, piston, run 1, engine set       OHT3F-050-RUN1         1 ea. ring, piston, run 2, engine Set       OHT3F-051-RUN3         1 ea. ring, piston, run 4, engine Set       OHT3F-051-RUN4         1 ea. ring, piston, run 5, engine Set       OHT3F-052-RUN5         1 ea. ring, piston, run 6, engine Set       OHT3F-052-RUN5	Head, cylinder	_
Key, valve stem keeper  Lifter, test ACI w/ flat (25338738A)  Pin, piston wrist, pkg. of 6  Piston, test, runs 1 and 2, grade 12  Piston, test, runs 3 and 4, grade 34  Piston, test, runs 5 and 6, grade 56  Plate, camshaft thrust, .1520 in. thickness  Plug, engine block core hole  Plug, cylinder head core hole  Plug, cylinder head cup  Plug, engine block, oil gallery  Plug, engine block, oil gallery  Plug, ignition spark  Plunger, oil relief  Pushrod, special length, pkg. of 12  Retainer clip, piston pin pkg. of 12  Retainer clip, piston, run 1, engine set  1 ea. ring, piston, run 2, engine Set  1 ea. ring, piston, run 3, engine Set  OHT3F-052-RUN5  1 ea. ring, piston, run 5, engine Set  OHT3F-052-RUN6		
Lifter, test ACI w/ flat (25338738A)  Pin, piston wrist, pkg. of 6  Piston, test, runs 1 and 2, grade 12  Piston, test, runs 3 and 4, grade 34  Piston, test, runs 5 and 6, grade 56  Plate, camshaft thrust, .1520 in. thickness  Plug, engine block core hole  Plug, cylinder head core hole  Plug, cylinder head cup  Plug, engine block, oil gallery  Plug, engine block, oil gallery  Pug, engine block, oil gallery  Roght TR6  Plunger, oil relief  Pushrod, special length, pkg. of 12  Retainer clip, piston pin pkg. of 12  Retainer clip, piston, run 1, engine set  1 ea. ring, piston, run 2, engine set  1 ea. ring, piston, run 3, engine Set  1 ea. ring, piston, run 4, engine Set  1 ea. ring, piston, run 5, engine Set  OHT3F-052-RUN6  OHT3F-052-RUN6		
Pin, piston wrist, pkg. of 6 Piston, test, runs 1 and 2, grade 12 Piston, test, runs 3 and 4, grade 34 Piston, test, runs 5 and 6, grade 56 Plate, camshaft thrust, .1520 in. thickness Plug, engine block core hole Plug, cylinder head core hole Plug, cylinder head cup Plug, engine block, oil gallery ABS35577 Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 OHT3F-007-1 OHT3F-007-1 OHT3F-012-1 1 ea. ring, piston, run 1, engine set OHT3F-050-RUN1 1 ea. ring, piston, run 2, engine Set OHT3F-051-RUN3 1 ea. ring, piston, run 4, engine Set OHT3F-052-RUN5 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN5		
Piston, test, runs 1 and 2, grade 12         OHT3F-053-1           Piston, test, runs 3 and 4, grade 34         OHT3F-054-1           Piston, test, runs 5 and 6, grade 56         OHT3F-055-1           Plate, camshaft thrust, .1520 in. thickness         OHT3F-011-2           Plug, engine block core hole         24500867           Plug, cylinder head core hole         3835577           Plug, cylinder head cup         24502262           Plug, engine block, oil gallery         3835577           Plug, ignition spark         NGK TR6           Plunger, oil relief         25530949           Pushrod, special length, pkg. of 12         OHT3F-007-1           Retainer clip, piston pin pkg. of 12         OHT3F-007-1           1 ea. ring, piston, run 1, engine set         OHT3F-050-RUN1           1 ea. ring, piston, run 2, engine set         OHT3F-050-RUN2           1 ea. ring, piston, run 3, engine Set         OHT3F-051-RUN3           1 ea. ring, piston, run 4, engine Set         OHT3F-052-RUN5           1 ea. ring, piston, run 5, engine Set         OHT3F-052-RUN5           1 ea. ring, piston, run 6, engine Set         OHT3F-052-RUN6		
Piston, test, runs 3 and 4, grade 34  Piston, test, runs 5 and 6, grade 56  Plate, camshaft thrust, .1520 in. thickness  Plug, engine block core hole  Plug, cylinder head core hole  Plug, cylinder head cup  Plug, cylinder head cup  Plug, engine block, oil gallery  Plug, ignition spark  Plunger, oil relief  Pushrod, special length, pkg. of 12  Retainer clip, piston pin pkg. of 12  1 ea. ring, piston, run 1, engine set  1 ea. ring, piston, run 3, engine Set  1 ea. ring, piston, run 4, engine Set  1 ea. ring, piston, run 5, engine Set  OHT3F-052-RUN5  1 ea. ring, piston, run 6, engine Set  OHT3F-052-RUN6		
Piston, test, runs 5 and 6, grade 56 Plate, camshaft thrust, .1520 in. thickness Plug, engine block core hole Plug, cylinder head core hole Plug, cylinder head cup Plug, cylinder head cup Plug, engine block, oil gallery Plug, engine block, oil gallery Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 Retainer clip, piston pin pkg. of 12 OHT3F-007-1 Retainer clip, piston, run 1, engine set OHT3F-050-RUN1 1 ea. ring, piston, run 2, engine set OHT3F-050-RUN2 1 ea. ring, piston, run 4, engine Set OHT3F-051-RUN3 1 ea. ring, piston, run 5, engine Set OHT3F-052-RUN5 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN6		
Plug, engine block core hole Plug, cylinder head core hole Plug, cylinder head core hole Plug, cylinder head cup Plug, cylinder head cup Plug, engine block, oil gallery Plug, engine block, oil gallery Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 Pushrod, special length,		OHT3F-055-1
Plug, cylinder head core hole Plug, cylinder head cup Plug, cylinder head cup Plug, engine block, oil gallery Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 Retainer clip, piston pin pkg. of 12 Pea. ring, piston, run 1, engine set Pea. ring, piston, run 2, engine set Pea. ring, piston, run 3, engine Set Pea. ring, piston, run 4, engine Set Pea. ring, piston, run 5, engine Set Pea. ring, piston, run 6, engine Set		OHT3F-011-2
Plug, cylinder head cup Plug, engine block, oil gallery Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 Retainer clip, piston pin pkg. of 12 OHT3F-007-1 1 ea. ring, piston, run 1, engine set OHT3F-050-RUN1 1 ea. ring, piston, run 2, engine set OHT3F-050-RUN2 1 ea. ring, piston, run 3, engine Set OHT3F-051-RUN3 1 ea. ring, piston, run 4, engine Set OHT3F-051-RUN4 1 ea. ring, piston, run 5, engine Set OHT3F-052-RUN5 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN5		
Plug, engine block, oil gallery  Plug, ignition spark  Plunger, oil relief  Pushrod, special length, pkg. of 12  Retainer clip, piston pin pkg. of 12  1 ea. ring, piston, run 1, engine set  1 ea. ring, piston, run 2, engine set  1 ea. ring, piston, run 3, engine Set  1 ea. ring, piston, run 4, engine Set  1 ea. ring, piston, run 5, engine Set  1 ea. ring, piston, run 6, engine Set  OHT3F-052-RUN5  1 ea. ring, piston, run 6, engine Set  OHT3F-052-RUN5		
Plug, ignition spark Plunger, oil relief Pushrod, special length, pkg. of 12 Retainer clip, piston pin pkg. of 12 1 ea. ring, piston, run 1, engine set 1 ea. ring, piston, run 2, engine set 1 ea. ring, piston, run 3, engine Set 1 ea. ring, piston, run 4, engine Set 1 ea. ring, piston, run 5, engine Set 1 ea. ring, piston, run 5, engine Set 1 ea. ring, piston, run 6, engine Set	0, ,	
Plunger, oil relief  Pushrod, special length, pkg. of 12  Retainer clip, piston pin pkg. of 12  1 ea. ring, piston, run 1, engine set  1 ea. ring, piston, run 2, engine set  1 ea. ring, piston, run 3, engine Set  1 ea. ring, piston, run 4, engine Set  1 ea. ring, piston, run 5, engine Set  1 ea. ring, piston, run 6, engine Set  OHT3F-052-RUN5  OHT3F-052-RUN5  OHT3F-052-RUN6		
Pushrod, special length, pkg. of 12 Retainer clip, piston pin pkg. of 12 1 ea. ring, piston, run 1, engine set 1 ea. ring, piston, run 2, engine set 1 ea. ring, piston, run 3, engine Set 1 ea. ring, piston, run 4, engine Set 1 ea. ring, piston, run 5, engine Set 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN5 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN6	0, 0	
Retainer clip, piston pin pkg. of 12  1 ea. ring, piston, run 1, engine set  1 ea. ring, piston, run 2, engine set  OHT3F-050-RUN1  1 ea. ring, piston, run 3, engine Set  1 ea. ring, piston, run 4, engine Set  1 ea. ring, piston, run 5, engine Set  OHT3F-051-RUN4  1 ea. ring, piston, run 5, engine Set  OHT3F-052-RUN5  1 ea. ring, piston, run 6, engine Set  OHT3F-052-RUN6		
1 ea. ring, piston, run 2, engine set 1 ea. ring, piston, run 3, engine Set 2 ea. ring, piston, run 4, engine Set 3 ea. ring, piston, run 4, engine Set 4 ea. ring, piston, run 5, engine Set 5 ea. ring, piston, run 6, engine Set 6 OHT3F-052-RUN5 7 ea. ring, piston, run 6, engine Set 7 OHT3F-052-RUN6		
1 ea. ring, piston, run 3, engine Set 1 ea. ring, piston, run 4, engine Set 1 ea. ring, piston, run 5, engine Set 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN5 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN6		
1 ea. ring, piston, run 4, engine Set 1 ea. ring, piston, run 5, engine Set 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN5 OHT3F-052-RUN6		
1 ea. ring, piston, run 5, engine Set OHT3F-052-RUN5 1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN6		
1 ea. ring, piston, run 6, engine Set OHT3F-052-RUN6		

#### TABLE A5.1 Continued

Part Description	Part No.
Rod, connecting (powdered metal)	12593374
Seal, crankshaft front oil (24504098)	OHT3G-092-1
Seal, crankshaft rear oil (25534760)	OHT36-091-1
Seal, exhaust valve stem	OHT3F-061-1
Seal, intake valve stem	OHT3F-060-1
Spring, oil relief valve	1262505
Spring, valve special test (color code yellow)	OHT3F-059-5
sprocket, camshaft	24505306
Valve, exhaust (STD)	12579949
Valve, intake (STD)	12569550

<sup>&</sup>lt;sup>A</sup> These heads may be used for non-reference testing on or after March 18, 2014, provided that the laboratory has conducted a successful reference oil test.

#### TABLE A5.2 Parts to be Replaced as Needed

Part Description Adapter, blowby breather tube Adapter, oil filter Adapter, oil filter Balancer, narmonic (24507058 or 12562256 (1997–2003) Bearing, balance shaft front (part of 24507058 or 12563265 (1997–2003) Bearing, balance shaft front (part of 24503285) Block, engine assembly Bolt, connecting rod Dolt, counter balance gear Bolt, counter balance gear Bolt, counter balance shaft retainer Bolt, counter balance shaft retainer Bolt, armonic balancer (2406341 or 24504736) (1997–2003) Bolt, oil filter adapter Bolt, index of 24506266 (1997–2003) Bolt, oil filter adapter Bolt, cocker cover w/ washer (25534748 or 24506266 (1997–2003) Bolt, cocker cover w/ washer (25534748 or 24502164) (1997–2003) Bolt, screw camshaft sensor Bolt, screw, oil gerotor, cover Bolt, screw, oil gerotor, cover Bolt, sub type, front cover and crankshaft sensor (1997–2003) Bolt, upper intake long Bolt, upper intake short Bolt, upper intake short Bolt, upper intake short Bolt, upper intake, stud Bracket, breather tube Bracket, breather tube Bracket, breather tube Bracket, breather tube Connector, modified for length, GM PN 2450283 Cover, front, impregnated Cover, cocker cover Connector, modified for length, GM PN 2450283 Cover, front, impregnated Cover, cocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Bushing, rocker cover Connector, modified for length, GM PN 2450283 Cover, front, impregnated Cover, cocker arm valve cover left side plastic Crankshaft Quinter Head Dipstick, metric, extended length Fitting, oil filter adapter Harness, fuel injector segment Harness, fuel	TABLE A5.2 Parts to be Replace	ced as Needed
Adapter, oil filter Adapter, oil filter Adapter, throttle body, air inlet Balancer, harmonic (24507058 or 24507058)  Bearing, balance shaft front (part of 24507058)  Bearing, balance shaft front (part of 24502522NFJEM)  Bolock, engine assembly 24506028  Block, engine assembly 24506028  Blot, counter balance gear 24501367  Bolt, counter balance shaft retainer 24500736  Bolt, counter balance shaft retainer 24500736  Bolt, counter balance shaft retainer 24500736  Bolt, airmonic balancer (2406341 or 24504736  Bolt, oil filter adapter 24504736  Bolt, oil gerd (2402791 or 24508626  (1997–2003)  Bolt, oil filter adapter 24508626  (1997–2003)  Bolt, oil suction tube 2450570  Bolt, oil screw camshaft sensor Bolt, screw, oil gerotor, cover 25519242  Bolt, stud type, front cover and crankshaft sensor (short)  Bolt, supper intake short 24504718  Bolt, upper intake short 24504718  Bolt, upper intake short 24504498  Bolt, upper intake short 24504498  Bolt, upper intake, stud 24502453  Bracket, breather tube OHT37-041-1  Bushing, rocker cover OHT37-028-1  Bushing, rocker cover OHT37-028-1  Cover, oil gerotor rower left side plastic Crankshaft 34502483  Cover, riort, impregnated OHT37-039-2  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, oil gerotor 25521935  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, rocker arm valve cover left side plastic Crankshaft 44502453  Cover, oil gerotor 25521935  Cover, oil gerotor 2	Part Description	Part No.
Adapter, in filter, with external bypass Adapter, throttle body, air inlet Balancer, harmonic (24507058 or 12563265 (1997–2003) Bearing, balance shaft front (part of 24502388) Block, engine assembly Bolt, connecting rod Bolt, counter balance gear Bolt, counter balance shaft retainer Bolt, coliner balance (2406341 or 24504736 24504736 24504736 24504736 24504736 24504736 24504736 Bolt, oil pan (2402791 or 24508626 (1997–2003) Bolt, oil suction tube Bolt, oil suction tube Bolt, oil suction tube Bolt, sorew camshaft sensor Bolt, screw, oil gerotor, cover Bolt, strew, oil gerotor, cover Bolt, strew, oil gerotor, cover and crankshaft sensor (short) Bolt, stud type, front cover and crankshaft sensor (short) Bolt, supper intake short Bolt, upper intake short Bolt, upper intake short Bolt, upper intake, stud Bracket, breather tube Braether tube, S.S. material Bushing, balance shaft rear Bushing, rocker cover Bushing,	Adapter, blowby breather tube	OHT3F-040-1
Adapter, throttle body, air inlet Balancer, harmonic (24507058 or 12563265 (1997–2003) Bearing, balance shaft front (part of 24500288) Block, engine assembly Block, engine assembly Block, engine assembly Bolt, counter balance gear Bolt, counter balance shaft retainer Bolt, oil part (2402791 or 24508626 (1997–2003) Bolt, oil filter adapter Bolt, orber cover w/ washer (25534748 or 24502164) (1997–2003) Bolt, screw camshaft sensor Bolt, screw camshaft sensor Bolt, screw camshaft sensor Bolt, screw oil gerotor, cover 2551942 Bolt, stud type, front cover and crankshaft sensor (short) Bolt, supper intake long Bolt, upper intake long Bolt, upper intake short Bolt, upper intake, stud Pracket, breather tube Bolt, upper intake, stud Bracket, breather tube Breather tube, S.S. material Bushing, rocker cover Connector, modified for length, GM PN 2450283 Cover, front, impregnated Cover, oil gerotor Connector, modified for length, GM PN 2450283 Cover, front, impregnated Cover, oil gerotor Connector, modified PN. 24503285 Gasket, exhaust, end plate Gasket, oil filter, pkg, of 50 G	· ·	
Balancer, harmonic (24507058 or 12563265 (1997–2003)         24507058           12563265 (1997–2003)         SKF6205-2ZNRJEM           24502388)         12568069           Block, engine assembly         24506028           Bolt, counter balance gear         24501367           Bolt, counter balance shaft retainer         24504736           Bolt, counter balance shaft retainer         24504736           Bolt, harmonic balancer (2406341 or 24504736         24504736           24504736         24504736           24504736         24504736           24504736         24504736           24504736         24504713           Bolt, oil suction tube         24508626           24502164         24502164           24502164         24502164           24502164         (1997–2003)           Bolt, situd type, front cover washer (25534748 or 24502164         24502164           24502164         (1997–2003)           Bolt, situd type, front cover and crankshaft sensor (short)         25526395           Bolt, situd type, front cover and crankshaft sensor (short)         24504717           Bolt, supper intake short         24504718           Bolt, upper intake, stud         24502478           Bott, upper intake, stud         24502453		
2562265 (1997–2003)	· · ·	
Bearing, balance shaft front (part of 24505-22NRJEM 24502388)		24507058
24506288   Block, engine assembly	,	SKF6205-2ZNRJEM
Bolt, connecting rod Bolt, counter balance gear Bolt, counter balance gear Bolt, counter balance shaft retainer Bolt, harmonic balancer (2406341 or 24504736 24504736 (1997–2003) Bolt, oil filter adapter Bolt, oil pan (2402791 or 24508626 (1997–2003) Bolt, oil suction tube Bolt, oil suction tube Bolt, oil suction tube Bolt, oil suction tube Bolt, oil suction fube Bolt, oroker cover w/ washer (25534748 or 24502164 24502164) (1997–2003) Bolt, screw camshaft sensor Bolt, screw, oil gerotor, cover Bolt, stud type, front cover and crankshaft sensor (long) Bolt, super intake long Bolt, upper intake short Bolt, upper intake short Bolt, upper intake, stud Bolt, upper intake, stud Bracket, breather tube Bolt, upper intake, stud Bracket, breather tube Breather tube, S.S. material Bushing, rocker cover Connector, modified for length, GM PN DH3F-028-1 Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Cylinder Head Cylinder Head Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil filter pkg, of 50 Gasket, exhaust, flange, metal Gasket, oil filter, pkg, of 50 Gasket, exhaust, flange, metal Harness, coil pack segment Harness, coil pack segment Harness, fuel injector segment Harness, viiring, dyno w/ OHT3F-056-1 Beansone Halance shaft Gear, counter balance shaft	24502388)	
Bolt, counter balance shaft retainer   24500365   Bolt, counter balance shaft retainer   24500055   Bolt, harmonic balancer (2406341 or 24504736   24504736   (1997–2003)   Bolt, oil filter adapter   24508626   (1997–2003)   Bolt, oil pan (2402791 or 24508626   (24505570   Bolt, oil suction tube   24505570   Bolt, oil suction tube   24505570   Bolt, oil suction tube   24502164   (1997–2003)   Bolt, sorew camshaft sensor   25526395   Bolt, screw, oil gerotor, cover   25519242   Bolt, strew, oil gerotor, cover   25519242   Bolt, strew, oil gerotor, cover   25519242   Bolt, stud type, front cover and crankshaft sensor (short)   Bolt, stud type, front cover and crankshaft sensor (long)   24505205   Bolt, upper intake long   24505205   Bolt, upper intake, stud   24504718   Sensor (long)   24505205   Bolt, upper intake, stud   24502453   Bracket, breather tube   OHT3F-041-1   Breather tube, S.S. material   OHT3F-041-1   Bushing, balance shaft rear   24503193   Bushing, rocker cover   OHT3F-028-1   Bushing, rocker cover   OHT3F-028-1   Bushing, rocker cover   OHT3F-028-2   Connector, modified for length, GM PN   OHT3F-039-2   24502885   Cover, front, impregnated   OHT3F-085-1   Cover, oil gerotor   25521935   Cover, rocker arm valve cover left side plastic   Crankshaft   34502260S   OHT3F-043-1   OHT3F-		24506028
Bolt, counter balance shaft retainer Bolt, harmonic balancer (2406341 or 24504736 24504736) (1997–2003) Bolt, oil filter adapter Bolt, oil pan (2402791 or 24508626 (1997–2003) Bolt, oil suction tube Bolt, oroker cover w/ washer (25534748 or 24502164 (1997–2003) Bolt, screw camshaft sensor Bolt, strew, oil gerotor, cover Bolt, strew, oil gerotor, cover Bolt, stud type, front cover and crankshaft sensor (short) Bolt, stud type, front cover and crankshaft sensor (ong) Bolt, upper intake long Bolt, upper intake, stud Bolt, upper intake, stud Bracket, breather tube Braing, rocker cover UhT3F-028-2 Connector, modified for length, GM PN 24502883 Cover, front, impregnated Cover, rocker arm valve cover left side Dipstick, metric, extended length Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 HT3F-022-1 Harness, full injector segment Harness, full injector segment Harness, wiring, dyno w/ OHT3F-056-1 Benank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, modified 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, modified 2 Ea. gasket, exhaust, modified 1 Ea. plate, front, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, modified 2 Ea. gasket, exhaust, modified 3 Ea. plate, front, exhaust manifold 4 Ea. plate, front, exhaust manifold 6 UHT3F-009-1 6 UHT3F-009-1 6 UHT3F-009-1		
Bolt, harmonic balancer (2406341 or 24504736)	,	
24504736    1097-2003    1091		
1997-2003   Bolt, oil filter adapter   24504713   Bolt, oil filter adapter   24504713   Bolt, oil pan (2402791 or 24508626   24508626   1997-2003   Bolt, rocker cover w/ washer (25534748 or 24502164   (1997-2003)   Bolt, screw camshaft sensor   25526395   Bolt, screw camshaft sensor   25526395   Bolt, screw camshaft sensor   25519242   Bolt, strew, oil gerotor, cover   25519242   Bolt, stud type, front cover and crankshaft sensor (short)   Bolt, stud type, front cover and crankshaft sensor (long)   24504718   Sensor (long)   24505205   Bolt, upper intake long   24502453   Bolt, upper intake short   24506498   Bolt, upper intake, stud   24502453   Bracket, breather tube   OHT3F-041-1   Breather tube, S.S. material   OHT3F-075-1   Bushing, balance shaft rear   24503193   Bushing, rocker cover   OHT3F-028-1   OHT3F-028-1   OHT3F-028-2   Connector, modified for length, GM PN   OHT3F-039-2   24502883   Cover, front, impregnated   OHT3F-085-1   Cover, oil gerotor   25521935   Cover, oil gerotor   25521935   Cover, cover arm valve cover left side   Disstick, metric, extended length   OHT3G-064-1   Fitting, oil filter adapter   Flywheel, manual, modified P.N. 24503285   Gasket, exhaust, end plate   Gasket, oil cooler, pkg. of 50   OHT3F-082-1   Gasket, oil fler, pkg. of 50   OHT3F-082-1   Gasket, oil fler, pkg. of 50   OHT3F-082-1   Gasket, oil fler, pkg. of 50   OHT3F-082-1   Gear, counter balance shaft drive   24504792   Gear, counter balance drive   24504792   Gear, counter balance drive   24504792   Gear, counter balance shaft   24503224   Gear, counter balance drive   2450324   Gear, counter balance drive   24504792   Gear, counter balance drive   24504792   Gear, counter balance shaft   24503224   Gear, counter balance drive   24504792   Gear, counter balance shaft   24503224   Gear, counter balance shaft   24503224   Gear, counter balance shaft   24503224   Gear, counter balance drive   24504792   Gear, counter balance shaft   24503224   Gear, counter balance shaft   24503224   Gear, counter balance shaft   24	•	24304700
Bolt, oil pan (2402791 or 24508626 (1997–2003)	· · · · · · · · · · · · · · · · · · ·	
1997-2003    Bolt, oil suction tube   24505570   24502164   24502164   (1997-2003)	Bolt, oil filter adapter	24504713
Bolt, oil suction tube		24508626
Bolt, rocker cover w/ washer (25534748 or 24502164) (1997–2003)	•	0.4505570
24502164) (1997–2003) Bolt, screw, oil gerotor, cover Bolt, strew, oil gerotor, cover Bolt, stud type, front cover and crankshaft sensor (short) Bolt, stud type, front cover and crankshaft sensor (long) Bolt, upper intake long Bolt, upper intake short Bolt, upper intake short Bolt, upper intake, stud Breather tube, S.S. material Bushing, rocker cover OHT3F-028-1 OHT3F-028-1 OHT3F-028-1 OHT3F-028-2 OHT3F-039-2 OHT3F-039-2 OHT3F-039-2 OHT3F-039-2 OHT3F-039-2 DIPPORT OF COVER, of Solution of the store of		
1997-2003   Bolt, screw camshaft sensor   25526395   Bolt, screw, oil gerotor, cover   25519242   Bolt, stud type, front cover and crankshaft sensor (short)   Bolt, stud type, front cover and crankshaft sensor (short)   Bolt, stud type, front cover and crankshaft sensor (long)   Bolt, upper intake long   24505205   Bolt, upper intake short   24506498   Bolt, upper intake, stud   24502453   Bracket, breather tube   OHT3F-041-1   Breather tube, S.S. material   OHT3F-075-1   Bushing, balance shaft rear   24503193   Bushing, rocker cover   OHT3F-028-1   Bushing, rocker cover   OHT3F-028-2   Connector, modified for length, GM PN   OHT3F-039-2   24502883   Cover, front, impregnated   OHT3F-085-1   25521935   Cover, cocker arm valve cover left side plastic   Crankshaft   34502168   Cylinder Head   24502260S   Dipstick, metric, extended length   OHT3F-043-1   Flywheel, manual, modified P.N. 24503285   Gasket, exhaust, end plate   Gasket, exhaust, flange, metal   Gasket, aminfold, upper intake   89017556   Gasket, oil cooler, pkg. of 50   OHT3F-074-1   Gasket, oil filter, pkg. of 50   OHT3F-062-1   Gear, balanceshaft drive   24504792   Gear, balanceshaft drive   24504792   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   42703524   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   42703524   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   42703524   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   42703524   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   25534749   Harness, wiring, dyno w/ OHT3F-056-1   Gear, balanceshaft position sensor   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   4712601   25534912 or 12563282   10456195   Majnet, camshaft position sensor   Gear, counter balance shaft   24503524   Grommet, rocker arm valve cover bolt   6713F-003-0   OHT3F-003-0   OHT3F-003-1   OHT3F-003-1   OHT3F-003-1   OHT3F-005-1   OHT3F-0	•	24502164
Bolt, screw camshaft sensor         25526395           Bolt, screw, oil gerotor, cover         25519242           Bolt, stud type, front cover and crankshaft sensor (short)         24504717           Bolt, stud type, front cover and crankshaft sensor (long)         24504718           Bolt, upper intake long         24506205           Bolt, upper intake, stud         2450243           Bolt, upper intake, stud         24502453           Bracket, breather tube         OHT3F-041-1           Breather tube, S.S. material         OHT3F-041-1           Breather tube, S.S. material         OHT3F-075-1           Bushing, rocker cover         OHT3F-028-1           Connector, modified for length, GM PN         OHT3F-028-2           24502883         Over, front, impregnated         OHT3F-028-2           Cover, oil gerotor         25521935           Cover, rocker arm valve cover left side plastic         12590366           Crankshaft         34502168           Cylinder Head         24502260S           Dipstick, metric, extended length         OHT3G-064-1           Fitting, oil filter adapter         OHT3G-064-1           Flywheel, manual, modified P.N. 24503285         OHT3F-004-1           Gasket, exhaust, end plate         OHT3F-009-1           Gasket, oil filter, pkg, o		
Bolt, screw, oil gerotor, cover Bolt, stud type, front cover and crankshaft sensor (short) Bolt, upper intake long Bolt, upper intake long Bolt, upper intake short Bolt, upper intake, stud Bolt, upper intake, stud Bolt, upper intake, stud Bracket, breather tube Bracket, cover Bushing, rocker cover Connector, modified for length, GM PN Cover, coll gerotor Cover, coll gerotor Cover, coll gerotor Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil filter, pkg, of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, viul injector segment Harness, viul picctor segment Harness, viul picctor, fuel Harness, viul picctor, fuel Harness, viul picctor, fuel Harness, viul picctor, fuel Bracket, endoutes:  1 Ea. plate, exhaust manifold DHT3F-003-1 DHT3F-003-1 DHT3F-003-1 DHT3F-003-1 DHT3F-005-1		25526395
sensor (short) Bolt, stud type, front cover and crankshaft sensor (long) Bolt, upper intake long Bolt, upper intake short Bolt, upper intake, stud Breather tube, S.S. material Bushing, tocker cover OHT3F-041-1 Breather tube, S.S. material Bushing, tocker cover OHT3F-028-1 OHT3F-028-1 OHT3F-028-1 OHT3F-028-2 OHT3F-028-2 Connector, modified for length, GM PN 24502883 Cover, front, impregnated Cover, oil gerotor 25521935 Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil cooler, pkg. of 50 Gear, balanceshaft driven Gasket, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, coil pack segment Harness, tuel injector segment Harness, viel injector, fuel Key, crankshaft 24503524 Gender, balanceshaft forten Grankler DHT3F-003-1 DHT3F-003-1 DHT3F-003-1 DHT3F-003-1 DHT3F-003-1 DHT3F-003-1 DHT3F-005-1 DHT3F-005-1 DHT3F-005-1 DHT3F-005-1 DHT3F-005-1		25519242
Bolt, stud type, front cover and crankshaft sensor (long) Bolt, upper intake long Bolt, upper intake short Bolt, upper intake, stud Bracket, breather tube Breather tube, S.S. material Bracket, breather tube Breather tube, S.S. material Bushing, balance shaft rear Bushing, rocker cover Connector, modified for length, GM PN Bushing, rocker cover Connector, modified for length, GM PN Bushing, rocker cover Connector, modified for length, GM PN Cover, front, impregnated Cover, oil gerotor Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head		24504717
sensor (long)         24505205           Bolt, upper intake short         24506498           Bolt, upper intake, stud         24502453           Bolt, upper intake, stud         24502453           Bracket, breather tube         OHT3F-041-1           Breather tube, S.S. material         OHT3F-075-1           Bushing, balance shaft rear         24503193           Bushing, rocker cover         OHT3F-028-1           Bushing, rocker cover         OHT3F-028-2           Connector, modified for length, GM PN         OHT3F-028-2           2connector, modified for length, GM PN         OHT3F-039-2           24502883         Over, rocker arm valve cover left side         12590366           Cover, oil gerotor         25521935           Cover, rocker arm valve cover left side         12590366           plastic         25521935           Crankshaft         34502168           Cylinder Head         24502260S           Dipstick, metric, extended length         OHT3F-08-1           Fitting, oil filter adapter         OHT3F-043-1           Flywheel, manual, modified P.N. 24503285         OHT3F-04-1           Gasket, exhaust, flange, metal         OHT3F-09-1           Gasket, oil cooler, pkg. of 50         OHT3F-018-1           Gasket, mainfold	, ,	
Bolt, upper intake long Bolt, upper intake short Bolt, upper intake, stud Bolt, upper intake, stud Bracket, breather tube Breather tube, S. S. material Bushing, rocker cover Connector, modified for length, GM PN Cover, in impregnated Cover, oil gerotor Cover, cocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gar, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance drive Gear, counter balance shaft Brances, coil pack segment Harness, coil pack segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust, and plate Chara-balance shaft		24504718
Bolt, upper intake, stud         24506498           Bolt, upper intake, stud         24502453           Bracket, breather tube         OHT3F-041-1           Breather tube, S.S. material         OHT3F-041-1           Bushing, balance shaft rear         24503193           Bushing, rocker cover         OHT3F-028-1           Bushing, rocker cover         OHT3F-028-2           Connector, modified for length, GM PN         OHT3F-028-2           Zonnector, modified for length, GM PN         OHT3F-039-2           24502883         OHT3F-085-1           Cover, front, impregnated         OHT3F-085-1           Cover, oil gerotor         25521935           Cover, rocker arm valve cover left side plastic         12590366           Crankshaft         34502168           Cylinder Head         24502260S           Dipstick, metric, extended length         OHT3G-064-1           Fitting, oil filter adapter         OHT3G-064-1           Flywheel, manual, modified P.N. 24503285         OHT3F-043-1           Gasket, exhaust, flange, metal         OHT3F-043-1           Gasket, exhaust, flange, metal         OHT3F-09-1           Gasket, oil cooler, pkg. of 50         OHT3F-074-1           Gear, balanceshaft drive         24504792           Gear, balanceshaft	, 0,	0.4505005
Bolt, upper intake, stud		
Bracket, breather tube Breather tube, S.S. material Bushing, balance shaft rear Bushing, rocker cover Bushing, rocker cover Connector, modified for length, GM PN 24502883 Cover, front, impregnated Cover, oil gerotor Crankshaft Cylinder Head Dijstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gear, counter balance shaft Grownet, balanceshaft drive Gear, counter balance shaft Grownet, rocker arm valve cover bolt Harness, viring, dyno w/ OHT3F-056-1 sensor Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. plate, rear, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1  OHT3F-003-2  OHT3F-041-1  OHT3F-074-1  OHT3F-074-1  OHT3F-074-1  OHT3F-074-1  OHT3F-062-1  OHT3F-062-1  OHT3F-062-1  OHT3F-062-1  OHT3F-02-2  OHT3F-062-1  OHT3F-02-2  OHT3F-08-1  OHT3F-003-1  OHT3F-003-1  OHT3F-003-1  OHT3F-003-1	7 11	
Breather tube, S.S. material Bushing, balance shaft rear Bushing, rocker cover Bushing, rocker cover Connector, modified for length, GM PN 24502883 Cover, front, impregnated Cover, oil gerotor Cover, oil gerotor Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gear, balanceshaft driven Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-008-1 OHT3F-008-1 OHT3F-008-1 OHT3F-003-1 OHT3F-008-1		
Bushing, rocker cover Bushing, rocker cover Connector, modified for length, GM PN 24502883 Cover, front, impregnated Cover, oil gerotor Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Cylinder Head Cylinder Head Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-008-1 OHT3F-003-1 OHT3F-008-1		
Bushing, rocker cover Connector, modified for length, GM PN 24502883 Cover, front, impregnated Cover, oil gerotor Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft driven Gear, counter balance shaft Garness, fuel injector segment Harness, coil pack segment Harness, fuel injector segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-008-1 OHT3F-006-1 OHT3F-006-1 OHT3F-006-1 OHT3F-005-1	Bushing, balance shaft rear	24503193
Connector, modified for length, GM PN 24502883  Cover, front, impregnated Cover, oil gerotor Cover, oil gerotor Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1 OHT3F-008-1 OHT3F-004-1 OHT3F-005-1 OHT3F-004-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1	•	
Cover, front, impregnated Cover, front, impregnated Cover, oil gerotor 25521935 Cover, rocker arm valve cover left side plastic Crankshaft 34502168 Cylinder Head 24502260S Dipstick, metric, extended length OHT3G-064-1 Fitting, oil filter adapter OHT3F-043-1 Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate OHT3F-009-1 Gasket, exhaust, flange, metal OHT3F-018-1 Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive 24504792 Gear, counter balance drive 24504792 Gear, counter balance drive 24504792 Gear, counter balance shaft 24503524 Grommet, rocker arm valve cover bolt 25534749 Harness, fuel injector segment 3F022-1 Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft 2534912 or 12563282 Magnet, camshaft position sensor Manifold, cast iron OHT3F-003-1 Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold OHT3F-003-1 1 Ea. plate, rear, exhaust manifold OHT3F-005-1 1 Ea. plate, rear, exhaust manifold OHT3F-005-1 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
Cover, front, impregnated Cover, oil gerotor Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gasket, oil cooler, pkg. of 50 Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, ciol pack segment Harness, fuel injector segment Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-008-1 CHT3F-008-1	9 1	OHT3F-039-2
Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Harness, coil pack segment Harness, fuel injector segment Harness, fuel injector segment Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate  25521935 12590366 1259036 125		OHT3F-085-1
Cover, rocker arm valve cover left side plastic Crankshaft Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Harness, fuel injector segment Harness, fuel injector segment Housing, assembly, bypass valve Injector, fuel Key, crankshaft Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  12590366 34502168 34502168 24502260S DHT3G-064-1 OHT3F-04-1 OHT3F-02-2 OHT3F-03-1 OHT3F-004-1 OHT3F-004-1 OHT3F-005-1		
plastic Crankshaft Cylinder Head Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, oil cooler, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, added and the color of the control of the control of the color.  OHT3F-006-1		
Cylinder Head Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, fuel injector segment Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  24502263  OHT3F-009-1  OHT3F-009-1  OHT3F-009-1		
Dipstick, metric, extended length Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1  OHT3F-009-1  OHT3F-009-1		
Fitting, oil filter adapter Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1  OHT3F-009-1	,	
Flywheel, manual, modified P.N. 24503285 Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, fuel injector segment Harness, fuel injector segment Hurness, viring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1  OHT3F-009-1  OHT3F-009-1		
Gasket, exhaust, end plate Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grownet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-006-1 OHT3F-006-1 OHT3F-006-1 OHT3F-006-1 OHT3F-006-1 OHT3F-006-1 OHT3F-006-1 OHT3F-006-1		
Gasket, exhaust, flange, metal Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft driven Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1  OHT3F-006-1  OHT3F-009-1		
Gasket, manifold, upper intake Gasket, oil cooler, pkg. of 50 Gasket, oil filter, pkg. of 50 Gasket, oil filter, pkg. of 50 Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  OHT3F-009-1  OHT3F-009-1  OHT3F-009-1	· · · · · · · · · · · · · · · · · · ·	
Gasket, oil cooler, pkg. of 50         OHT3F-074-1           Gasket, oil filter, pkg. of 50         OHT3F-062-1           Gear, balanceshaft drive         24504792           Gear, balanceshaft driven         24503524           Gear, counter balance drive         24504792           Gear, counter balance shaft         24503524           Grommet, rocker arm valve cover bolt         25534749           Harness, coil pack segment         3F022-2           Harness, fuel injector segment         3F022-1           Harness, wiring, dyno w/ OHT3F-056-1         OHT3F-022-1           sensor         OHT3F-084-1           Housing, assembly, bypass valve         OHT3F-084-1           Injector, fuel         17120601           Key, crankshaft         25534912 or 12563282           Magnet, camshaft position sensor         0HT3F-004-1           Manifold, cast iron         OHT3F-003-0           Manifold, exhaust, water cooled assy (one bank)         OHT3F-003-0           Assembly includes:         1           1 Ea. runner, exhaust manifold         OHT3F-005-1           1 Ea. elbow, exhaust, modified         OHT3F-005-1           1 Ea. plate, front, exhaust manifold         OHT3F-006-1           2 Ea. gasket, exhaust, end plate         OHT3F-009-1		
Gear, balanceshaft drive Gear, balanceshaft drive Gear, counter balance drive Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate  24503524 245	Gasket, oil cooler, pkg. of 50	OHT3F-074-1
Gear, balanceshaft driven Gear, counter balance drive Gear, counter balance shaft Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate  24503524 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 24504792 34704792 34702-2 24504792 34702-2 24504792 34702-2 24504792 34702-2 24504792 34702-		
Gear, counter balance drive Gear, counter balance shaft Gear, counter balance shaft Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate  24504792 24503224 24503524 24503524 24503524 24503524 24503524 24503524 25534749 267032-1 267032-1 267034-1 24503524 24503524 25534749 26534749 2653474 26534749 2653474 2653474 2653474 2653474 2653474 2653474 2653474 2653474 2653474 2653474 2653474 2653474 265347 265347 265347 265347 265347 265347 265347 265347 265347		
Gear, counter balance shaft Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 2 Ea. gasket, exhaust, end plate  25534749  3F022-1  0HT3F-022-1  0HT3F-084-1  17120601  25534912 or 12563282  0HT3F-003-0  OHT3F-003-0  OHT3F-003-1  OHT3F-009-1		
Grommet, rocker arm valve cover bolt Harness, coil pack segment Harness, fuel injector segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Cystankshaft Manifold, cast iron Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate  25534749  OHT3F-002-1  OHT3F-004-1  OHT3F-005-1  OHT3F-005-1  OHT3F-006-1  OHT3F-006-1		
Harness, coil pack segment Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 Sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. elbow, exhaust, modified 1 Ea. gasket, exhaust, end plate  3F022-2 3F022-1 3F022-1 3F022-2 3F022-2 3F022-2 3F022-1 3F02		
Harness, fuel injector segment Harness, wiring, dyno w/ OHT3F-056-1 sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. elbow, exhaust, modified 1 Ea. gasket, exhaust, end plate  3F022-1 OHT3F-022-1 OHT3F-084-1 I7120601 V25534912 or 12563282 OHT3F-003-0 OHT3F-003-0 OHT3F-003-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-005-1 OHT3F-006-1 OHT3F-006-1		
sensor Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-006-1 CHT3F-008-1		3F022-1
Housing, assembly, bypass valve Injector, fuel Key, crankshaft Magnet, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-009-1	Harness, wiring, dyno w/ OHT3F-056-1	OHT3F-022-1
Injector, fuel Key, crankshaft Agy, crankshaft Eystantshaft Cambridge, camshaft position sensor Manifold, cast iron Manifold, exhaust, water cooled assy (one bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate 1 Ea. gasket, exhaust, end plate		
Key, crankshaft  Magnet, camshaft position sensor  Manifold, cast iron  Manifold, exhaust, water cooled assy (one bank)  Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. elbow, exhaust, modified 0HT3F-005A-1 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate 0HT3F-006-1 0HT3F-006-1		
Magnet, camshaft position sensor  Manifold, cast iron  Manifold, exhaust, water cooled assy (one bank)  Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. elbow, exhaust, modified 1 Ea. plate, front, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, rear, exhaust manifold 1 Ea. plate, front, exhaust manifold 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate  10456195  OHT3F-003-1		
Manifold, cast iron  Manifold, exhaust, water cooled assy (one bank)  Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold OHT3F-005-1 1 Ea. elbow, exhaust, modified OHT3F-005A-1 1 Ea. plate, front, exhaust manifold OHT3F-005A-1 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
Manifold, exhaust, water cooled assy (one bank)  Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold OHT3F-005-1 1 Ea. elbow, exhaust, modified OHT3F-005A-1 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
bank) Assembly includes:  1 Ea. runner, exhaust manifold 1 Ea. plate, rear, exhaust manifold OHT3F-005-1 1 Ea. elbow, exhaust, modified OHT3F-005A-1 1 Ea. plate, front, exhaust manifold 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
1 Ea. runner, exhaust manifold OHT3F-004-1 1 Ea. plate, rear, exhaust manifold OHT3F-005-1 1 Ea. elbow, exhaust, modified OHT3F-005A-1 1 Ea. plate, front, exhaust manifold OHT3F-006-1 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
1 Ea. plate, rear, exhaust manifold 1 Ea. elbow, exhaust, modified OHT3F-005A-1 1 Ea. plate, front, exhaust manifold CHT3F-006-1 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
1 Ea. elbow, exhaust, modified OHT3F-005A-1 1 Ea. plate, front, exhaust manifold OHT3F-006-1 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
1 Ea. plate, front, exhaust manifold OHT3F-006-1 2 Ea. gasket, exhaust, end plate OHT3F-009-1		
2 Ea. gasket, exhaust, end plate OHT3F-009-1		
	1 Ea. gasket, exhaust, flange, metal	OHT3F-018-1

# TABLE A5.2 Continued

TABLE A5.2 Conti	inuea
Part Description	Part No.
Manifold, lower intake	24505728
Manifold, upper intake	17096162
Meter, blowby	RX-116169-A1 REV N
Module, assembly, coil pack	1103948
Mount front engine w/ bolt pattern for coil	OHT3F-026-1
pack	
Mount, rear engine housing w/ air starter,	OHT3F-025-1
muffler and	
shim pack	
Assembly includes:	
Starter, air	3F025-03
Muffler, starter, air	3F025-04
Shim pack, starter, air	3F025-05
Muffler, starter, air	3F025-04
Nut, throttle body fuel rail retainer	24506469
Nut, throttle body retainer	24506469
Oil filter housing assembly, no bypass,	OHT3G-080-1
impregnated	011707.004.4
Outlet, coolant	OHT3F-034-1
Pan, IIIF test, nickel plated	OHT3F-073-1
PCM, special	OHT3F-021-1
PCV, dummy	OHT3F-002-1
Pin, cylinder head locating	25536320
Pin, front cover lower	25536323
Pin, front cover upper	24501162
Pin, transmission locating	12338076
Plate. EGR block off	OHT3F-024-1
Plate, front, exhaust manifold	OHT3F-006-1
Plate, rear, exhaust manifold	OHT3F-005-1
Plate, water pump housing	OHT3F-031-1
Plug, auto hex, socket, (main oil gallery	444777
block off)	
Plug, dip stick	OHT3F-065-1
Plug, drain, modified	OHT3F-063-1
Pump, oil, gerotor set	24505433
Rail, fuel	17098211
Rail, fuel injector	17120601
Reamer, dip stick and dip stick hole plug	OHT3F-071-1
Regulator, fuel pressure, on rail	17113346
Retainer, counter balance, timing chain	24500374
oiler	24300374
	45000070
Retainer, rocker arm (replace after 6 tests)	45022278
Runner, exhaust manifold	OHT3F-004-1
Screen, oil pump (w/ suction pipe)	24505569
Seal, oil pan drain plug (O ring)	3536966
Sensor, camshaft position	10456148
Sensor, mass air flow (2003 shielded)	12568877 or 88961007
Sensor, MAF	24503983
Sensor, Mass Air Flow (2 Bolt, Use with	24503983
Throttle Body 24507235)	
Sensor, Mass Air Flow (3 Bolt, Use with	24504302
Throttle Body 24507230)	
Sensor, modified coolant temperature	OHT3F-056-1
Shaft assembly, counter balance	24502388 or 24506557
Shield, crankshaft position sensor	24506440
Shim pack, starter, air	3F025-05
Shim, steel, 0.005 in. thick, pkg. of 10	OHT3F-072-005
Shim, steel, 0.010 in. thick, pkg. of 10	OHT3F-072-010
Shim, steel, 0.015 in. thick, pkg. of 10	OHT3F-072-015
Shim, steel, 0.020 in. thick, pkg. of 10	OHT3F-072-020
Shim, steel, 0.031 in. thick, pkg. of 10	OHT3F-072-031
Sleeve, valve stem protectors (pkg. of	OHT3F-070-1
100)	
Sprocket, crankshaft, special 2 Pc	OHT3F-036-1
Starter, air	3F025-03
Stud, front cover (2)	24504717
Stud, front cover (2)	24504717
Support, throttle body	24504697
Throttle body (2 bolt mass air flow sensor)	24507235
Throttle body (3 bolt mass air flow sensor)	24504302
Tool, camshaft bushing installation	OHT3F-019-2
Tool, oil pump primer	OHT3F-038-1
Tube, throttle body to fuel pressure	24505671
regulator	



# A6. SEQUENCE IIIF DETERMINATION VOLUME OF ENGINE OIL IN PAN

A6.1 Determine the volume of engine oil in the pan from Table A6.1 or Fig. A6.1.

TABLE A6.1 Sequence IIIF Determination Volume of Engine Oil in Pan

mm	mL	mm	mL	mm	mL
1	5153	51	3313	101	1635
2	5115	52	3278	102	1603
3	5077	53	3243	103	1571
4	5038	54	3208	104	1539
5	5000	55	3173	105	1508
6	4962	56	3138	106	1476
7	4924	57	3103	107	1444
8	4886	58	3069	108	1413
9	4848	59		109	
			3034		1381
10	4810	60	2999	110	1350
11	4773	61	2965	111	1318
12	4735	62	2930	112	1287
13	4697	63	2896	113	1256
14	4659	64	2861	114	1225
15	4622	65	2827	115	1194
16	4584	66	2793	116	1163
17	4547	67	2759	117	1132
18	4510	68	2725	118	1101
19	4472	69	2690	119	1070
20	4435	70	2657	120	1039
21	4398	71	2623	121	1009
22	4361	72	2589	122	978
23	4324	73	2555	123	947
23 24	4287	73 74	2521	124	917
	4250	74 75		125	
25			2488		886
26	4213	76	2454	126	856
27	4176	77	2420	127	826
28	4140	78	2387	128	796
29	4103	79	2353	129	765
30	4067	80	2320	130	735
31	4030	81	2287	131	705
32	3994	82	2254	132	675
33	3957	83	2220	133	645
34	3921	84	2187	134	615
35	3885	85	2154	135	586
36	3848	86	2121	136	556
37	3812	87	2089	137	526
38	3776	88	2056	138	497
39	3740	89	2023	139	467
40	3704	90	1990	140	438
41	3668	91	1958	141	408
42	3633	92	1925	142	379
43	3597	93	1893	143	350
44	3561	94	1860	144	320
45	3526	95	1828	145	291
46	3490	96	1795	146	262
47	3455	97	1763	147	233
48	3419	98	1731	148	204
49	3384	99	1699	149	175
50	3349	100	1667	150	146

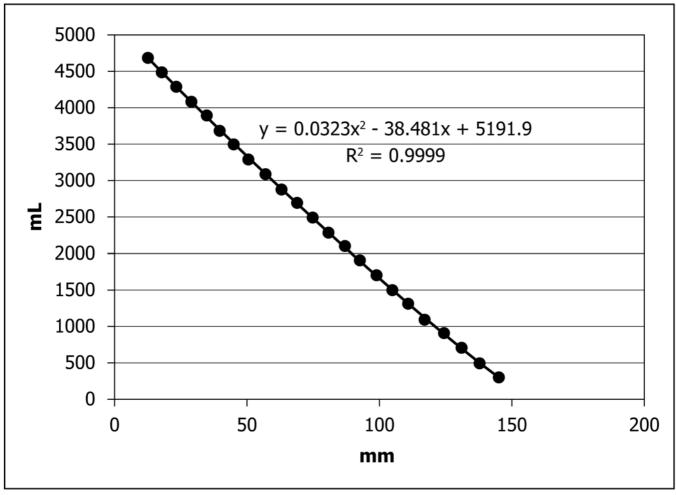


FIG. A6.1 Sequence IIIF Engine Oil Dipstick Calibration Curve

# A7. SEQUENCE HIF TEST FUEL ANALYSIS

A7.1 See Fig. A7.1 for Sequence IIIF test fuel analysis.

			HALT	TERMANN HF003 S	Specs
TEST	METHOD	UNITS	MIN	TARGET	MAX
Distillation - IBP	ASTM D86	°C	23.9		35
5%		°C			
10%		°C	48.9		57.2
20%		°C			
30%		°C			
40%		°C			
50%		°C	93.3		110.0
60%		°C	00.0		
70%		°C			
80%		°C			
90%		°C	151.7		162.8
195%		°C	151.7		102.0
Distillation - EP		°C			212.8
Recovery	+	vol %	+	Report	212.0
Residue		vol %		Report	
		vol %		· ·	
Loss	ASTM D4052	°API	58.7	Report	61.2
API Gravity (@60°F/60°F)					
Density (@15°C)	ASTM D4052	kg/L	0.734		0.744
Reid Vapor Pressure	ASTM D5191	kPa	60.8		63.4
Reid Vapor Pressure	ASTM D323	kPa		Report	
Carbon	ASTM D3343	mass fraction		Report	
Carbon	ASTM E191	mass fraction		Report	
Hydrogen	ASTM E191	mass fraction		Report	
Hydrogen/Carbon ratio	ASTM E191	mole/mole		Report	
Oxygen	ASTM D4815	mass fraction, %			0.05
Sulfur ppm	ASTM D5453	mg/kg	3		15
Lead	ASTM D3237	mg/L			2.6
Phosphorus	ASTM D3231	mg/L			1.3
Composition, aromatics	ASTM D1319	vol %	26.0		32.5
Composition, olefins	ASTM D1319	vol %			10.0
Composition, saturates	ASTM D1319	vol %		Report	
Particulate matter	ASTM D5452	mg/L		•	1
Oxidation Stability	ASTM D525	minutes	240		
Copper Corrosion	ASTM D130				1
Gum content, washed	ASTM D381	mg/100mL			5
Fuel Economy Numerator/C Density	ASTM E191	<b>3</b>	2401		2441
C Factor	ASTM E191			Report	
Research Octane Number	ASTM D2699		96.0		
Motor Octane Number	ASTM D2700		30.0	Report	
Sensitivity	7.01111 227.00		7.5	Tioport	
Net Heating Value, Btu/lb	ASTM D3338	J/kg	7.5	Report	
Net Heating Value, Btu/lb	ASTM D3336 ASTM D240	J/kg		Report	
Color	VISUAL	1.75 ptb		Red	
00101	VISUAL	1.75 μω		neu	

FIG. A7.1 Sequence III Test Fuel Analysis (Haltermann HF003 Test Fuel)

# A8. SEQUENCE HIF TEST REPORT FORMS AND DATA DICTIONARY


A8.1 Download the actual report forms and data dictionary separately from the ASTM Test Monitoring Center Web Page at www.astmtmc.cmu.edu; or obtain them in hardcopy format from the TMC.<sup>2</sup> See Table A8.1.

**TABLE A8.1 Sequence IIIF Forms** 

Title / Validity Declaration Page	Form 1
Summary of Test Method	Form 3
Test Result Summary	Form 4
Operational Summary	Form 5
Viscosity and ICP Analytical Test Results	Form 6
Valve Lifter and Camshaft Wear Results	Form 7
Summary of Oil Ring Land Deposit Rating	Form 8
Summary of Weighted Piston Deposits	Form 9
Blowby Values and Plot	Form 10
Viscosity Increase Plot	Form 11
Hardware Information	Form 12
Downtime and Outlier Report Form	Form 13

## A9. AIR-TO-FUEL RATIO CONTROL FLOW CHART

# A9.1 See Figs. A9.1-A9.3.

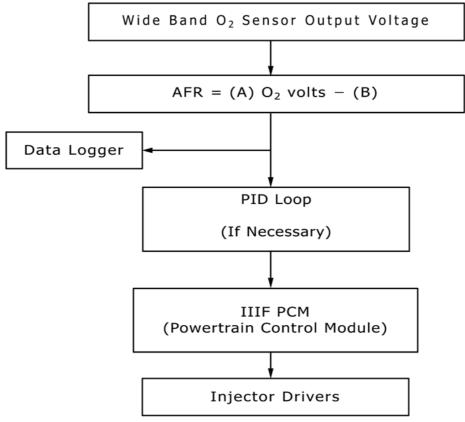

Note 1—A and B derived from sensor calibration procedures and sealed to oscillating voltage input to PCM from 100 mv to 900 mv. Adjust B term as necessary during first hour of test condition to control at 15:1 air-to-fuel ratio.

FIG. A9.1 Air-to-Fuel Ratio Control Flow Chart


 Composition by Weight:
 % C
 % H
 Stoichiometric AFR 14.530

 86.50
 13.50

Eq	uivalence Rat	ios	E	Emissions by	Volume (Dry	/)	Moisture
AFR	Lambda	Gamma	% O <sub>2</sub>	% H <sub>2</sub>	% CO	% CO <sub>2</sub>	% H <sub>2</sub> O
7.265	0.500	2.000	0.000	13.635	19.975	2.968	7.149
7.555	0.520	1.923	0.000	12.557	19.179	3.387	7.772
7.846	0.540	1.852	0.000	11.536	18.379	3.817	8.344
8.137	0.560	1.786	0.000	10.571	17.575	4.258	8.868
8.427	0.580	1.724	0.000	9.660	16.767	4.709	9.346
8.718	0.600	1.667	0.000	8.803	15.954	5.170	9.780
9.008	0.620	1.613	0.000	7.997	15.137	5.641	10.173
9.299	0.640	1.562	0.000	7.241	14.317	6.122	10.526
9.589	0.660	1.515	0.000	6.533	13.494	6.611	10.843
9.880	0.680	1.471	0.000	5.872	12.670	7.107	11.125
10.171	0.700	1.429	0.000	5.256	11.844	7.611	11.374
10.461	0.720	1.389	0.000	4.682	11.018	8.120	11.593
10.752	0.740	1.351	0.000	4.149	10.192	8.634	11.783
11.042	0.760	1.316	0.000	3.655	9.369	9.153	11.947
11.333	0.780	1.282	0.000	3.197	8.549	9.674	12.086
11.624	0.800	1.250	0.000	2.774	7.732	10.196	12.202
11.914	0.820	1.220	0.000	2.382	6.921	10.720	12.297
12.205	0.840	1.190	0.000	2.021	6.116	11.243	12.373
12.495	0.860	1.163	0.000	1.689	5.319	11.765	12.432
12.786	0.880	1.136	0.000	1.383	4.529	12.285	12.474
13.077	0.900	1.111	0.000	1.101	3.740	12.802	12.502
13.367	0.920	1.087	0.000	0.842	2.977	13.315	12.517
13.658	0.940	1.064	0.000	0.604	2.216	13.824	12.519
13.948	0.960	1.042	0.000	0.385	1.466	14.327	12.511
14.239	0.980	1.020	0.000	0.184	0.727	14.825	12.494
14.530	1.000	1.000	0.000	0.000	0.000	15.317	12.467
14.820	1.020	0.980	0.439	0.000	0.000	14.996	12.238
15.111	1.020	0.962	0.861	0.000	0.000	14.688	12.017
15.401	1.060	0.943	1.265	0.000	0.000	14.392	11.803
15.692	1.080	0.926	1.653	0.000	0.000	14.108	11.597
15.982	1.100	0.909	2.027	0.000	0.000	13.835	11.398
16.273	1.120	0.893	2.386	0.000	0.000	13.572	11.206
16.564	1.140	0.877	2.732	0.000	0.000	13.320	11.021
16.854	1.160	0.862	3.065	0.000	0.000	13.076	10.841
17.145	1.180	0.847	3.386	0.000	0.000	12.841	10.667
17.145	1.200	0.833	3.696	0.000	0.000	12.614	10.498
17.726	1.220	0.820	3.995	0.000			
					0.000	12.396	10.335
18.017	1.240	0.806	4.284	0.000	0.000	12.185	10.177
18.307	1.260	0.794	4.563	0.000	0.000	11.980	10.024
18.598	1.280	0.781	4.833	0.000	0.000	11.783	9.875
18.808	1.300	0.769	5.094	0.000	0.000	11.592	9.730
19.179	1.320	0.758	5.347	0.000	0.000	11.407	9.590
19.470	1.340	0.746	5.592	0.000	0.000	11.228	9.453
19.760	1.360	0.735	5.830	0.000	0.000	11.054	9.321
20.051	1.380	0.725	6.060	0.000	0.000	10.886	9.192
20.341	1.400	0.714	6.283	0.000	0.000	10.723	9.067
20.632	1.420	0.704	6.500	0.000	0.000	10.564	8.945
20.923	1.440	0.694	6.710	0.000	0.000	10.410	8.826
21.213	1.460	0.685	6.915	0.000	0.000	10.261	8.710
21.504	1.480	0.676	7.113	0.000	0.000	10.116	8.593
21.794	1.500	0.667	7.306	0.000	0.000	9.975	8.483

FIG. A9.2 Sequence IIIF Air-to-Fuel Ratio for Specified Fuel (C  $\rm H_{1.860})_x$ 

# Theoretical Exhaust Gas Relationships for Specified EEE Test Fuel

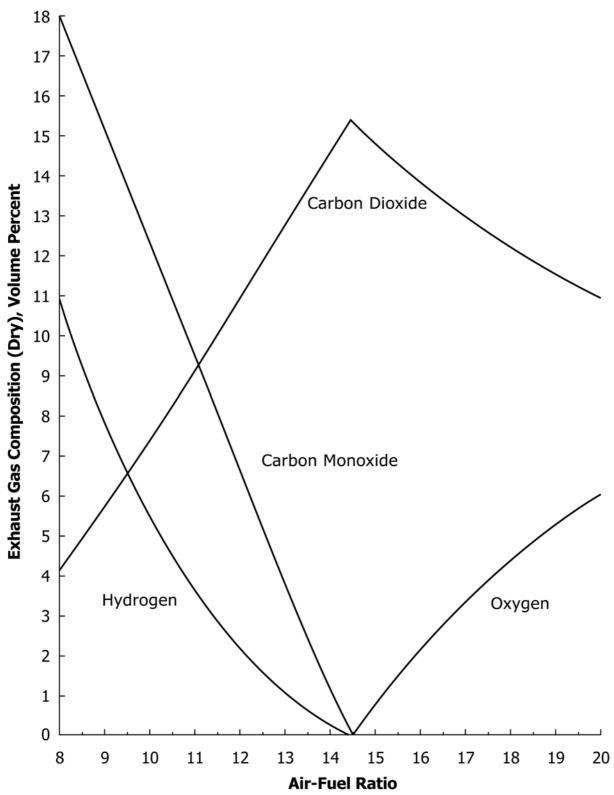

Note 1—Use corrected values for oxygen and carbon dioxide.

FIG. A9.3 Sequence IIIF Air-to-Fuel Ratio for Specified Fuel (C  $H_{1.860}$ )<sub>x</sub>



# A10. SEQUENCE HIF TEST SET POINTS AND CONTROL STATES

A10.1 See Table A10.1 and Figs. A10.1 and A10.2.

TABLE A10.1 Sequence IIIF Operating Procedure and Specifications

-1-			
Sequence IIIF	On-Test Control S	Settings	
Test Parameter	Set Point	Units	Abbreviations
Engine speed	3600	r/min	RPM
Torque	200	N⋅m	TORQUE
Temperature			
Oil filter block	155	°C	TOTEMP
Oil sump	Record	°Č	TOLSUMP
Engine coolant out	122	°C	TCOLOUT
Engine coolant in	Record	°C	TCOLIN
Inlet air adapter	27	°C	TAIRIN
Dew point	Record	°C	TINDEW
Condenser coolant outlet	40	°C	TCCOLOUT
Fuel inlet	Record	°C	TFUELIN
Intake air	Record	°C	TINAT
Pressure			
Pump outlet	Record	kPa	POUTP
Oil gallery	Record	kPa	POILPRS
Fuel	Record	kPa	PFUEL
Intake air	0.05	kPa	PINAIR
Intake manifold vacuum	Record	kPa	PINVAC
Crankcase	Record	kPa	<b>PCCASEP</b>
Exhaust back pressure, right	6.0	kPa	PREXBP
Exhaust back pressure, left	6.0	kPa	PLEXBP
Flow			
Engine coolant	160	L/min	COLFLO
Breather tube	10	L/min	FCOND
Exhaust manifold, left	8	L/min	FMML
Exhaust manifold, right	8	L/min	FMMR
Air Fuel Ratio			
air-to-fuel ratio. left	15.0:1		LAFR
air-to-fuel ratio, right	15.0:1		RAFR


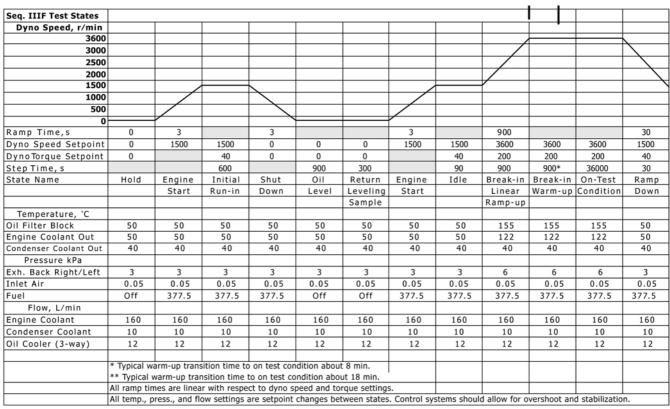


FIG. A10.1 Sequence IIIF Test States, page 1

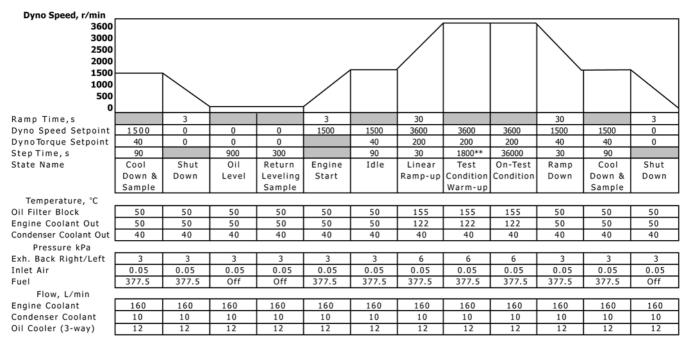

<sup>\*</sup> Typical warm-up transition time to on test condition about 8 min.

All temp ., press., and flow settings are setpoint changes between states. Control systems should allow for overshoot and stabilization.

FIG. A10.2 Sequence IIIF Test States, page 2

 $<sup>\</sup>ensuremath{^{**}}$  Typical warm-up transition time to on test condition about 18 min.

All ramp times are linear with respect to dyno speed and torque settings.

### A11. SEQUENCE HIF QUALITY INDEX UPPER AND LOWER VALUES

A11.1 See Table A11.1 and Table A11.2.

**TABLE A11.1 Quality Index Upper and Lower Values** 

Controlled Parameters	Quality Index Upper and Lower Values								
	L	U							
Speed	3595	3605							
Torque	199.02	200.98							
Air-to-Fuel Ratio	14.87	15.13							
Condenser Coolant Outlet Temperature	39.54	40.46							
Engine Coolant Outlet Temperature	121.54	122.46							
Oil Filter Block Temperature	154.58	155.42							
Exhaust Back Pressure	5.92	6.08							
Intake Air Pressure	0.041	0.059							
Engine Coolant Flow	158.57	161.43							

TABLE A11.2 Sequence IIIF Required Resolution for Data Acquisition

Controlled Parameters	Units	Required Resolution <sup>A</sup>
Speed	r/min	5.0
Torque	N⋅m	5.1
Air-to-Fuel Ratio		5.2
Condenser Coolant Outlet	°C	5.1
Temperature		
Engine Coolant Outlet Temperature	°C	5.1
Oil Filter Block Temperature	°C	5.1
Exhaust Back Pressure	kPa	5.2
Intake Air Pressure	kPa	5.3
Condenser Coolant Flow	L/min	5.2
Engine Coolant Flow	L/min	5.1

A Decimal point is counted in format.

Note 1—Maximum Time Response—for controlled (QI) parameters only

Speed-0.10 s

Torque-0.60 s

Coolant Flow-8.0 s

Intake Air Pressure-0.75 s

Exhaust Backpressure-1.20 s

Temperatures-2.40 s

### A12. ENGINE OIL LEVEL WORK SHEET

A12.1 See Fig. A12.1.



TEST CELL								TEST #		
ENGINE #		SEQ. IIIF O	IL LEVEL AN	CONSUMPT	ION			START DATE		
OIL SAMPLE	1									
#	ı									
				OIL LEVI		D OF INIT	IAL RUN		mL	
	INITIAL				TEST					EOT
INITIAL FILL = 5500 mL	RUN	10	20	30	40	50	60	70	80	TOTAL
REMOVE 472 mL PURGE SAMPLE										
REMOVE 472 mL LEVELING SAMPLE										
REMOVE 236 mL ANALYSIS SAMPLE										
REMOVE 59 mL ANALYSIS SAMPLE										
REPLACE 472 mL PURGE SAMPLE										
ADD 59 mL TO REPLACE SAMPLE										Total 474 Adds
ADD 472 mL NEW OIL										а
OIL LEVEL AFTER DRAIN DOWN										
(mL)										
LEVELING SAMPLE ADDED (mL)										Total Discard
LEVELING SAMPLE DISCARDED										ь
(mL)										_
RESULTING DIPSTICK LEVEL (mm)										
mL BELOW FULL FROM START										с
PERFORMED BY										
										-236
									TOTAL OIL	
									CONSUMPTION	
										(5)

Note 1—total oil consumption = 472 mL (new oil additions 10 h to 70 h) – total sample discarded + (level at EOT – 236 mL)

Note 2—If the test is terminated early, follow the 80 h level checklist for final sample and leveling procedure.

FIG. A12.1 Engine Oil Level Data Sheet

# A13. ENGINE BUILD WORKSHEETS

A13.1 See Fig. A13.1 and Fig. A13.2.

### SEQUENCE IIIF BUILD FORM

ENGINE ID:	LEFT HEAD ID :	
BLOCK CODE:	RIGHT HEAD ID:	
REBUILDER ID :	 BEARING SERIAL NUMBER ID:	
DATE COMPLETED :	 CRANKSHAFT ID:	
CAMSHAFT ID:	FRONT COVER ID:	
CONNECTING ROD TYPE (CAST or PM)	MANIFOLD ID:	
LIFTER SET ID :	 BREATHER TUBE ID:	
LIFTER BATCH CODE :	 OIL FILTER BATCH CODE:	
PISTON BATCH CODE :	KIT NUMBER:	
PISTON GRADE :		
RING BATCH CODE :		
RING GRADE :		
WRIST PIN BATCH CODE :		
PUSH ROD BATCH CODE :		
ROCKER ARM BATCH CODE:		
COMMENTS :		
COMMENTS:		

### CYLINDER BORE MEASUREMENTS

STANDARD CALIBRATION READING:

LOCATION	TOP	MIDDLE	BOTTOM	TAPER	LOCATION	TOP	MIDDLE	BOTTOM	TAPER
CYLINDER	#1				CYLINDER		#2	2	
LONG DIA. (mm)					LONG DIA.				
TRANS. DIA. (mm)					TRANS. DIA.				
DELTA					DELTA				
	AVERAGE AVERAGE MICROFIN	TAPER:				AVERAGE O AVERAGE TO MICROFINIS	APER :		
CYLINDER		7	#3		CYLINDER		#4	1	
LONG DIA.					LONG DIA.				
TRANS. DIA.					TRANS. DIA.				
DELTA					DELTA				
	AVERAGE C AVERAGE T MICROFINI	APER : SH, Ra :				AVERAGE O AVERAGE TO MICROFINIS	APER:		
CYLINDER		ŧ	<b>#</b> 5		CYLINDER		#6	5	
LONG DIA.					LONG DIA.				
TRANS. DIA.					TRANS. DIA.				
DELTA					DELTA				
	AVERAGE OUT : AVERAGE TAPER : MICROFINISH, Ra :					AVERAGE O	APER:		

FIG. A13.1 Sequence IIIF Build Form

# SEQUENCE IIIF BUILD FORM

ENGINE ID:		_		RE	BUILDER ID:		
COMPRESSION R	RING	RING	SIDE CLEAR	ANCE			
GAPS* CYLINDE TOP, R	in. 2nd, in.	TOP .033–.079 mm	2nd .033–.079 mm	OIL .023–.201 mm			
1							
<sup>2</sup>							
4							
5 6							
•							
*IIIF ring gap spec	$top 0.042 \pm 0.0$	002 in., bottor	n 0.038 ± 0.	002 in.			
		CRANKSI	HAFT				
•	ON DOD 1011DN	MEASURI	EMENTS			**** 30110*14	1.6
	ON ROD JOURN C: 57.1170 -	ALS -			SPEC:	AIN JOURN <i>A</i> : 63.470 -	ILS -
JOURNAL# HOR		OUT OF RD.			63.49 HORIZ.	5 mm VERT.	OUT OF RD.
1			102508 m	nm			
2							
3 4							
5							
6							
CRANKSHAFT END	PLAY			_(spec: 0.076-	-0.276 mm)		
		OIL PU	MP MEASU	REMENTS			
OIL PUMP GEAR DRO	OP			(spec: 0.025-	·0.089 mm)		
OIL PUMP GEAR TIP				_(spec: 0.076-	-0.127 mm)		
OIL PMP OUTER GEA	AR DIA. CLEAR.			_(spec: 0.025-	-0.127 mm)		
		VALVE T	RAIN MEAS	SUREMENTS	;		
VALVE SPRINGS B	ATCH:						
INTAKE VALVE SEA				_			
EHXAUST VALVE S	EALS BATCH:			-			
CYLINDER HEAD SI	PRING CALIBRAT	ΓΙΟΝ - 82 + 2	.3 kg @ 9.5	mm			
IT HEAD#:	1 EX	1 INT	3 EX	3 INT	5 EX	5 INT	
LT HEAD#: SHIM SIZE:							
RT HEAD#:	2 EX	2 INT	4 EX	4 INT	6 EX	6 INT	
SHIM SIZE:							

FIG. A13.2 Sequence IIIF Build Form

### A14. BLOWBY FLOW RATE DETERMINATION

A14.1 See Figs. A14.1-A14.3.

	30	1.038	1.035	1.033	1.030	1.028		1.025	1.023	1.020	1.018	1.015	1.013	1.010	1.008	1.005	1.002	1.000	0.997	0.995	0.992	0.990	0.987	0.984	0.982
	59	1.039	1.037	1.034	1.032	1.029		1.027	1.024	1.022	1.019	1.017	1.014	1.012	1.009	1.007	1.004	1.002	0.999	966.0	0.994	0.991	0.989	986.0	0.983
	28	1.041	1.039	1.036	1.034	1.031		1.029	1.026	1.024	1.021	1.019	1.016	1.013	1.011	1.008	1.006	1.003	1.001	0.998	0.995	0.993	0.660	0.988	0.985
	27	1.043	1.040	1.038	1.035	1.033		1.030	1.028	1.025	1.023	1.020	1.018	1.015	1.013	1.010	1.007	1.005	1.002	1.000	0.997	0.994	0.992	0.989	0.987
	26	1.045	1.042	1.040	1.037	1.035		1.032	1.030	1.027	1.024	1.022	1.019	1.017	1.014	1.012	1.009	1.007	1.004	1.001	0.999	966.0	0.994	0.991	0.988
	25	1.046	1.044	1.041	1.039	1.036		1.034	1.031	1.029	1.026	1.024	1.021	1.019	1.016	1.013	1.011	1.008	1.006	1.003	1.000	0.998	0.995	0.993	066.0
REES C	24	1.048	1.046	1.043	1.041	1.038		1.035	1.033	1.030	1.028	1.025	1.023	1.020	1.018	1.015	1.013	1.010	1.007	1.005	1.002	1.000	0.997	0.994	0.992
TEMPERATURE, DEGREES C	23	1.050	1.047	1.045	1.042	1.040		1.037	1.035	1.032	1.030	1.027	1.025	1.022	1.019	1.017	1.014	1.012	1.009	1.006	1.004	1.001	0.999	966.0	0.993
PERATU	22	1.052	1.049	1.047	1.044	1.042		1.039	1.036	1.034	1.031	1.029	1.026	1.024	1.021	1.019	1.016	1.013	1.011	1.008	1.006	1.003	1.000	0.998	0.995
TEM	21	1.053	1.051	1.048	1.046	1.043		1.041	1.038	1.036	1.033	1.031	1.028	1.025	1.023	1.020	1.018	1.015	1.012	1.010	1.007	1.005	1.002	0.999	0.997
	20	1.055	1.053	1.050	1.048	1.045		1.043	1.040	1.037	1.035	1.032	1.030	1.027	1.025	1.022	1.019	1.017	1.014	1.012	1.009	1.006	1.004	1.001	0.998
	19	1.057	1.054	1.052	1.049	1.047		1.044	1.042	1.039	1.037	1.034	1.031	1.029	1.026	1.024	1.021	1.019	1.016	1.013	1.011	1.008	1.005	1.003	1.000
	18	1.059	1.056	1.054	1.051	1.049		1.046	1.044	1.041	1.038	1.036	1.033	1.031	1.028	1.025	1.023	1.020	1.018	1.015	1.012	1.010	1.007	1.004	1.002
	17	1.061	1.058	1.056	1.053	1.050		1.048	1.045	1.043	1.040	1.038	1.035	1.032	1.030	1.027	1.025	1.022	1.019	1.017	1.014	1.011	1.009	1.006	1.004
	16	1.062	1.060	1.057	1.055	1.052		1.050	1.047	1.045	1.042	1.039	1.037	1.034	1.032	1.029	1.026	1.024	1.021	1.019	1.016	1.013	1.011	1.008	1.005
	15	1.064	1.062	1.059	1.057	1.054		1.052	1.049	1.046	1.044	1.041	1.039	1.036	1.033	1.031	1.028	1.026	1.023	1.020	1.018	1.015	1.012	1.010	1.007
PRES- SURE.	KPa	105.0	104.5	104.0	103.5	103.0	_	102.5	102.0	101.5	101.0	100.5	100.0	99.5	0.66	98.5	0.86	97.5	97.0	96.5	0.96	95.5	95.0	94.5	94.0

FIG. A14.1 Blowby Flow Rate Correction Factor

	45	1.013	1.010	1.008	1.006	1.003	1.001	0.998	966.0	0.993	0.991	0.988	0.986	0.984	0.981	0.979	0.976	0.974	0.971	0.968	0.966	0.963	0.961	0.958
	44	1.014	1.012	1.010	1.007	1.005	1.002	1.000	0.997	0.995	0.992	0.660	0.988	0.985	0.983	0.980	0.978	0.975	0.973	0.970	0.967	0.965	0.962	096.0
	43	1.016	1.014	1.011	1.009	1.006	1.004	1.001	0.999	0.997	0.994	0.992	0.989	0.987	0.984	0.982	0.979	0.977	0.974	0.972	0.969	996.0	0.964	0.961
	45	1.018	1.015	1.013	1.010	1.008	1.005	1.003	1.001	0.998	966.0	0.993	0.991	0.988	0.986	0.983	0.981	0.978	926.0	0.973	0.971	0.968	0.965	0.963
	41	1.019	1.017	1.014	1.012	1.010	1.007	1.005	1.002	1.000	0.997	0.995	0.992	0.990	0.987	0.985	0.982	0.980	0.977	0.975	0.972	0.970	0.967	0.964
	40	1.021	1.018	1.016	1.014	1.011	1.009	1.006	1.004	1.001	0.999	966.0	0.994	0.991	0.989	986.0	0.984	0.981	0.979	0.976	0.974	0.971	0.969	996.0
GREES C	39	1.023	1.020	1.018	1.015	1.013	1.010	1.008	1.005	1.003	1.000	0.998	0.995	0.993	0.990	0.988	0.985	0.983	0.980	0.978	0.975	0.973	0.970	0.968
TURE, DE	38	1.024	1.022	1.019	1.017	1.014	1.012	1.009	1.007	1.005	1.002	1.000	0.997	0.995	0.992	0.989	0.987	0.984	0.982	0.979	0.977	0.974	0.972	0.969
TEMPERATURE, DEGREES C	37	1.026	1.023	1.021	1.018	1.016	1.014	1.011	1.009	1.006	1.004	1.001	0.999	966.0	0.994	0.991	0.989	986.0	0.983	0.981	0.978	0.976	0.973	0.971
	36	1.028	1.025	1.023	1.020	1.018	1.015	1.013	1.010	1.008	1.005	1.003	1.000	0.998	0.995	0.993	0.990	0.988	0.985	0.982	0.980	0.977	0.975	0.972
	35	1.029	1.027	1.024	1.022	1.019	1.017	1.014	1.012	1.009	1.007	1.004	1.002	0.999	0.997	0.994	0.992	0.989	0.987	0.984	0.982	0.979	926.0	0.974
	34	1.031	1.028	1.026	1.023	1.021	1.018	1.016	1.014	1.011	1.009	1.006	1.003	1.001	0.998	966.0	0.993	0.991	0.988	986.0	0.983	0.981	0.978	0.975
	33	1.033	1.030	1.028	1.025	1.023	1.020	1.018	1.015	1.013	1.010	1.008	1.005	1.003	1.000	0.998	0.995	0.992	0.660	0.987	0.985	0.982	0.980	0.977
	32	1.034	1.032	1.029	1.027	1.024	1.022	1.019	1.017	1.014	1.012	1.009	1.007	1.004	1.002	0.999	0.997	0.994	0.991	0.989	0.986	0.984	0.981	0.979
	31	1.036	1.033	1.031	1.028	1.026	1.024	1.021	1.019	1.016	1.013	1.011	1.008	1.006	1.003	1.001	0.998	966.0	0.993	0.991	0.988	0.985	0.983	0.980
RES- SURE.	KPa	105.0	104.5	104.0	103.5	103.0	102.5	102.0	101.5	101.0	100.5	100.0	99.5	99.0	98.5	98.0	97.5	97.0	96.5	96.0	95.5	95.0	94.5	94.0

FIG. A14.2 Blowby Flow Rate Correction Factor (continued)

KPa : 105.0													í		
 I O	46	47	48	49	20	51	25	23	54	22	26	57	28	29	09
	1.011	1.010	1.008	1.007	1.005	1.003	1.002	1.000	0.999	0.997	966.0	0.994	0.993	0.991	0.990
104.5 :	1.009	1.007	1.006	1.004	1.003	1.001	1.000	0.998	0.996	0.995	0.993	0.992	0.990	0.989	0.987
104.0 :	1.006	1.005	1.003	1.002	1.000	0.999	0.997	966.0	0.994	0.993	0.991	0.660	0.988	0.987	0.985
103.5 :	1.004	1.002	1.001	0.999	0.998	966.0	0.995	0.993	0.992	0.660	0.989	0.987	0.986	0.984	0.983
103.0 :	1.002	1.000	0.998	0.997	0.995	0.994	0.992	0.991	0.989	0.988	0.986	0.985	0.983	0.982	0.980
102.5 :	0.999	0.998	966.0	0.995	0.993	0.991	0.990	0.988	0.987	0.985	0.984	0.982	0.981	0.979	0.978
102.0 :	0.997	0.995	0.994	0.992	0.991	0.989	0.988	0.986	0.984	0.983	0.981	0.980	0.979	0.977	0.976
101.5 :	0.994	0.993	0.991	0.660	0.988	0.987	0.985	0.984	0.982	0.981	0.979	0.978	0.976	0.975	0.973
101.0	0.992	0.660	0.989	0.987	0.986	0.984	0.983	0.981	0.980	0.978	0.977	0.975	0.974	0.972	0.971
100.5 :	0.989	0.988	0.986	0.985	0.983	0.982	0.980	0.979	0.977	0.976	0.974	0.973	0.971	0.970	0.968
100.0	0.987	0.985	0.984	0.982	0.981	0.979	0.978	0.976	0.975	0.973	0.972	0.970	0.969	0.967	996.0
99.5 :	0.984	0.983	0.981	0.980	0.978	0.977	0.975	0.974	0.972	0.971	0.969	0.968	996.0	0.965	0.964
: 0.66	0.982	0.980	0.979	0.977	0.976	0.974	0.973	0.971	0.970	0.968	0.967	0.965	0.964	0.963	0.961
98.5 :	0.979	0.978	0.976	0.975	0.973	0.972	0.970	0.969	0.967	996.0	0.965	0.963	0.962	096.0	0.959
: 0.86	0.977	0.975	0.974	0.972	0.971	0.969	0.968	996.0	0.965	0.964	0.962	0.961	0.959	0.958	0.956
97.5 :	0.975	0.973	0.971	0.970	0.968	0.967	0.965	0.964	0.963	0.961	0.960	0.958	0.957	0.955	0.954
97.0	0.972	0.970	0.969	0.967	996.0	0.964	0.963	0.962	0.960	0.959	0.957	0.956	0.954	0.953	0.951
96.5 :	0.969	0.968	996.0	0.965	0.963	0.962	0.961	0.959	0.958	0.956	0.955	0.953	0.952	0.950	0.949
: 0.96	0.967	0.965	0.964	0.962	0.961	0.959	0.958	0.957	0.955	0.954	0.952	0.951	0.949	0.948	0.946
95.5 :	0.964	0.963	0.961	0.960	0.958	0.957	0.956	0.954	0.953	0.951	0.950	0.948	0.947	0.945	0.944
95.0 :	0.962	096.0	0.959	0.957	0.956	0.954	0.953	0.952	0.950	0.949	0.947	0.946	0.944	0.943	0.942
94.5 :	0.959	0.958	0.956	0.955	0.953	0.952	0.951	0.949	0.948	0.946	0.945	0.943	0.942	0.940	0.939
94.0 :	0.957	0.955	0.954	0.952	0.951	0.949	0.948	0.947	0.945	0.944	0.942	0.941	0.939	0.938	0.937

FIG. A14.3 Blowby Flow Rate Correction Factor (continued)



#### **A15. SAFETY PRECAUTIONS**

#### **A15.1 General Information**

A15.1.1 The operating of engine tests can expose personnel and facilities to a number of safety hazards. Only personnel who are thoroughly trained and experienced in engine testing should undertake the design, installation, and operations of engine test stands.

A15.1.2 Each laboratory conducting engine tests should have their test installation inspected and approved by their Safety Department. Personnel working on the engines should be provided with proper tools, be alert to common sense safety practices, and avoid contact with moving or hot engine parts. Guards should be installed around all external moving or hot parts. When engines are operating at high speeds, heavy-duty guards are required, and personnel should be cautioned against working alongside the engine and coupling shaft. Barrier protection should be provided for personnel. All fuel lines, oil lines, and electrical wiring should be properly routed, guarded, and kept in good order. Scraped knuckles, minor burns, and cuts are common occurrences, if proper safety precautions are not taken. Safety masks or glasses should always be worn by personnel working on the engines and no loose or flowing clothing, including long hair or other accessory to dress which could become entangled, should be worn near running engines. A15.1.3 The external parts of the engines and the floor area around the engines should be kept clean and free of oil and fuel spills. In addition, all working areas should be free of tripping hazards. In case of injury, no matter how slight, first aid attention should be applied at once and the incident reported. Personnel should be alert for leaking fuel or exhaust gas. Leaking fuel represents a fire hazard and exhaust gas fumes are noxious. Containers of oil or fuel cannot be permitted to accumulate in the testing area.

A15.1.4 The test installation should be equipped with a fuel shut-off valve that is designed to automatically cut off the fuel supply to the engine when the engine is not running. A remote station for cutting off fuel from the test stand is recommended. Suitable interlocks should be provided to automatically shutdown the engine when any of the following events occur: engine loses oil pressure; dynamometer loses field current; engine overspeeds; exhaust system fails; room ventilation fails; or the fire protection system is activated.

A15.1.5 Consider an excessive vibration pickup interlock if equipment operates unattended. Fixed fire protection equipment should be provided.

A15.1.6 Normal precautions should be observed whenever using flammable solvents for cleaning purposes. Make sure adequate fire fighting equipment is immediately accessible.

#### A16. SEQUENCE HIF BLUEPRINT LISTING

A16.1 See Table A16.1 for the blueprint list.

TABLE A16.1 Blueprint List (Available from the TMC)<sup>2</sup>

Print Number	Description
1 milit Number	Description
RX-116924-C	flushing tank
RX-117230-E	flushing tank system piping layout
RX-117231-C	flushing tank schematic
RX-117350-D	coolant mixing tank
RX-116169-A1, revision N	flow meter (multiple orifice) blowby
RX-118602-B	ring depth gauge
BX-310-2	valve spring load measurement
	apparatus
RX-117431-C	blowby gas surge tank
RX-117294-A	bushing, blowby adapter
RX-118137-C	water in and out coolant flushing tank-
	evertite
RX-118613-C	oil filter adapter
RX-118457-B	oil filter adapter fitting

Note 1—The list is available from the TMC.

### A17. FLUID CONDITIONING MODULE COMPONENTS

A17.1 See Table A17.1.

TABLE A17.1 List of Components that have been Found Suitable for Use in the Fluid Conditioning Module

System	Component	Make	Model	Comments
Fuel	Pump	KFI	10210	12 VDC
	Flow Meter	Micro Motion		
	Pressure Regulator (on-rack)	Weldon	2040-200-A-170	
	Heat Exchanger	Elanco	M11	
	Check Valve	Sharpe	FNW-16	
	Solenoid Valve	Skinner	72218RN4UV00N0H222P	23
	Filter	Racor	110A	
System	Component	Make	Model	Comments
Engine Coolant	Pump	Aurora	341ABF 1-½ × 2 × 9	
	Flow Meter	ABB/Fisher Porter	10VT1000	1111ADH11C12AA0A has been replaced
	Heat Exchanger	Elanco	M71FL	
	Heater	Chromalox	ARTMS-1250TL	
	3-Way Control Valve	SVF	T7-6666TT150-S1	2 in. Valve
	2-Way Control Valve	Orion/Badger Meter	9003GCW36SV3A29L36	2 in. Valve (same as used on Sequence VIB)
	Inlet Line I.D. / Total Length	2 in.	226 in.	Total run from Process Controller to Engine Inlet Adapter
System	Component	Make	Model	Comments
Breather Tube	Pump	Aurora	133-BF-E03 1-3/4 × 3/4	
	Flow Meter	Sparling	FM625*	
	Heat Exchanger	Elanco	M21	
	Heater	Chromalox	3CVCHS-151	
	3-Way Control Valve	SVF	T7-6666TTSE-S1	½ in. Valve
	2-Way Control Valve	SVF	V7-6666NTSE-V60	½ in. Valve
System	Component	Make	Model	Comments
Oil Cooler	Pump	Aurora	133-BF-E03 1-3/4 × 3/4	
	Flow Meter	Sparling	FM625*	
	3-Way Control Valve	SVF	T7-6666TTSE-S1	½ in. Valve
	2-Way Control Valve	SVF	V7-6666NTSE-V30	½ in. Valve
	Heat Exchanger			Tube and shell nominally 3 in. dia. by 8 in.

### A18. ENGINE OIL COOLING SYSTEM CONFIGURATION

A18.1 See Fig. A18.1.

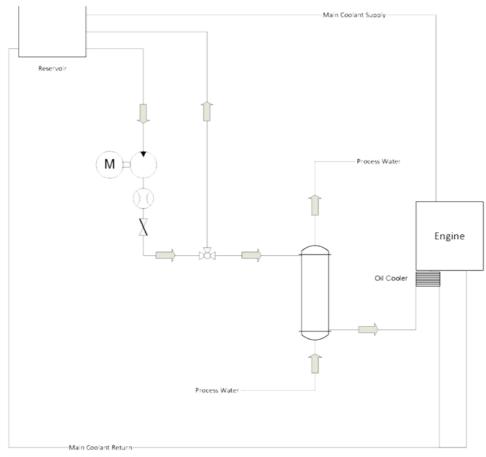


FIG. A18.1 Typical Engine Oil Cooling System Schematic

### A19. GUIDELINES FOR HARDWARE SUBJECT TO FIRST IN – FIRST OUT CRITERIA

A19.1 Consume the following hardware according to the below listed guidelines for first in - first out procedure with regards to batch codes, pour codes and date received.

Camshaft

Lifters

Main bearings, connecting-rod bearings, camshafts bushings

Oil Filter

Oil Cooler

Pistons

Piston rings

Rocker arms

Valve springs

Valve-stem seals (intake and exhaust)

- A19.2 Laboratory(s) shall record the date (month, day, year) a critical part was received at the given lab.
- A19.3 Consume hardware in the following order of importance. Where no batch code/pour code information is available, consume hardware by earliest date received.

- (1) Batch Code/Pour Code
- (2) Date of receipt by the laboratory

A19.4 Each batch of ring sets and pistons is run-dependent. When a laboratory consumes a new batch of pistons on a given ring set size, the laboratory cannot return to a previous batch for that same ring set size. For example, if a laboratory uses a piston ring set size and a grade 12 piston from Batch Code Y (12 designates for use in the first and second engine builds), the laboratory cannot use a Batch Code X piston ring set for subsequent Batch Code Y grade 12 pistons.

A19.5 Record batch code information for the hardware listed in A19.1 on the appropriate form of the test report package.

#### **APPENDIXES**

(Nonmandatory Information)

#### X1. SEQUENCE HIFHD TEST PROCEDURE

X1.1 Overview —The Sequence IIIFHD test was developed to replace the viscosity increase portion of the Sequence IIIE test. The Sequence IIIFHD test consists of examining the percent viscosity increase data obtained at 60 h, rather than the normal 80 h for a Sequence IIIF test. No parts ratings or measurements are required in the Sequence IIIFHD test. A separate Sequence IIIFHD report form set is available from the TMC for reporting Sequence IIIFHD test results. Do not use the Sequence IIIF report form set to report Sequence IIIFHD test results.

X1.2 Preparation of Apparatus—Prepare the Sequence II-IFHD test engine in the same manner as a Sequence IIIF test engine. No special preparations are required or permitted on test engines for Sequence IIIFHD use.

#### X1.3 Calibration

X1.3.1 There is no stand-alone calibration system for the Sequence IIIFHD test. Consider any stand that is calibrated for Sequence IIIF testing to be calibrated for Sequence IIIFHD testing.

X1.3.2 No special calibration of stand instrumentation is required for Sequence IIIFHD testing.

X1.3.3 The minimum result that will be considered for the percent viscosity increase is 0.1 %. When negative or zero percent viscosity increase results are encountered, substitute 0.1 % for the original unit result and complete the calculations below. A notation is required in the Other Comments and Outliers section of Form 13 (see Annex A8) indicating that the percent viscosity result used for interpolation has been modified for a special case.

X1.3.3.1 Calculate SA for percent viscosity increase at 60 h for all Sequence IIIF reference oil tests by multiplying the 80 h IIIF SA by 0.5. Adjust results by performing the following steps and utilizing an industry correction factor of 5 h:

(1) Determine the interpolation point in hours for EOT viscosity increase:

Interpolation Point in Hours (*IPH*) = Test Length – Hours to 275 % Viscosity Increase Industry Correction Factor – Lab SA for Hours to

275 % Viscosity Increase

Or

Interpolation Point in Hours (IPH) = 60 - 5 - Lab SA

- (2) Find t, where  $t-10 < IPH \le t$ , for example, if IPH in X1.3.3.1(1) is 54.7 h, then t = 60 h and t-10 is 50 h.
- (3) Calculate Final Corrected Percent Viscosity Increase by interpolation as follows:

$$PVIS_{Final} = \left(x \cdot \sqrt{PVIS_{t-10}} + y \cdot \sqrt{PVIS_{t}}\right)^{2} \quad (X1.1)$$

where:

x = (t-IPH)/10, and

y = 1-x and  $t-10 < IPH \le t$ .

X1.3.4 A Sequence IIIFHD test counts as one run against the Sequence IIIF stand calibration period for the stand on which it is run. A test run as a combined Sequence IIIF/ Sequence IIIFHD test counts as only one run against the stand calibration period for the stand on which it is run.

X1.4 *Test Procedure*—Conduct the Sequence IIIFHD test in either the Stand-alone (X1.4.1) or Combined Sequence (X1.4.2):

X1.4.1 Stand-Alone Sequence IIIFHD Test—If only a Sequence IIIFHD test result is needed, conduct the test in the normal manner as listed in this test method until the test reaches the 60 h point. When the 60 h point is reached, terminate the test according to the procedure listed in 11.16. The 79 h NO<sub>x</sub> reading listed in 11.12 is not required. The blowby readings listed in 11.11 for test-hours 61, 66, 71, 76, and 79 are also not required. The MRV and CCS measurements listed in 11.6 are not required for a Sequence IIIFHD test. Analyze the used oil samples for viscosity increase according to 11.7. ICP analysis results for the 70 h and 80 h samples are not required; perform all other ICP Analyses and report according to 11.8. No other ratings or measurements are required.

X1.4.2 Combined Sequence IIIF/Sequence IIIFHD Test—If both Sequence IIIF and Sequence IIIFHD test results are desired on a non-reference oil, conduct the test in the normal manner as listed in this test method, including all ratings, measurements, and used oil analyses. Once completed, report the percent viscosity increase results at 60 h as the Sequence IIIFHD results and report the Sequence IIIF results in the normal manner.

X1.5 *Quality Index*—Calculate the quality index results for Sequence IIIFHD test results, based upon a test length of 60 h, rather than 80 h for a normal Sequence IIIF test. Consider only operational data for the first 60 h (in the case of combined Sequence IIIF/Sequence IIIFHD tests) Sequence IIIFHD quality index calculations.

X1.6 *Test Reporting*—Report Sequence IIIFHD tests using the standard report form set, available from the TMC.

### X1.7 Precision and Bias

X1.7.1 Test precision is established based on reference oil test results (for operationally valid tests) monitored by the TMC. The Sequence IIIF Surveillance Panel reviews the data semiannually; contact the TMC for current industry data.

X1.7.2 Bias is determined by applying an accepted statistical technique to reference-oil test results. When a significant bias is determined, an SA is permitted for non-reference oil test results.

#### **X2. SEQUENCE HIFVS TEST PROCEDURE**

X2.1 Overview—The Sequence IIIFVS test procedure was developed to support the viscosity increase requirements for Heavy Duty Diesel Category CJ-4 (Specification D4485). The Sequence IIIFVS test procedure consists of examining the percent viscosity increase data obtained at the end of a normal 80 h Sequence IIIF test method. No parts ratings or measurements are required in the Sequence IIIFVS test procedure. A separate Sequence IIIFVS report form set is available from the TMC for reporting Sequence IIIFVS test results. Do not use the Sequence IIIF Report Form Set to report Sequence IIIFVS test results.

X2.2 Preparation of Apparatus—Prepare the Sequence IIIFVS test engine in the same manner as a Sequence IIIF test engine. No special preparations are required or permitted on test engines for Sequence IIIFVS use. Do not perform Camshaft and Lifter Measurements, as outlined in 9.11, for the Sequence IIIFVS test procedure.

### **X2.3** Calibration

- X2.3.1 There is no stand-alone calibration system for the Sequence IIIFVS test procedure. Consider any stand that is calibrated for Sequence IIIF testing to be calibrated for Sequence IIIFVS testing.
- X2.3.2 No special calibration of stand instrumentation is required for Sequence IIIFVS testing.

- X2.3.3 Apply Sequence IIIF percent viscosity increase Severity Adjustments (SA) to Sequence IIIFVS results.
- X2.3.4 A Sequence IIIFVS test procedure start counts as one run against the Sequence IIIF calibration period in which it is run.
- X2.4 *Test Procedure*—Conduct the Sequence IIIFVS test procedure in a calibrated IIIF test stand.
- X2.5 Determination of Result—Determine the test result using 12.6, 12.12, and 12.13.
- X2.6 *Test Reporting*—Report the Sequence IIIFVS result using the standard report form set, available from the TMC.

### **X2.7** Precision and Bias

X2.7.1 Test precision for the IIIFVS test procedure is assumed to be the same as that established for the Sequence IIIF test method, which is based on reference oil test results (for operationally valid tests) monitored by the TMC. The Sequence IIIF Surveillance Panel reviews the data semiannually; contact the TMC for current industry data.

X2.7.2 Bias for the IIIFVS test procedure is assumed to be the same as that determined by applying an accepted statistical technique to Sequence IIIF test method reference oil test results. When a significant bias is determined, an SA is permitted for non-reference oil test results.

### **SUMMARY OF CHANGES**

Subcommittee D02.B0 has identified the location of selected changes to this standard since the last issue (D6984 – 15) that may impact the use of this standard. (Approved Oct. 1, 2015.)

- (1) Introduction revised.
- (2) Subsection 9.7.2.1 revised to allow use of hardened valve seat heads for multiple tests.
- (3) Subsection 10.2.3 and 12.14.2, revised.
- (4) Section 13, revised.

- (5) Table 1 revised test precision data.
- (6) Replaced former Annex A1 with new Annex A1 Annex A4, describing the role of the TMC; renumbered subsequent Annex sections and references throughout.

Subcommittee D02.B0 has identified the location of selected changes to this standard since the last issue (D6984-14a) that may impact the use of this standard. (Approved April 1, 2015.)

- (1) Subsection 7.5.4 was revised to include new cleaning agents if using an ultrasonic cleaner.
- (2) Subsection 9.5.3.1 was revised to describe cleaning procedure when using an ultrasonic cleaner.

Subcommittee D02.B0 has identified the location of selected changes to this standard since the last issue (D6984 – 13) that may impact the use of this standard. (Approved Oct. 1, 2014.)

(1) Subsections 9.7.2.1 added and Table A5.1 and Table A5.2 revised to allow use of cylinder heads with hardened seats.



ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; http://www.copyright.com/