


CENTRALIZED RELAY

Connector No.	Name	Connector No.	Name
A-04X	Front fog lamp relay	B-10X	Engine speed detection connector
A-05X	Horn relay	B-11X	—
A-06X	—	B-12X	—
A-07X	—	B-13X	—
A-08X	—	B-14X	Ignition coil relay
A-09X	Fan control relay	B-15X	A/T control relay
A-10X	Front-ECU	B-16X	Engine control relay
A-11X	Front-ECU	B-17X	A/C compressor relay


(Relay box in engine compartment)

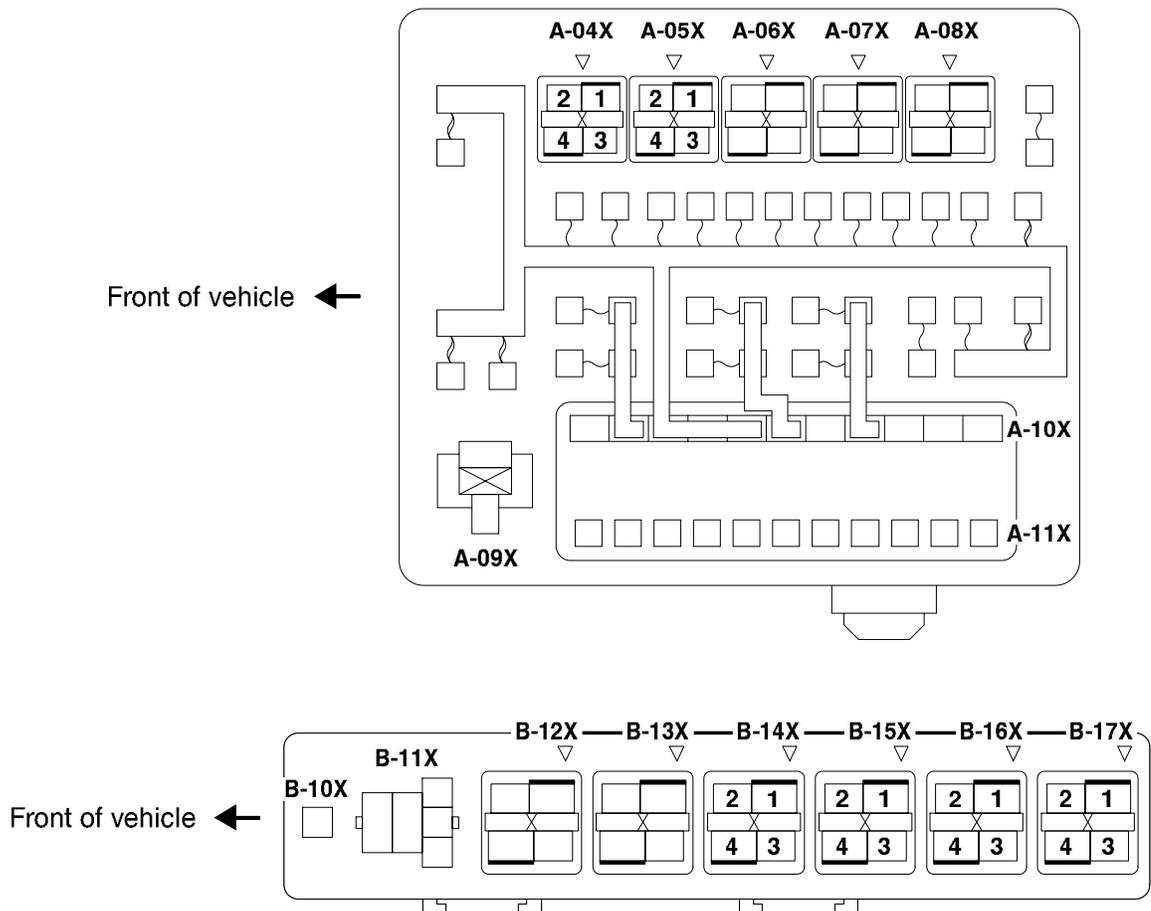


NOTE:

- The triangle mark on the relay housing should face that on the J/B and the relay box.

ENGINE COMPARTMENT

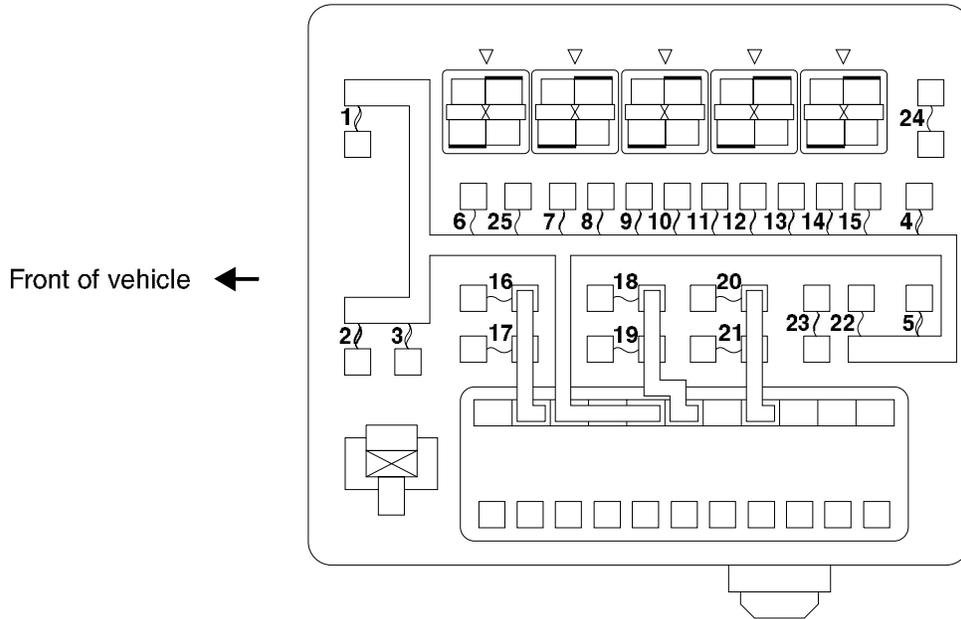

(Connected directly to battery positive terminal)

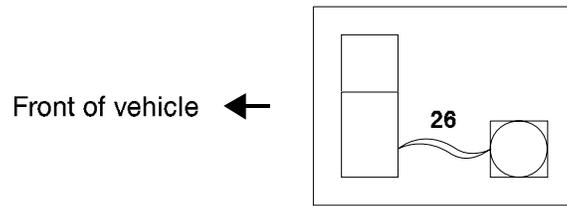

FUSIBLE LINK AND FUSE


No.	Power supply circuit	Name	Rated capacity (A)	Housing colour	Load circuit
1	Battery	Fusible link	60	Yellow	Fuse No. 15, 16, 19, 20 (in junction block) circuit
2			50	Red	Fan controller
3			60	Yellow	ABS-ECU
4			40	Green	Ignition switch circuit
5			30	Pink	Power window main switch and power window sub switch
6		Fuse	15	Blue	Front fog lamp, front fog lamp indicator lamp, front fog lamp relay and spare connector (for front fog lamp)
7			10	Red	Horn relay and horn
8			20	Yellow	Air flow sensor, camshaft position sensor, crank angle sensor, EGR control solenoid valve, engine-A/T-ECU, engine-ECU, engine control relay, fan control relay, idle speed control servo, ignition coil relay, immobilizer-ECU, injector, oxygen sensor and purge control solenoid valve
9			10	Red	A/C compressor
10			15	Blue	ABS-ECU, engine-A/T-ECU, high mount stop lamp and rear combination lamp
11			15	Blue	Accessory socket
12			7.5	Brown	Alternator
13			10	Red	ETACS-ECU, front turn signal lamp, rear combination lamp, side turn signal lamp and turn signal indicator lamp
14			20	Yellow	A/T control solenoid valve assembly and engine-A/T-ECU
15			15	Blue	Fuel pump
16	Front-ECU (Headlamp relay: Hi)		10	Red	Headlamp (RH)
17			10	Red	Headlamp (LH) and high beam indicator lamp
18			10	Red	Headlamp (RH)
19			10	Red	Headlamp (LH), headlamp assembly and headlamp leveling switch

No.	Power supply circuit	Name	Rated capacity (A)	Housing colour	Load circuit
20	Front-ECU (Tail lamp relay)	Fuse	7.5	Brown	A/C-ECU, ashtray illumination lamp, cigarette lighter illumination lamp, combination meter, fog lamp switch, front turn signal lamp, hazard warning switch, headlamp assembly (RH), headlamp leveling switch, heated seat switch, heater control unit, licence plate lamp, rear combination lamp, rheostat, side turn signal lamp and spare connector (for audio)
21			7.5	Brown	Combination meter, headlamp assembly (LH), licence plate lamp, position lamp (LH) and rear combination lamp (LH)
22	Battery		10	Red	Combination meter, column switch, ETACS-ECU and front-ECU
23	Ignition switch (ACC)		10	Red	Clock, ETACS-ECU and spare connector (for audio)
24	Battery		-	-	-
25			20	Yellow	Heated seat assembly and heated seat switch
26		Fusible link	100	-	Alternator

PASSENGER COMPARTMENT

Front side

Rear side

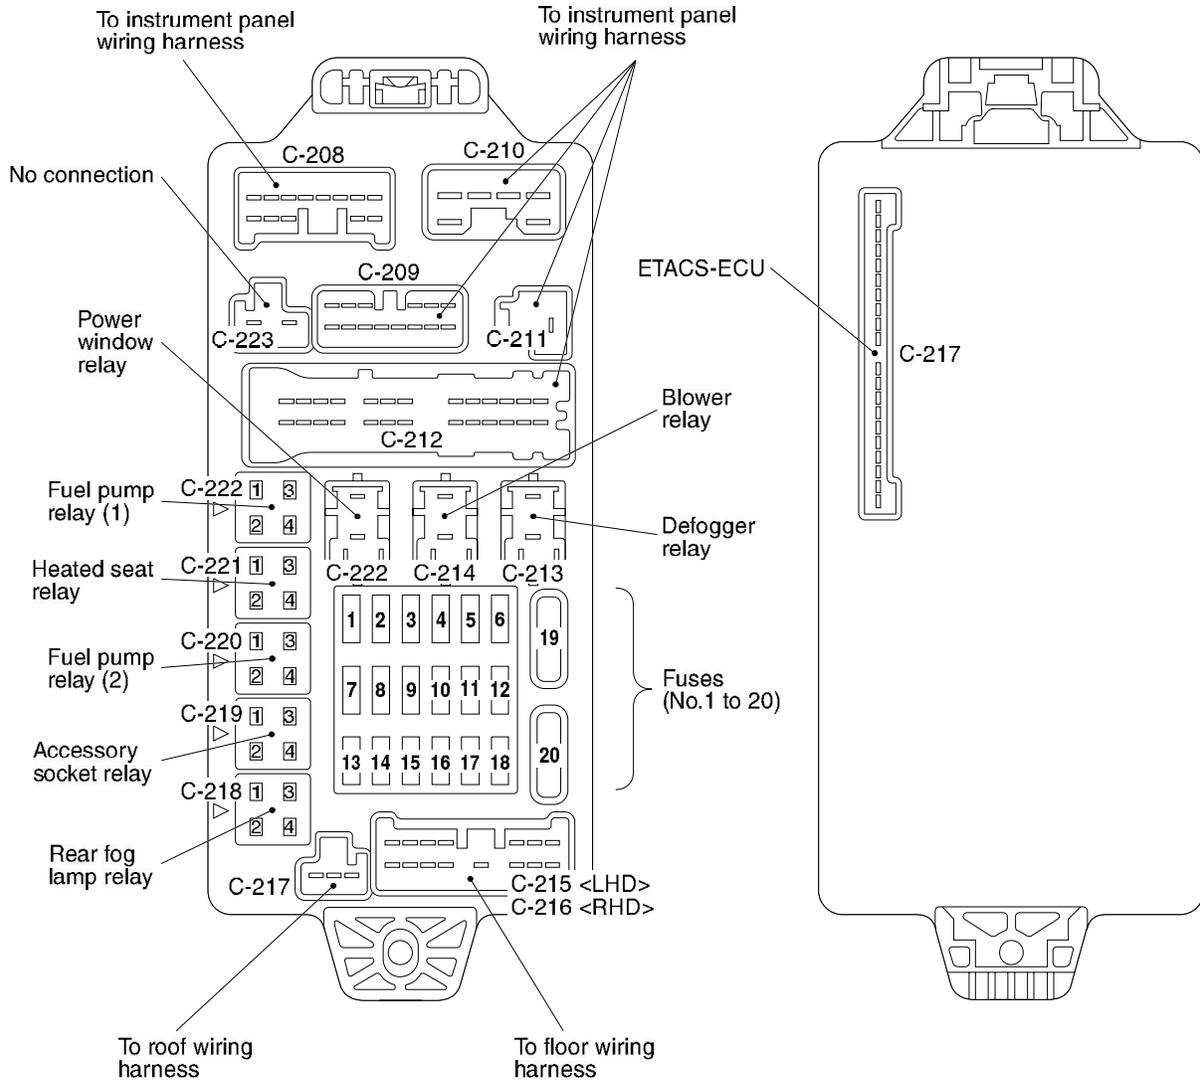

NOTE:

- The triangle mark on the relay housing should face that on the J/B and the relay box.

No.	Power supply circuit	Name	Rated capacity (A)	Housing colour	Load circuit
1	Ignition switch (IG1)	Fuse	10	Red	Capacitor and ignition coil
2			7.5	Brown	ABS warning lamp, brake warning lamp, charging warning lamp, check engine warning lamp, column switch, combination meter, ETACS-ECU, low fuel warning lamp, oil pressure warning lamp, SRS air bag warning lamp, SRS-ECU and vehicle speed sensor
3			7.5	Brown	A/T control relay, combination meter, engine-A/T-ECU, ETACS-ECU, input shaft speed sensor, output shaft speed sensor, rear combination lamp and SRS-ECU
4			–	–	–
5	Ignition switch (IG2)		7.5	Brown	A/C compressor relay, A/C-ECU, blower relay, defogger relay, front-ECU, heated seat relay, heater control unit and outside/inside air selection damper control motor
6	Defogger relay		7.5	Brown	Remote controlled mirror
7	Ignition switch (ACC)		20	Yellow	Front-ECU and windshield wiper motor
8	Ignition switch (IG1)		7.5	Brown	Engine-A/T-ECU, engine-ECU, fuel pump relay (1) and fuel pump relay (2)
9	Ignition switch (ACC)		15	Blue	Cigarette lighter
10			–	–	–
11			7.5	Brown	Accessory socket relay and Remote controlled mirror
12			7.5	Brown	ABS-ECU
13	Ignition switch (ACC)		–	–	–
14			15	Blue	ETACS-ECU and rear wiper motor
15	Fusible link No.1	Fuse	15	Blue	Diagnosis connector
16			10	Red	Rear fog lamp, rear fog lamp indicator lamp and rear fog lamp relay
17			–	–	–
18			–	–	–
19			30	Green	A/C-ECU, blower motor, heater control unit and resistor
20			30	Green	Defogger