

SECTION 3

CIRCUIT DIAGRAMS

CONTENTS

J/B3-4

J/C3-6

Central Junction.....3-11

Power Supply3-18

Starting System3-23

Ignition.....3-24

Charging3-26

Engine Control3-28

Cooling3-36

Lighting

Headlights (excl. discharge type).....3-38

Headlights (discharge type)3-42

Tail lights, position lights, licence plate
lights, lighting monitor report buzzer.....3-46

Cabin lights, boot compartment lights,
ignition key cylinder illumination light,
door ajar indicator light3-50

Fog lamps3-54

Headlight levelling system3-58

Signals

Turn signal lights, hazard warning lights3-60

Reversing lights3-64

Stop lights3-65

Horn3-66

Meters

Needle meters.....3-68

Remaining fuel warning light, oil pressure
warning light, brake warning light,
seatbelt warning light3-70

Door Opening / Closing Control

Power windows3-72

Central door locking
(vehicle without keyless entry).....3-78

Central door locking
(vehicle with keyless entry).....3-80

Temperature Control

Heater3-86

Manual air-conditioning.....3-90

Fully automatic air-conditioning3-96

Vision / Safety

Windscreen washer / wipers.....3-104

Rear washer / wiper3-108

Demister
(vehicle with heater or manual A/C).....3-110

Demister, door mirror heating elements
(vehicle with full auto A/C).....3-112

Electric stowable remote control
door mirrors.....3-114

Accessories

Spare audio connectors3-118

Clock3-120

Cigarette lighter, ashtray illumination lamp3-121

Cont. on next page


Equipment

ABS	3-122	Sunroof	3-154
ACD (vehicle without AYC)	3-130	Ignition key reminder buzzer.....	3-157
ACD, AYC	3-138	Intercooler water spray	3-158
SRS airbags, seatbelt pre-tensioners (vehicle without front passenger airbag).....	3-148	Engine immobilizer system	3-160
SRS airbags, seatbelt pre-tensioners (vehicle with front passenger airbag).....	3-152	Security alarm.....	3-162
		Spare connector for fog lamp	3-167
		Generic spare connectors.....	3-168


<Notes>

J/B

M3030000200630

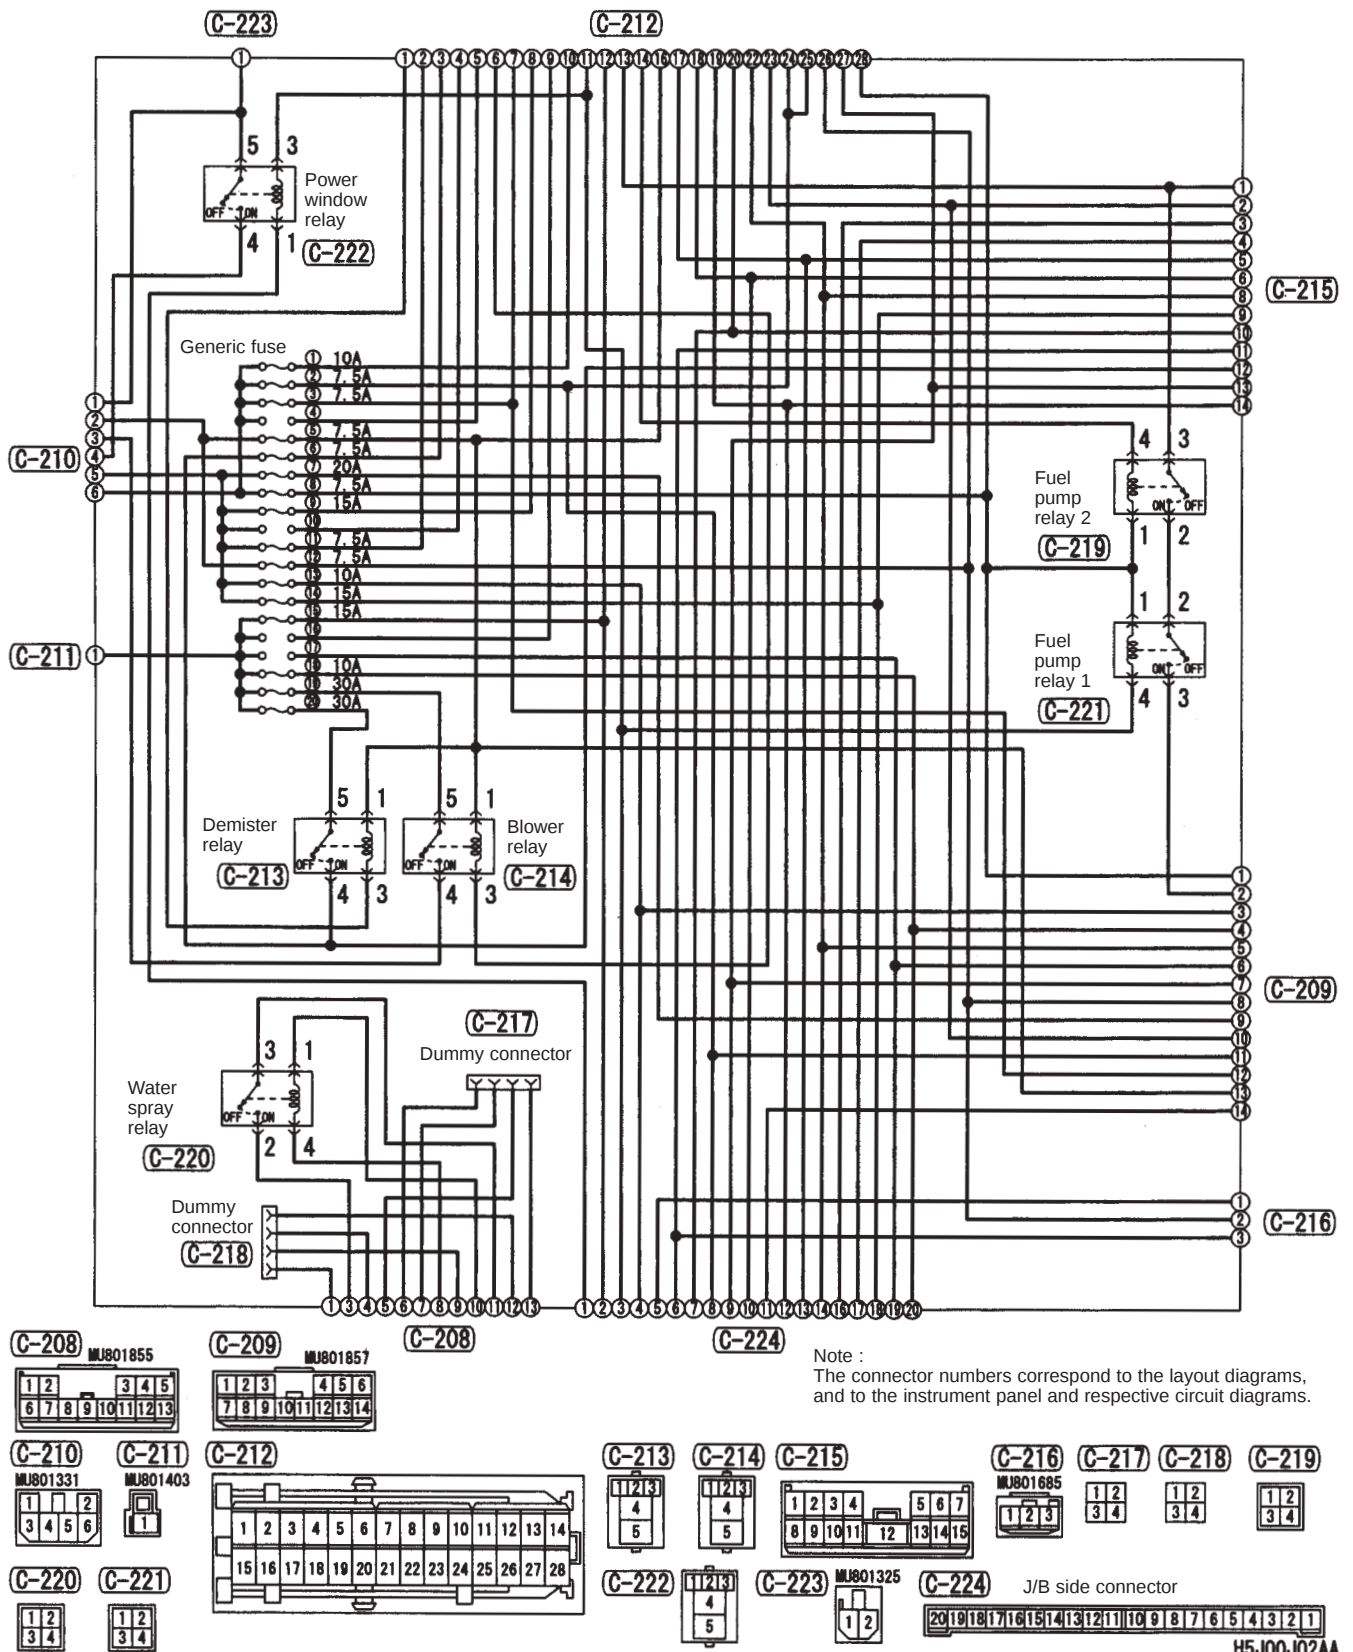

H5J00J02AA

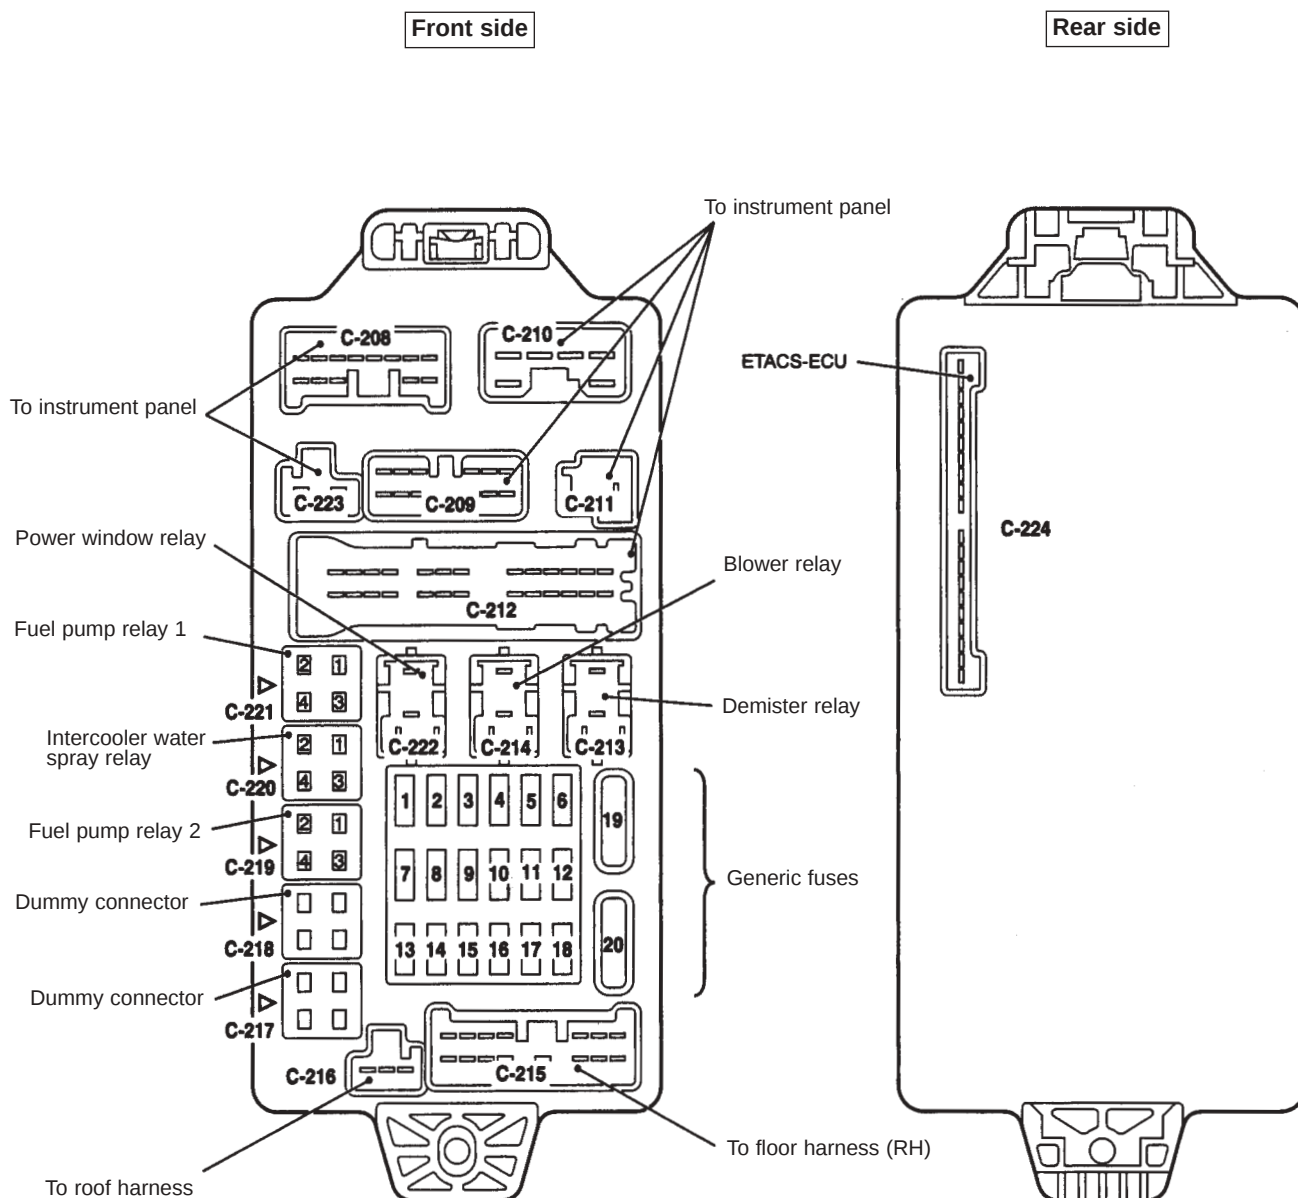

AC209083A0


Note : The triangle symbols in the J/B and relay boxes show the positions that coincide with the triangle marks engraved on the relays.

J/C

M3030014200763

Note :

In the actual vehicle, any of the terminals connected inside the J/C may be used. Therefore the terminal numbers indicated on the circuit diagrams may not correspond to the terminal sequence in the vehicle.

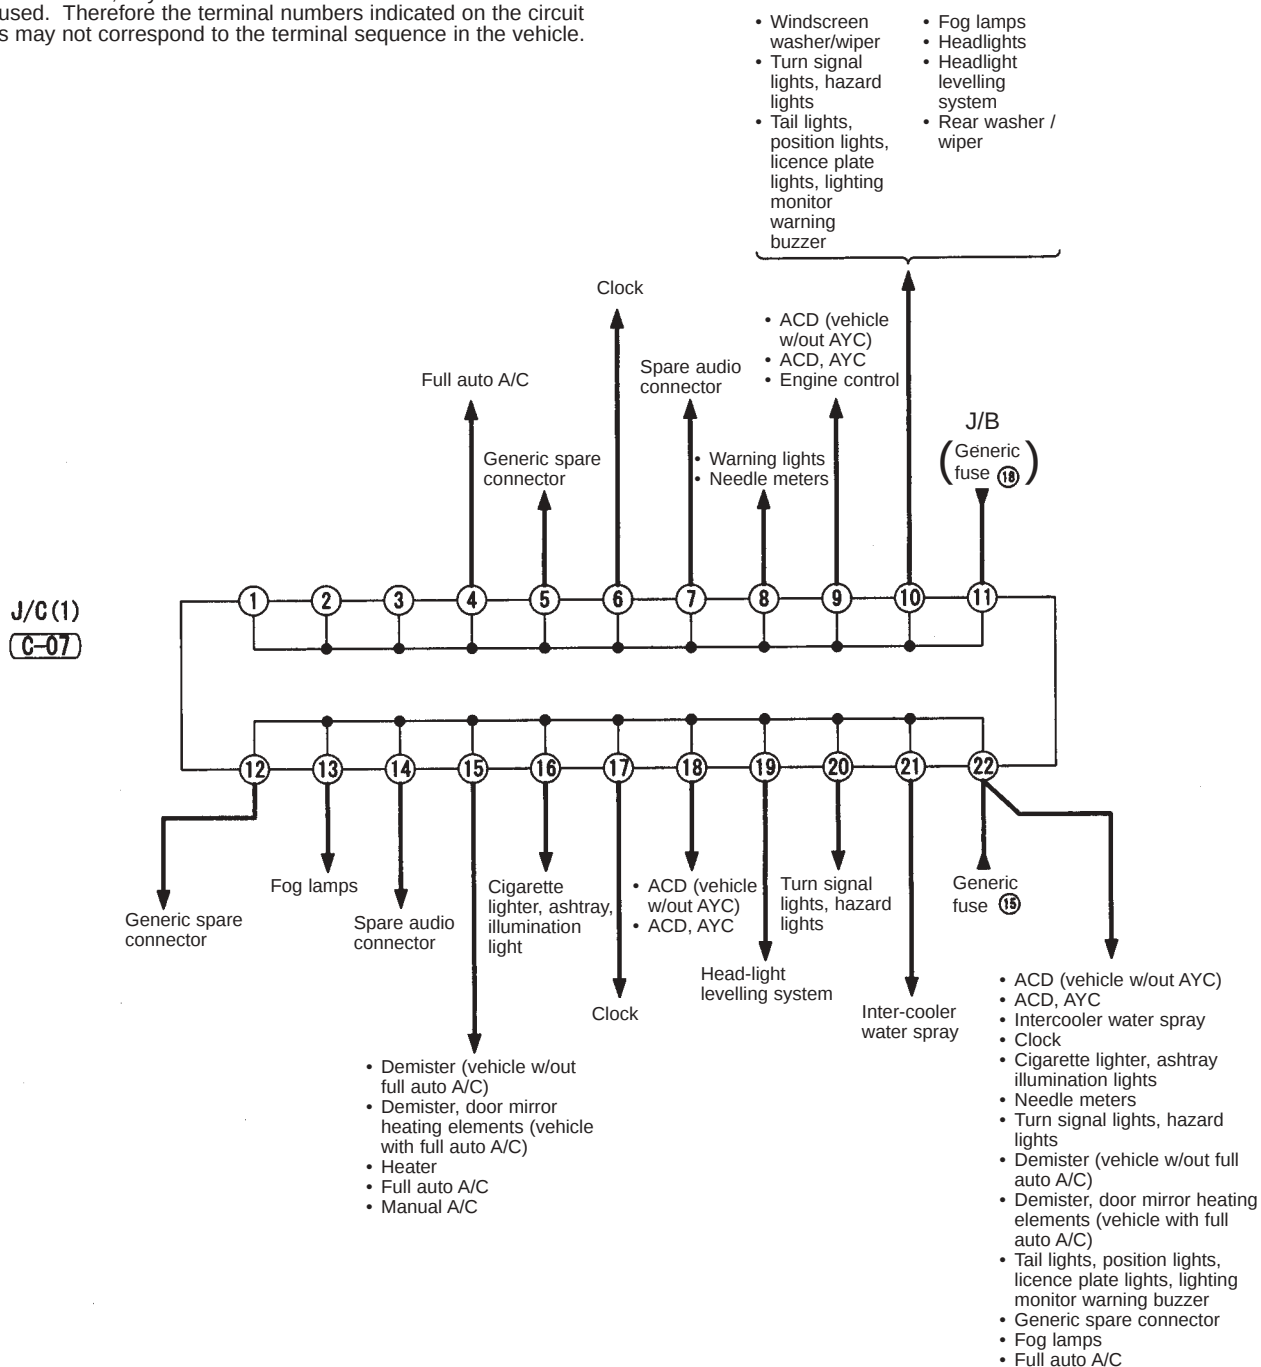


(C-07)




(C-119)



H5J00J03AA

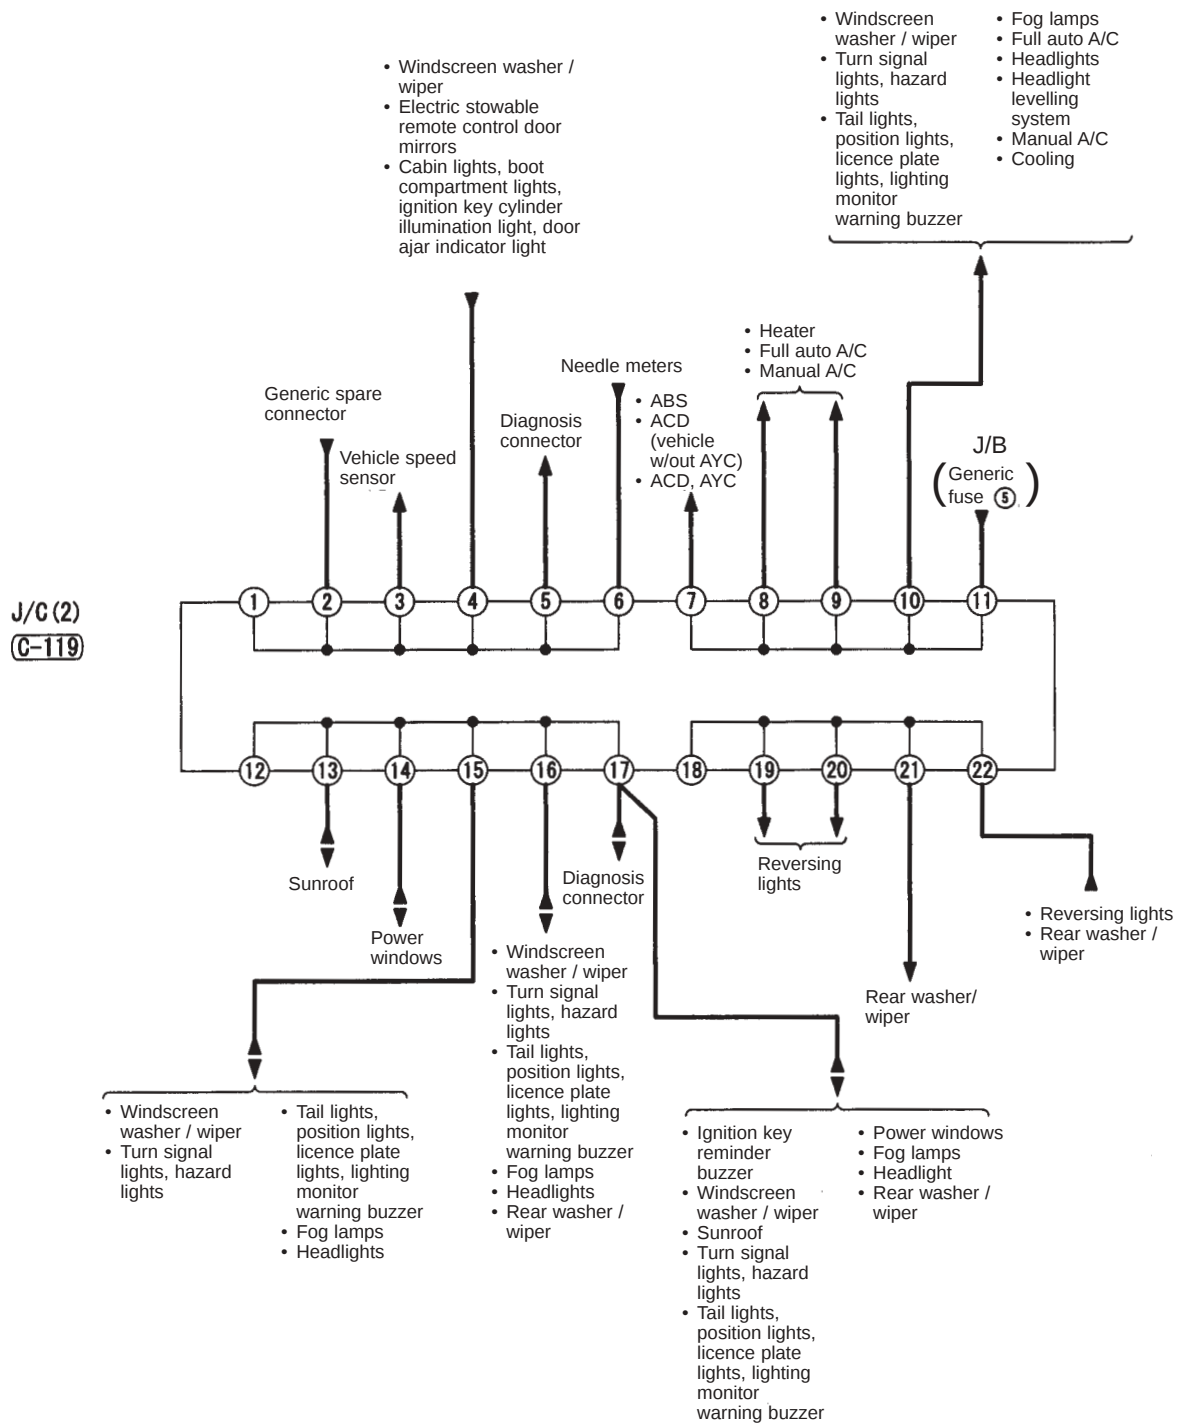

J/C (cont'd)

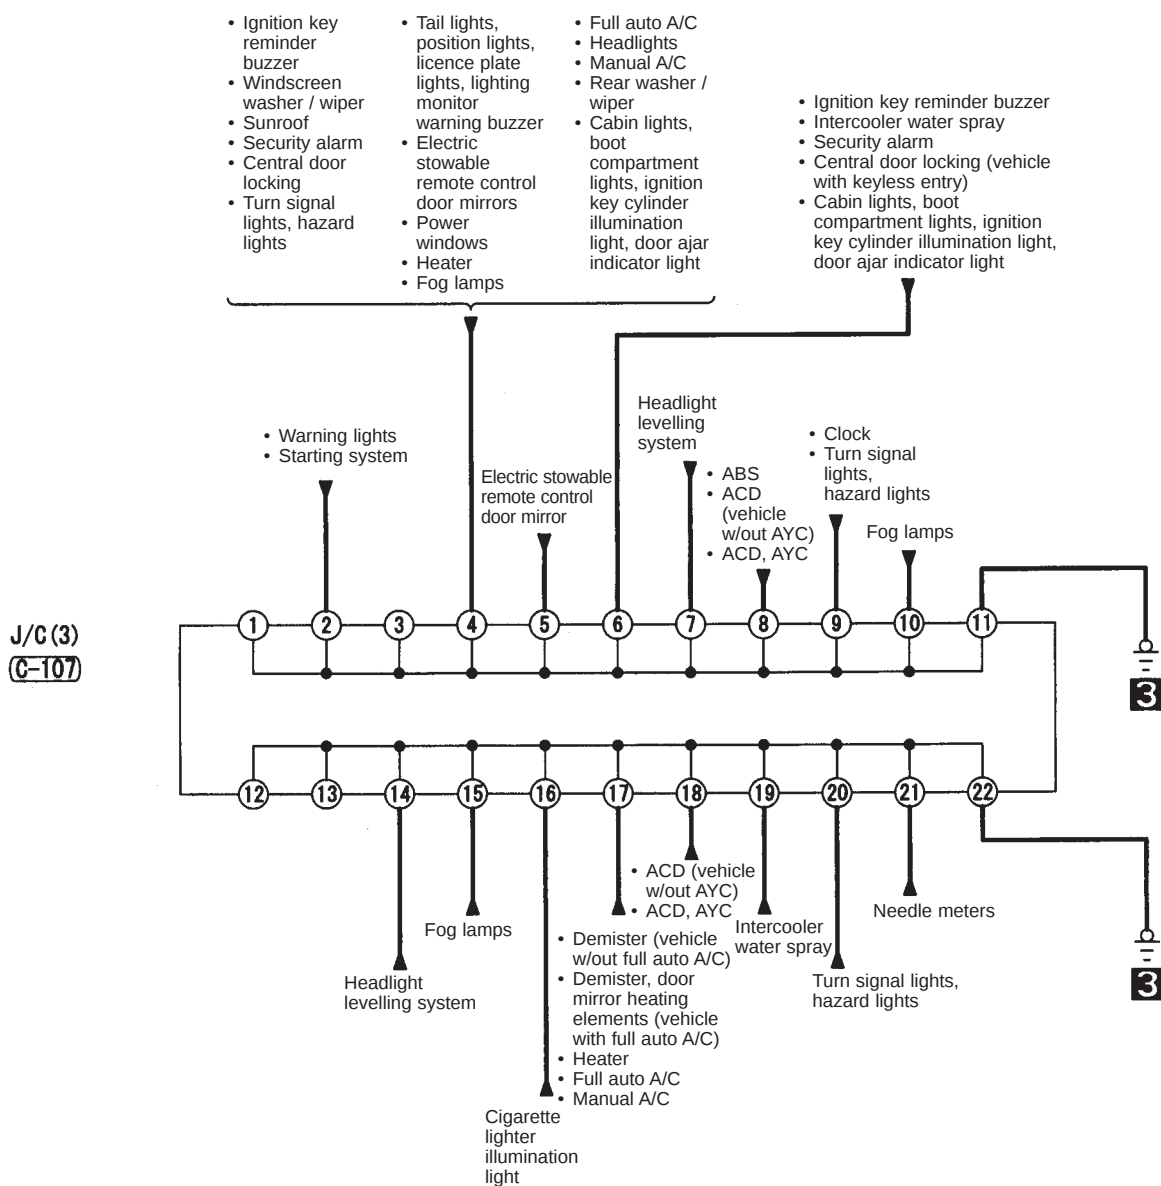


C-107





C-110



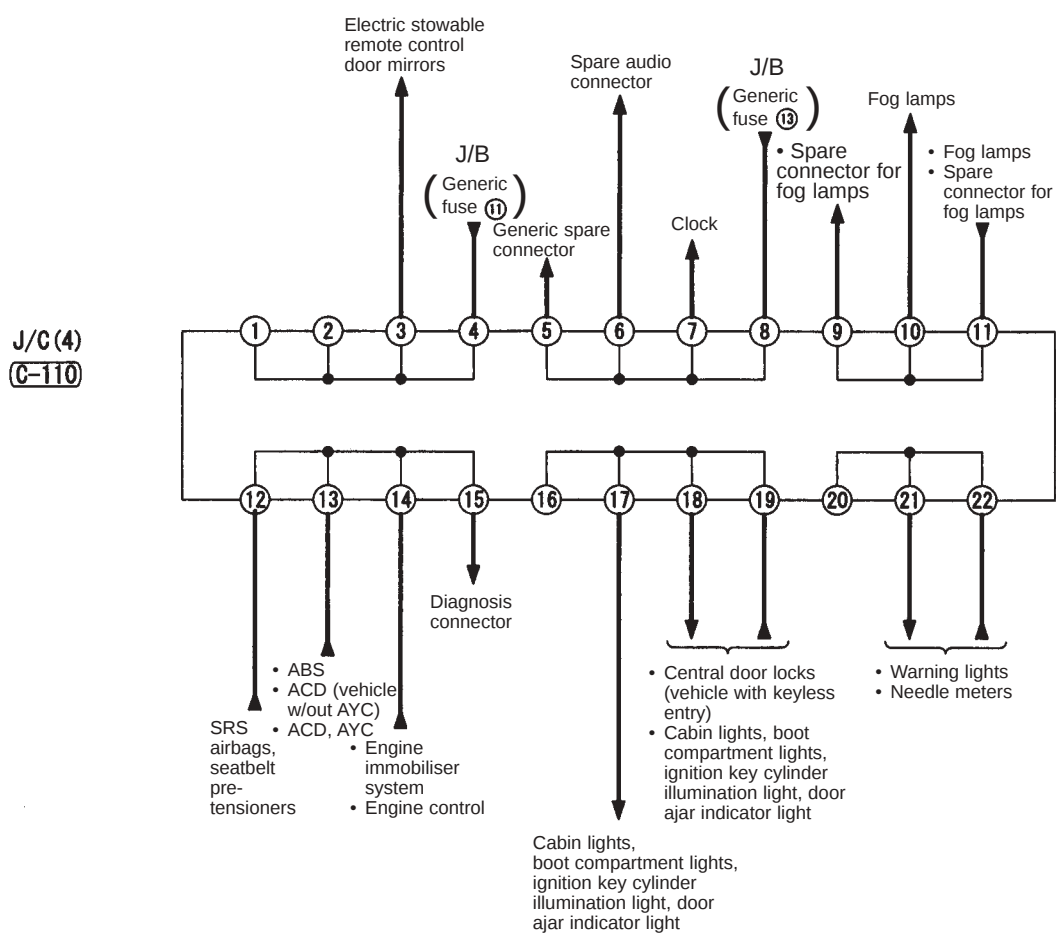

J/C (cont'd)

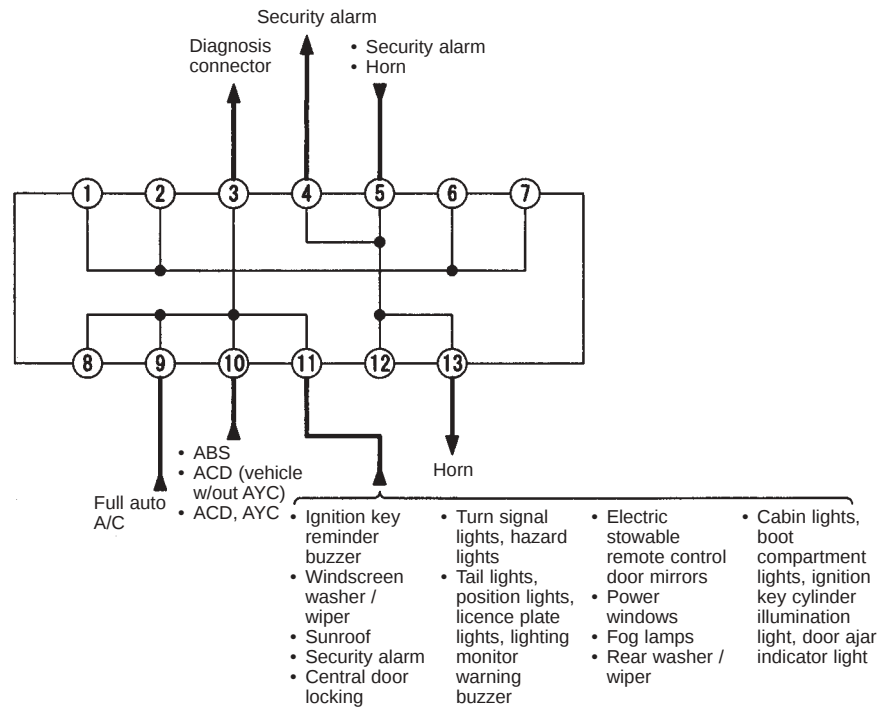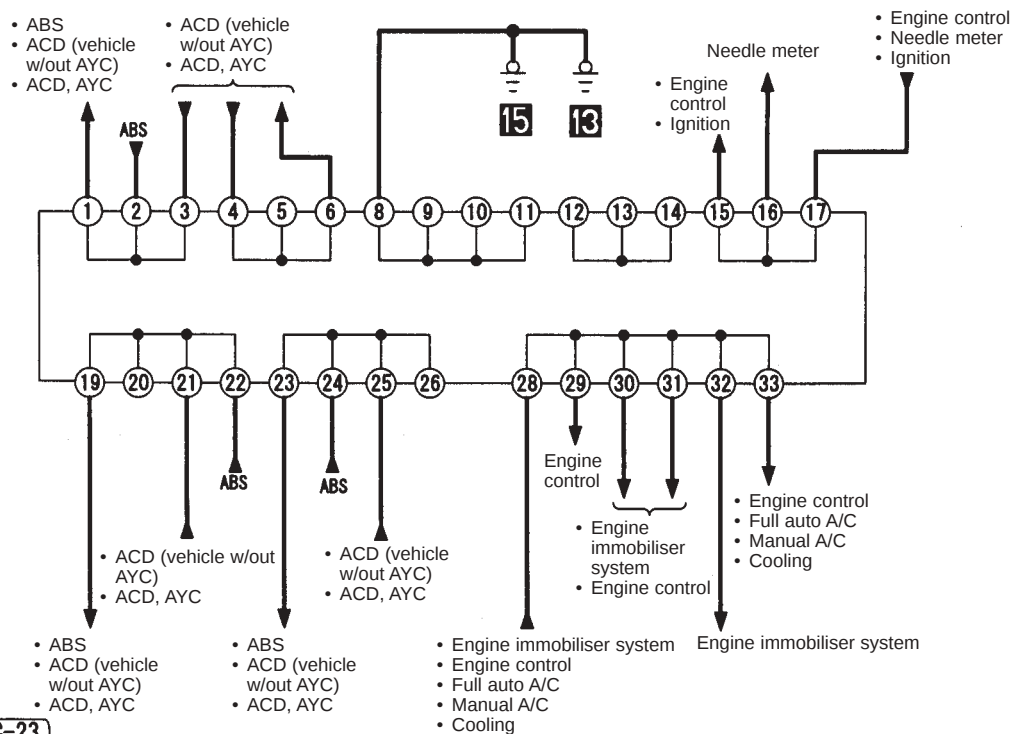J/C (5)
(C-06)J/C (6)
(C-23)

C-06

MU801855

1	2	3	4	5
6	7	8	9	10
11	12	13		

C-23


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

CENTRAL JUNCTION


Fusible Links (relay box inside engine compartment and fuse box connected directly to battery)

No.	Circuit	Type	Colour of housing	Rating (A)
1	Generic fuses No.15, 18, 19, 20	Screw fitting	Yellow	60
2	Full auto A/C, manual A/C, cooling	Connector type	Red	50
3	ABS	Connector type	Yellow	60
4	Ignition switch relay circuits	Connector type	Green	40
5	Generic fuse No. 21, power windows	Connector type	Green	40
6	Charging	Screw fitting	-	100
7	ACD, AYC, ACD (vehicle w/out AYC)	Screw fitting	-	60

Relay box in engine compartment

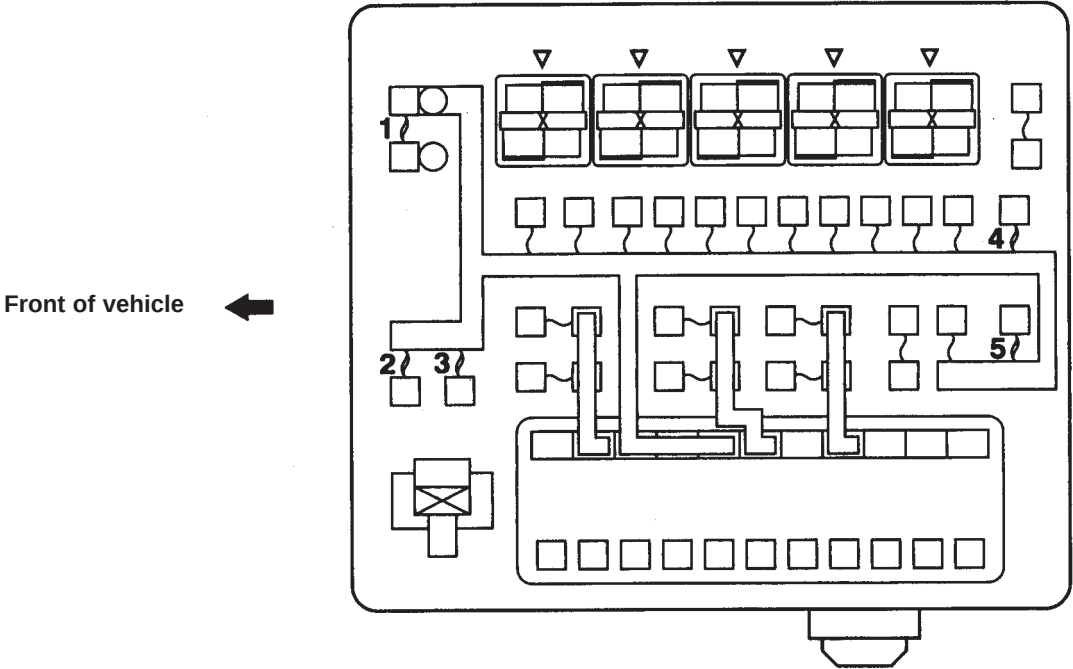


Fuse box connected directly to battery

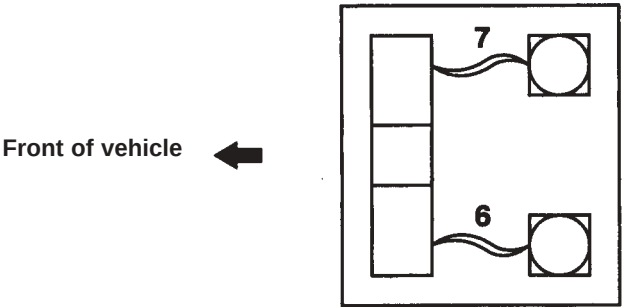

Generic fuses (fuse box inside J/B)

Power supply circuit		Fuse No.	Rating (A)	Colour code	Load circuits
Ignition switch	IG1	1	10	Red	Ignition coil relay
		2	7.5	Brown	Charging warning light, engine warning light, ETACS-ECU, ABS warning light, SRS airbag warning light, intercooler water spray indicator light, seatbelt warning light, oil pressure warning light, brake warning light, combination meter, column switch, vehicle speed sensor, SRS-ECU, 4WD-ECU
		3	7.5	Brown	Rear combination lights, ETACS-ECU, SRS-ECU
		4	-	-	
	IG2	5	7.5	Brown	Front ECU, blower relay, internal/external air switching damper motor, A/C-ECU, A/C compressor relay, heater control unit, demister relay, steer sensor, intercooler water spray relay, 4WD-ECU, condenser fan relay (LO), condenser fan relay (HI)
Demister relay (generic fuse No.20)		6	7.5	Brown	Remote control mirrors
Ignition switch	ACC	7	20	Yellow	Front ECU, windscreen wiper motor
	IG1	8	7.5	Brown	Engine ECU, fuel pump relay 1, fuel pump relay 2
	ACC	9	15	Blue	Cigarette lighter
		10	-		
		11	7.5	Brown	A/C-ECU, remote control door mirror
	IG2	12	7.5	Brown	ABS-ECU, lateral G sensor, front/rear G sensor, sunroof motor ASSY
	ACC	13	10	Red	ETACS-ECU, audio unit, navigation unit, clock, generic spare connector, spare audio connector
		14	15	Blue	ETACS-ECU, rear wiper motor
Fusible link No.1 (battery / alternator)		15	15	Blue	Diagnosis connector, ETACS-ECU
		16	-	-	
		17	-	-	
		18	10	Red	ETACS-ECU, engine ECU, column switch, front ECU, A/C-ECU, audio unit, combination meter, navigation unit, clock, 4WD-ECU, generic spare connector, spare audio connector
		19	30	Green	Blower motor, register, lower pulse controller, heater control unit
		20	30	Green	Demister

Fuse box inside J/B

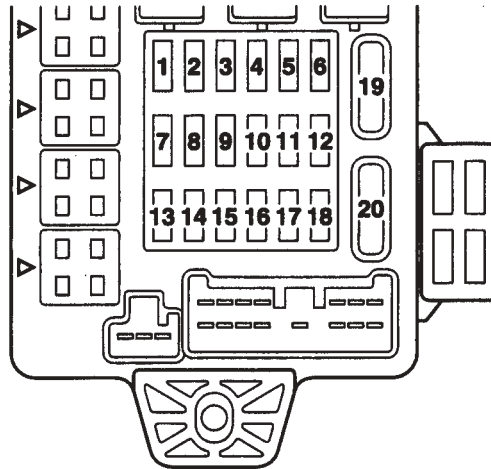


AC212459AB

Central relays (relay box inside engine compartment)

Connector No.	Name	Connector No.	Name
A-06X	Fog lamp relay or spare connector (for fog lamp relay)	B-13X	Engine speed detection connector
A-07X	Horn relay	B-14X	Starter relay
A-08X	Condenser fan relay (LO)	B-15X	-
A-09X	Condenser fan relay (HI)	B-16X	-
A-10X	-	B-17X	Ignition coil relay
A-11X	Radiator fan control relay	B-18X	-
A-12X	Front ECU	B-19X	Engine control relay
A-13X	Front ECU	B-20X	A/C compressor relay

Relay box inside engine compartment

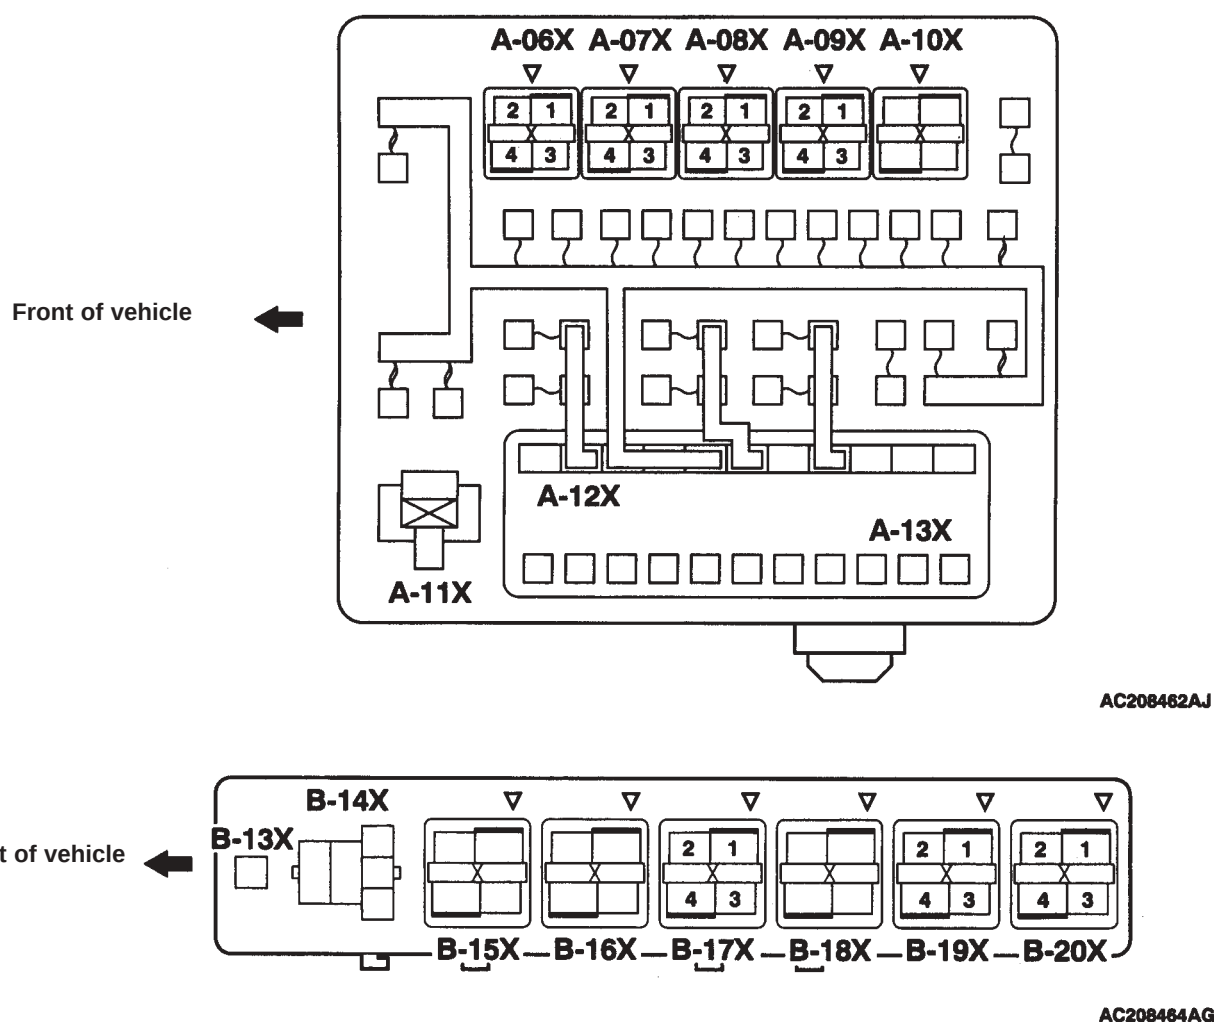


Note : The triangle symbols engraved in the J/B and relay box indicate the position which coincide with the triangle marks engraved on the relays.

Dedicated Fuses (relay box in engine compartment and fuse box installed in J/B)


Power supply circuit	Fuse No.	Rating (A)	Colour code	Load circuits
Battery / Alternator (fusible link No.6)	1	15	Blue	Fog lamp relay, fog lamps, fog lamp indicator light, spare connector for fog lamps
	2	10	Red	Horn relay, horn
	3	20	Yellow	Engine ECU, engine control relay, idle speed control servo, register (for indicators), purge control solenoid valve, intake cam position sensor, exhaust cam position sensor, oil feeder control valve, crank angle sensor, O2 sensor, air flow sensor, radiator fan control relay, secondary air control solenoid valve, waste gate solenoid valve 1, waste gate solenoid valve 2, fuel pressure solenoid valve, ignition coil 1, ignition coil 2
	4	10	Red	A/C compressor
	5	15	Blue	ABS-ECU, rear combination lights, high-mount stop lights, 4WD-ECU
	6	30	Green	Condenser fan motor
	7	7.5	Brown	Alternator
	8	10	Red	ETACS-ECU
	9	-	-	-
	10	20	Blue	Fuel pump relay 3, fuel pump register, fuel pump & fuel gauge unit (main)
Front ECU (headlight relay: HI)	11	10	Red	Headlight (HI : RH)
	12	10	Red	Headlight (HI : LH), high-beam indicator light
Front ECU (headlight relay: LO)	13	10	Red	Headlight ASSY (LO : RH) (except discharge type headlights)
		20	Yellow	Headlight ASSY (LO : RH) (discharge type headlights)
	14	10	Red	Headlight ASSY (LO : LH) (except discharge type headlights)
		20	Yellow	Headlight ASSY (LO : LH) (discharge type headlights), headlight levelling switch

Power supply circuit	Fuse No.	Rating (A)	Colour code	Load circuits
Front ECU (Tail light relay)	15	7.5	Brown	Headlight ASSY (position : RH), rear combination lights, A/C-ECU, heater control unit, audio unit, clock, cigarette lighter illumination light, ashtray illumination light, combination meter, hazard switch, fog lamp switch, ACD mode switch, intercooler water spray switch, headlight levelling switch, generic spare connector, spare audio connector
	16	7.5	Brown	Headlight ASSY (position : LH), rear combination lights, licence plate lights
-	17	-	-	-
Battery / Alternator (fusible link No. 6)	18	-	-	-
-	19	-	-	-
-	20	-	-	-
Fusible link No.5	21	20	Yellow	Sunroof motor ASSY
-	22	-	-	-
Ignition switch (IG)	23	10	Red	Intercooler water spray motor
Battery / Alternator (fusible link No. 6)	24	30	Green	Condenser fan motor

Relay box in engine compartment

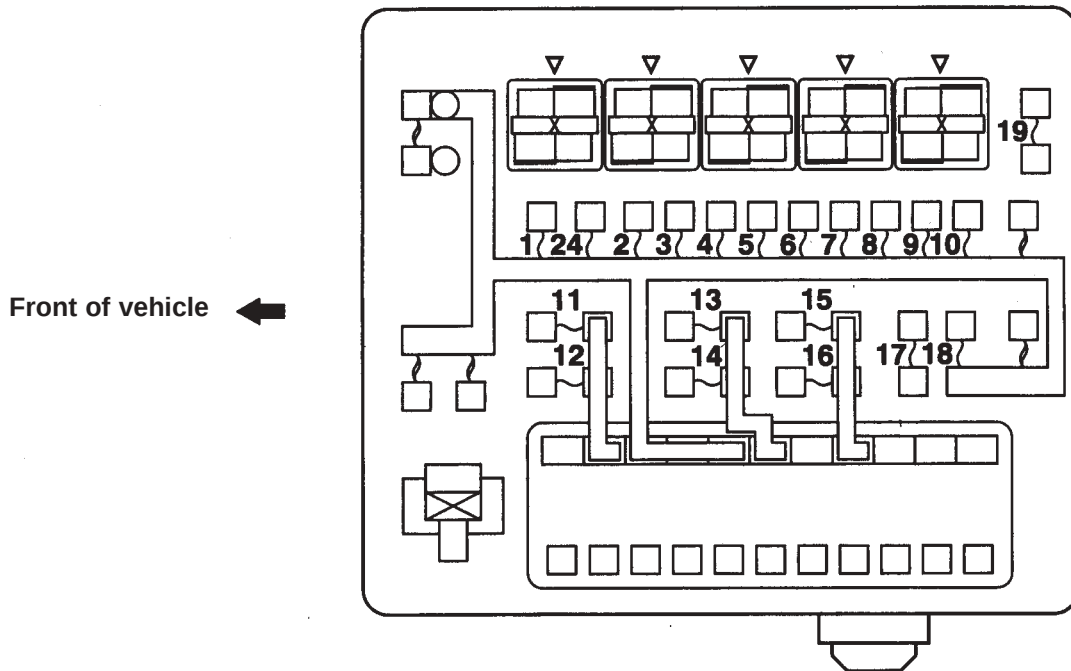

Fuse box installed in J/B

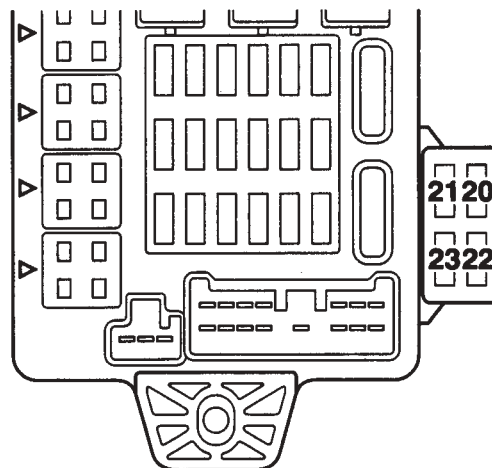


AC203979AB

POWER DISTRIBUTION

M3030000401002

1

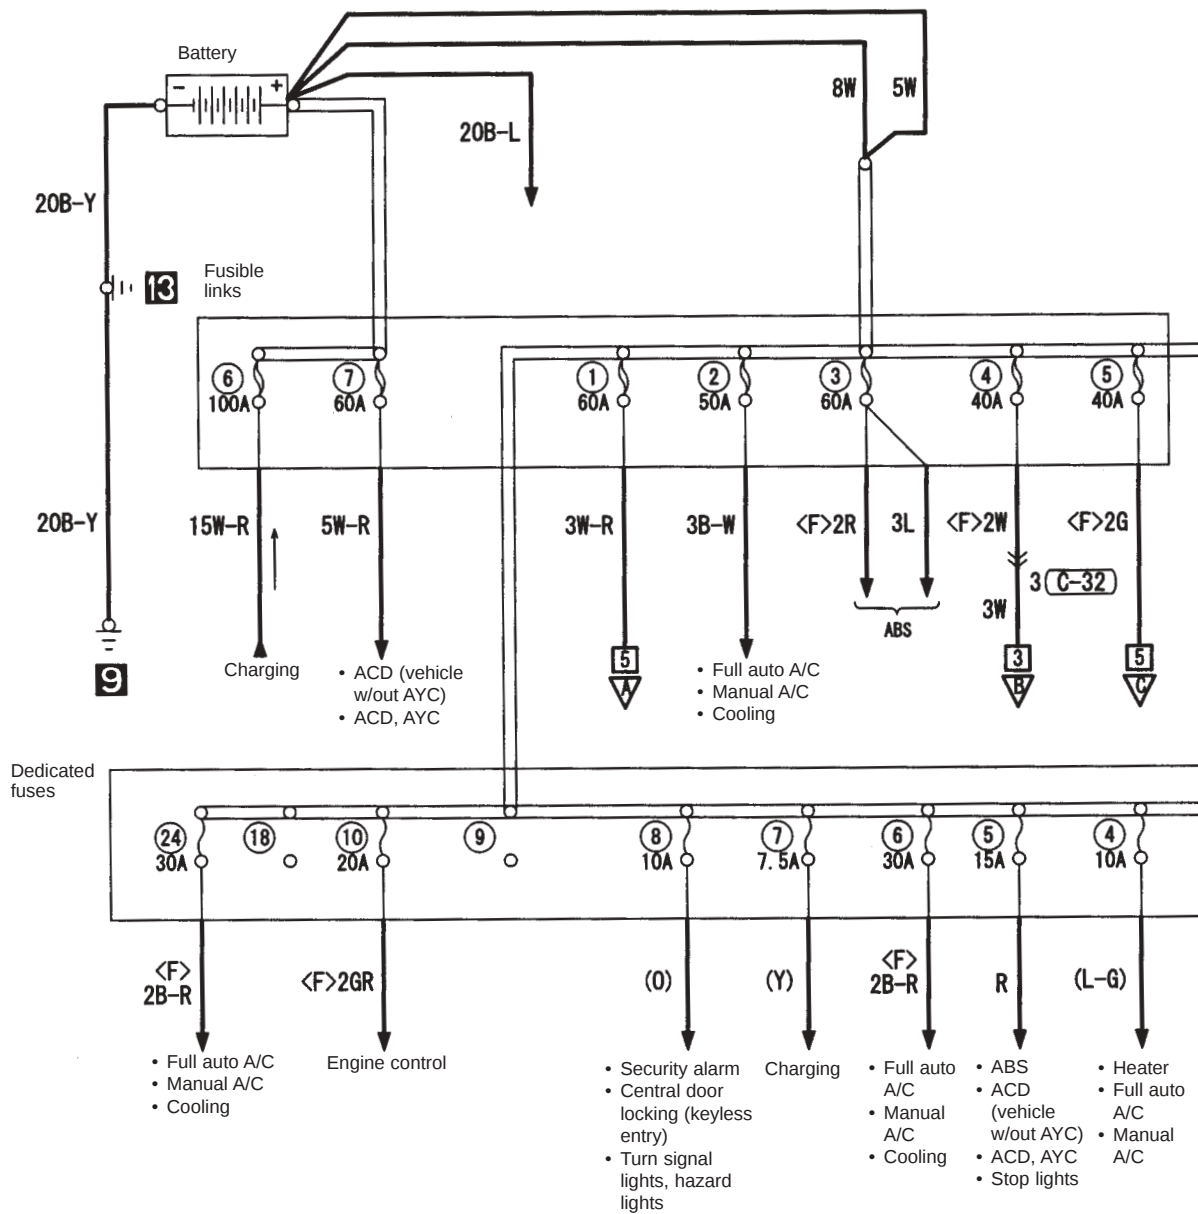

A-12X

1 2 3 4 5 6 7 8 9 10 11


C-32

(MU801380)


1 2 3

H5J01J04AA


2

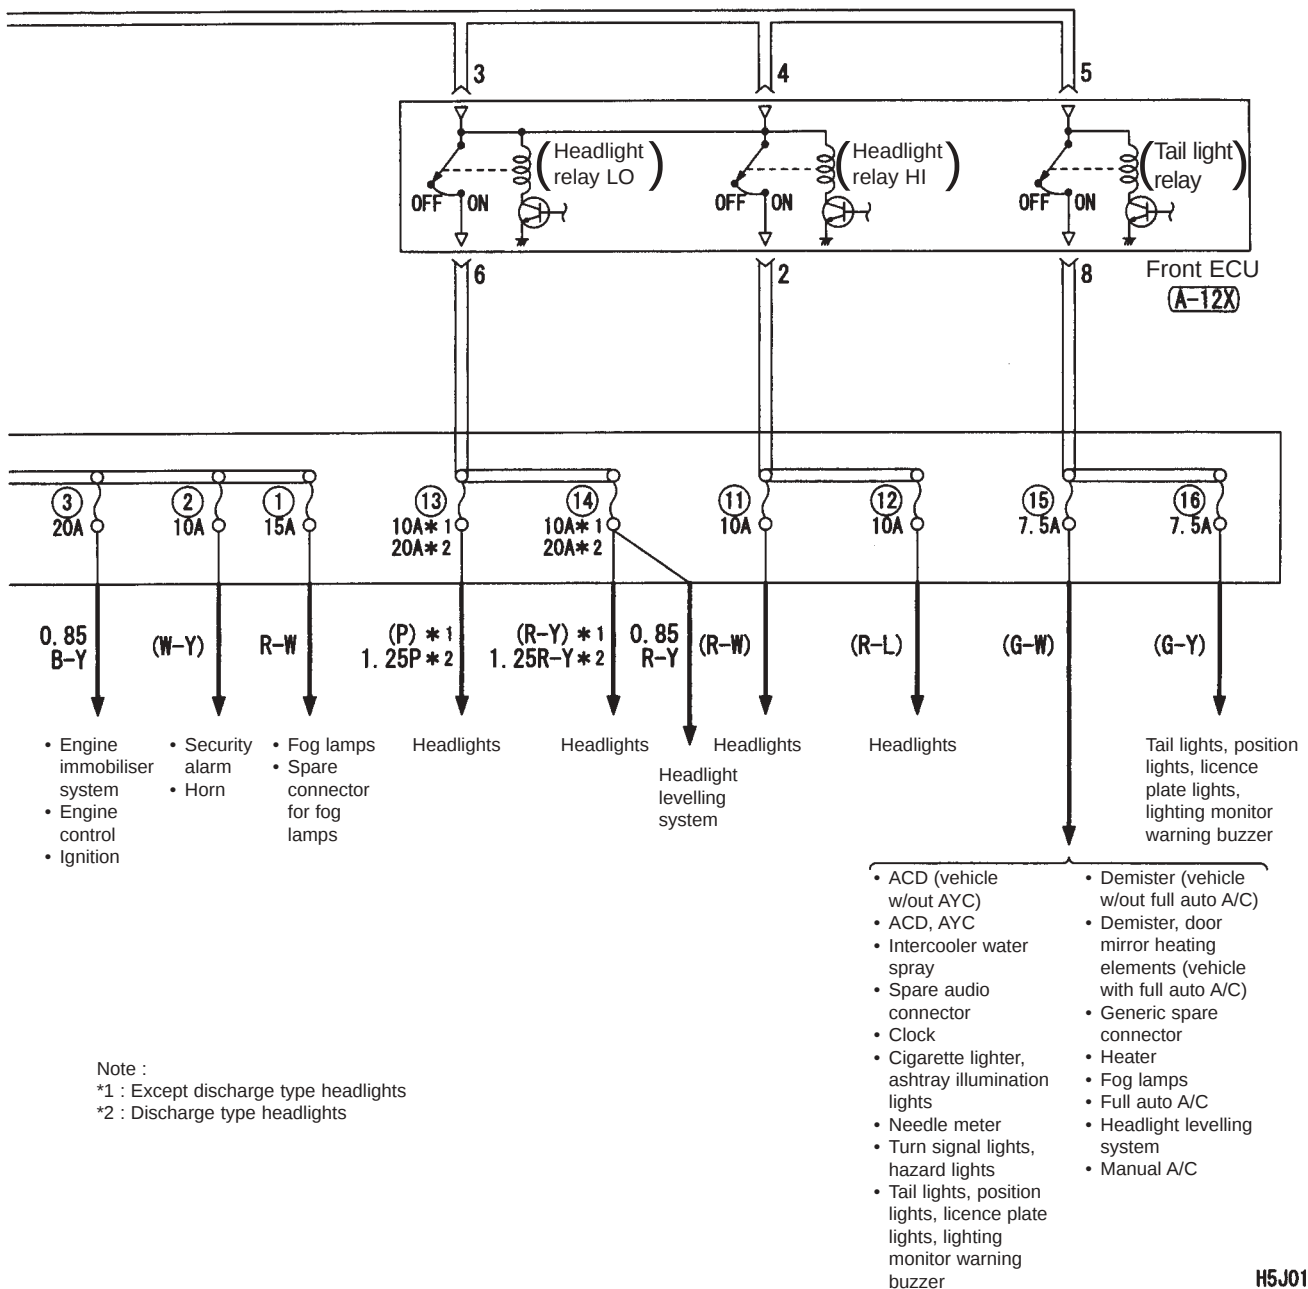



Power distribution (continued)

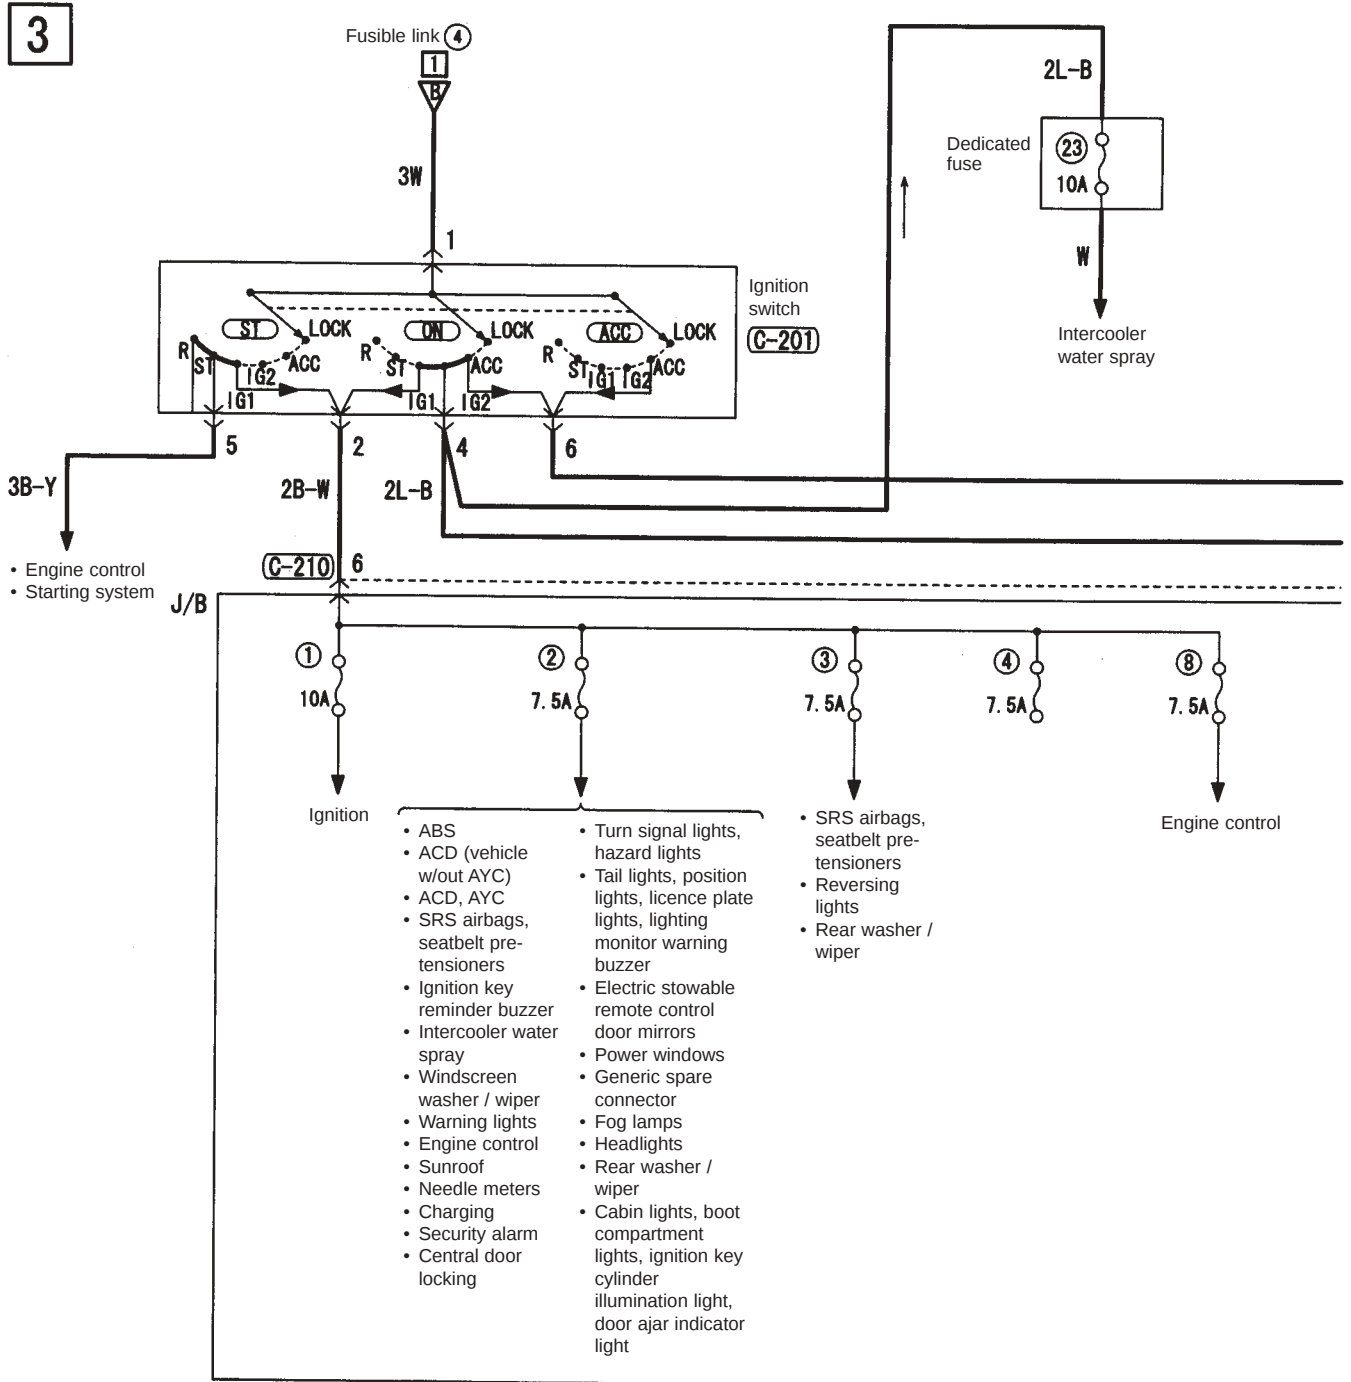


4

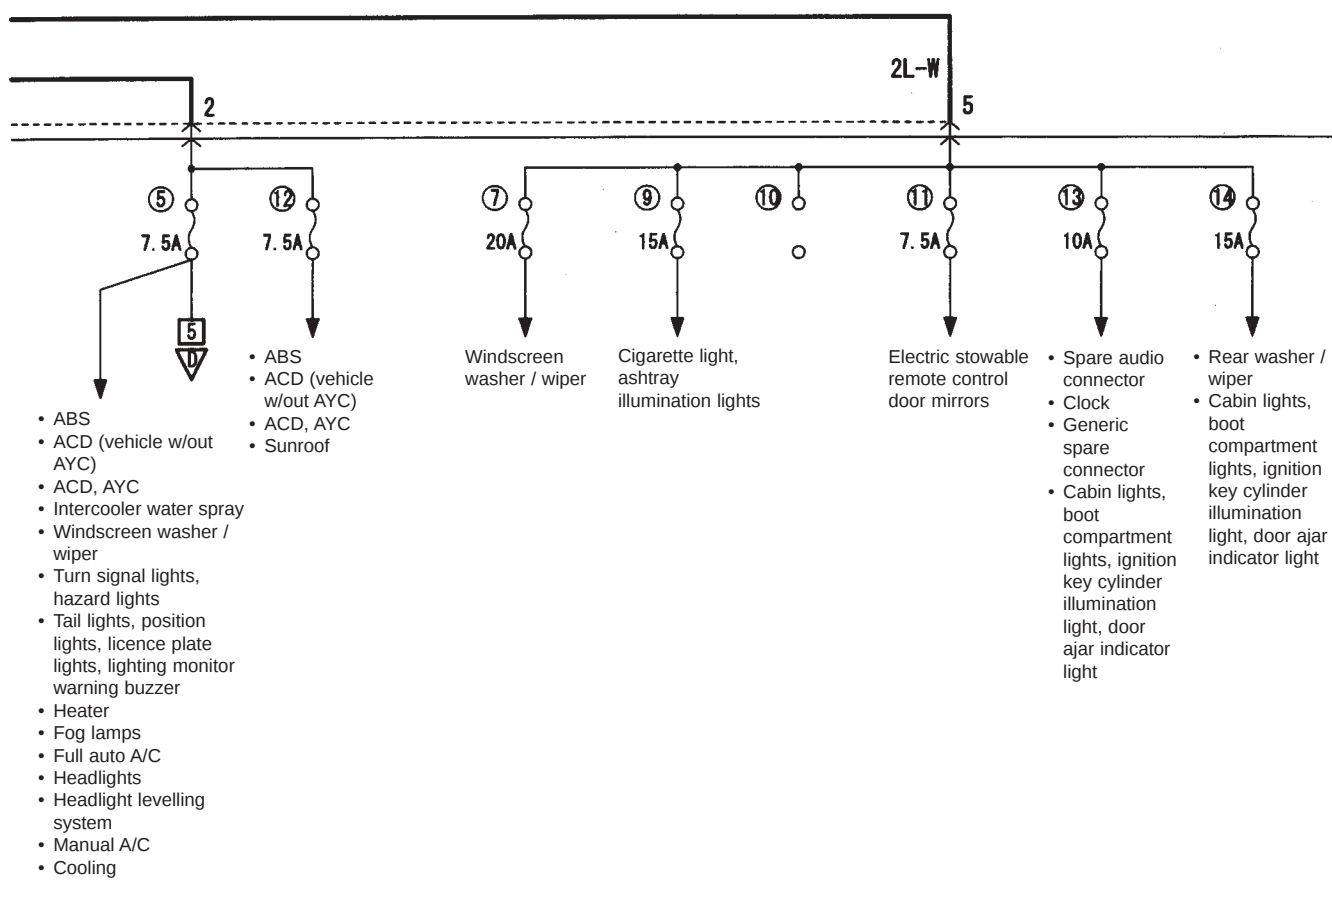

Power distribution (continued)

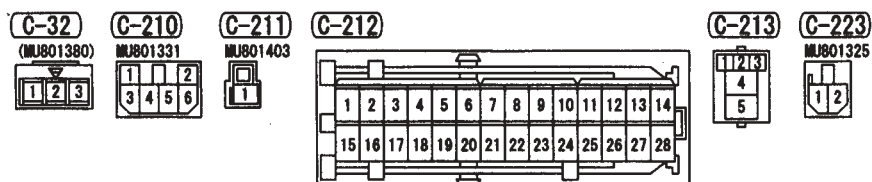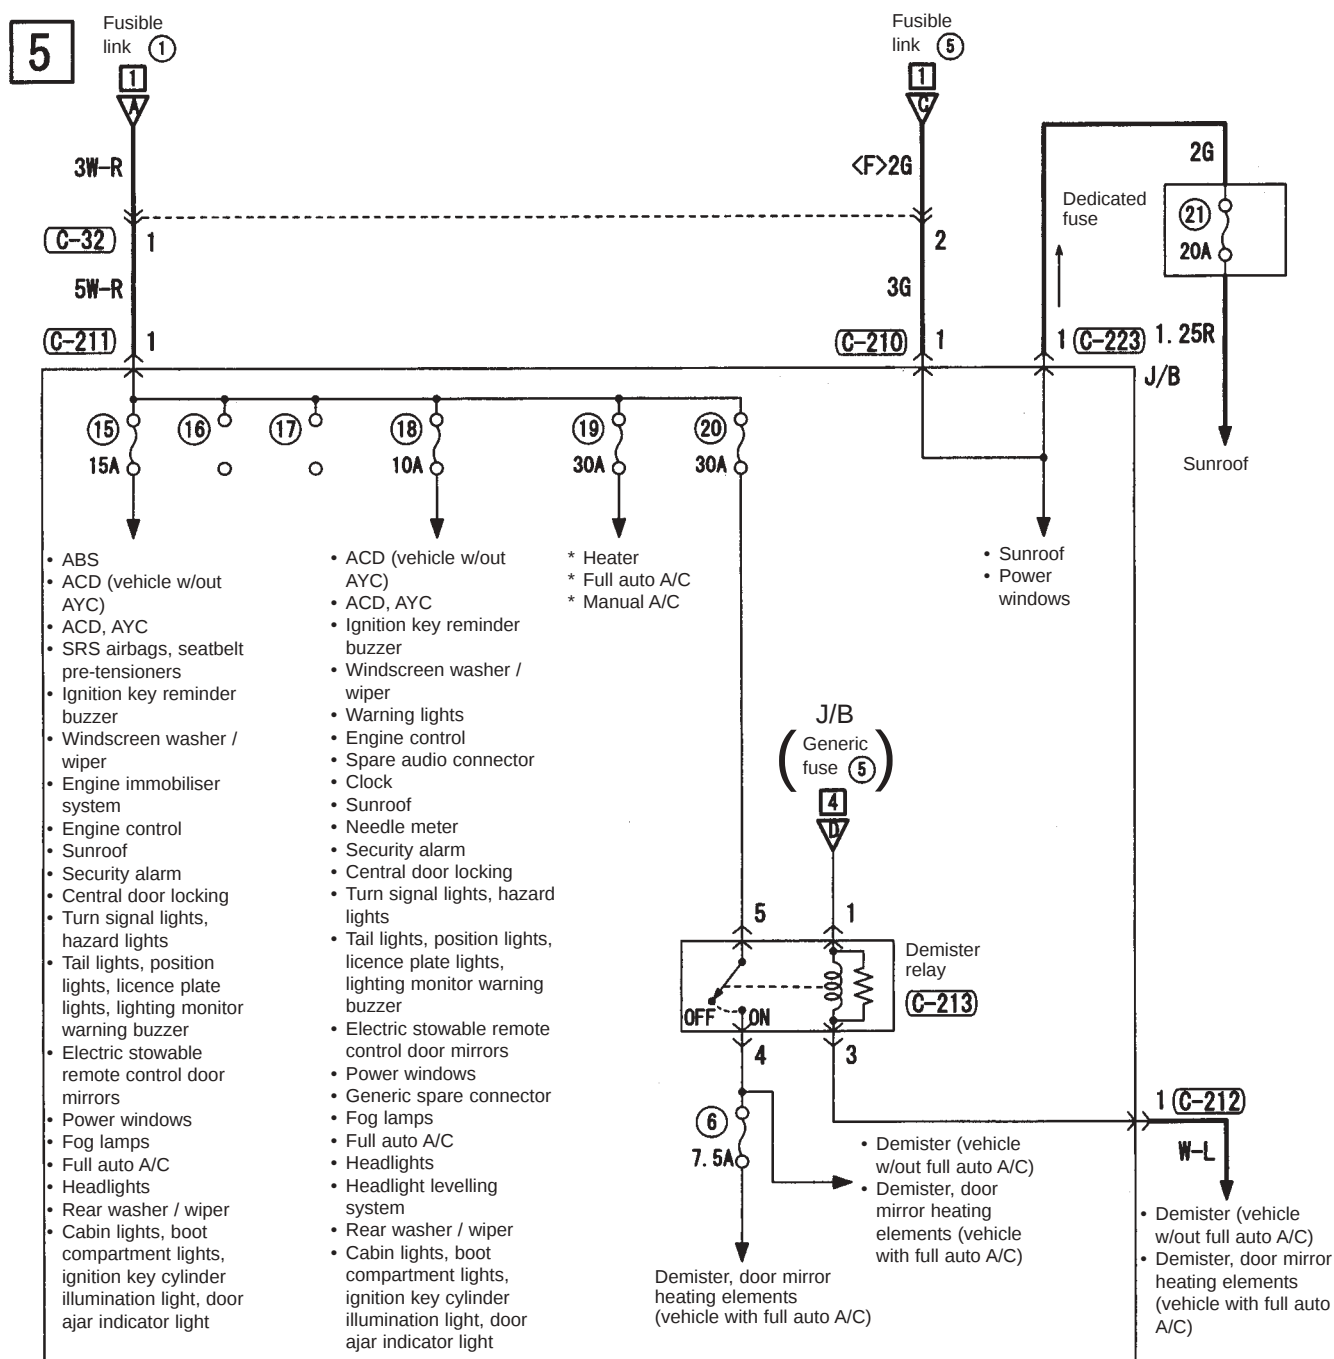


1

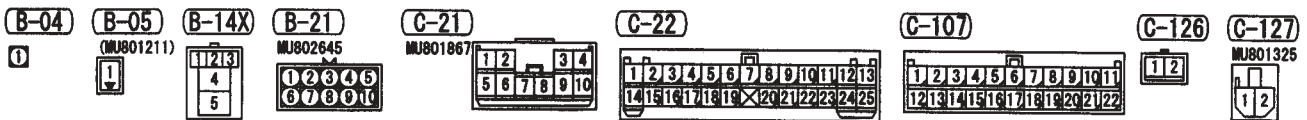

IGNITION

M3030000601073

1

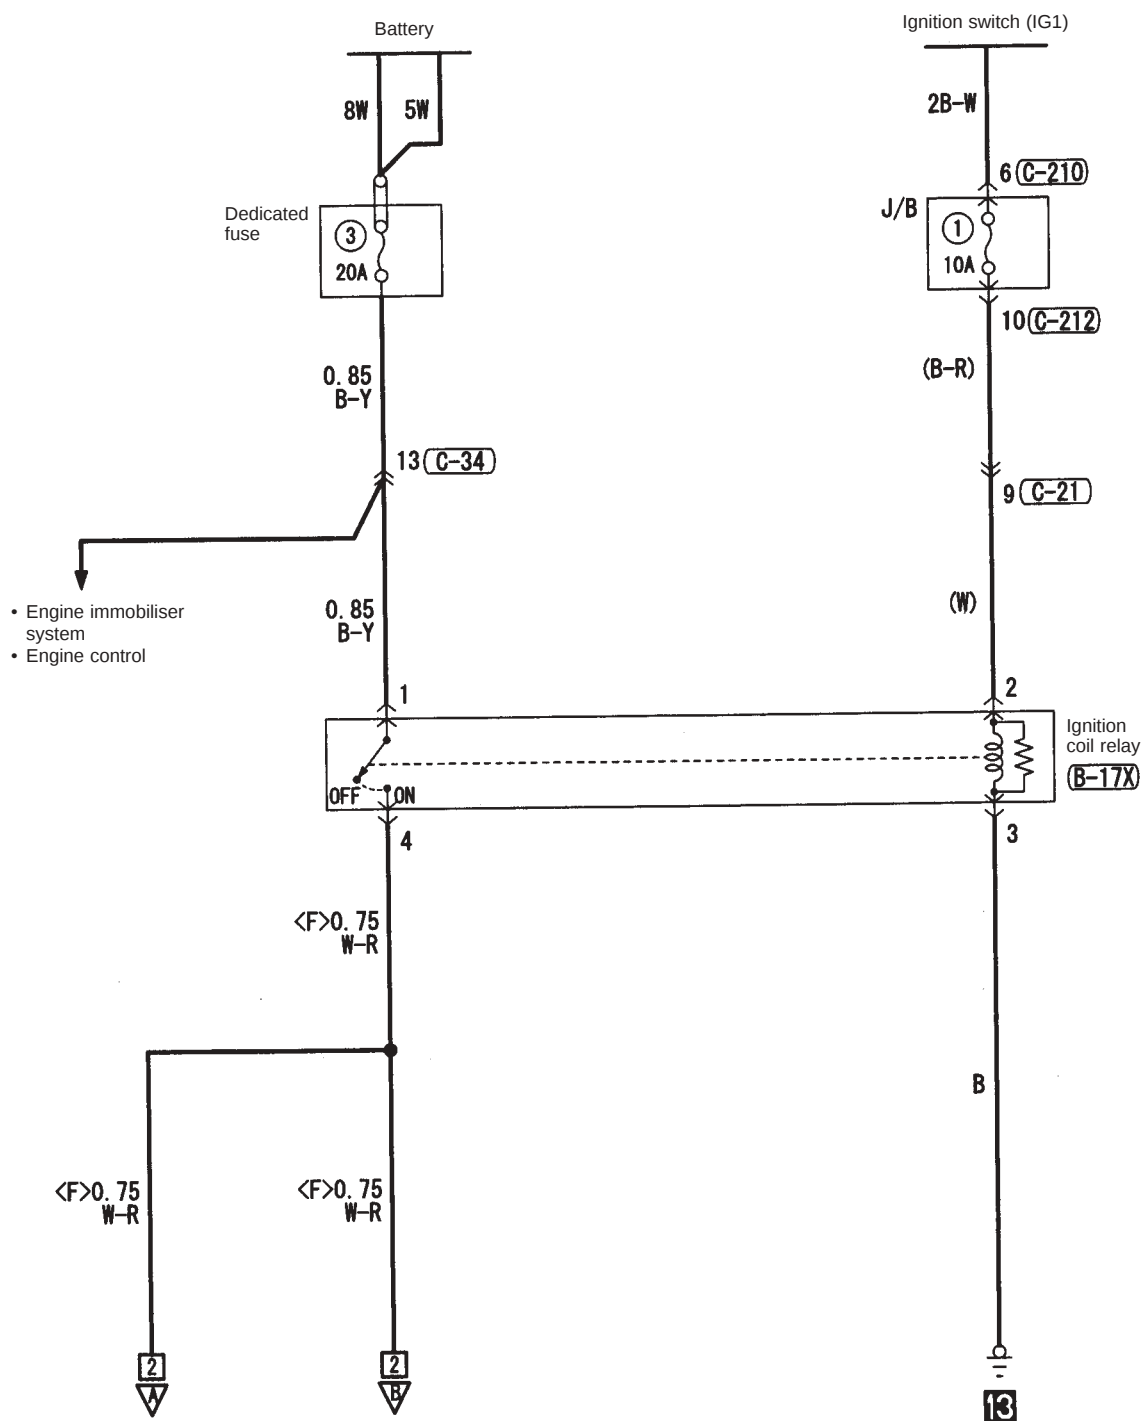

B-13X

B-17X

B-119

B-123

C-21


C-23

C-34

1





2

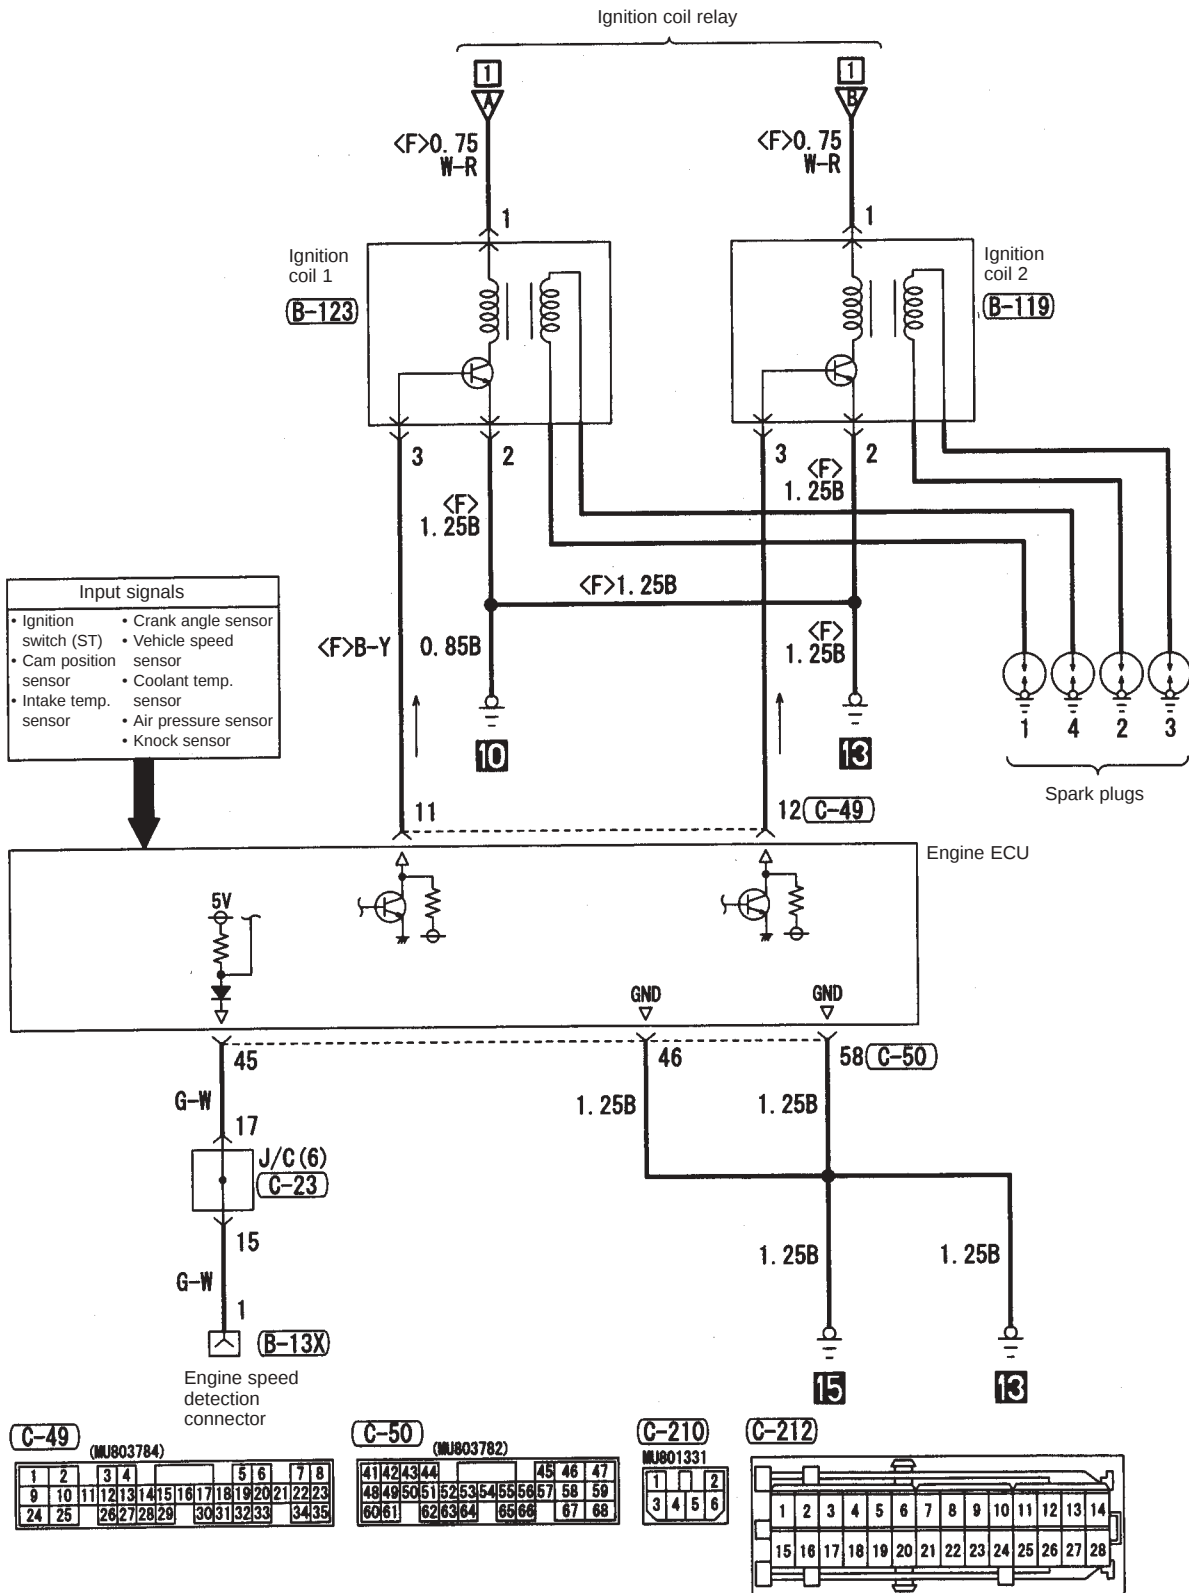

CHARGING

M3030000700817

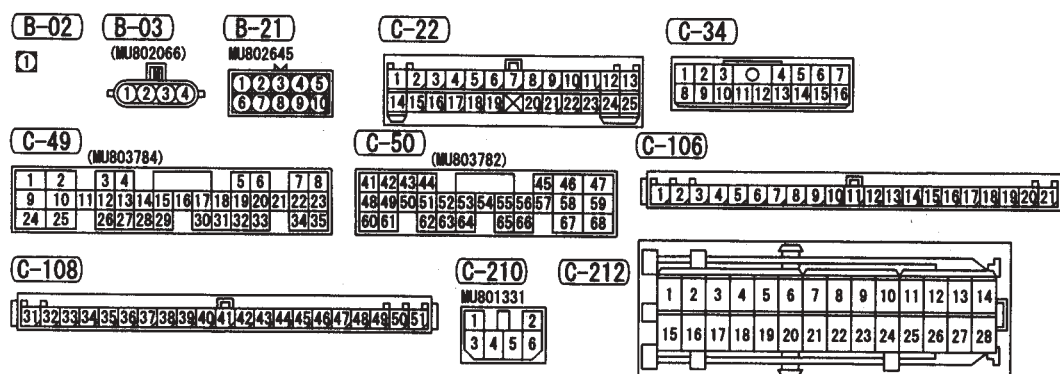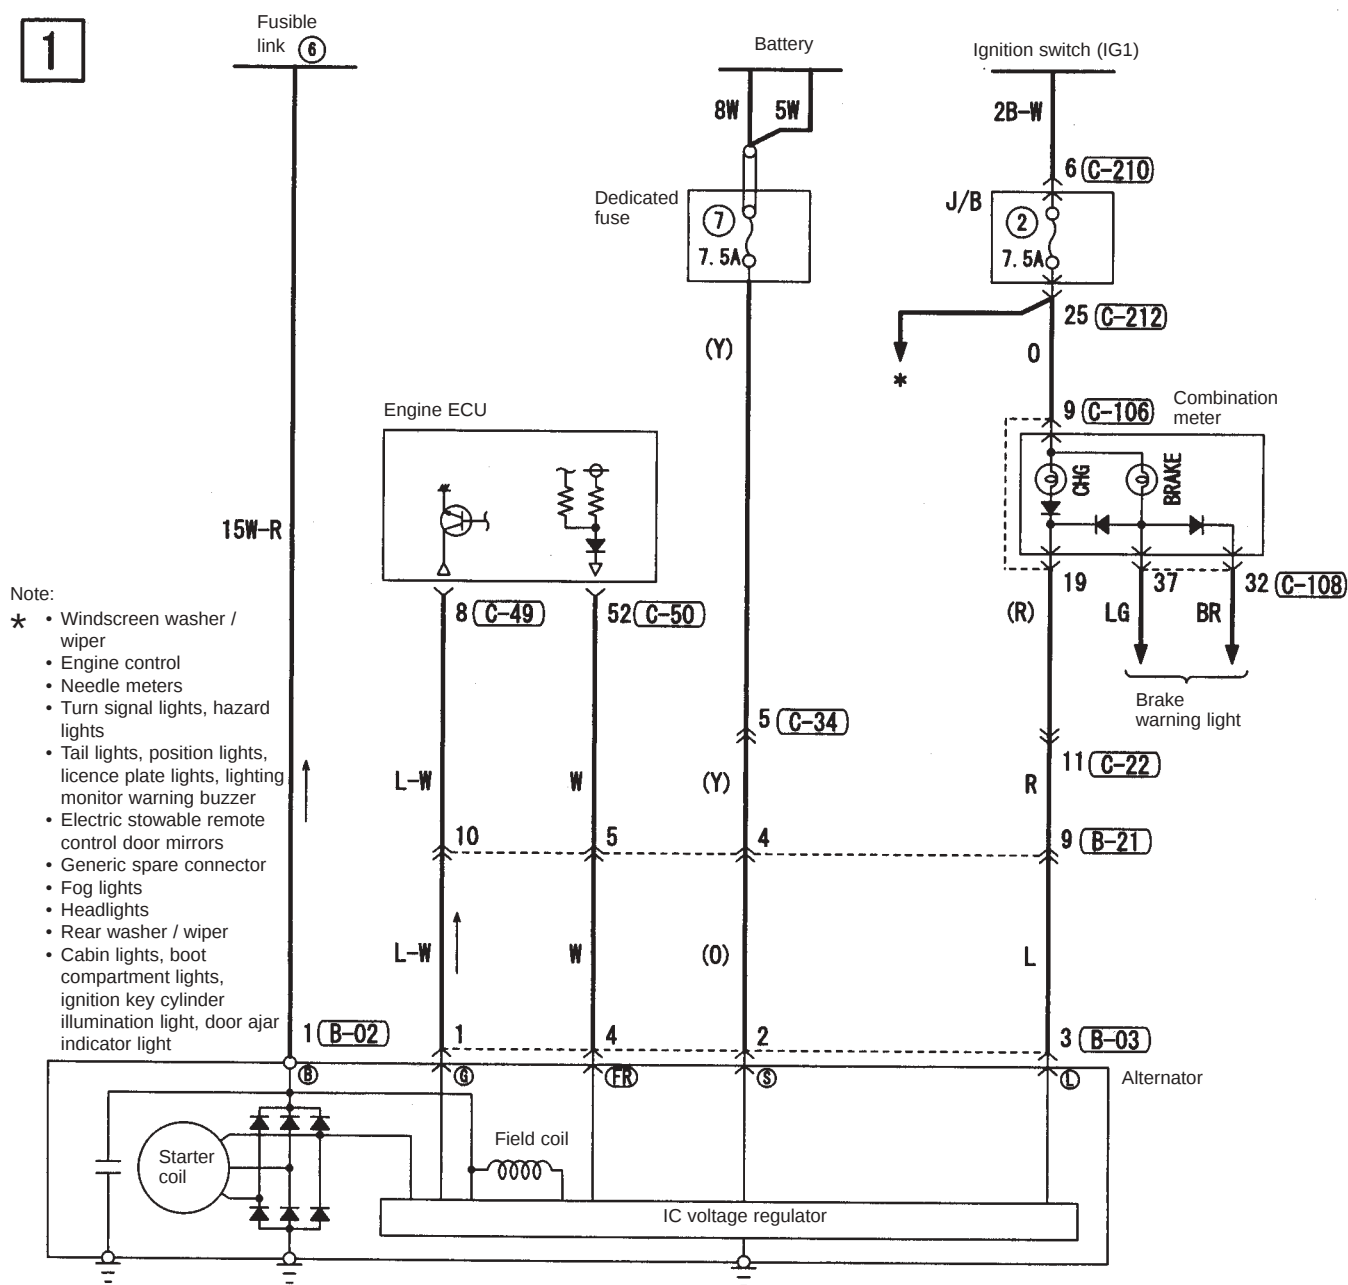


H5J04J06AA

<Notes>


ENGINE CONTROL SYSTEM

M3030000802036

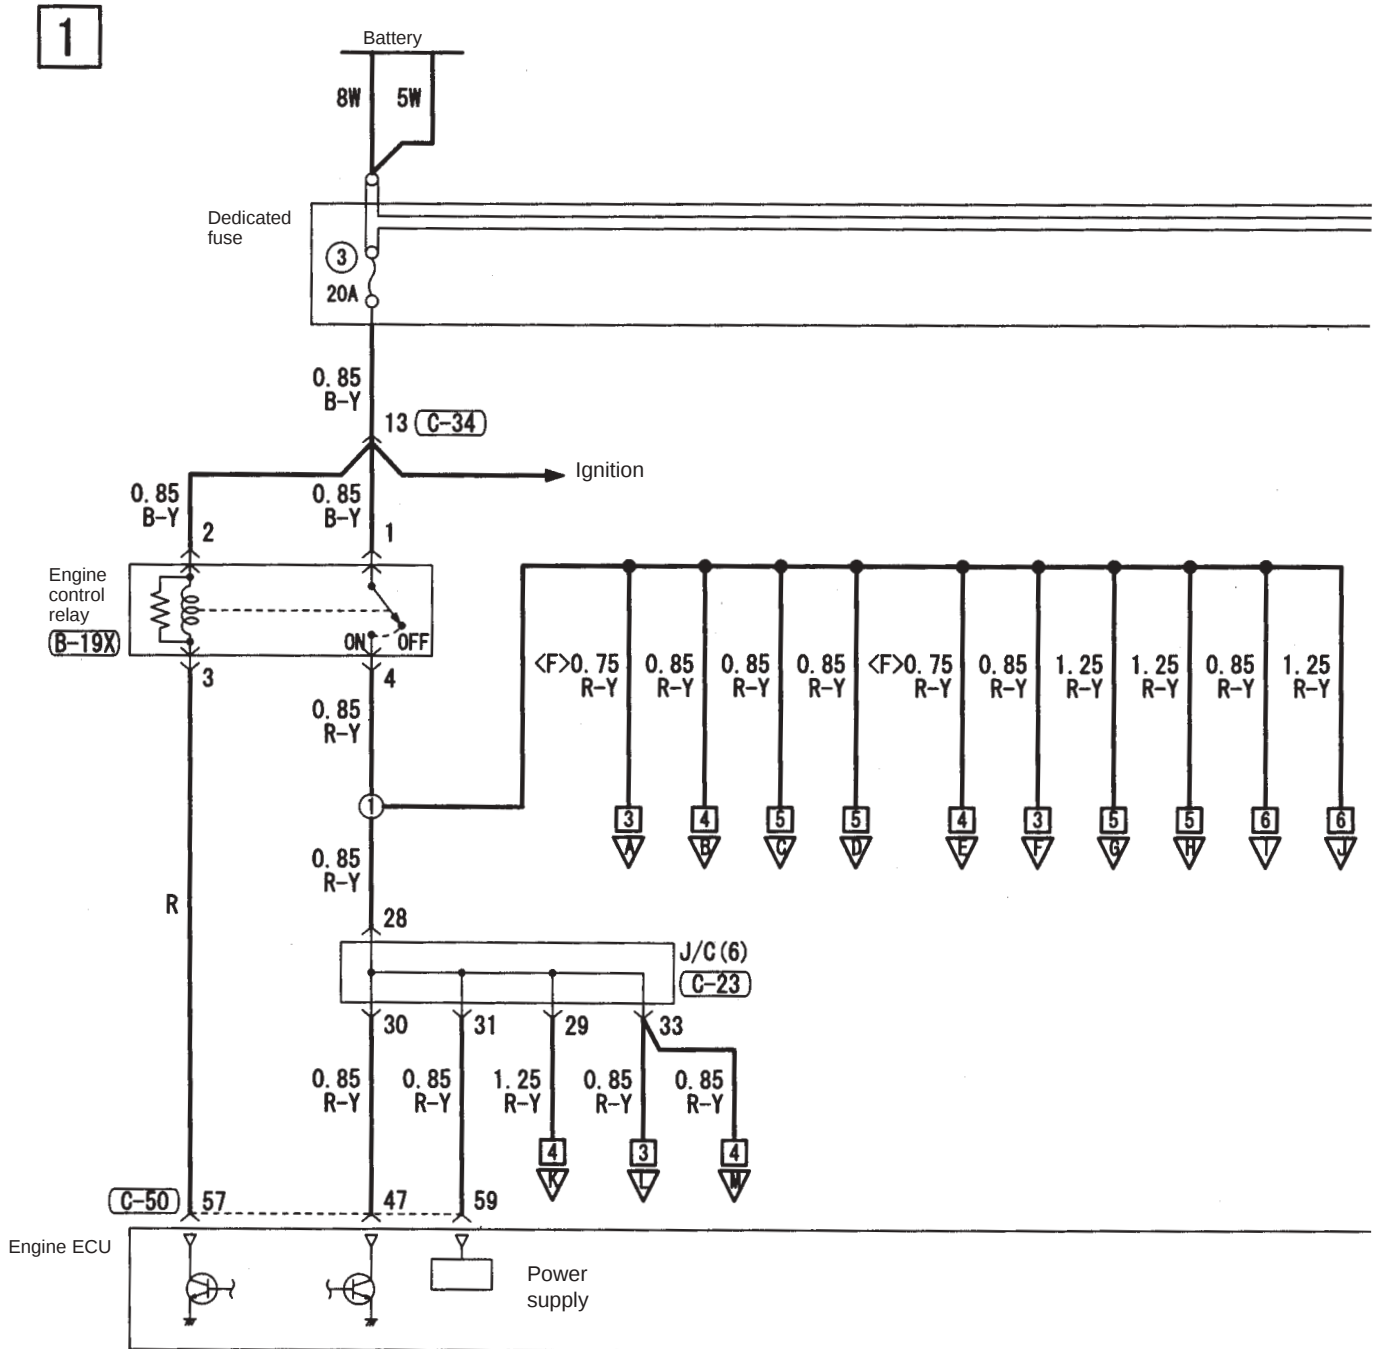

H5J05J02AA

2

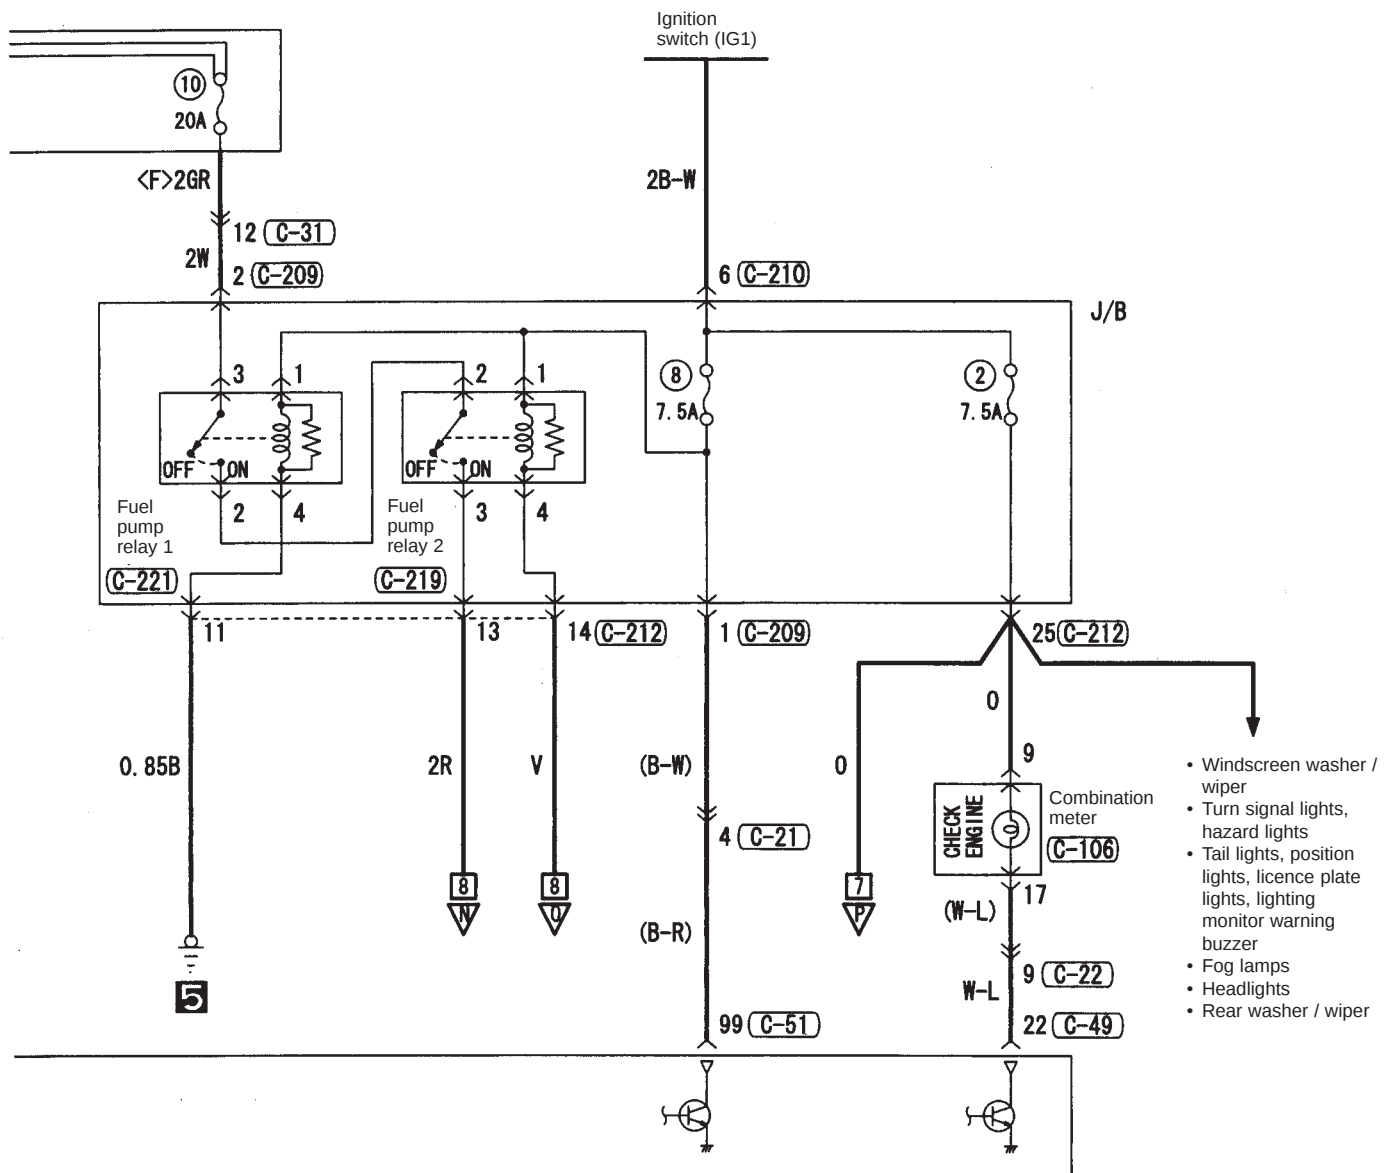

C-49

(MU803784)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

C-50

(MU803782)

41	42	43	44	45	46	47	
48	49	50	51	52	53	54	55
56	57	58	59	60	61	62	63
64	65	66	67	68			

C-51

(MU803783)


71	72	73	74	75	76	77	
78	79	80	81	82	83	84	85
86	87	88	89	90	91	92	93
94	95	96	97	98	99	100	

C-221

1	2
3	4


Engine control system (continued)

3

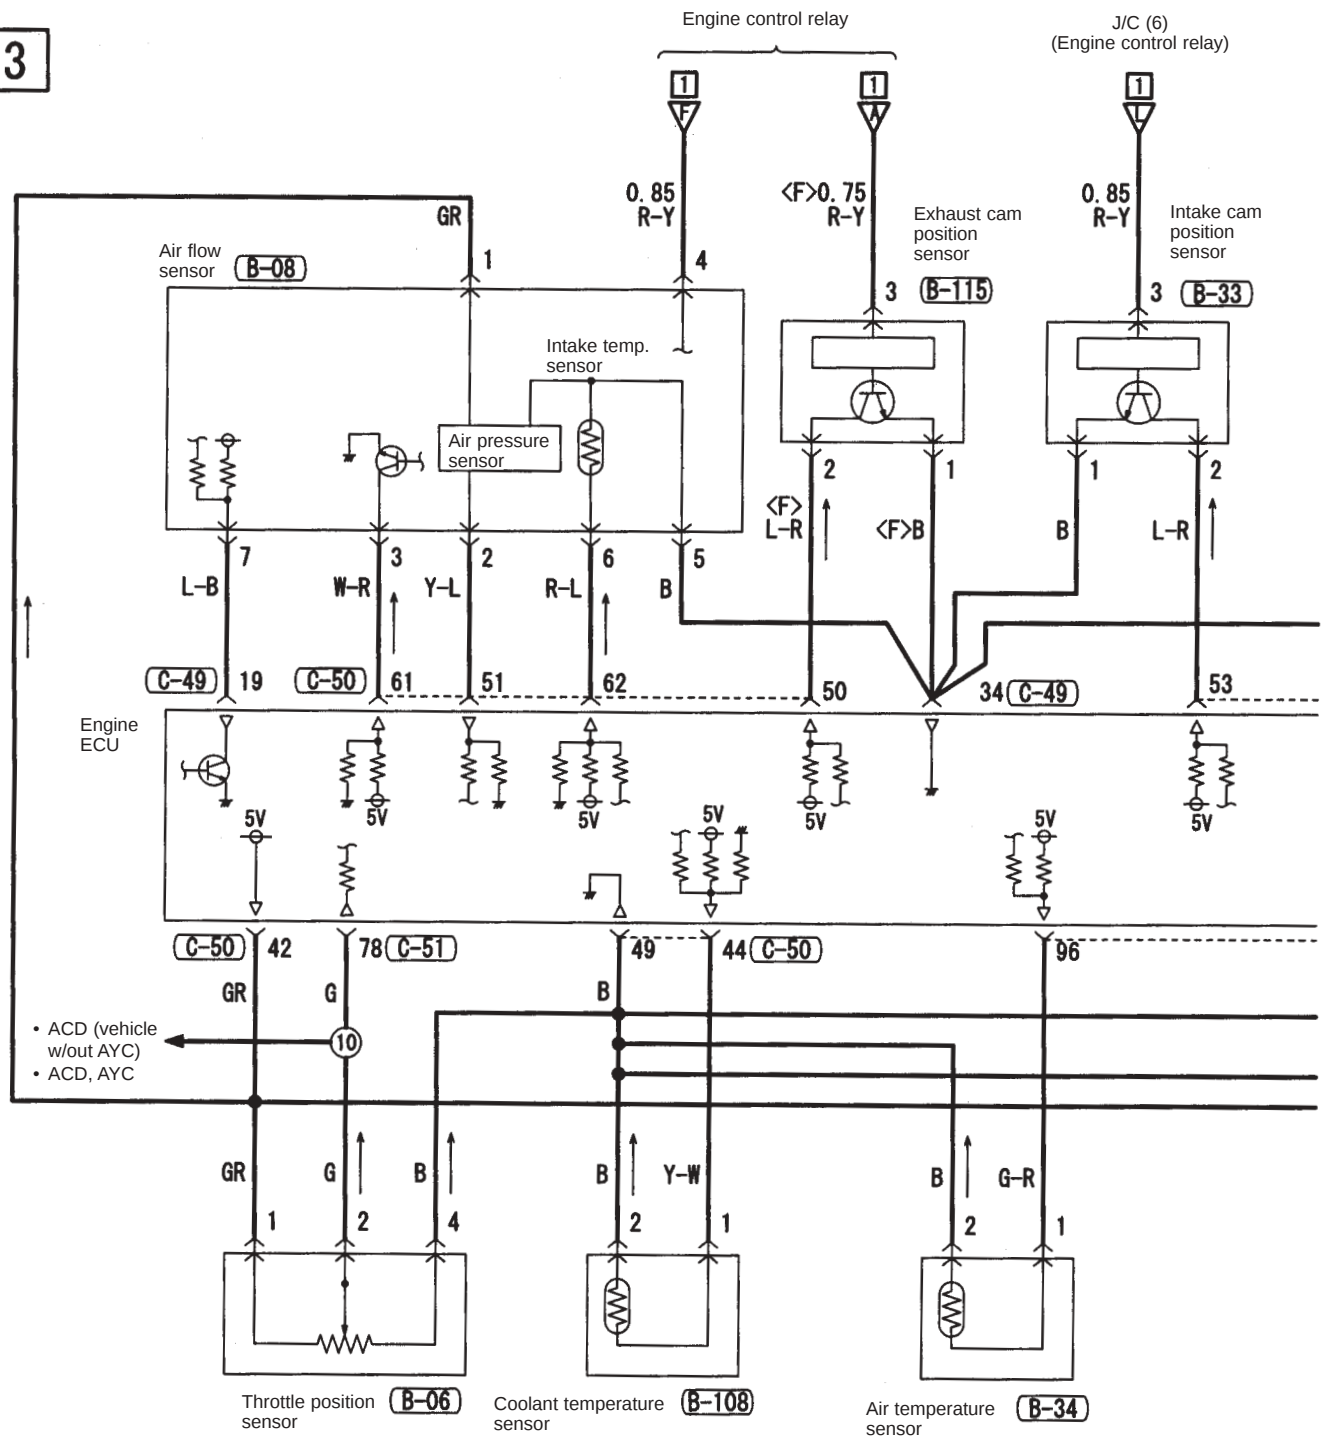

B-06 (MUJ802724)	B-08 (MUJ802552)	B-25 MUJ802605	B-26 (MUJ802722)	B-27 (MUJ802722)	B-28 (MUJ802722)	B-29 (MUJ802722)	B-33 MUJ802337	B-34	B-106 MUJ802661	B-108 (MUJ802406)	B-115 MUJ802337	B-122 MUJ802603
1234	1234567	1234	12	12	12	12	123	12	12	12	123	123

4

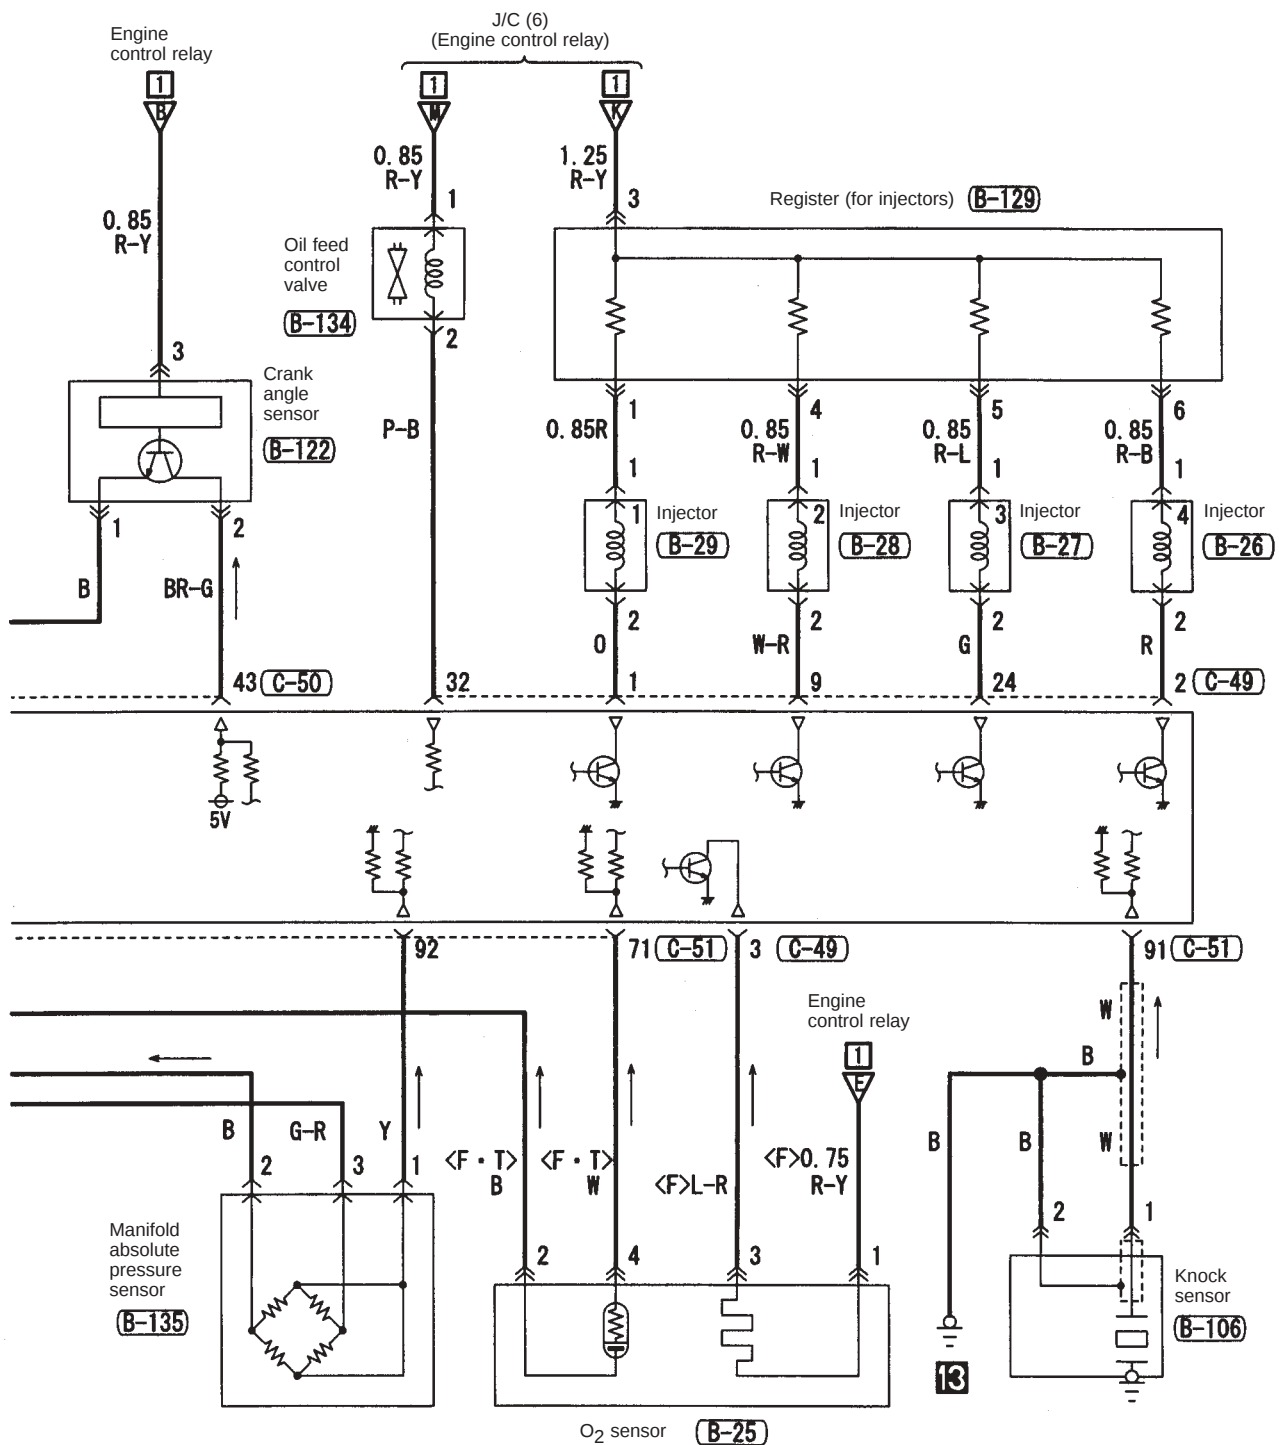

(B-129)

MU802607

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68

(B-134)

MU802779

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68

(B-135)

(MU802723)

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68

(C-49)

(MU803784)

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68

(C-50)

(MU803782)


1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68

(C-51)

(MU803783)

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68

Engine control system (continued)

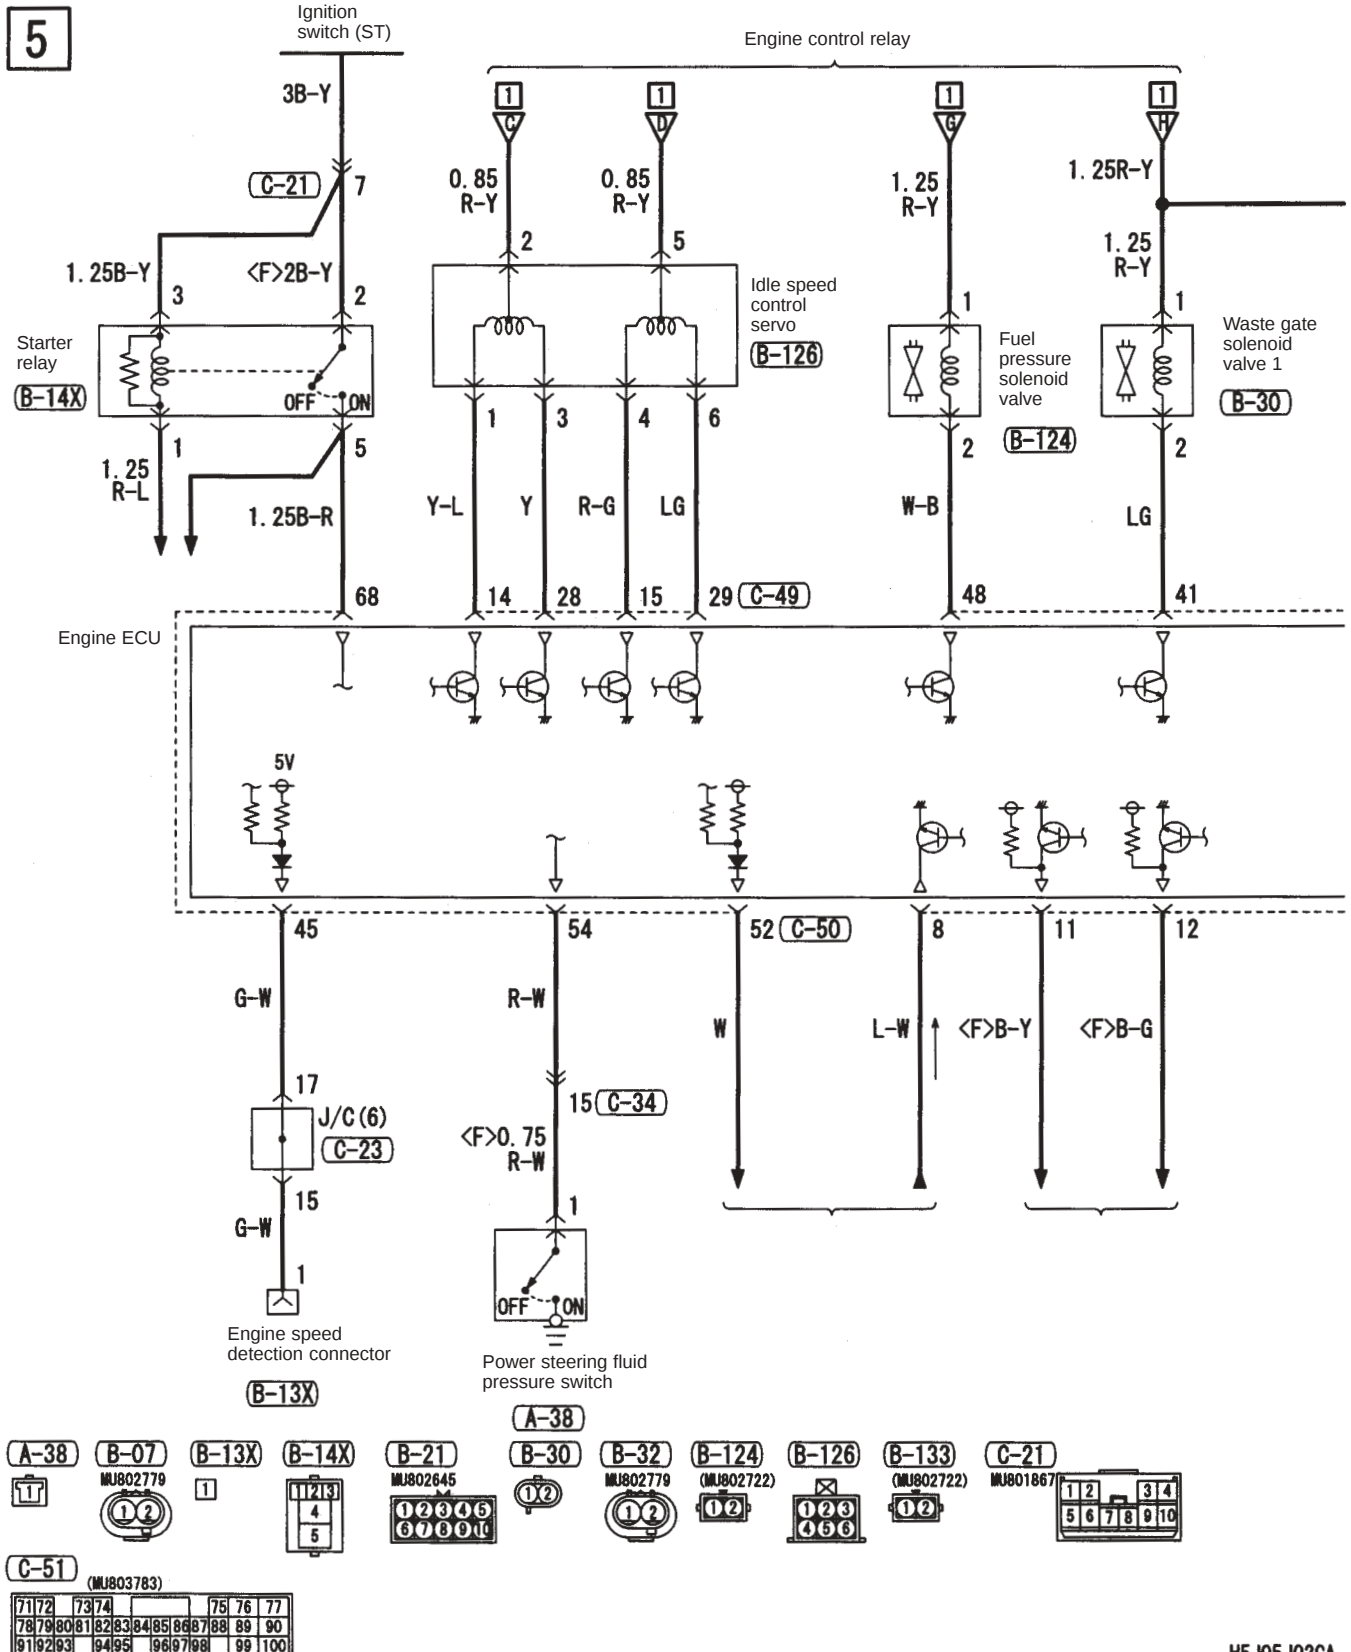



1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33



1	2	3	○	4	5	6	7
8	9	10	11	12	13	14	15




1	2		3	4				5	6		7	8		
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
24	25		26	27	28	29		30	31	32	33		34	35



41	42	43	44				45	46	47
48	49	50	51	52	53	54	55	56	57
58	59		62	63	64		65	66	67
68									


Engine control system (continued)

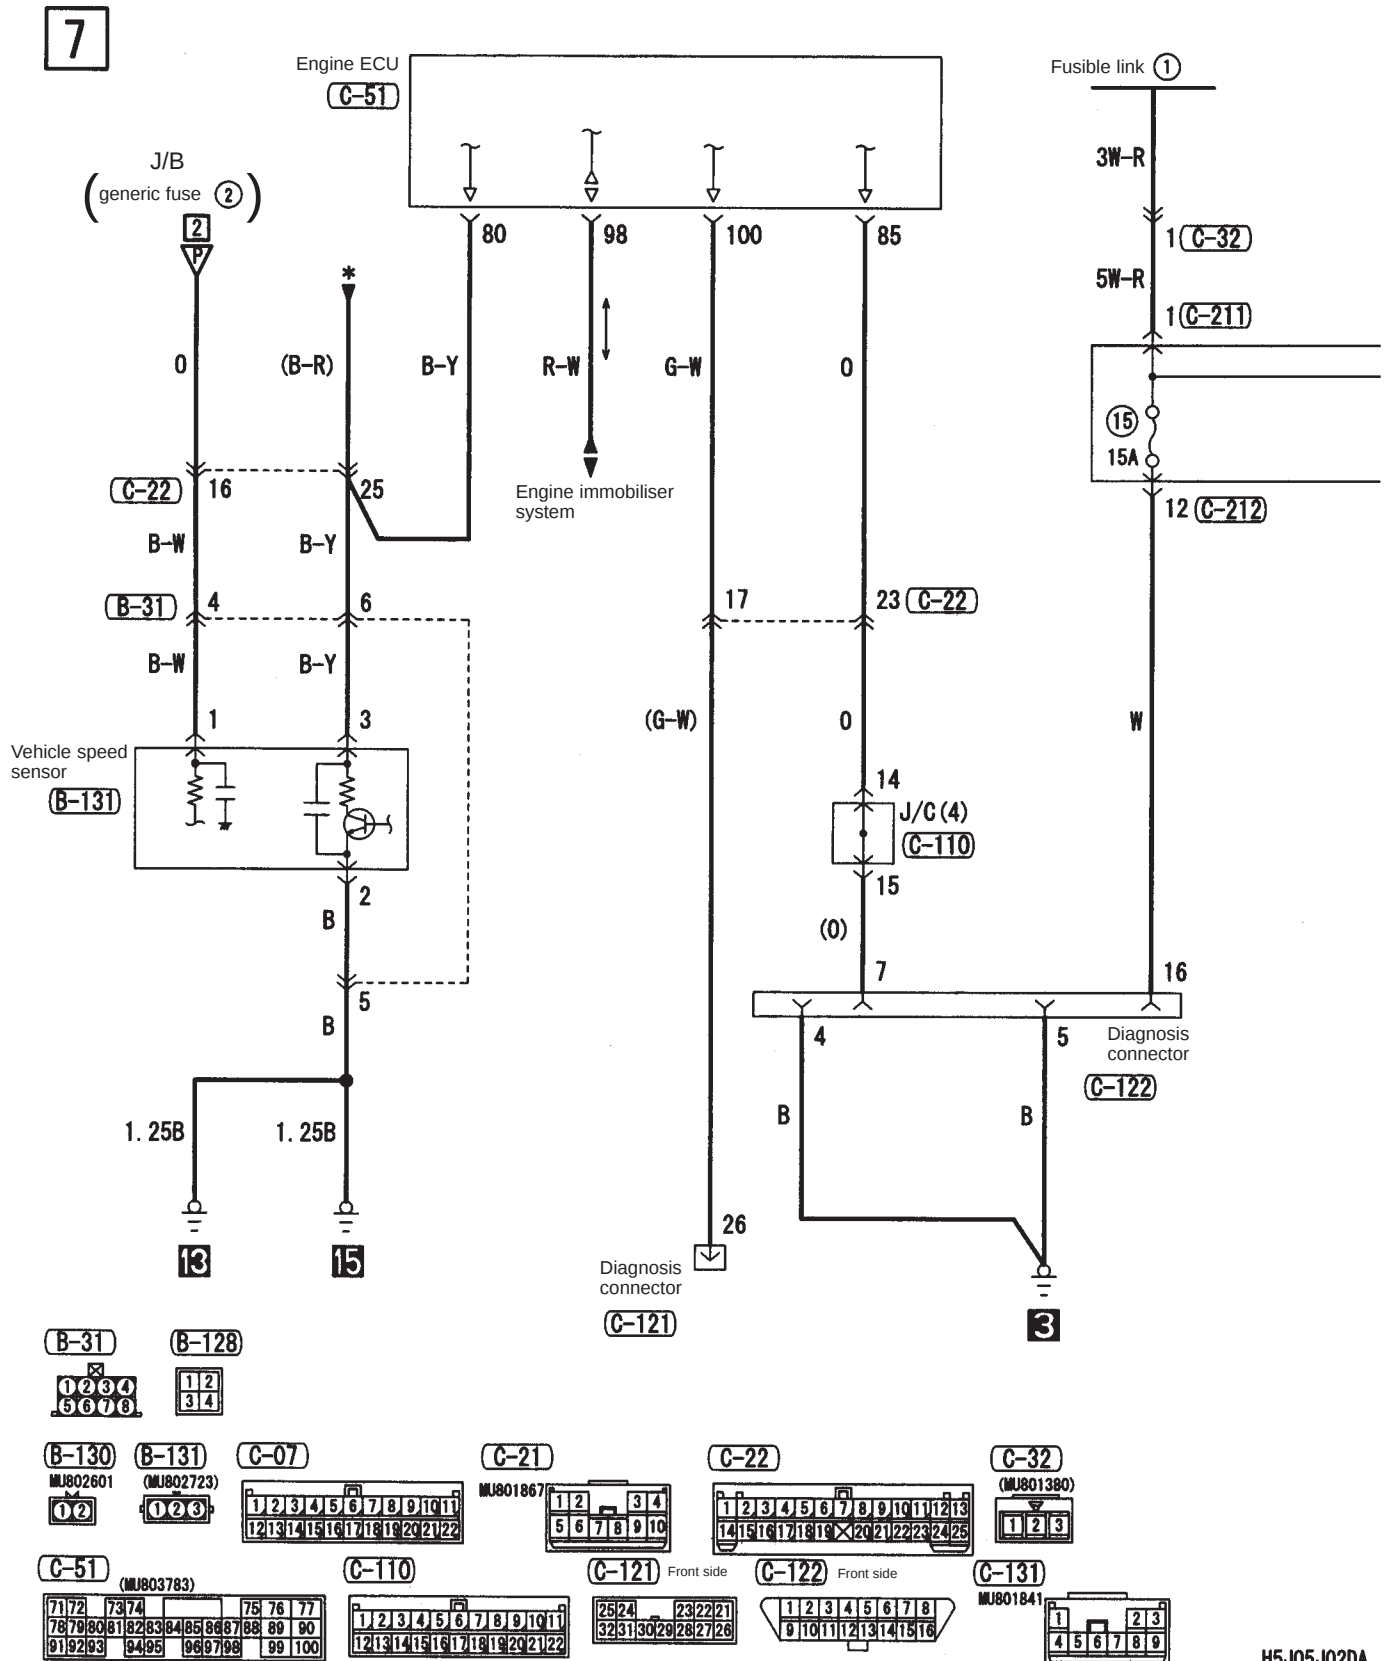

Note:

- ★ • Windscreen washer / wiper
- Needle meters
- Electric stowable remote control door mirrors
- Generic spare connector
- Cabin lights, boot compartment lights, ignition key cylinder illumination light, door ajar indicator light

8

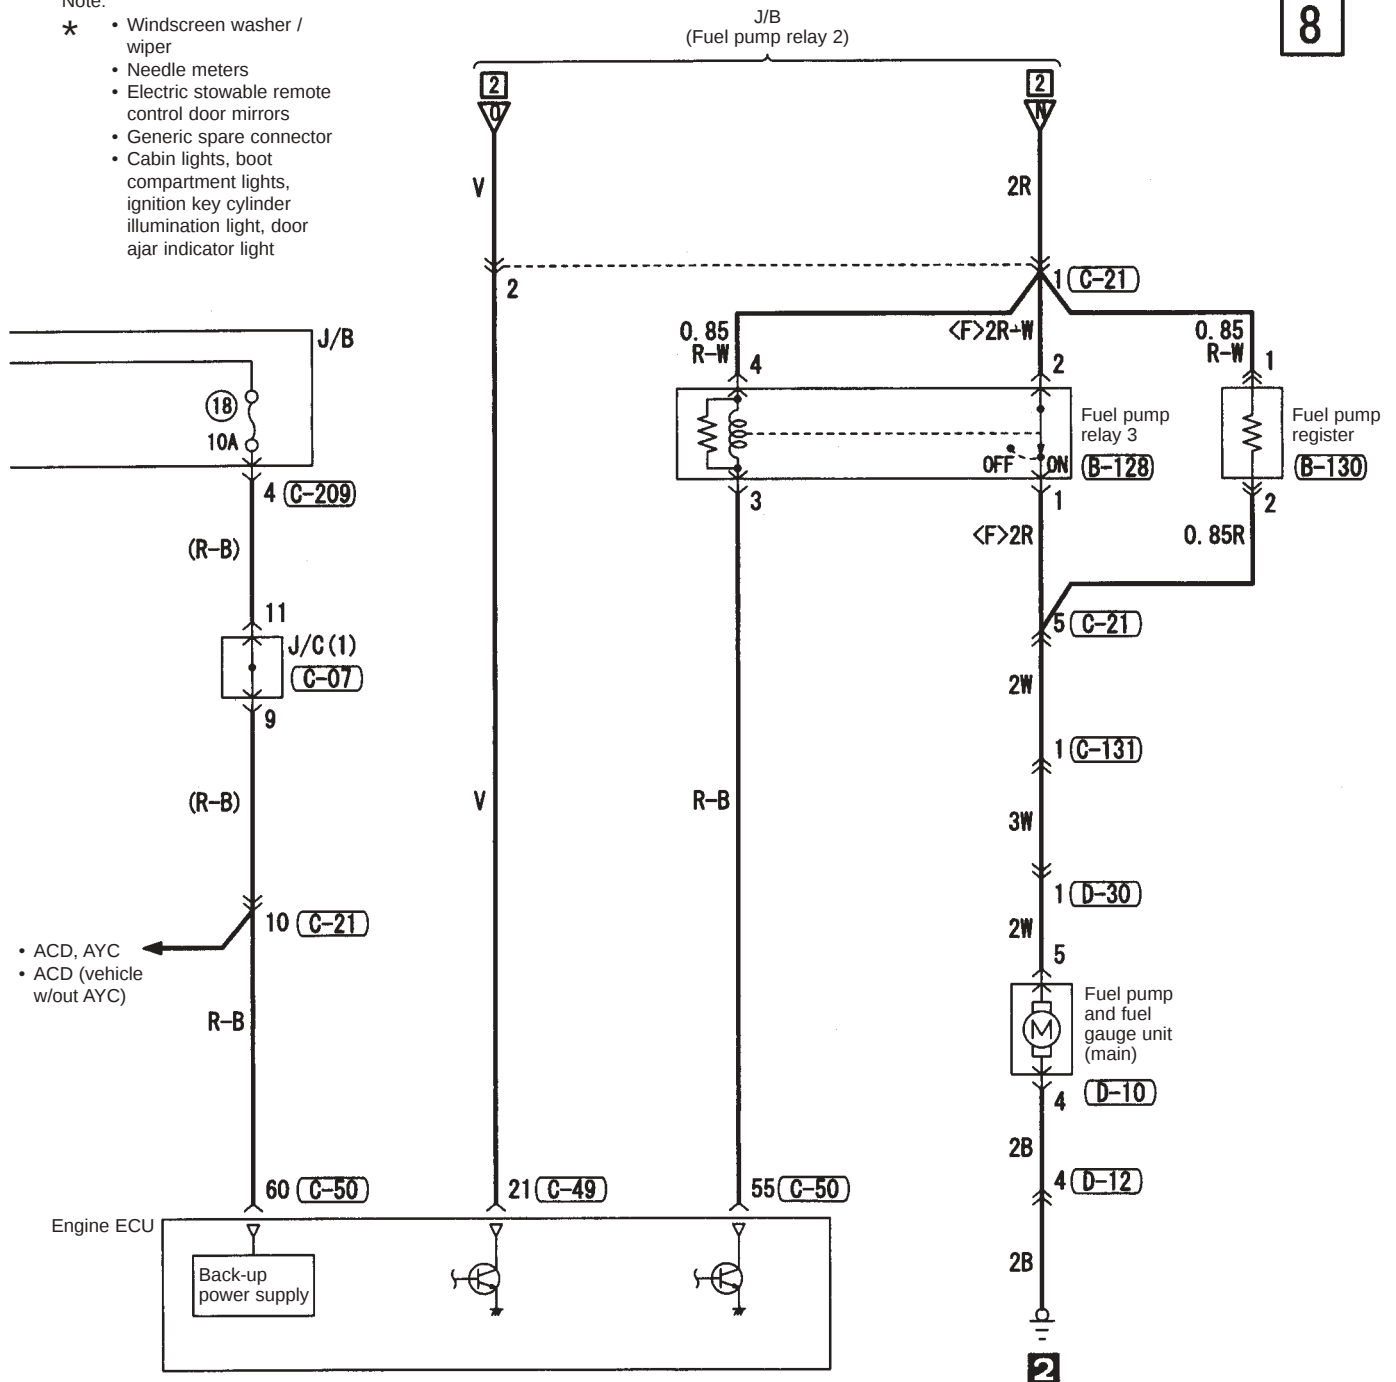

C-49

(MU803784)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

C-209

MU801857


1	2	3	4	5	6
7	8	9	10	11	12
13	14				

C-211

MU801403

1

C-212

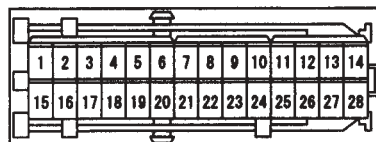

C-50

(MU803782)

41	42	43	44	45	46	47
48	49	50	51	52	53	54
55	56	57	58	59	60	61
62	63	64	65	66	67	68

D-10

(MU802058)

1	2	3	4	5
---	---	---	---	---

D-12

MU801839

1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---


D-30

MU801361

1


COOLING

M3030001000941

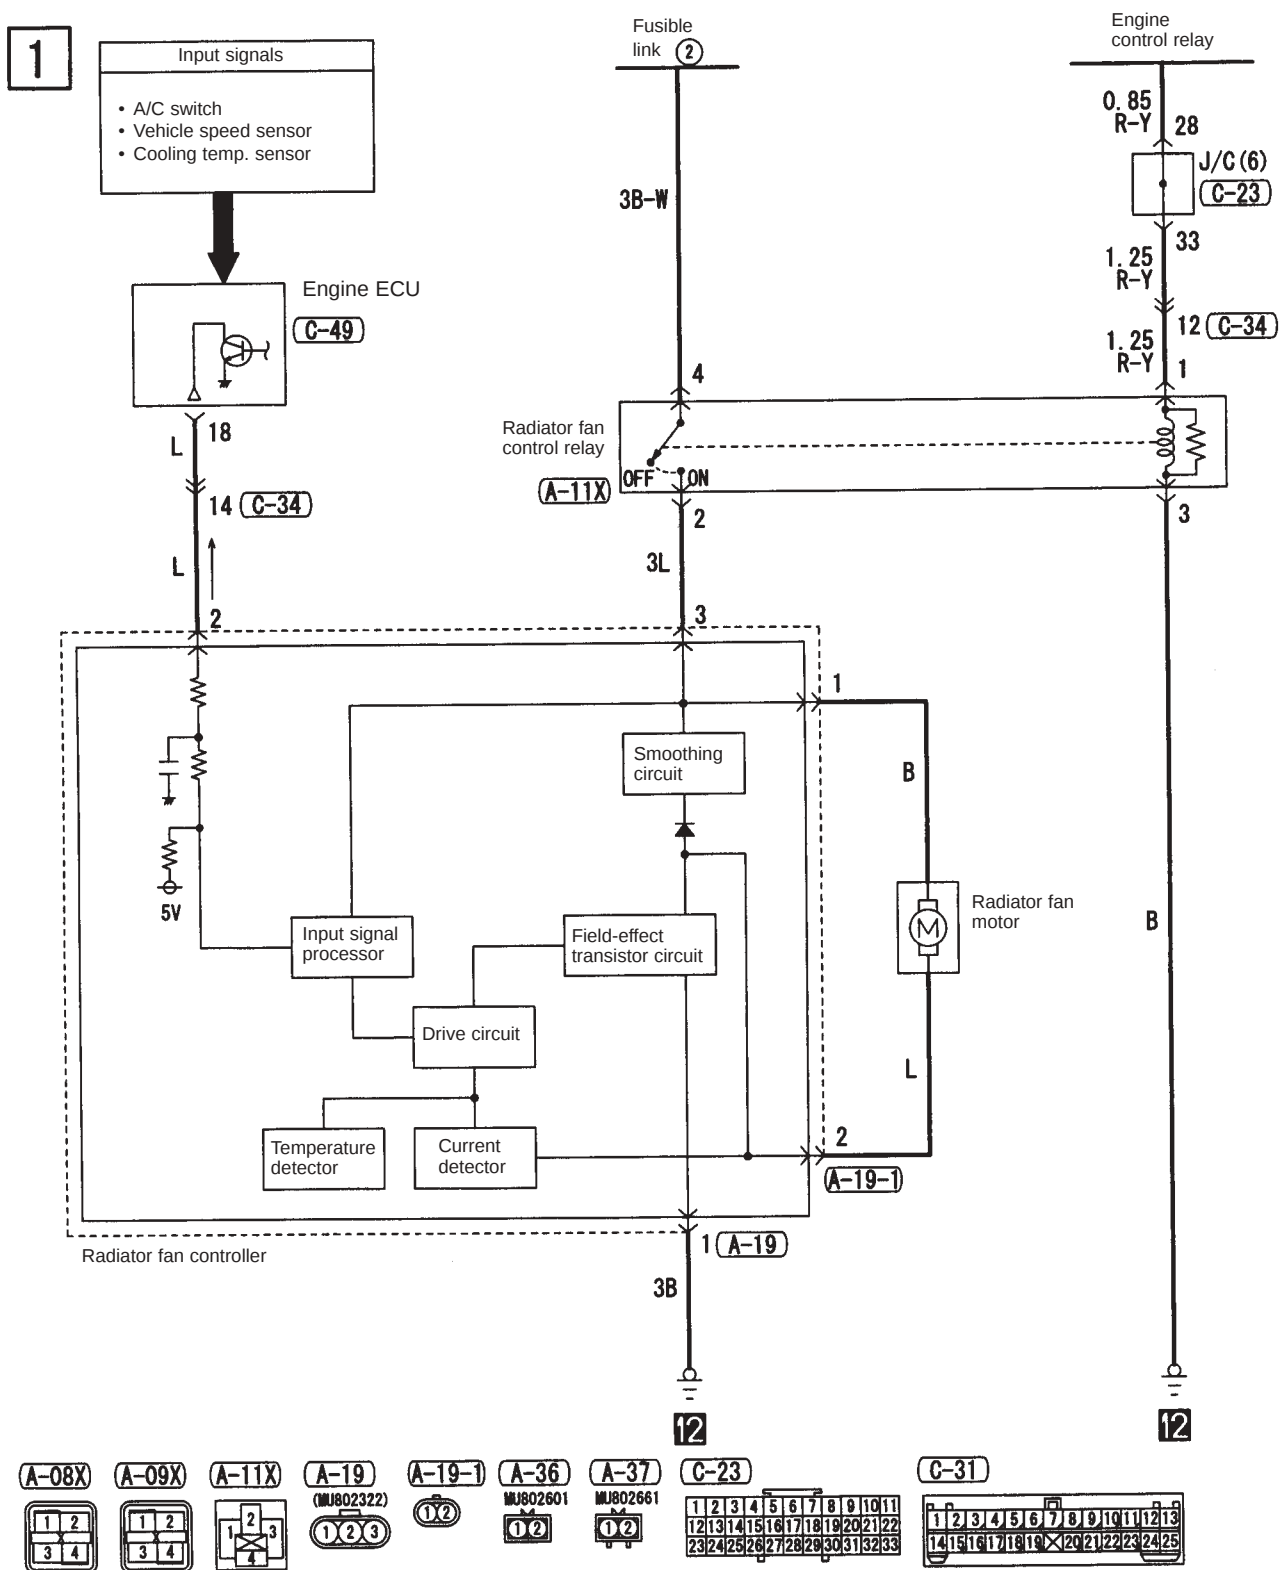

H5J06J02AA

2

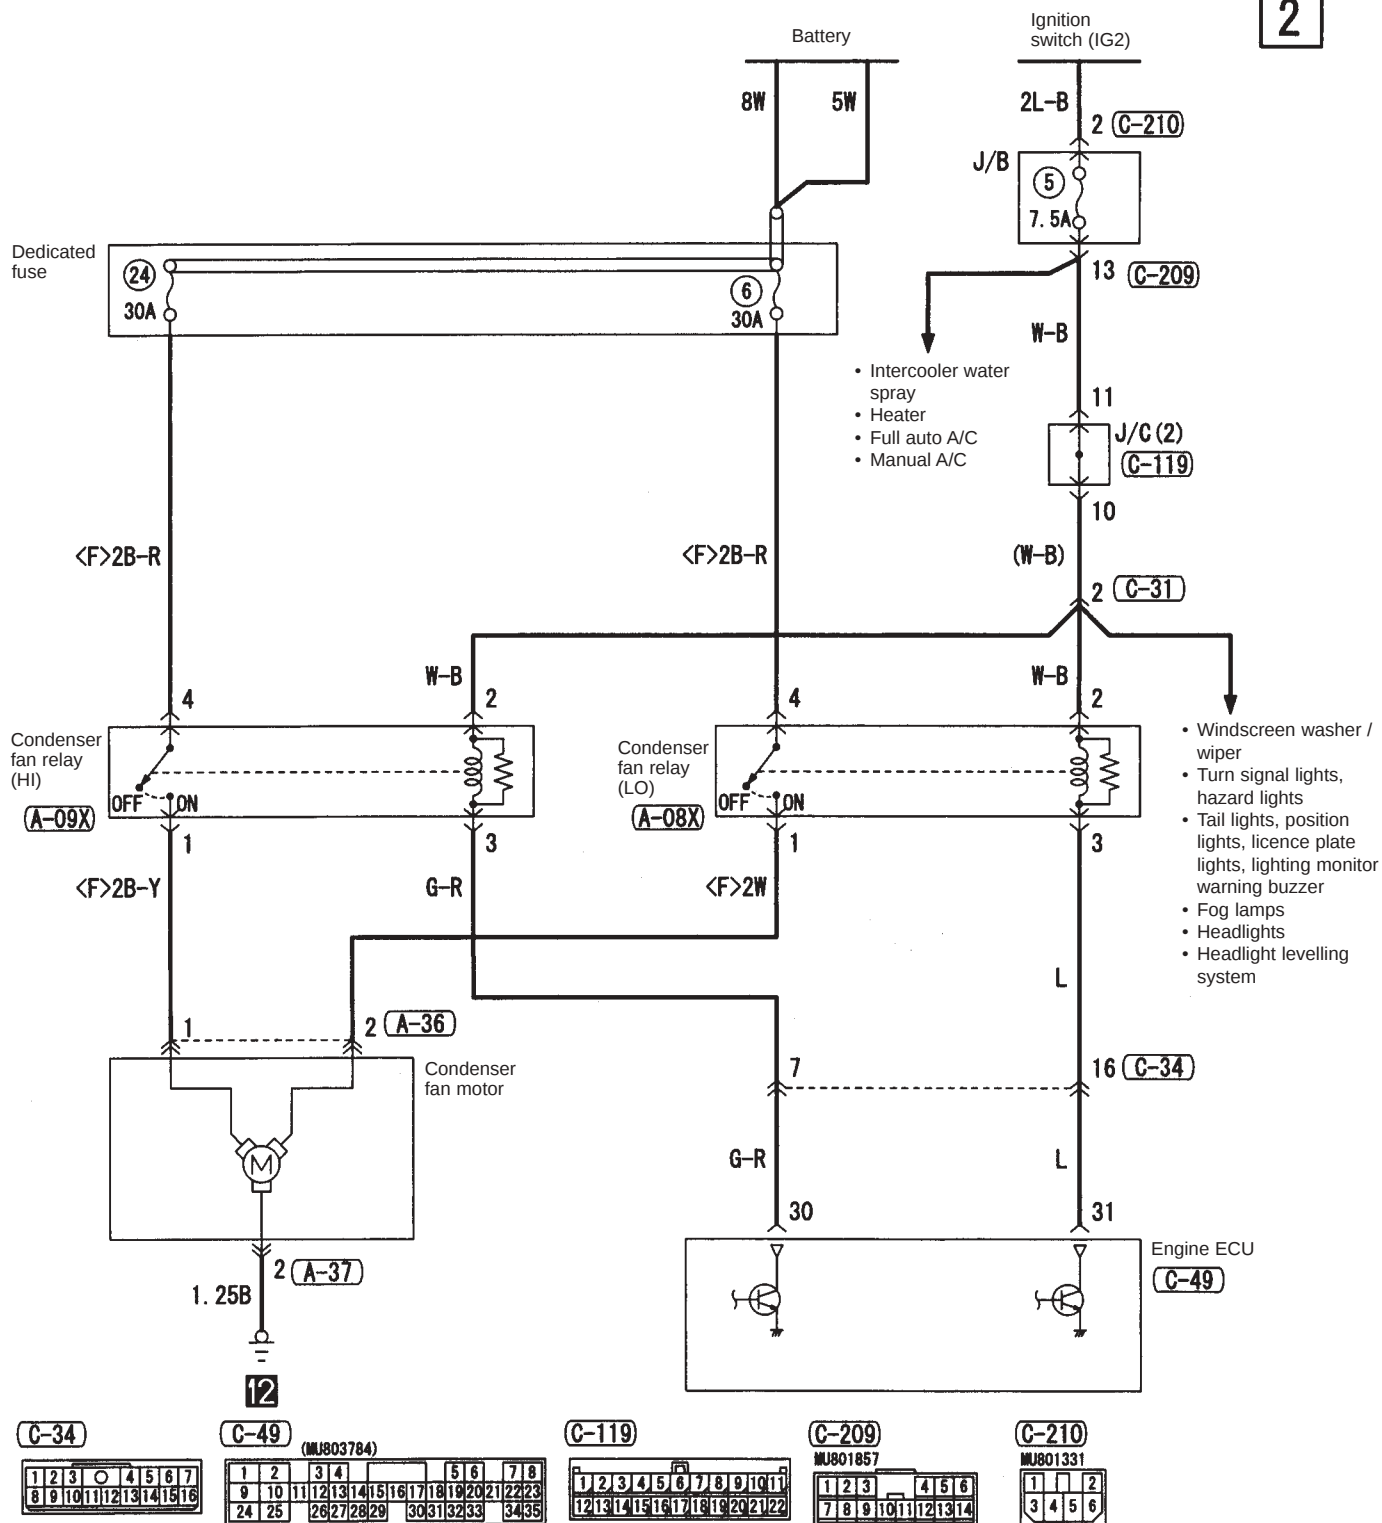


LIGHTING


Headlight <excluding discharge type>

M3030001501336

1



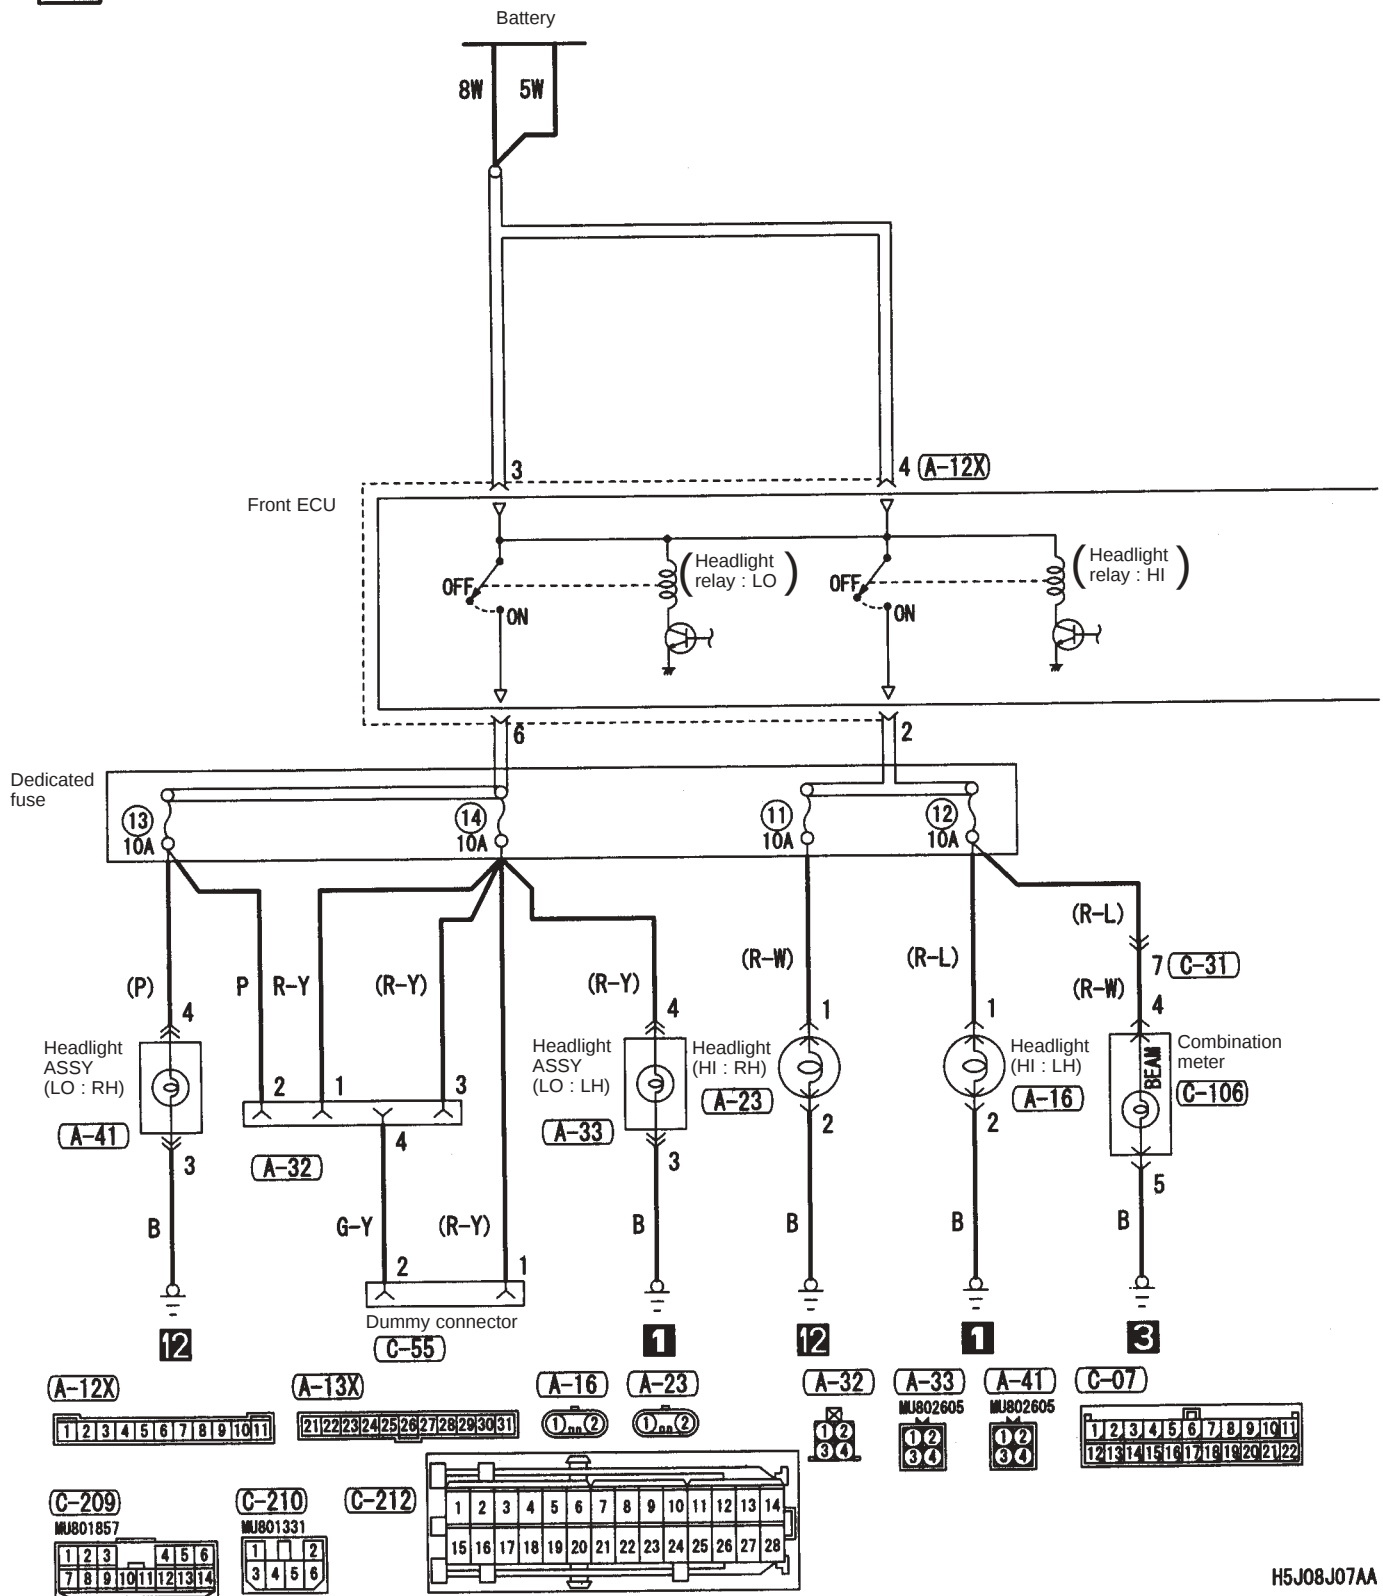


H5J08J07AA

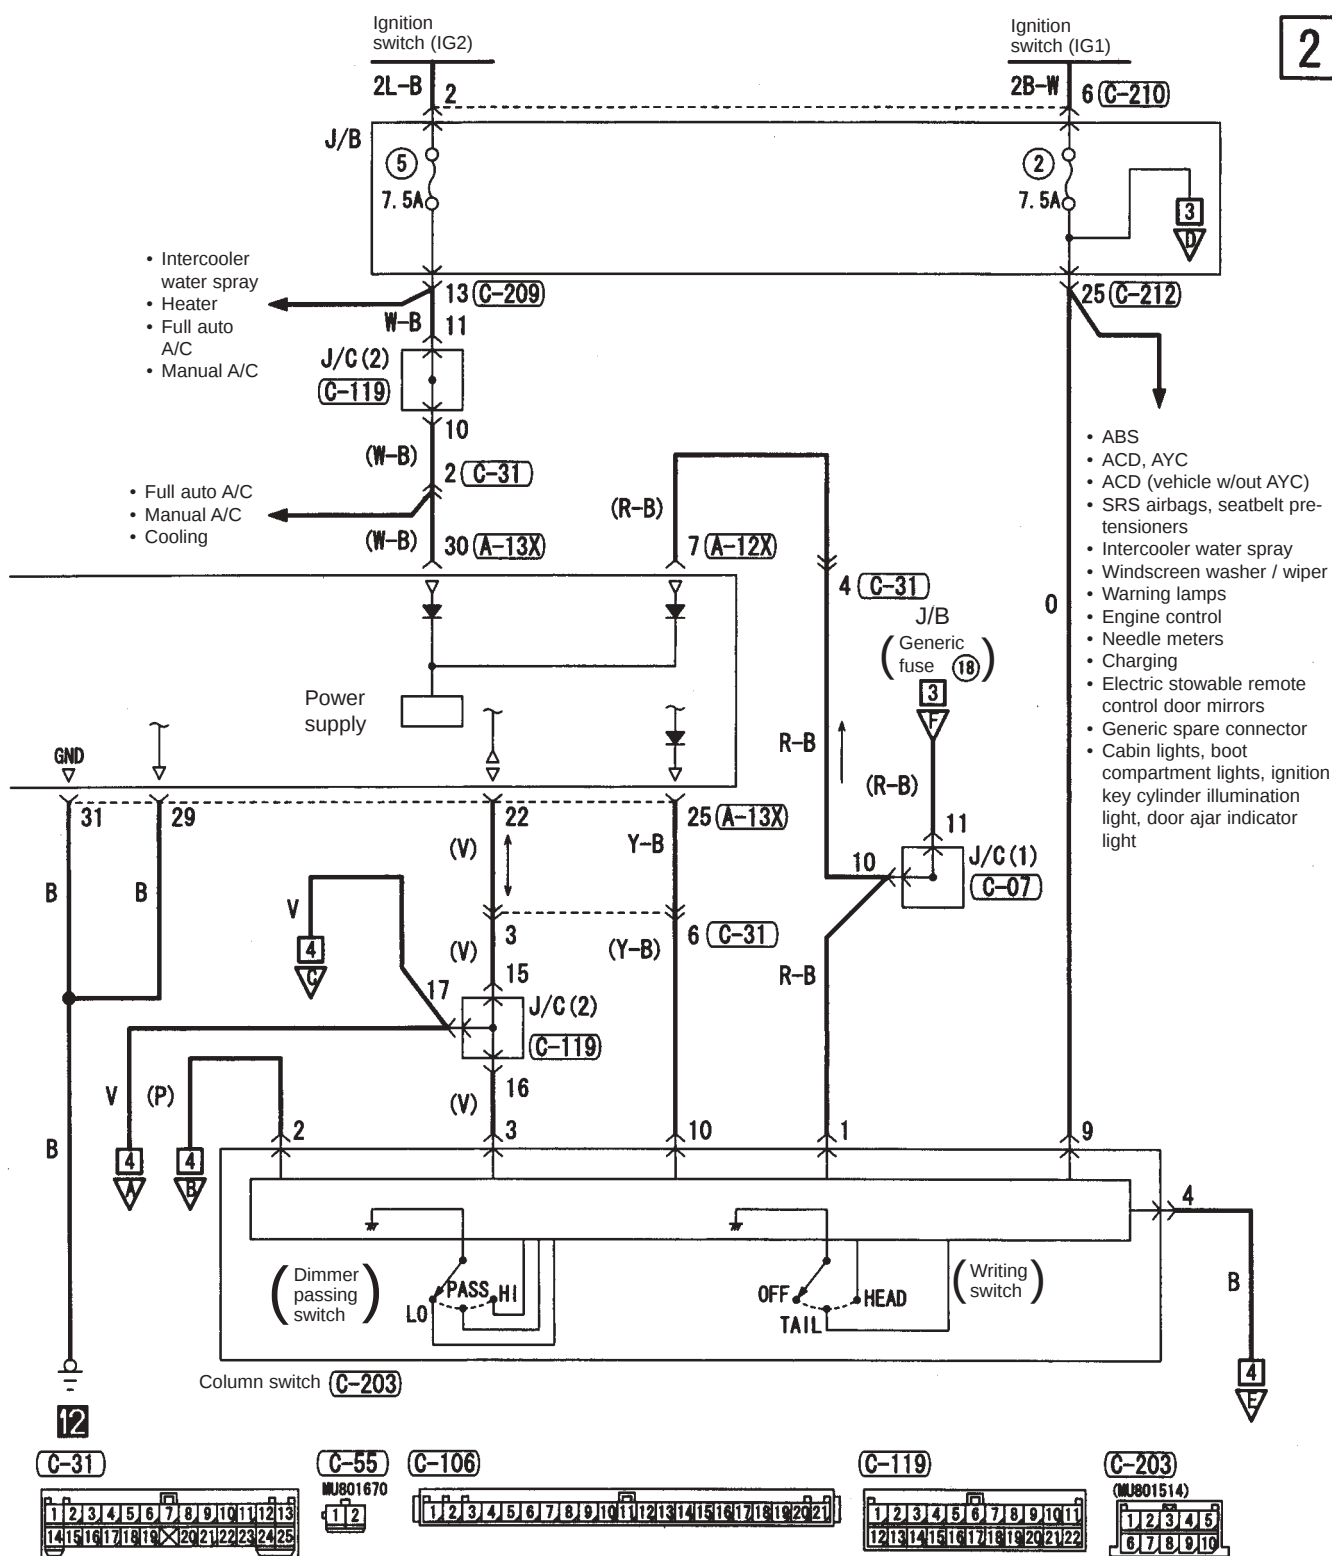

Headlight <excluding discharge type> (continued)

3

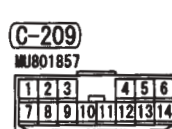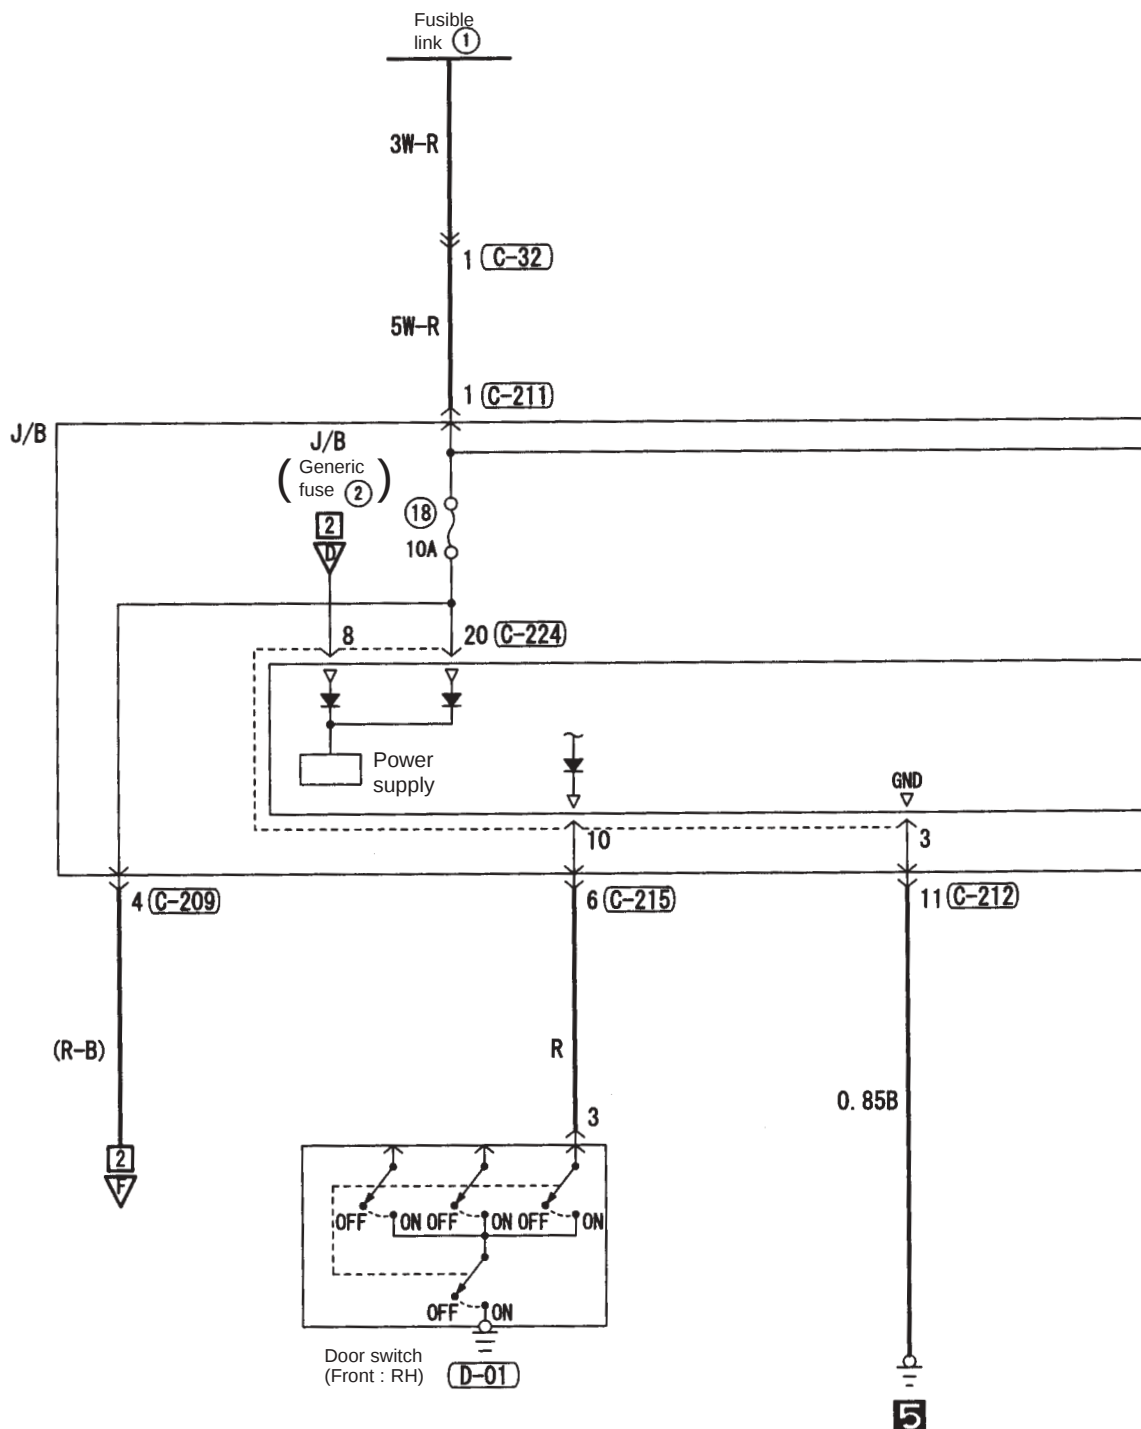




Headlight <discharge type>

M3030001501347

1


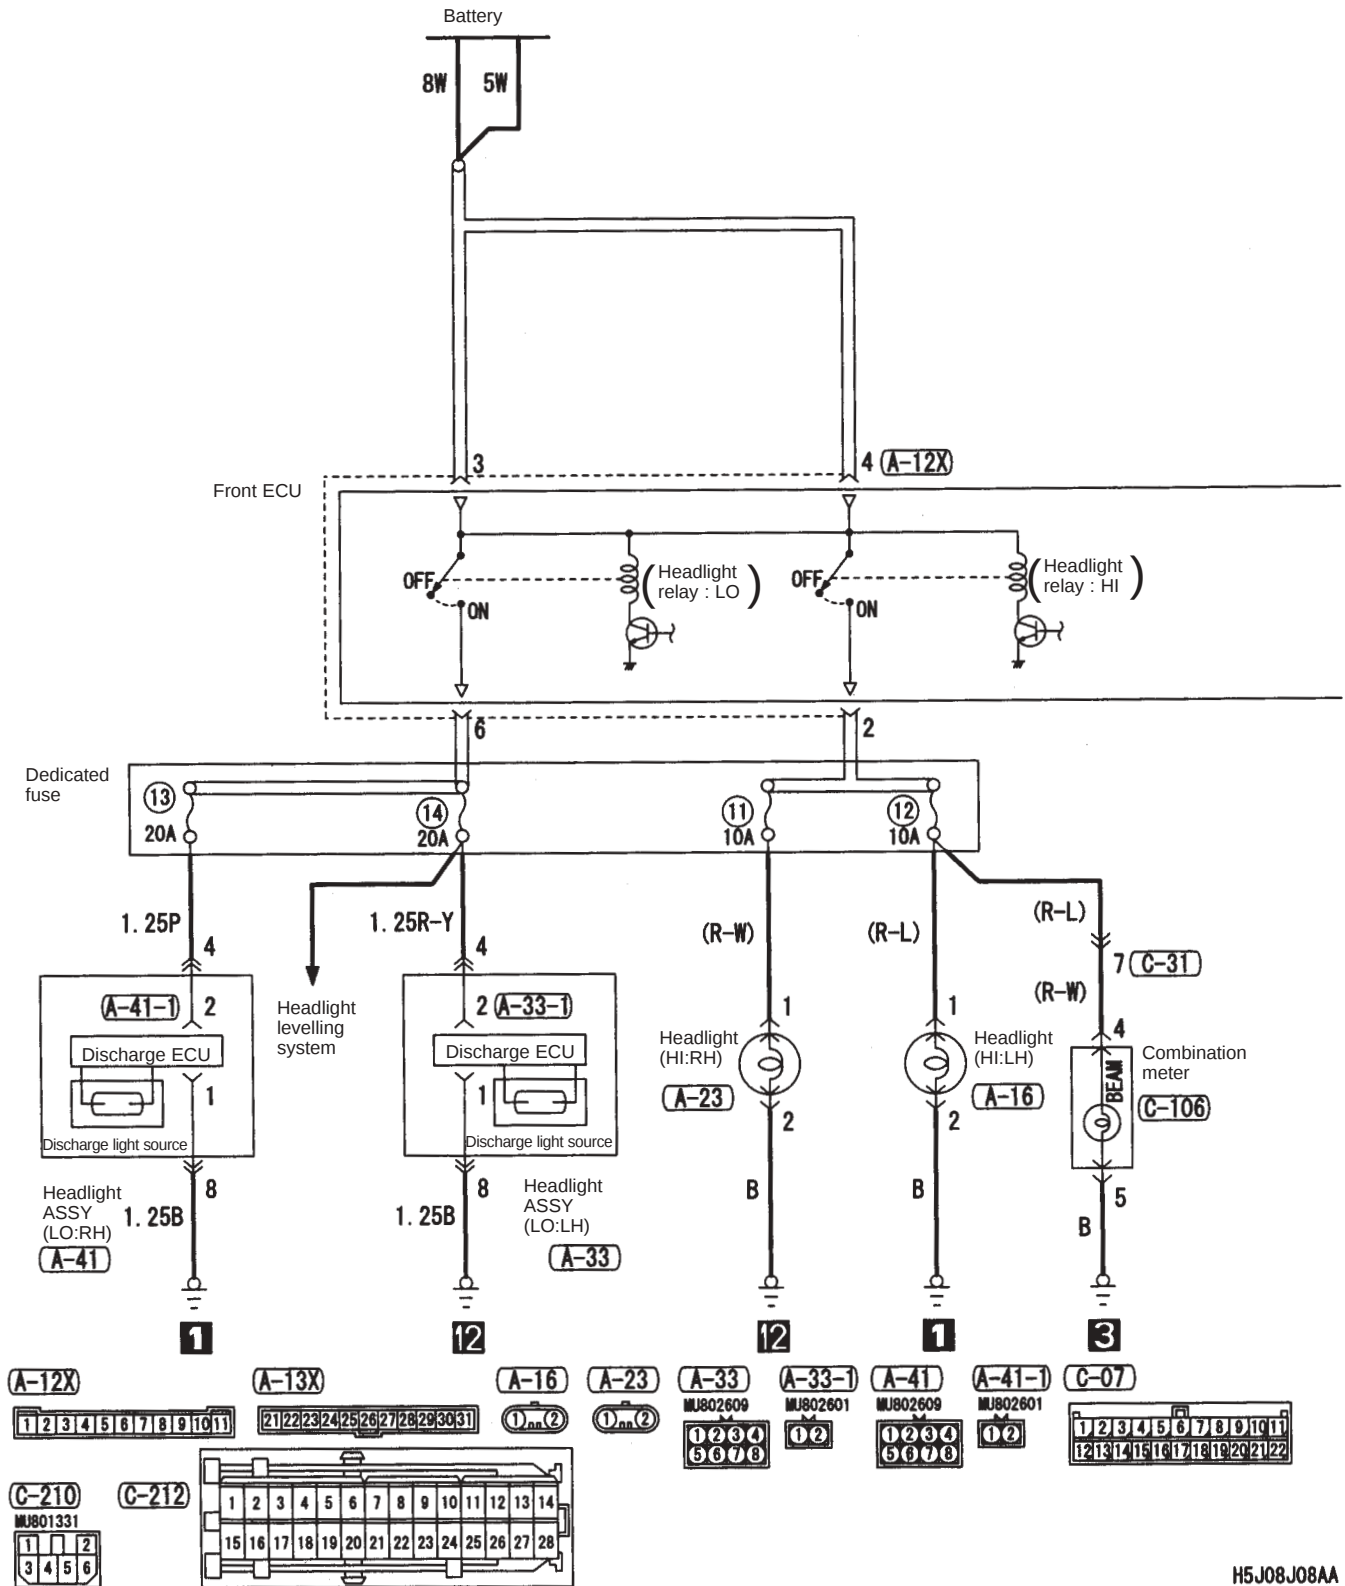


H5J08J08AA





Headlight <discharge type> (continued)

3

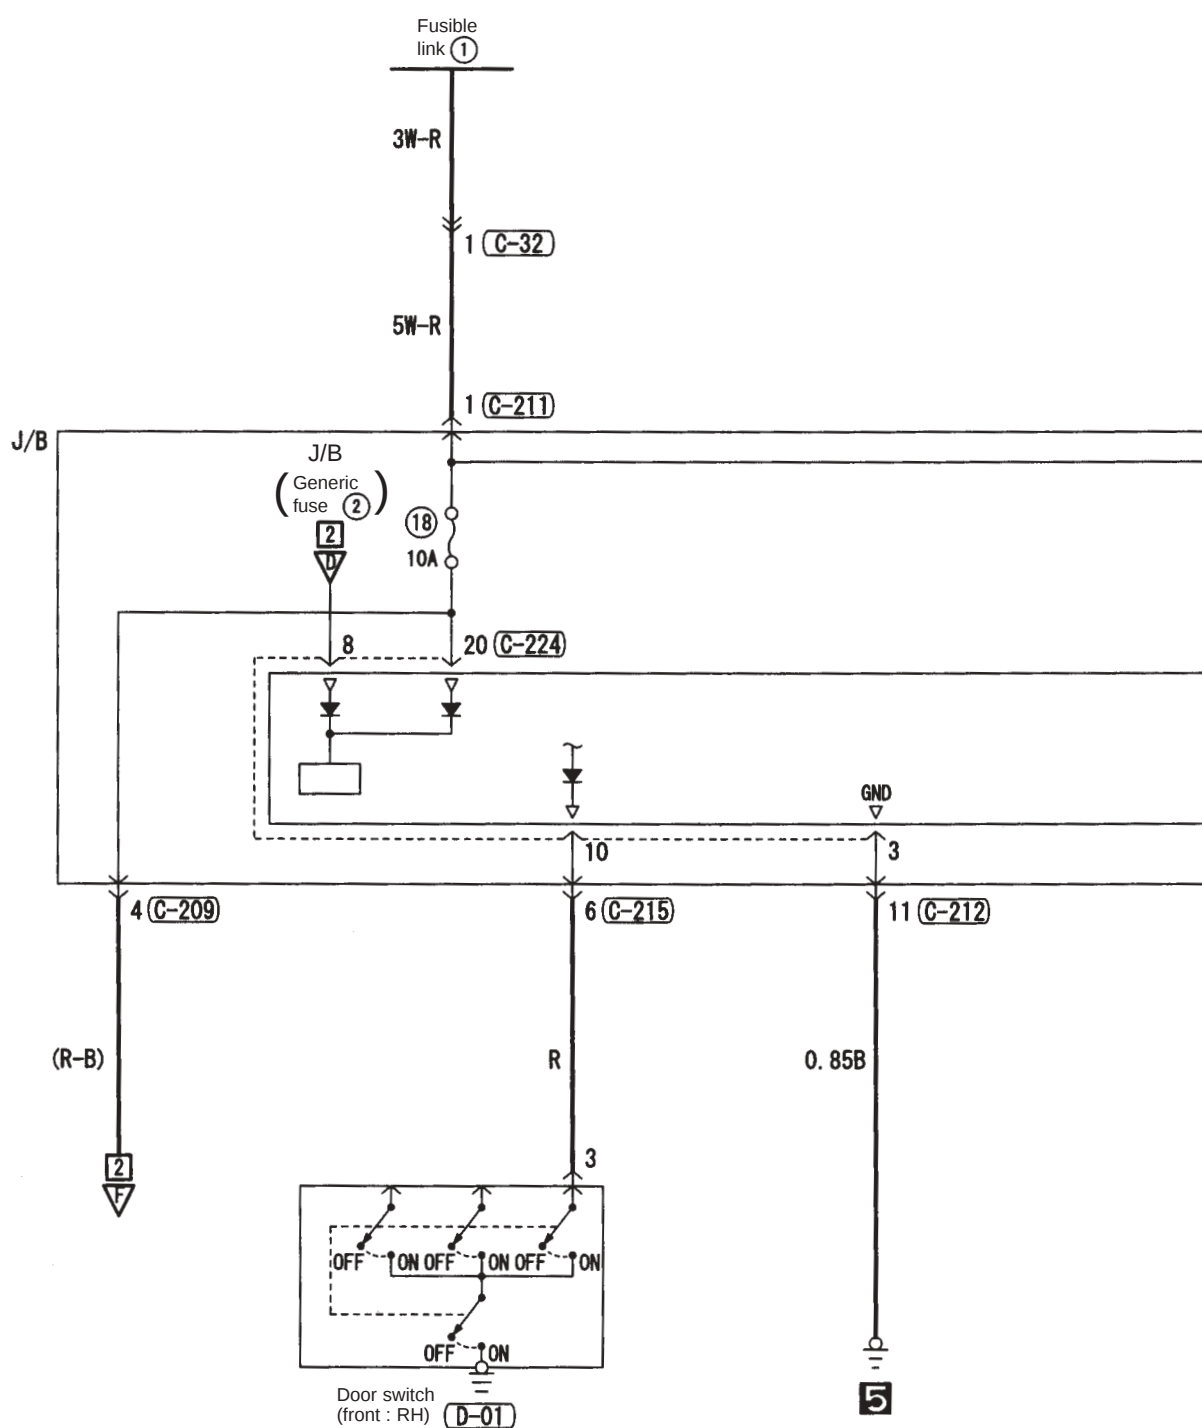

The diagram illustrates the electrical connections for the ETACS-ECU. It features several components and their interconnections:

- Column switch:** Two switches are shown. One is connected to terminal 68 of the ETACS-ECU and terminal 56 of the ETACS-ECU. The other is connected to terminal 51 of the ETACS-ECU and terminal 56 of the ETACS-ECU.
- J/C(2):** A connector with two terminals, A and B. Terminal A is connected to terminal 59 of the ETACS-ECU. Terminal B is connected to terminal 12 of the ETACS-ECU.
- J/C(3):** A connector with two terminals, A and B. Terminal A is connected to terminal 68 of the ETACS-ECU. Terminal B is connected to terminal 56 of the ETACS-ECU.
- J/C(5):** A connector with two terminals, A and B. Terminal A is connected to terminal 51 of the ETACS-ECU. Terminal B is connected to terminal 56 of the ETACS-ECU.
- ETACS-ECU:** The central component with terminals 68, 59, 56, 51, 67, 12, and 16. It is connected to a 15A fuse and a 15V power source.
- Diagnosis connector (C-122):** A connector with terminals 4, 5, and 16. Terminal 4 is connected to terminal 51 of the ETACS-ECU. Terminal 5 is connected to terminal 67 of the ETACS-ECU. Terminal 16 is connected to terminal 12 of the ETACS-ECU.
- Wiring:** The diagram shows various wiring paths, including a ground connection (GND) and a 15A fuse.

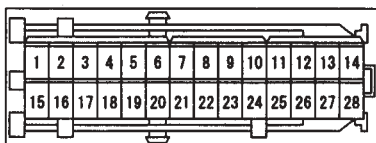

Tail light, front side light, licence plate light, lighting monitor buzzer


M3030001700445

1

Note :

*1: Except discharge type headlights



*2: Discharge type headlights

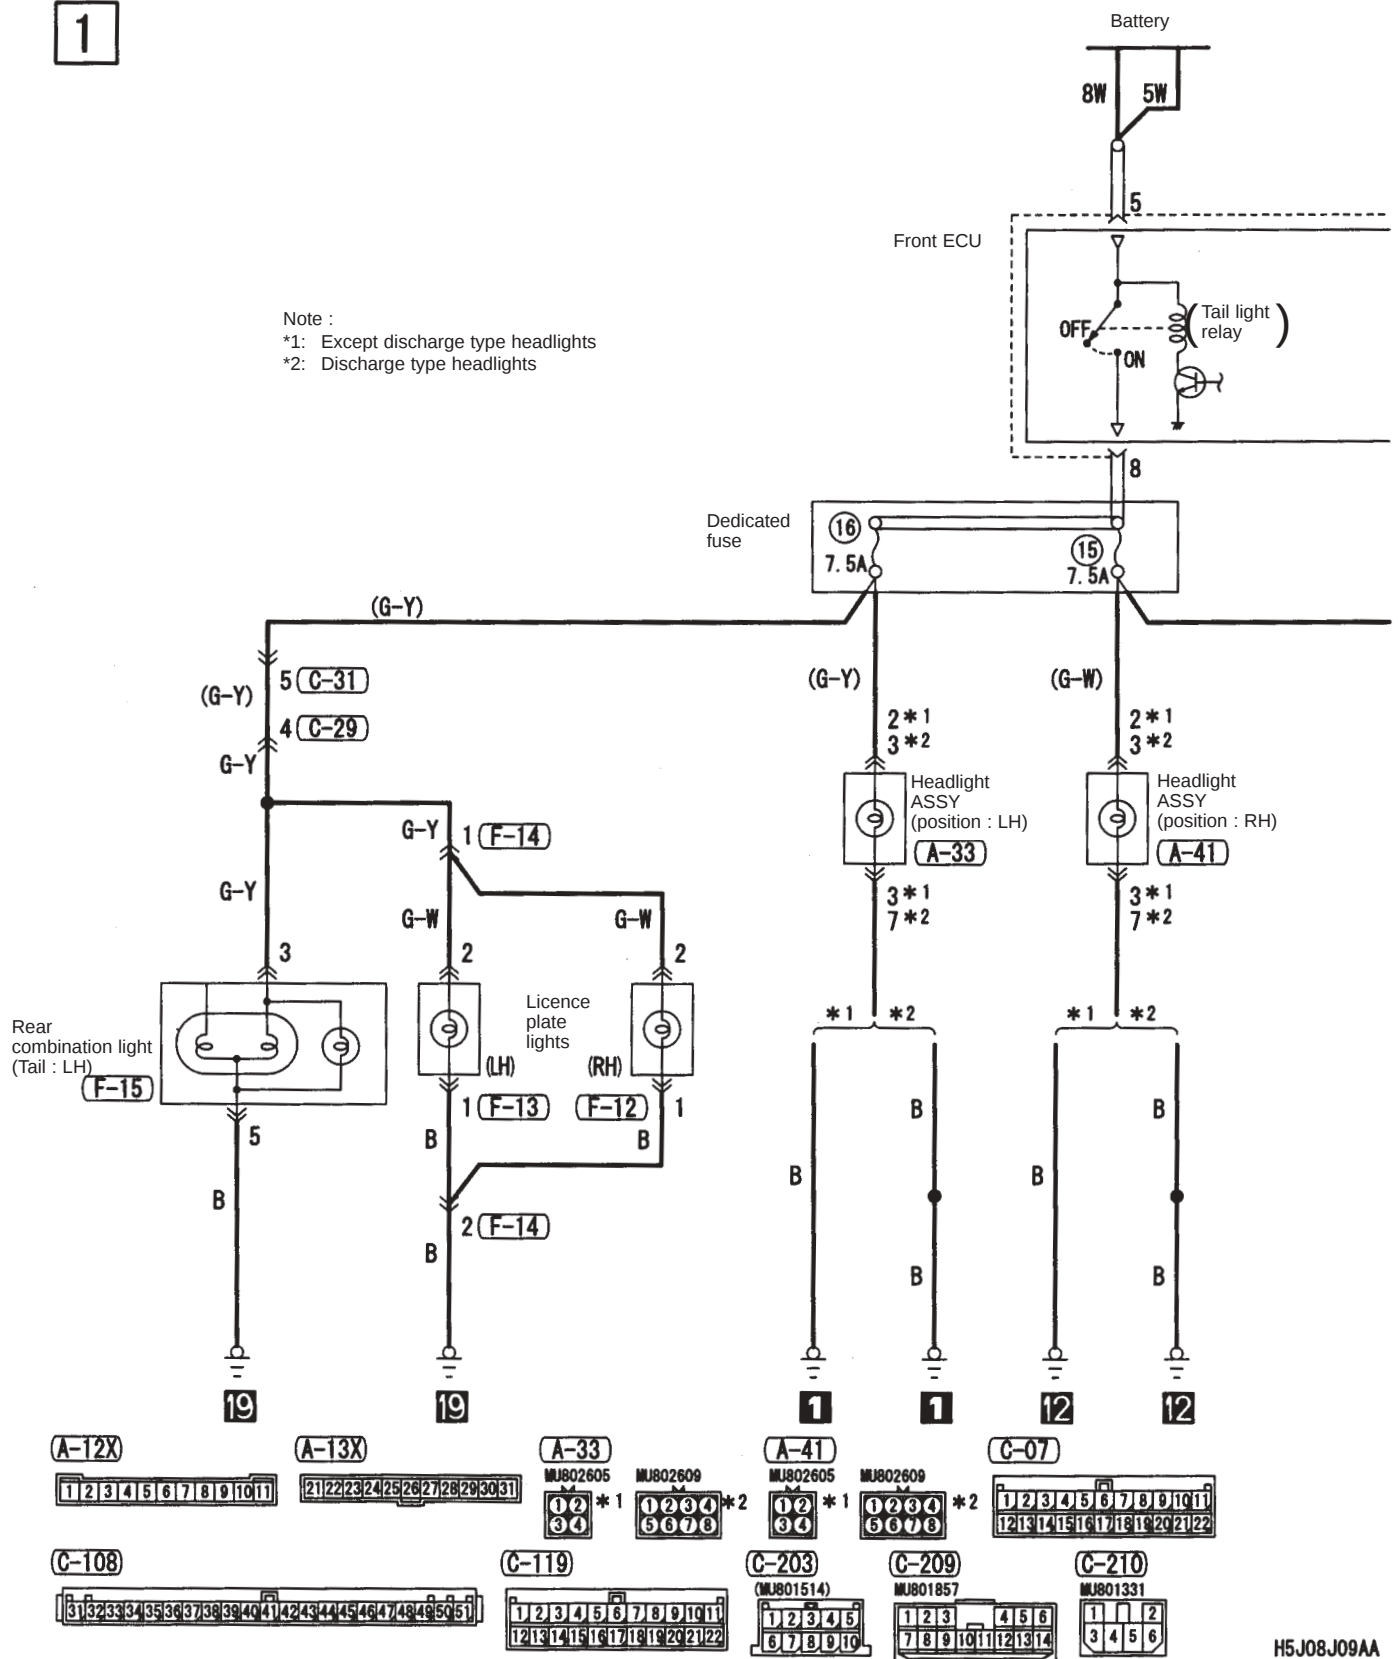

H5J08J09AA




3

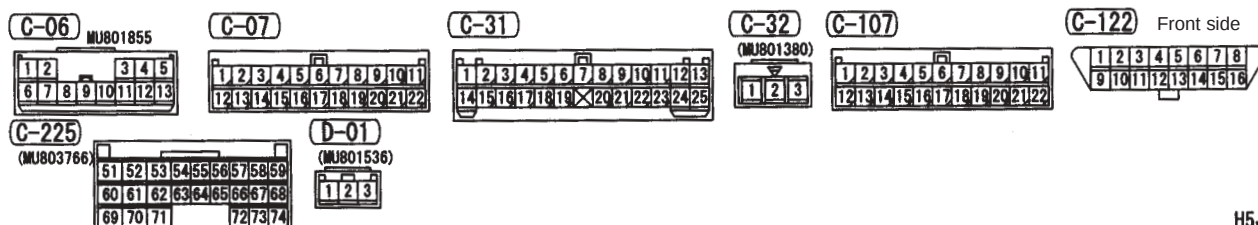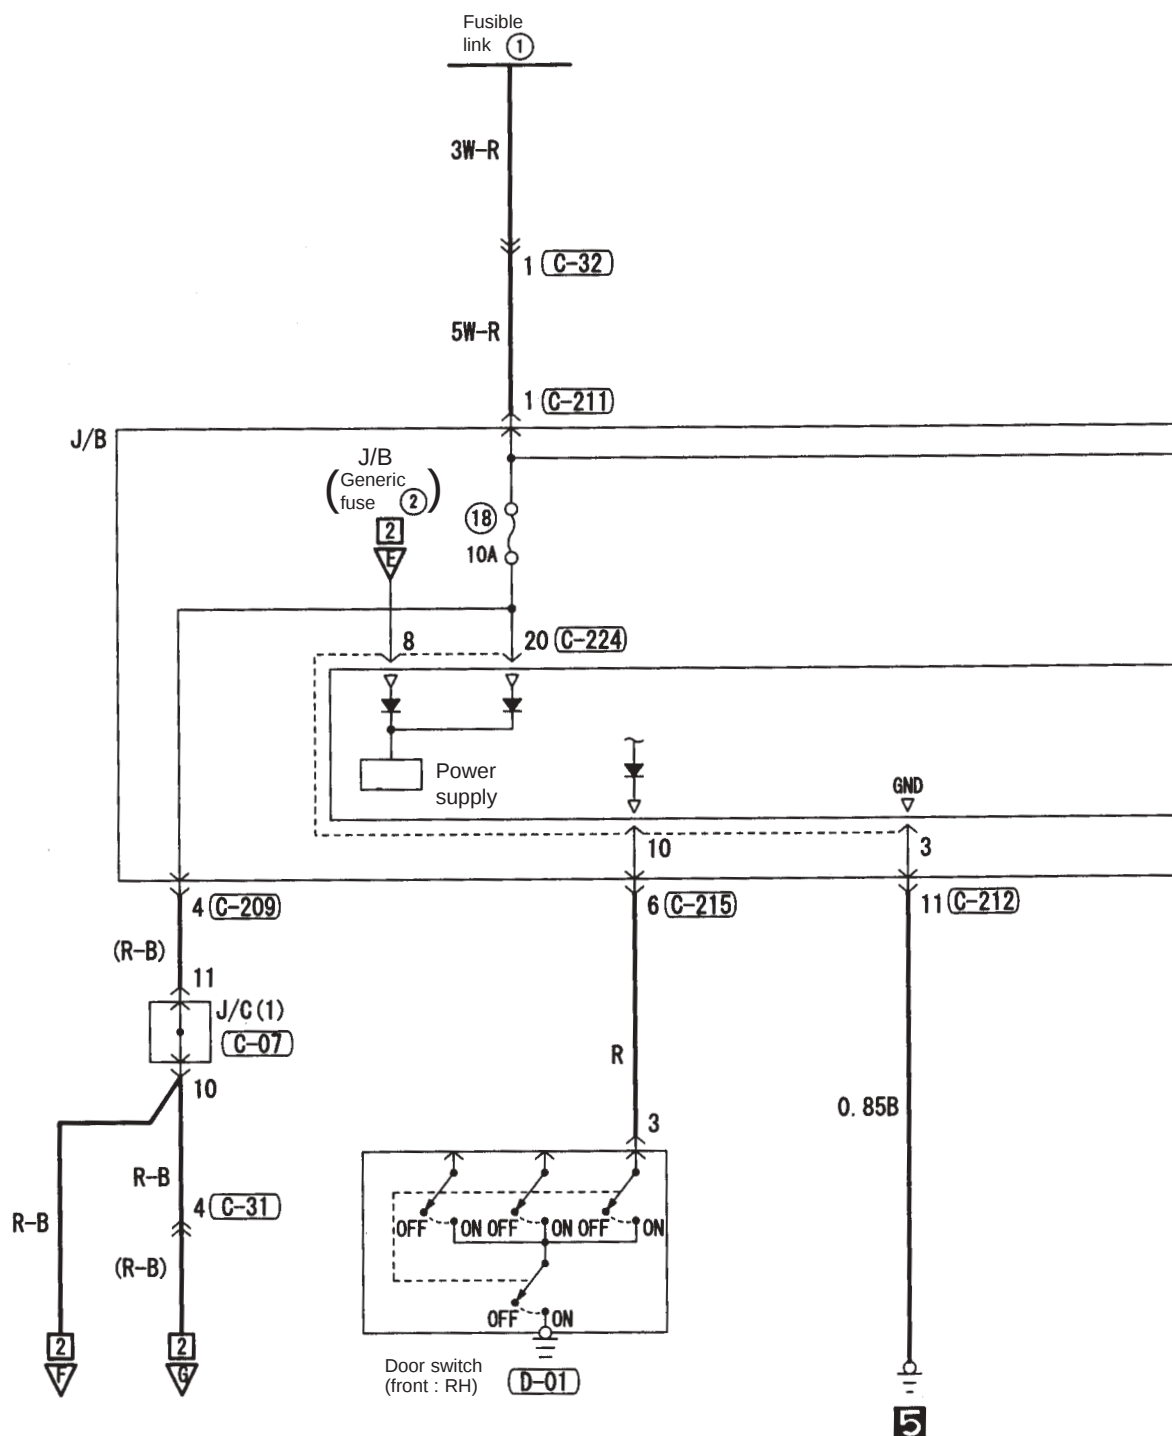

H5J08J09BA

4

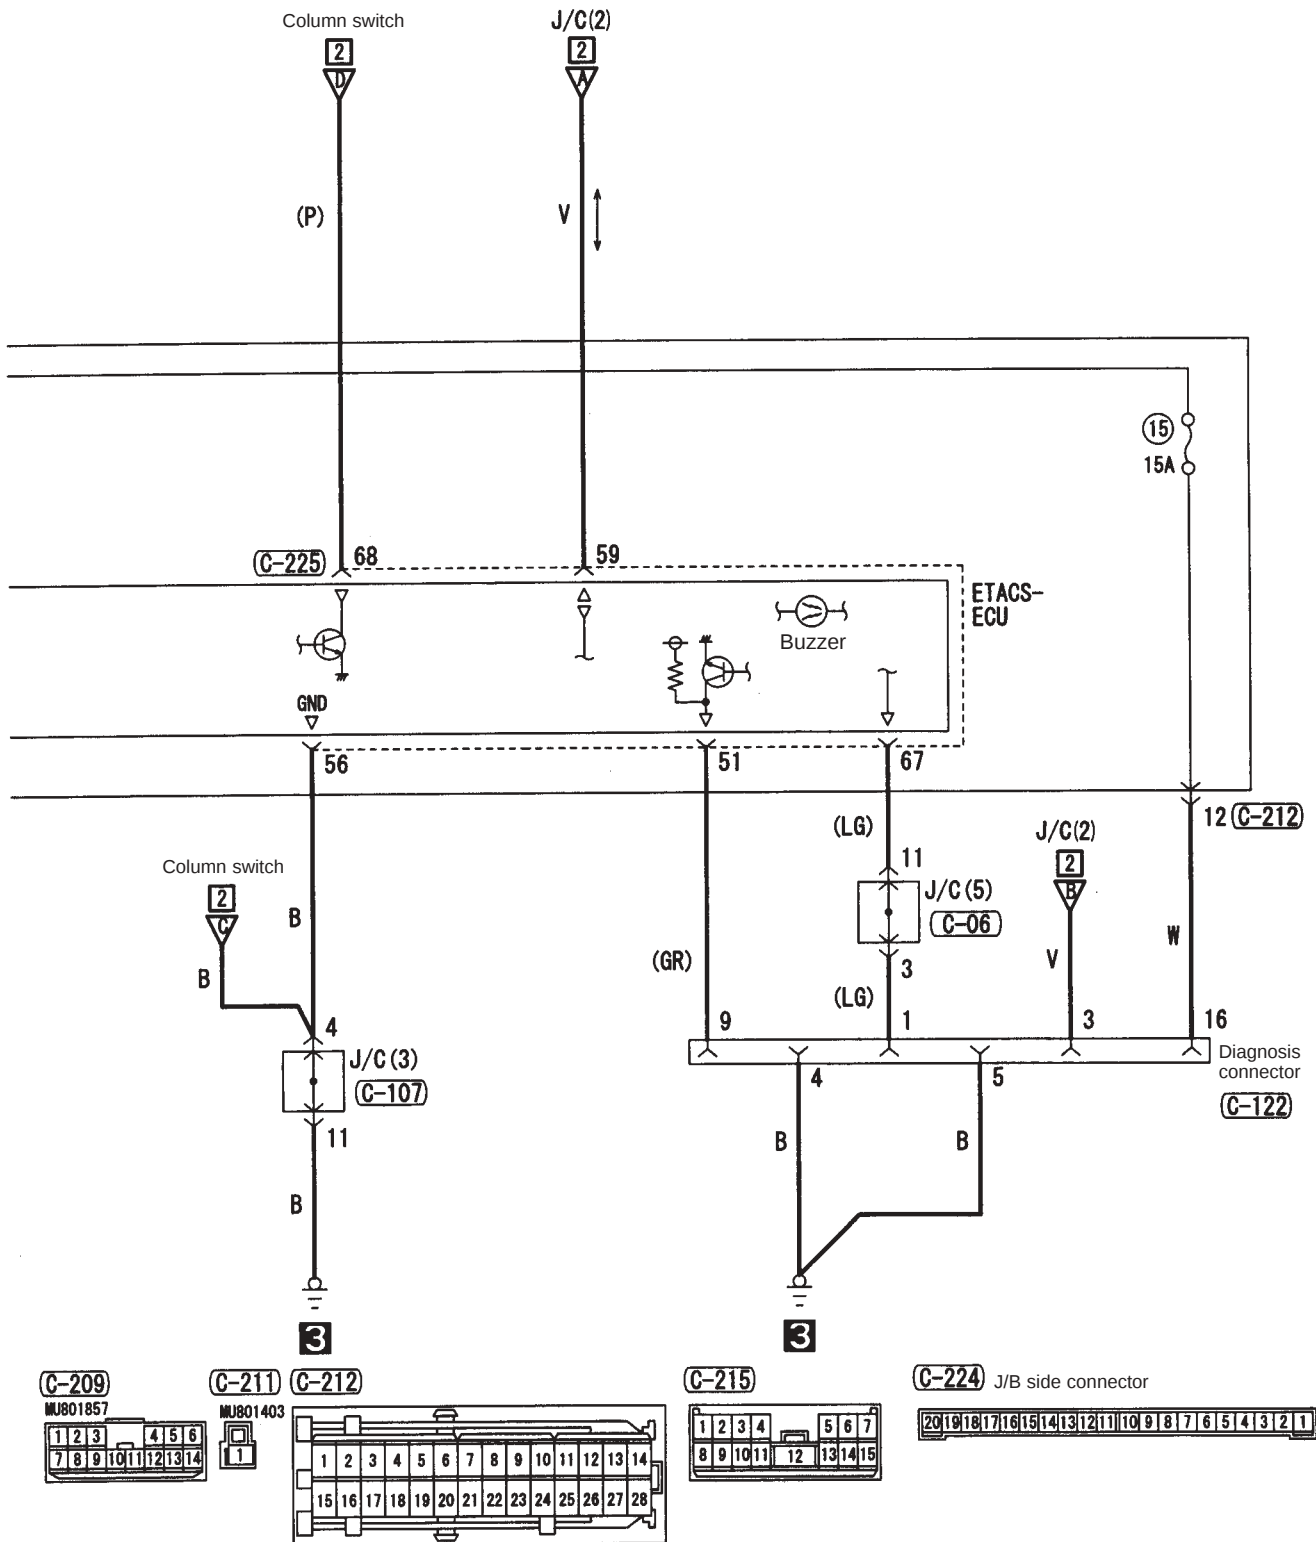


H5J08J09BB

M3030018800068



2

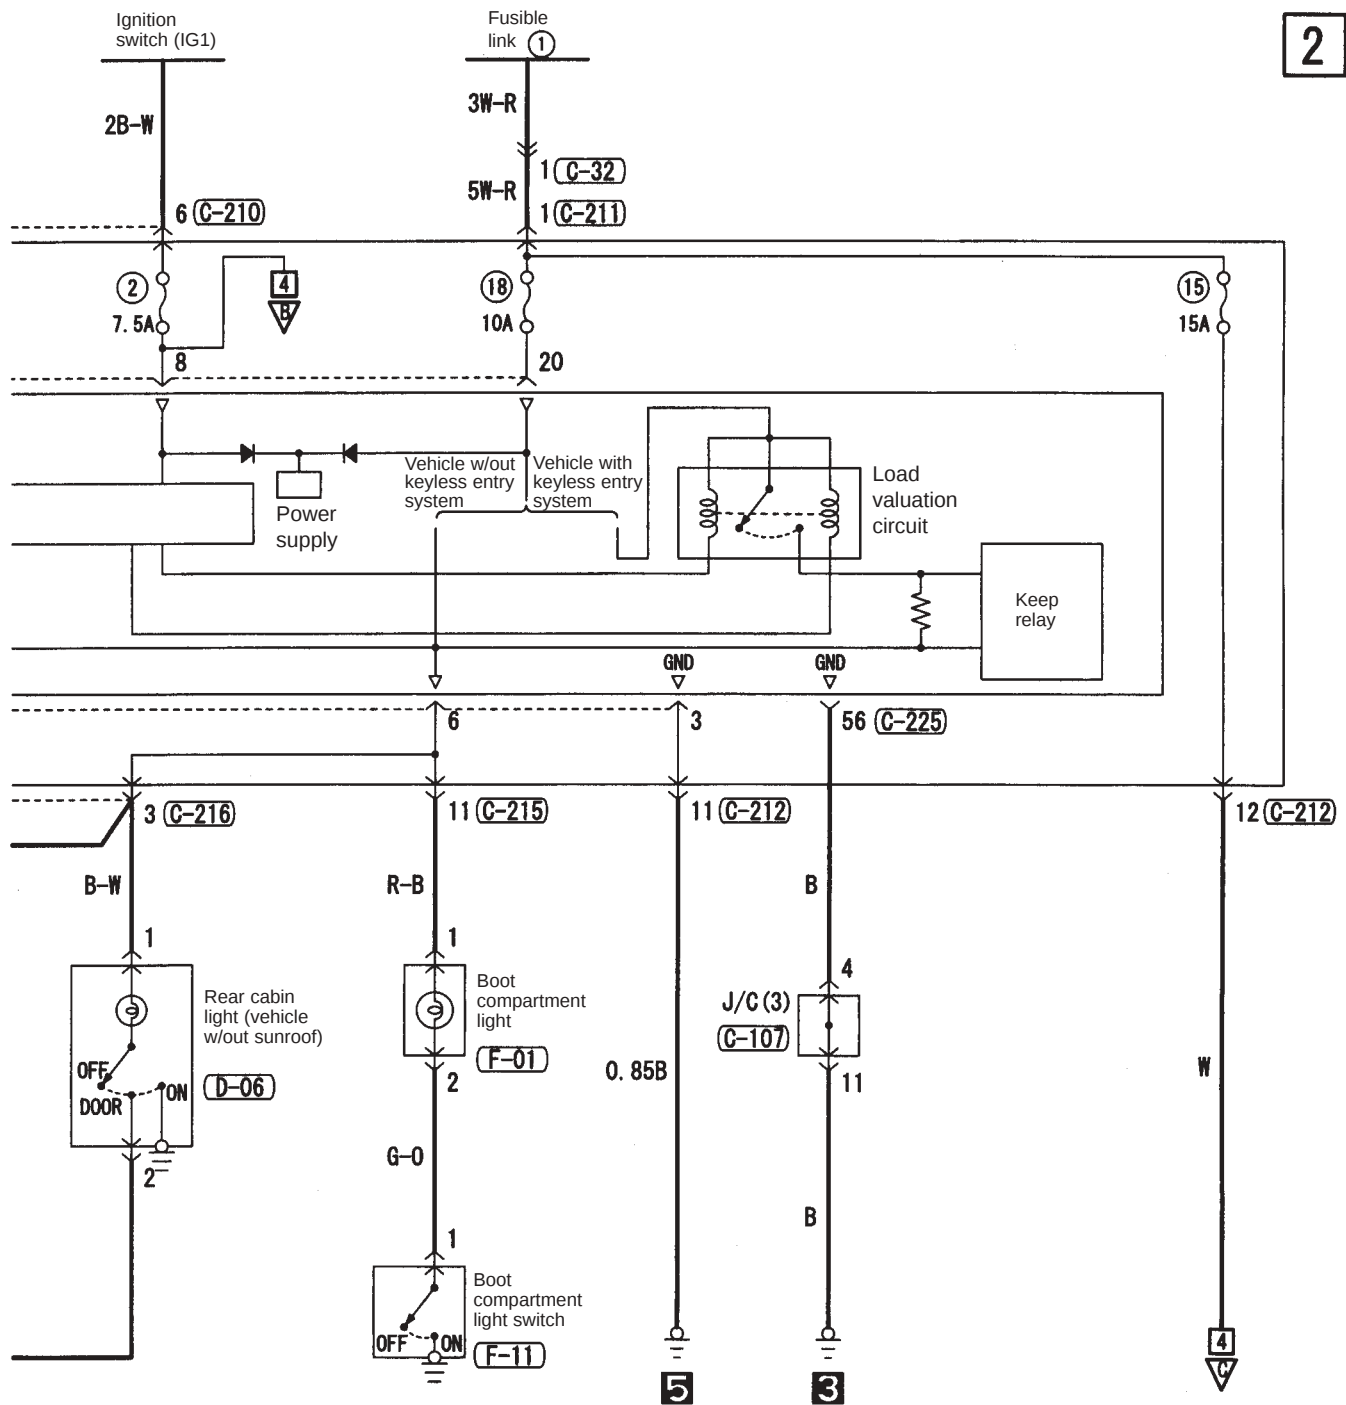

C-107

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-108

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----

C-110

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-202

1	2	3	4	5	6	7
1	2	3	4	5	6	7

C-224 J/B side connector

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

C-225
(MU803766)

51	52	53	54	55	56	57	58	59
60	61	62	63	64	65	66	67	68
69	70	71	72	73	74			

D-04

1
2

D-06

1	2

F-01


1
2

F-11


1
2

Cabin lights, boot compartment lights, ignition key cylinder illumination light, door ajar indicator light (cont'd)

3

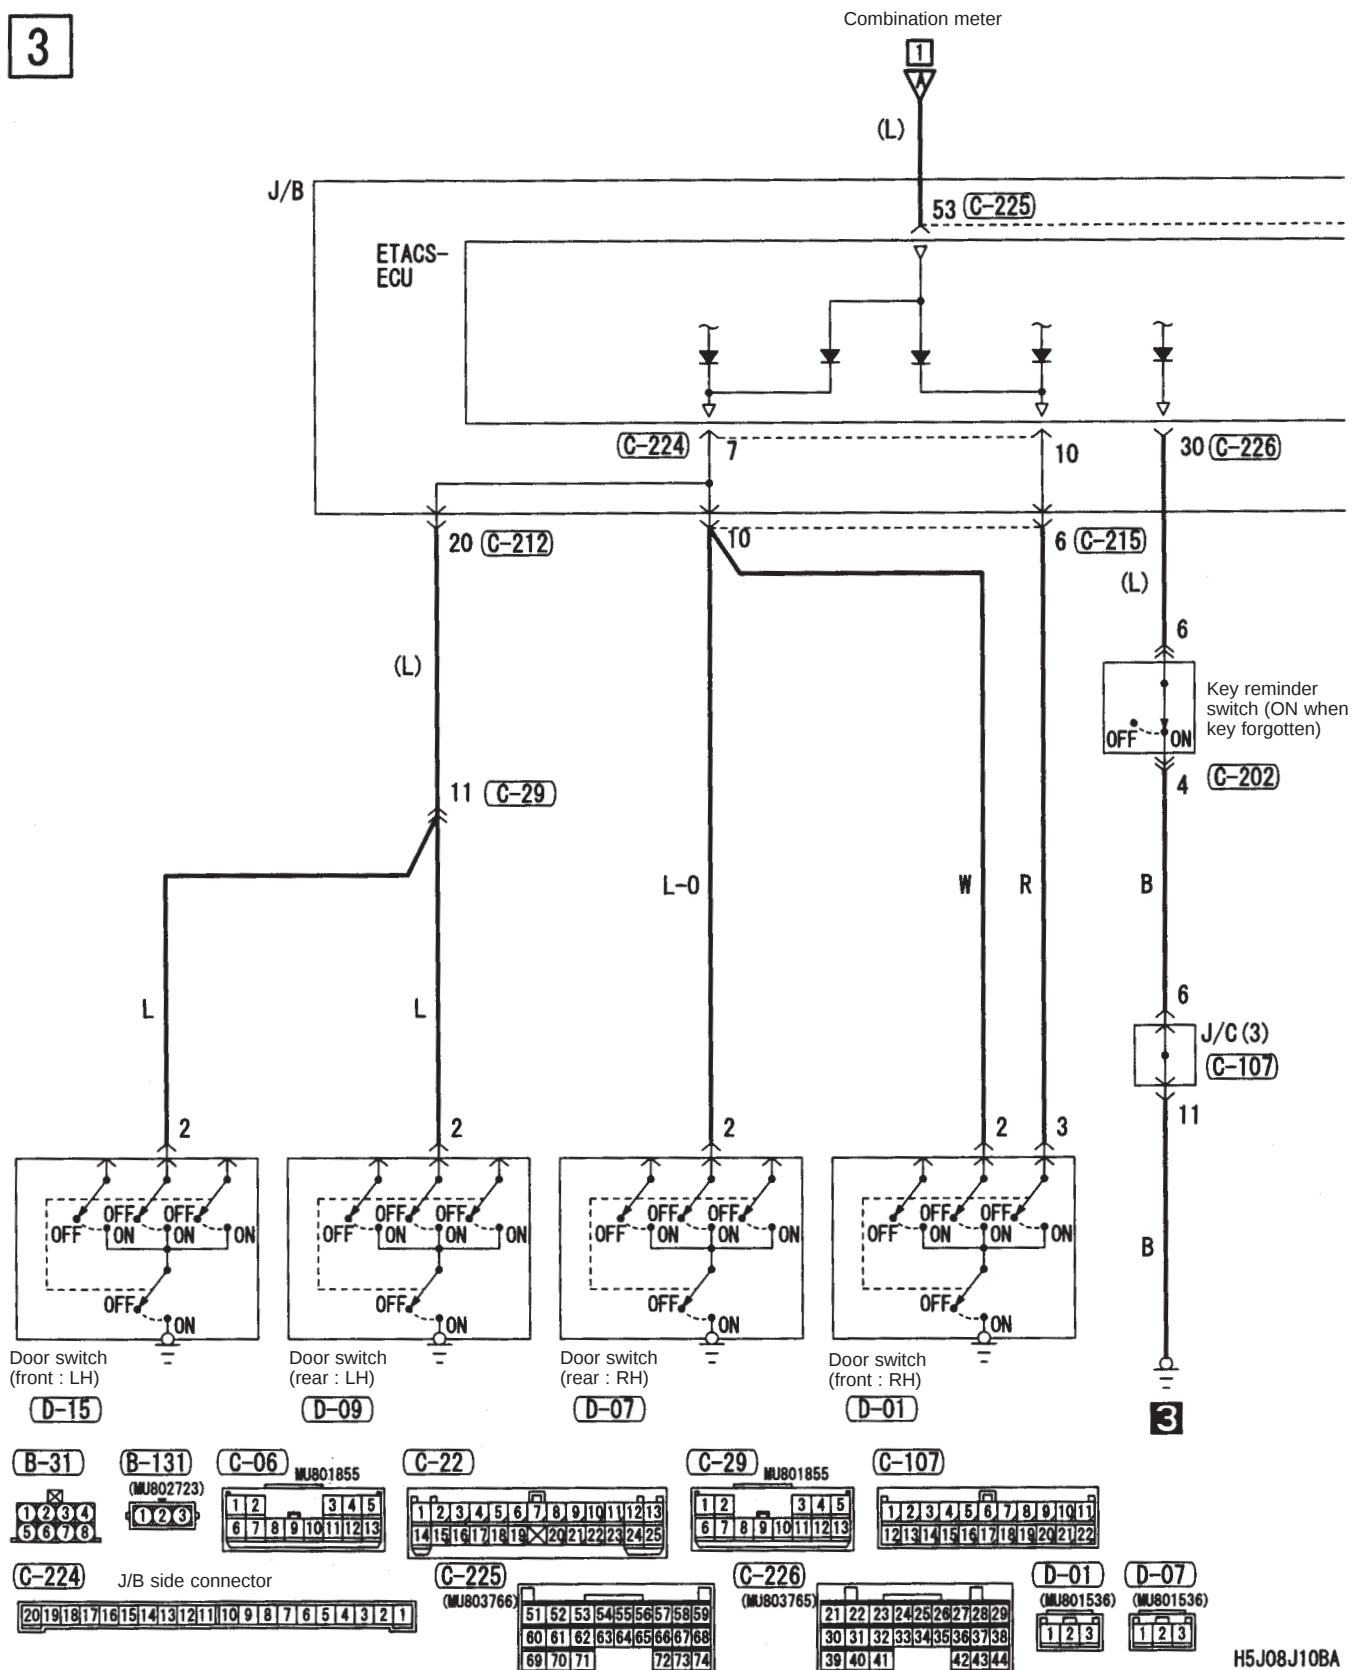


4

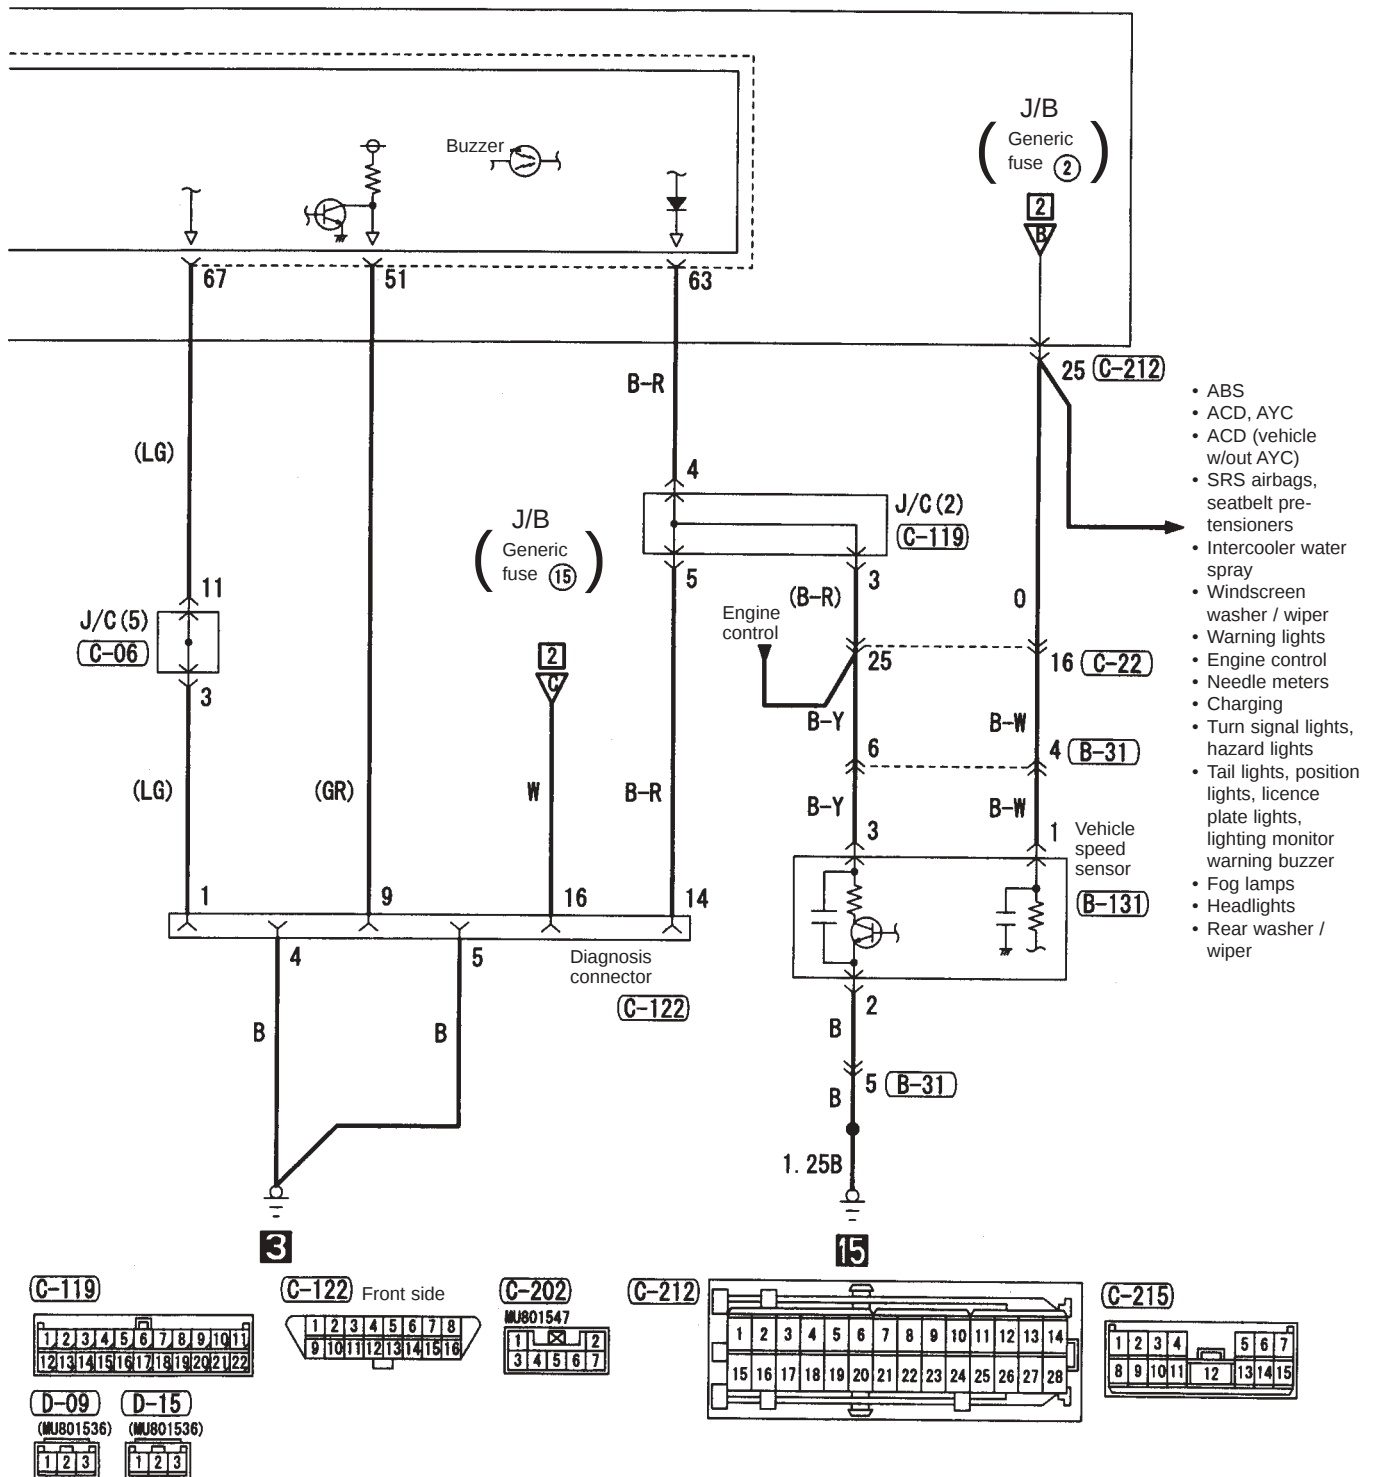


H5J08J10BB

Fog lamps




M3030001800323

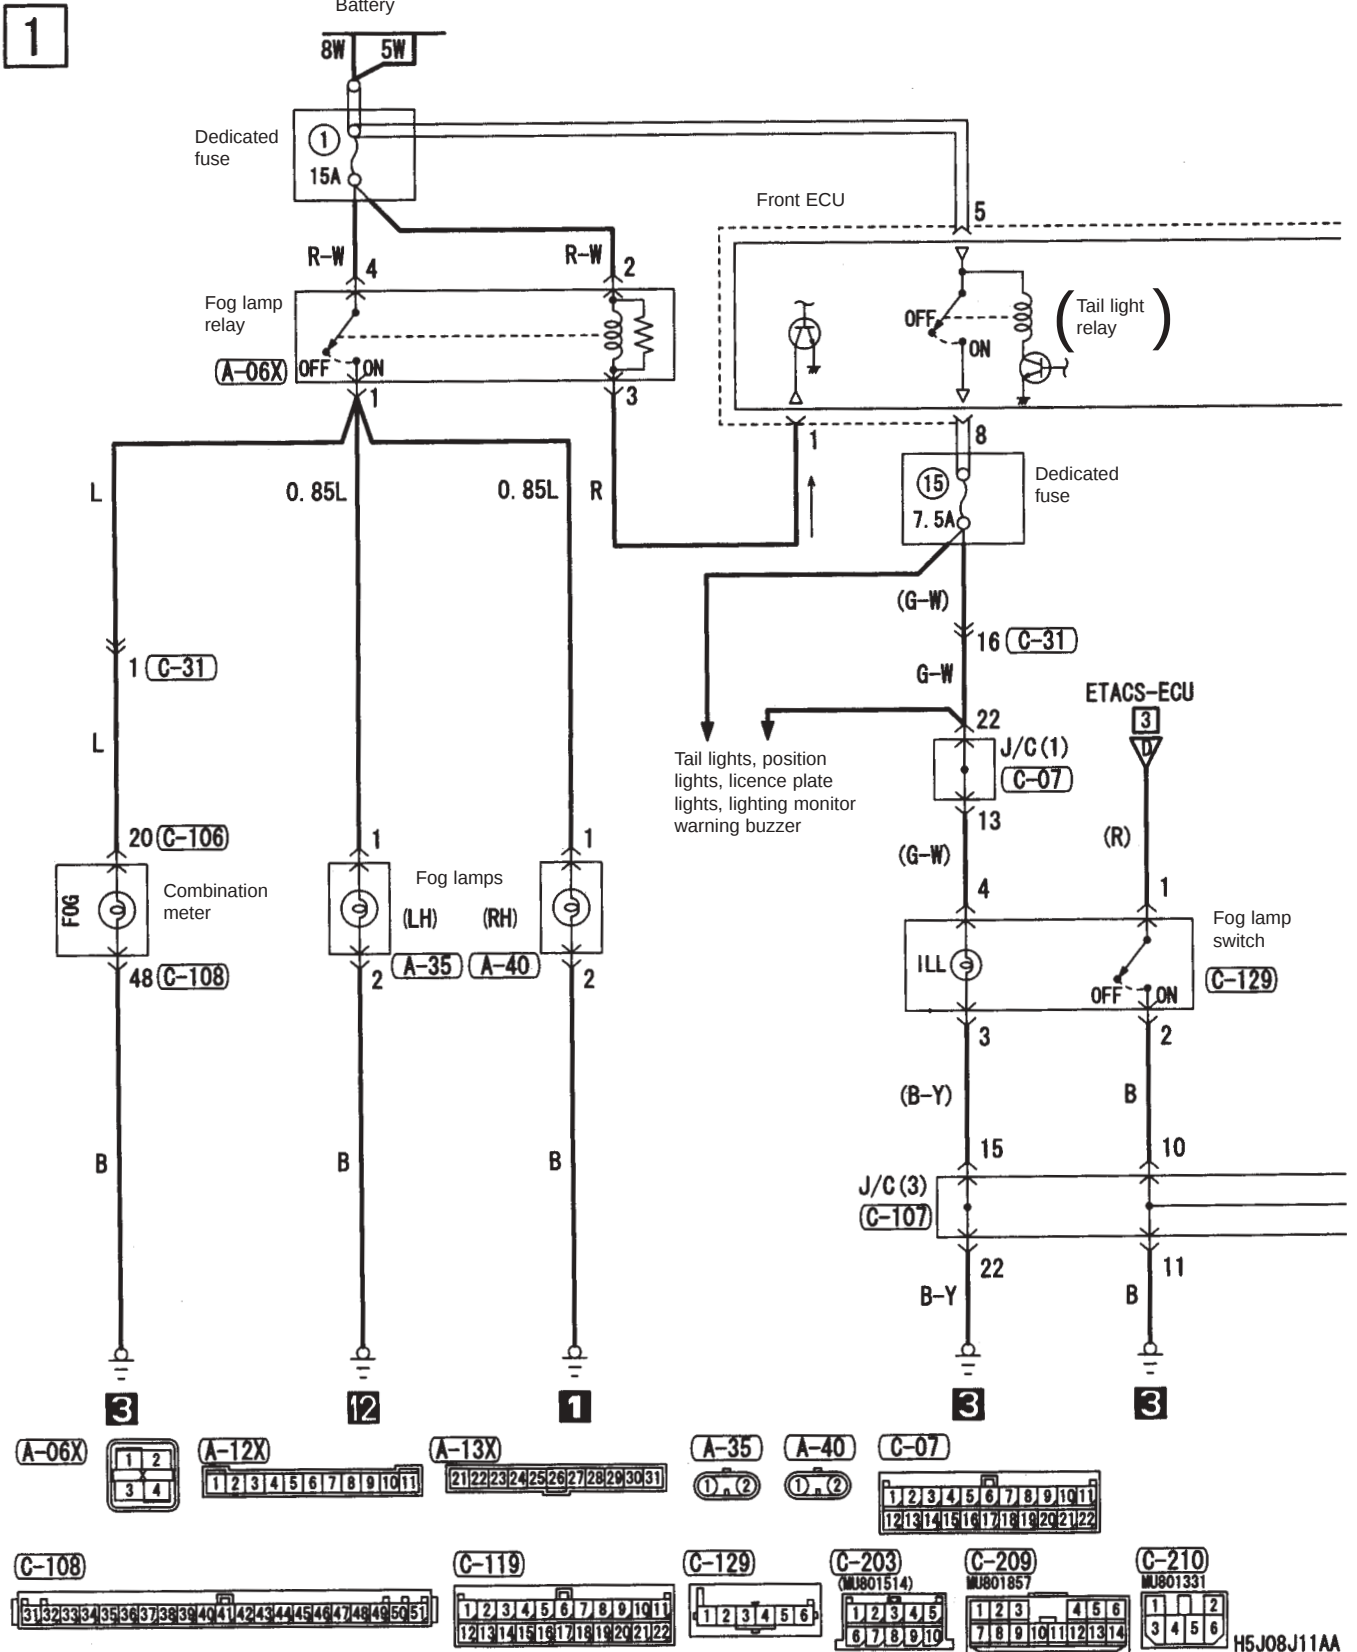

H5J08J11AA

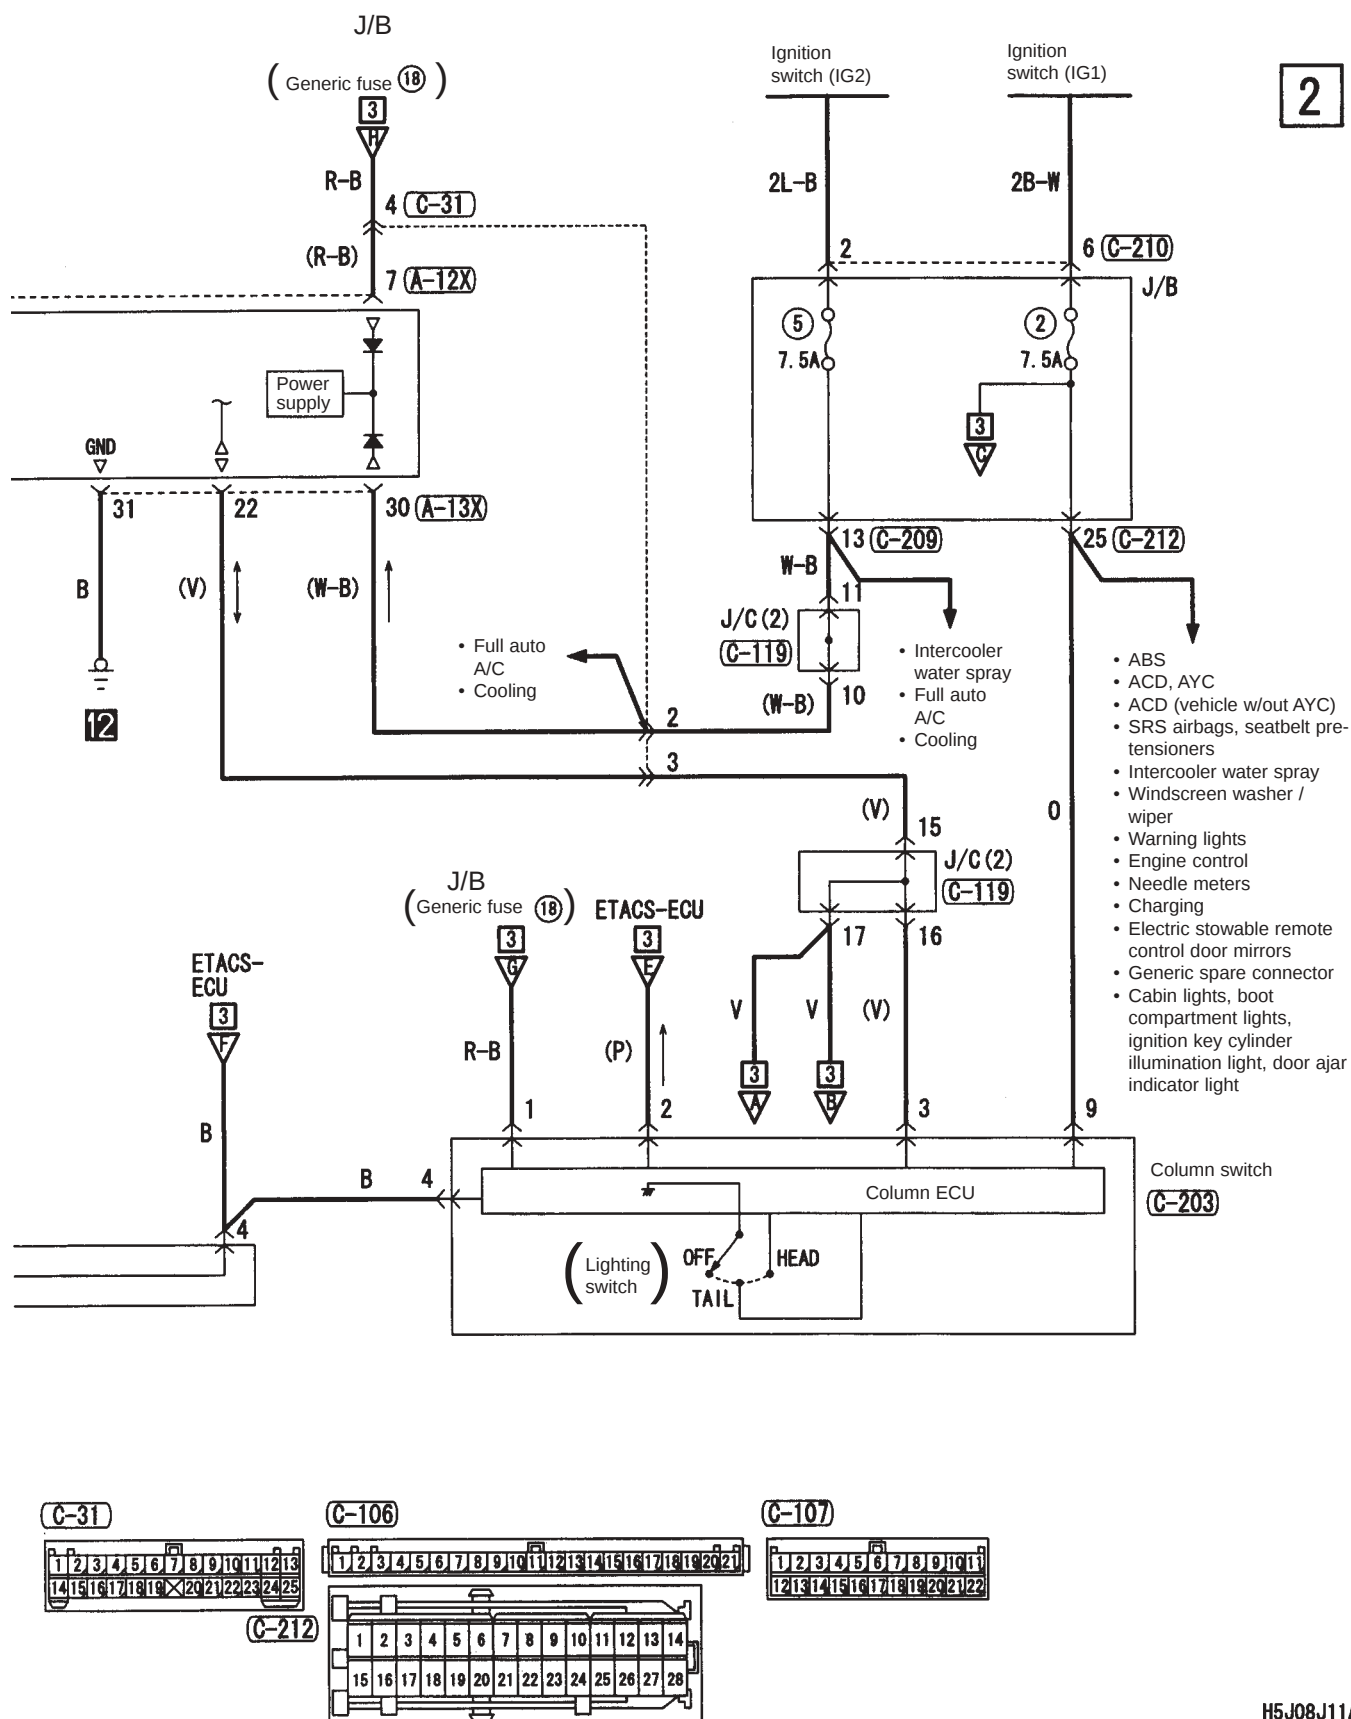

Fog lamps (cont'd)

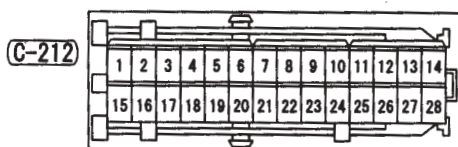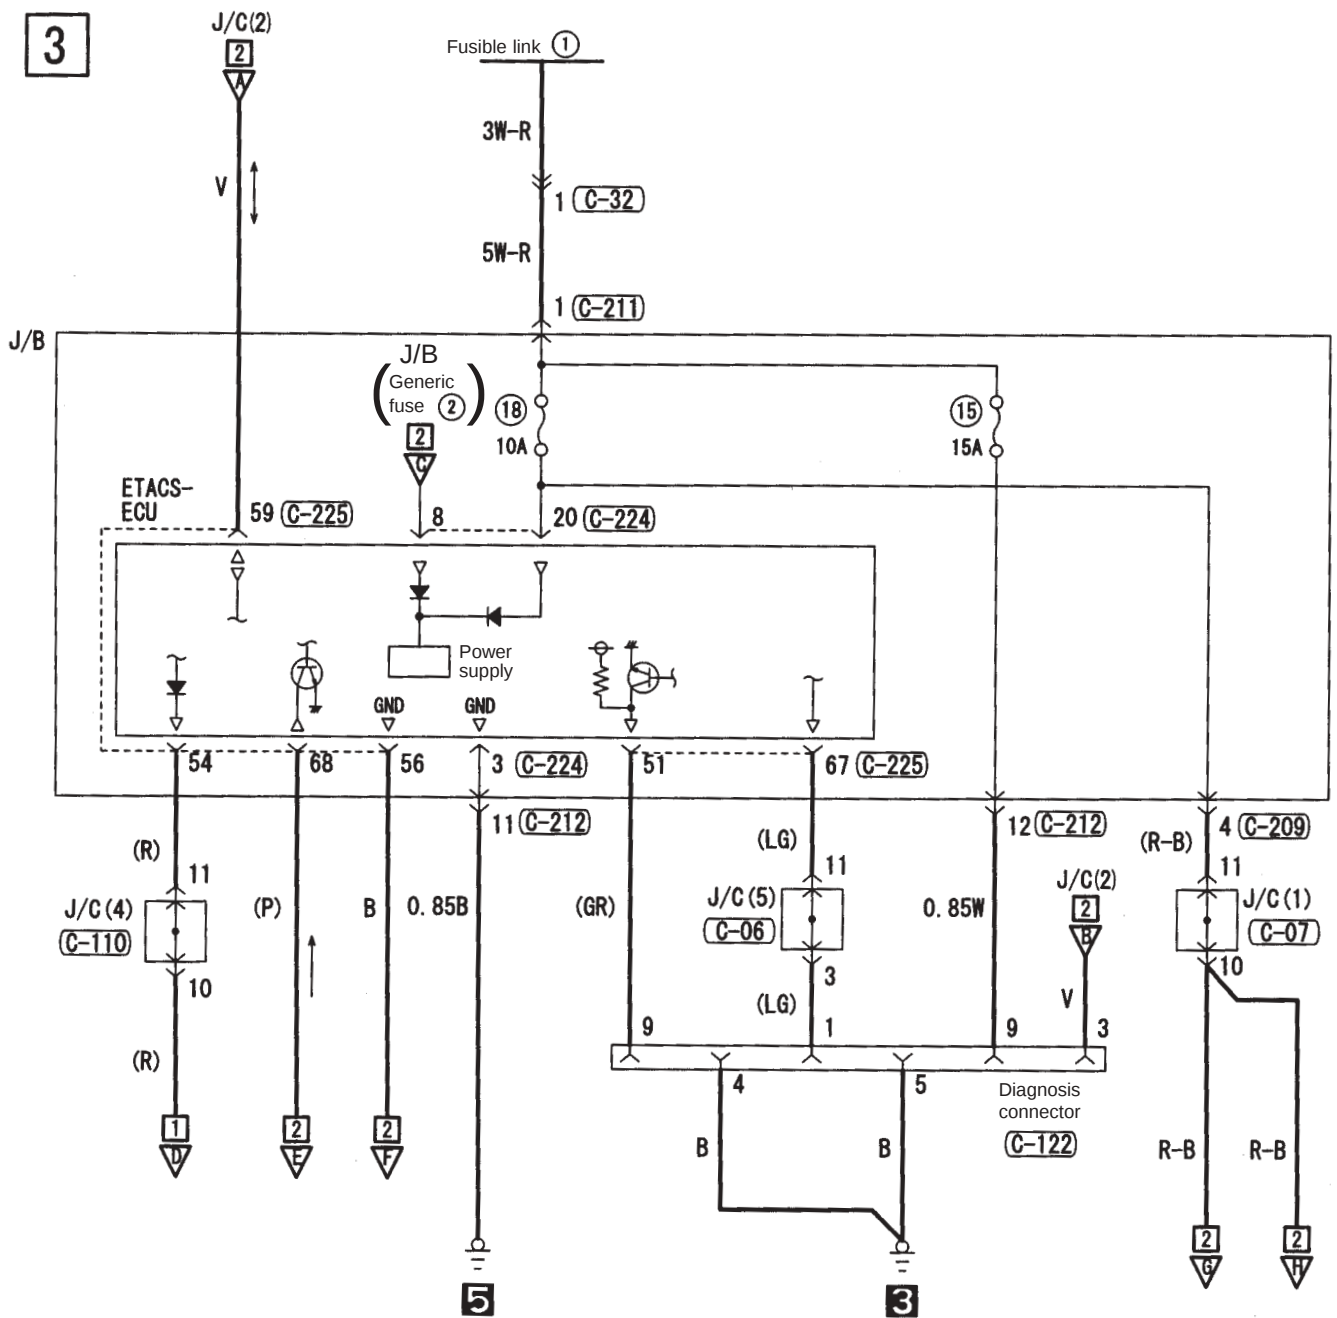



<Notes>

Headlight levelling system

M3030012500412

1

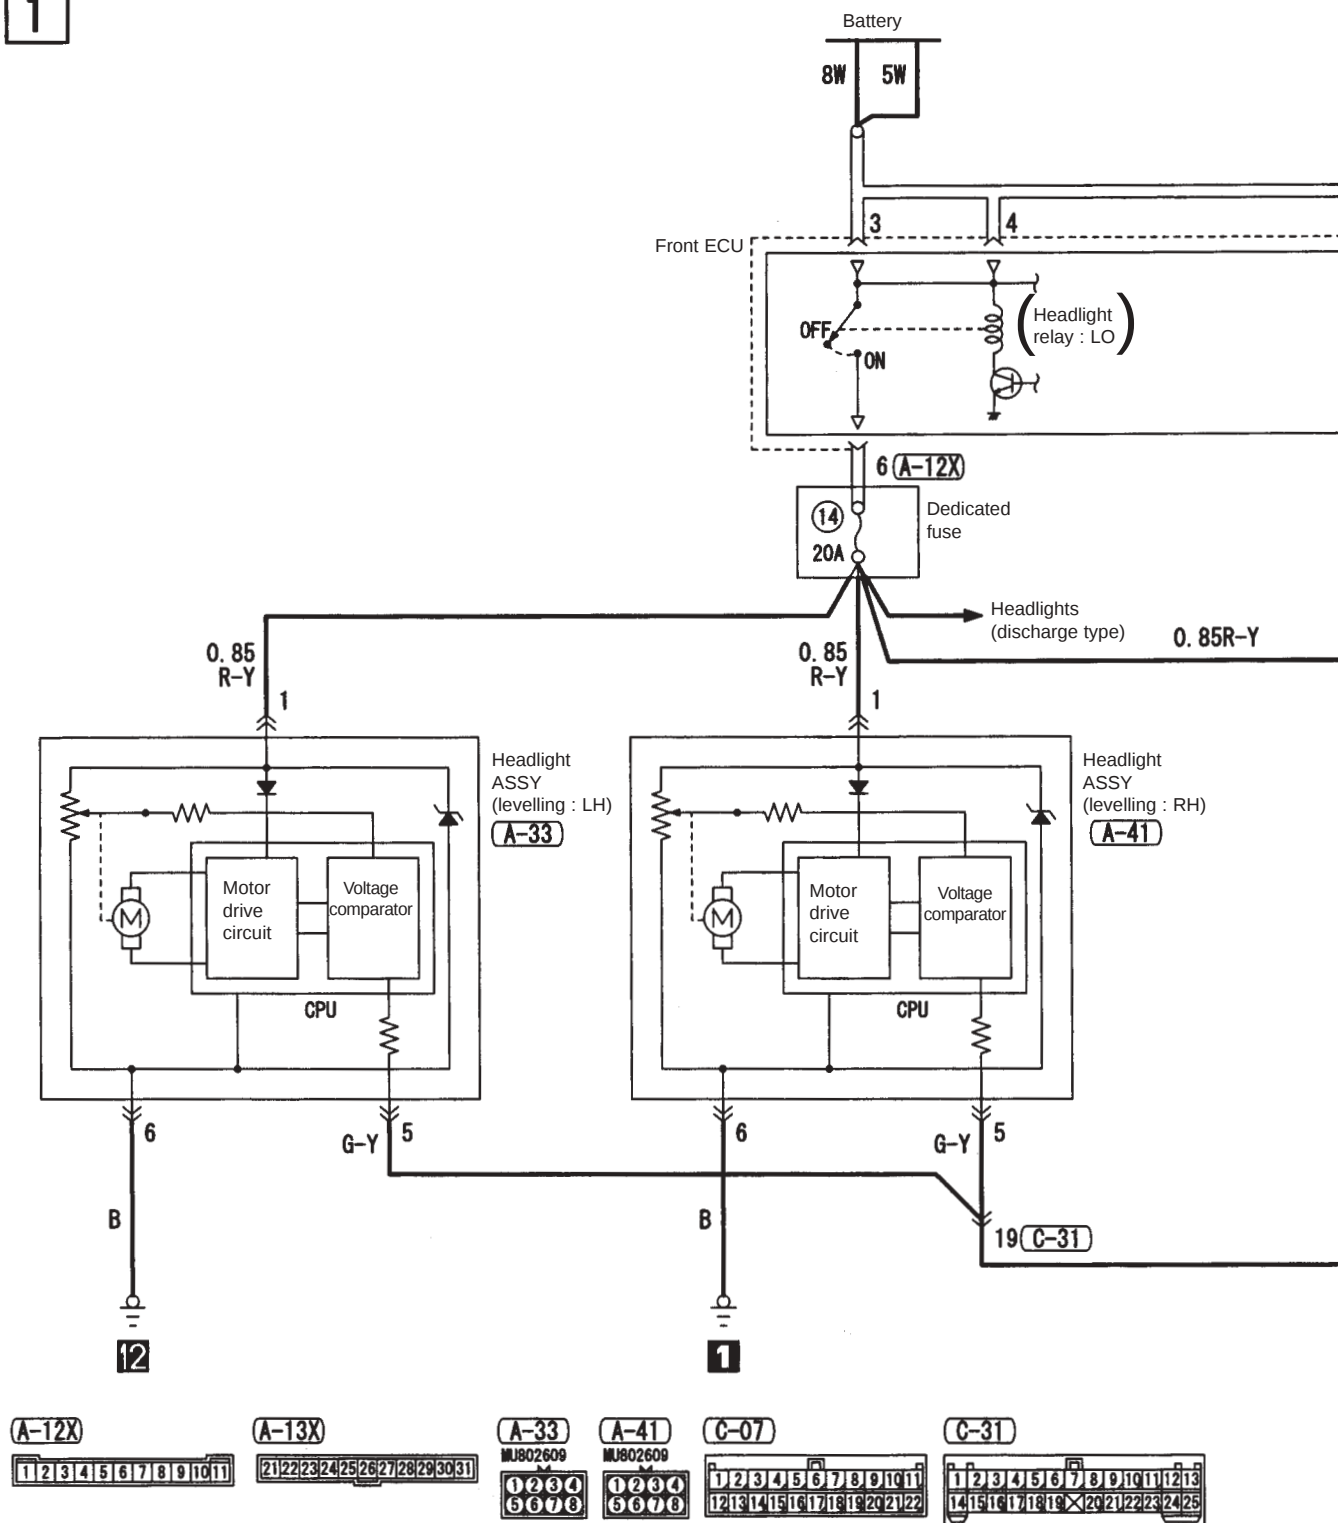


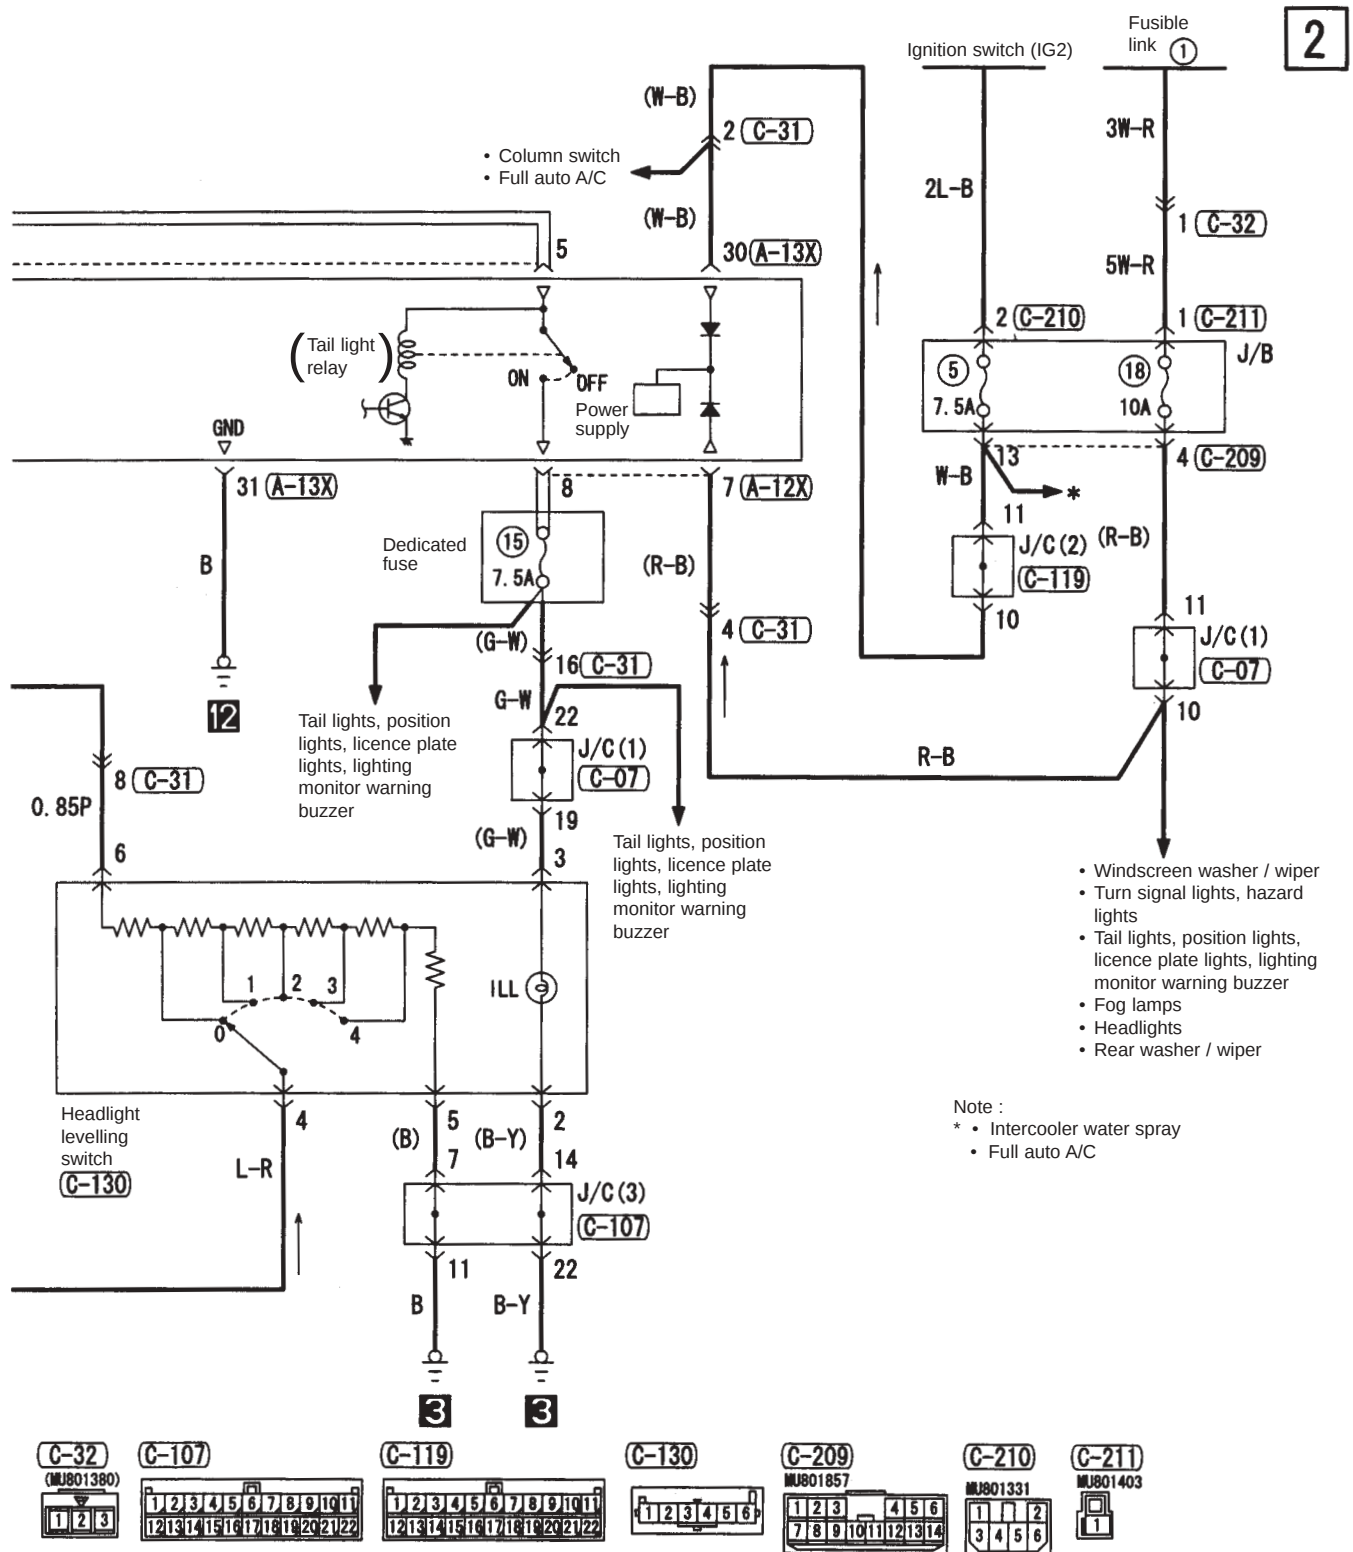

SIGNALS

Turn signal lights, hazard lights

M3030002800721

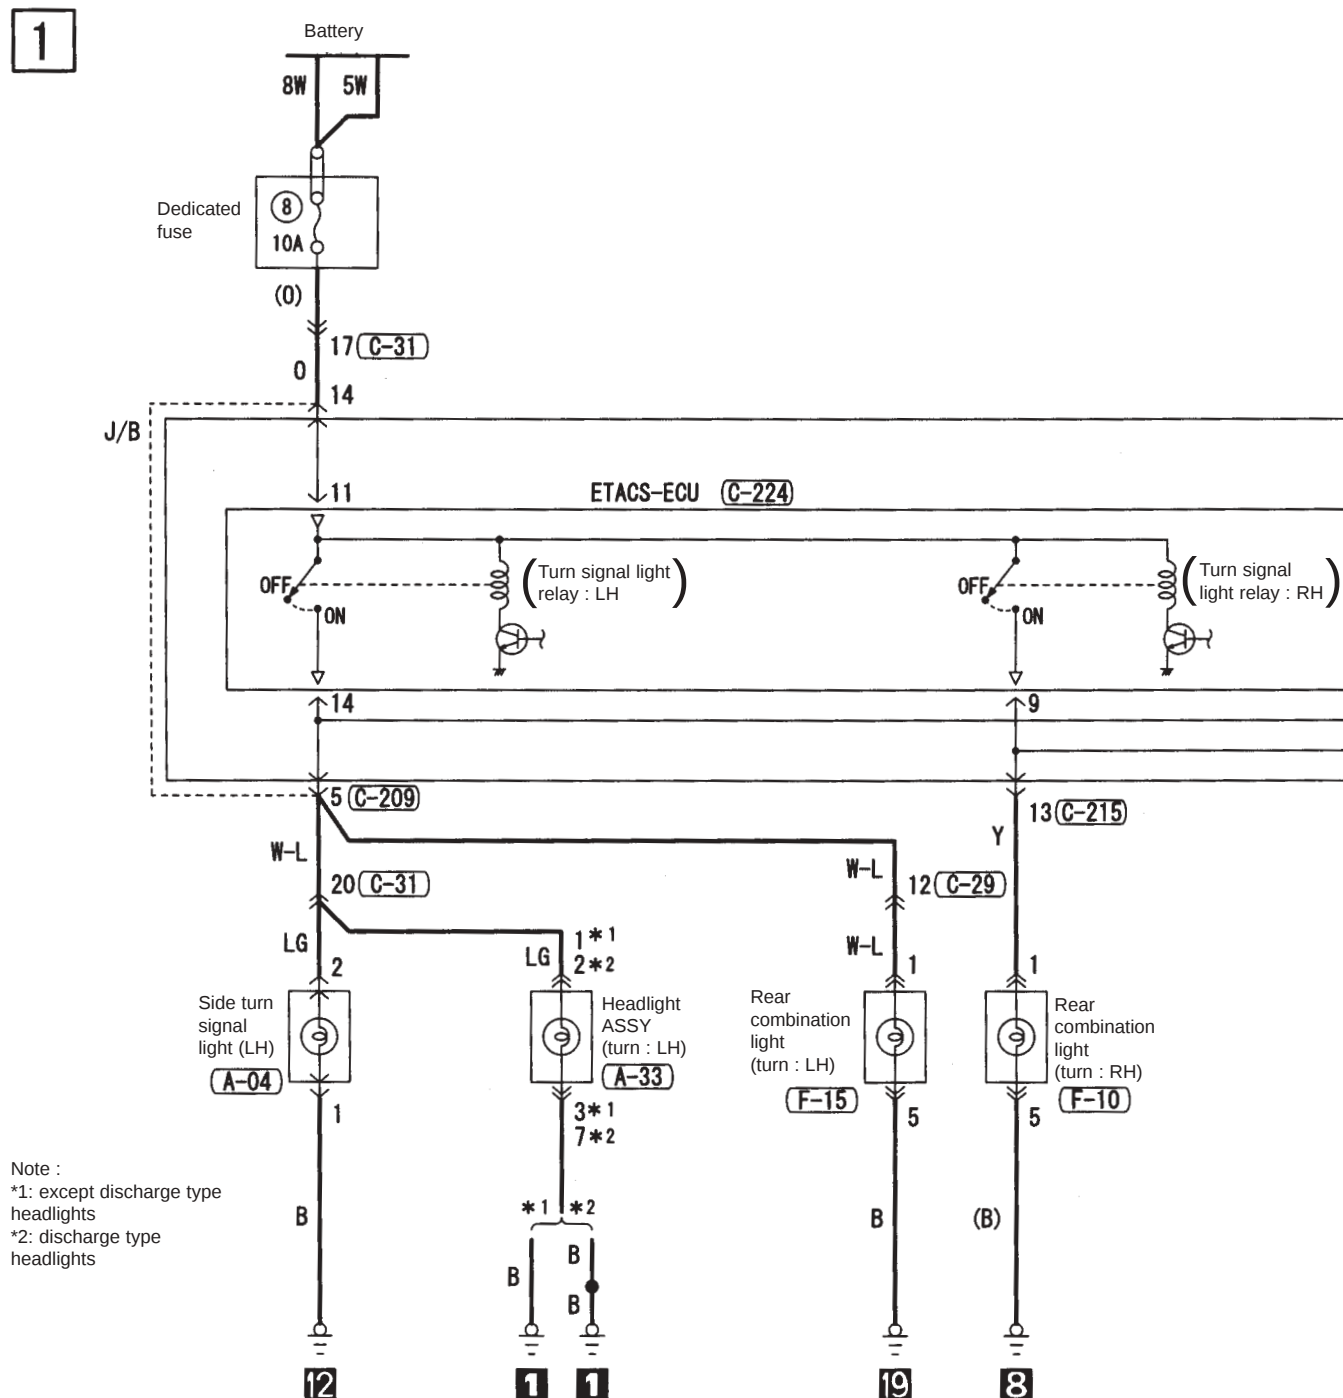

A-01

A-04

A-33

MU802605

*1

MU802609

*2

A-41

MU802605

*1

MU802609

*2

C-29

MU801855

C-31

C-209

MU801857

C-212


C-215

C-224


J/B side connector

H5J09J01AA

2

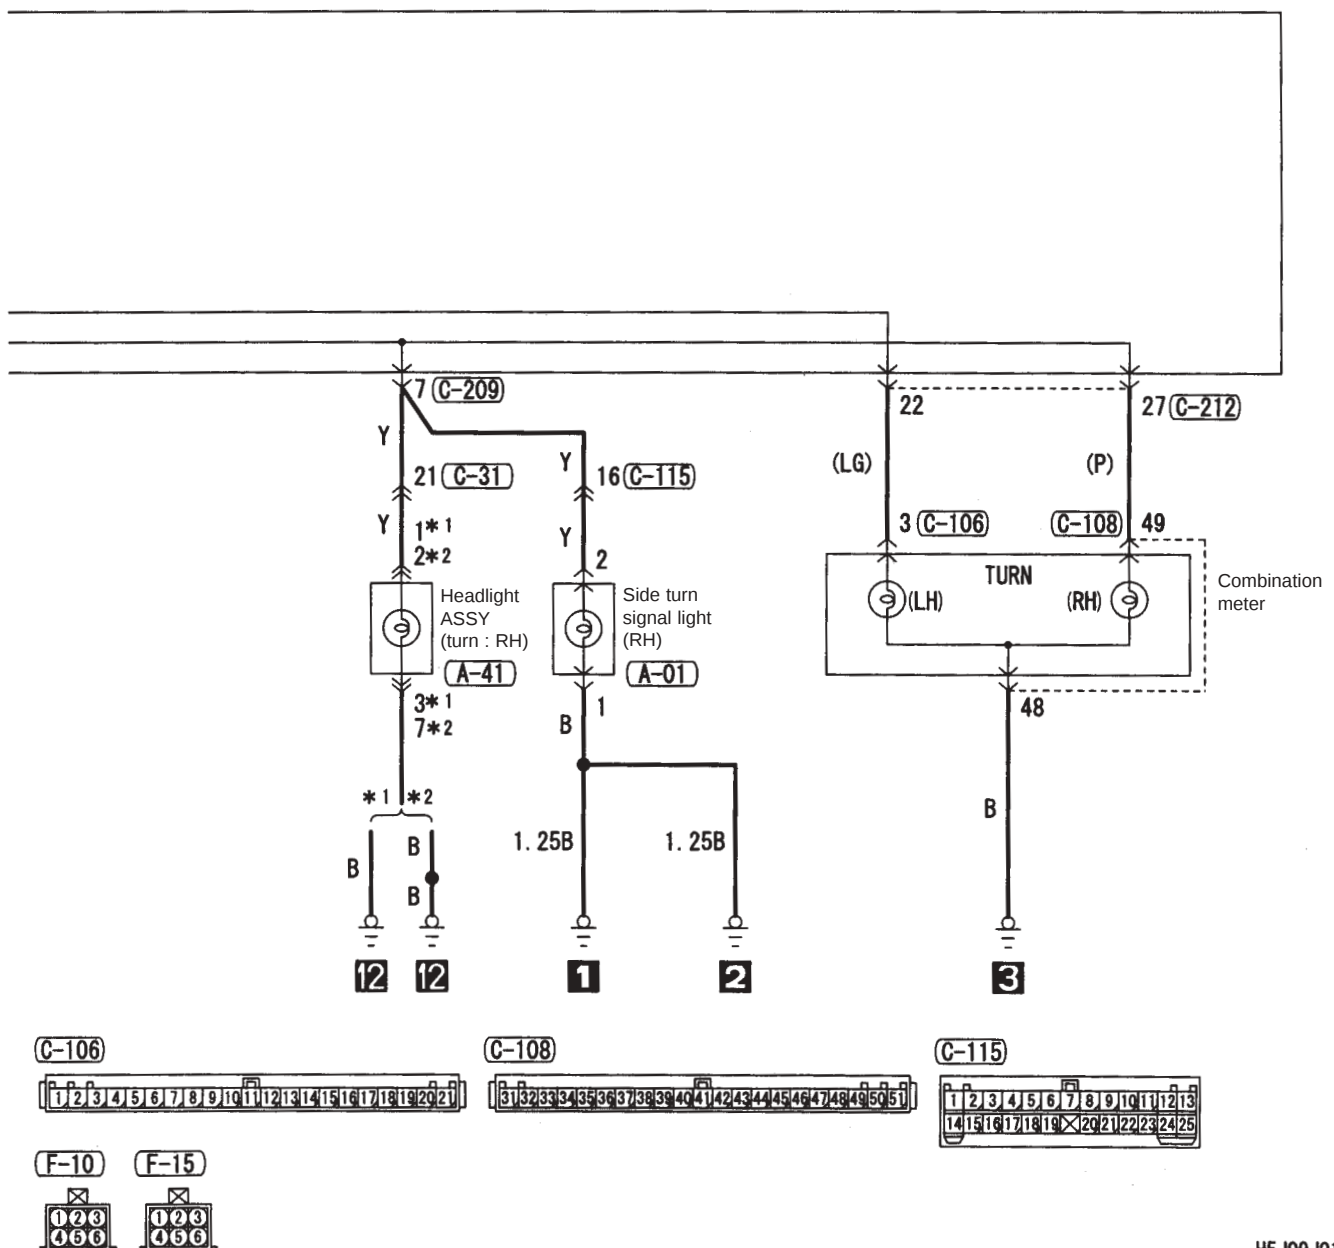

Turn signal lights, hazard lights (cont'd)

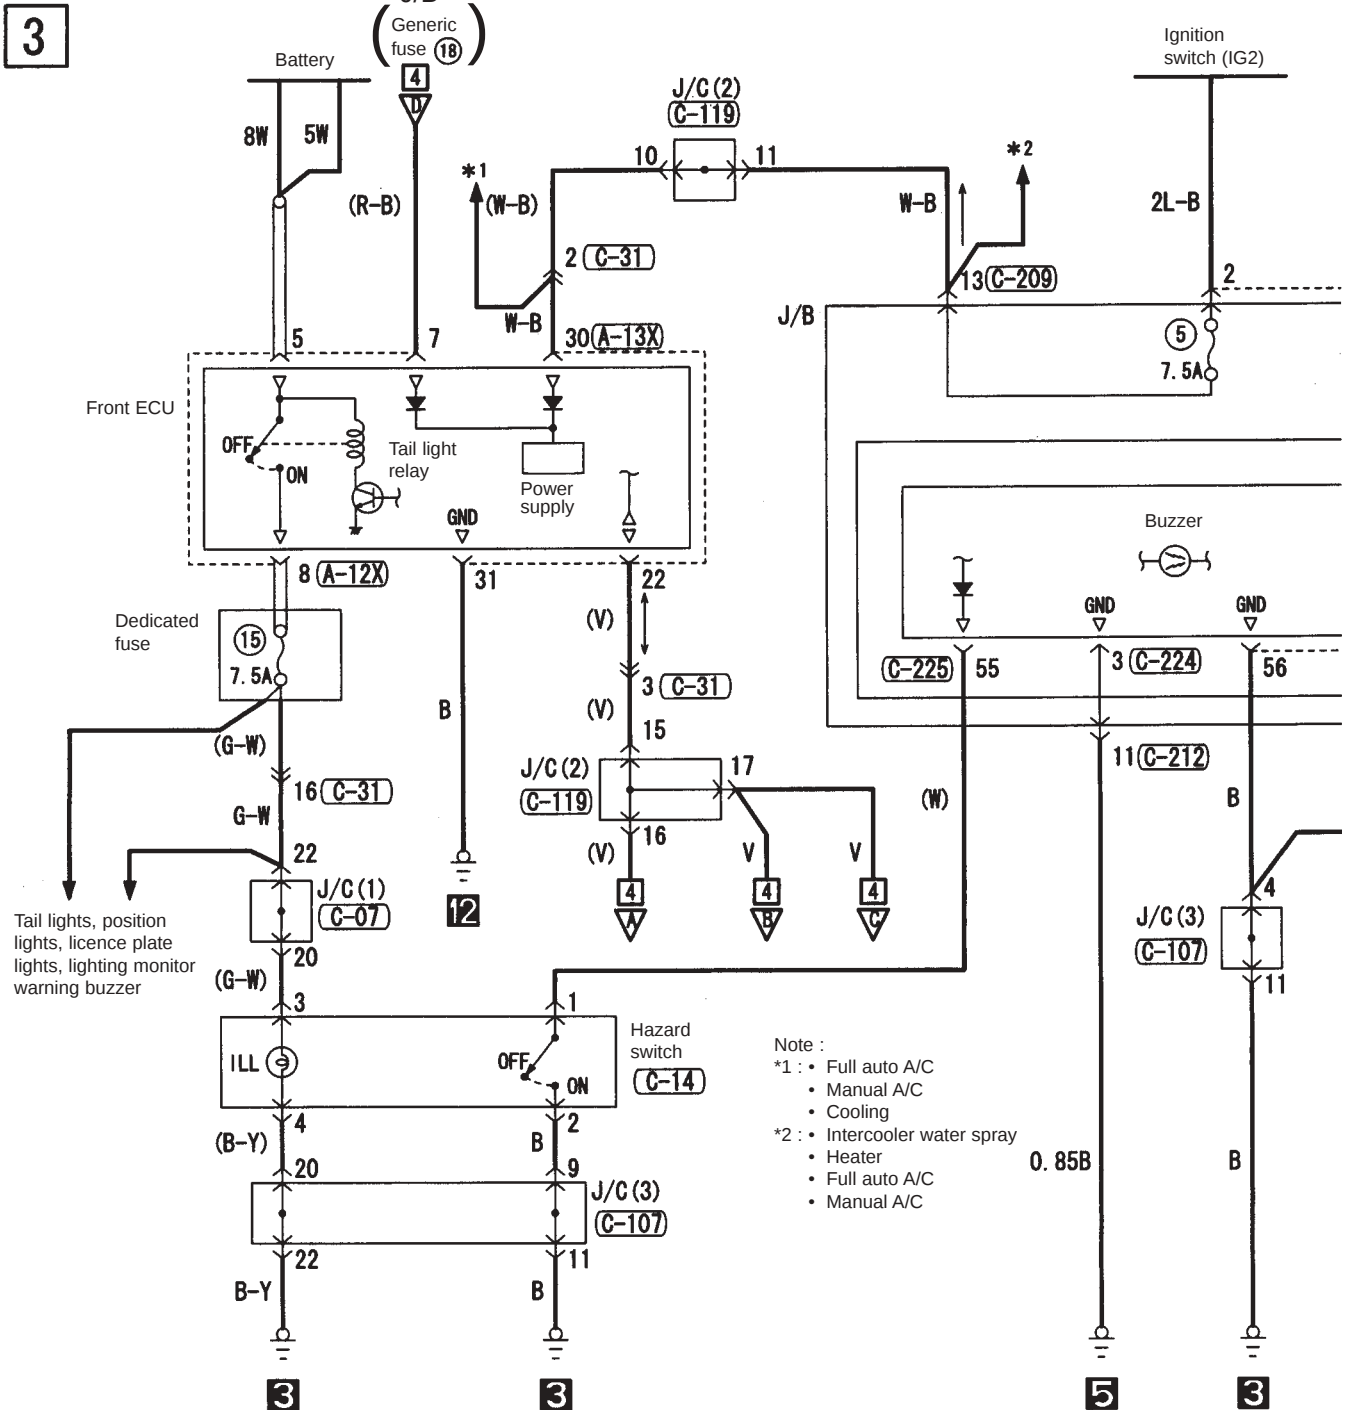

(A-12X)



(A-13X)



(C-06)



(C-07)



(C-14)




(C-119)



(C-122) Front side




(C-203)



(C-209)





(C-210)



(C-211)




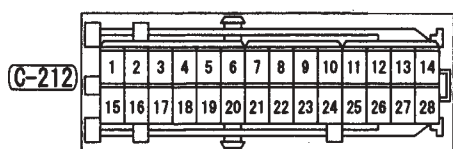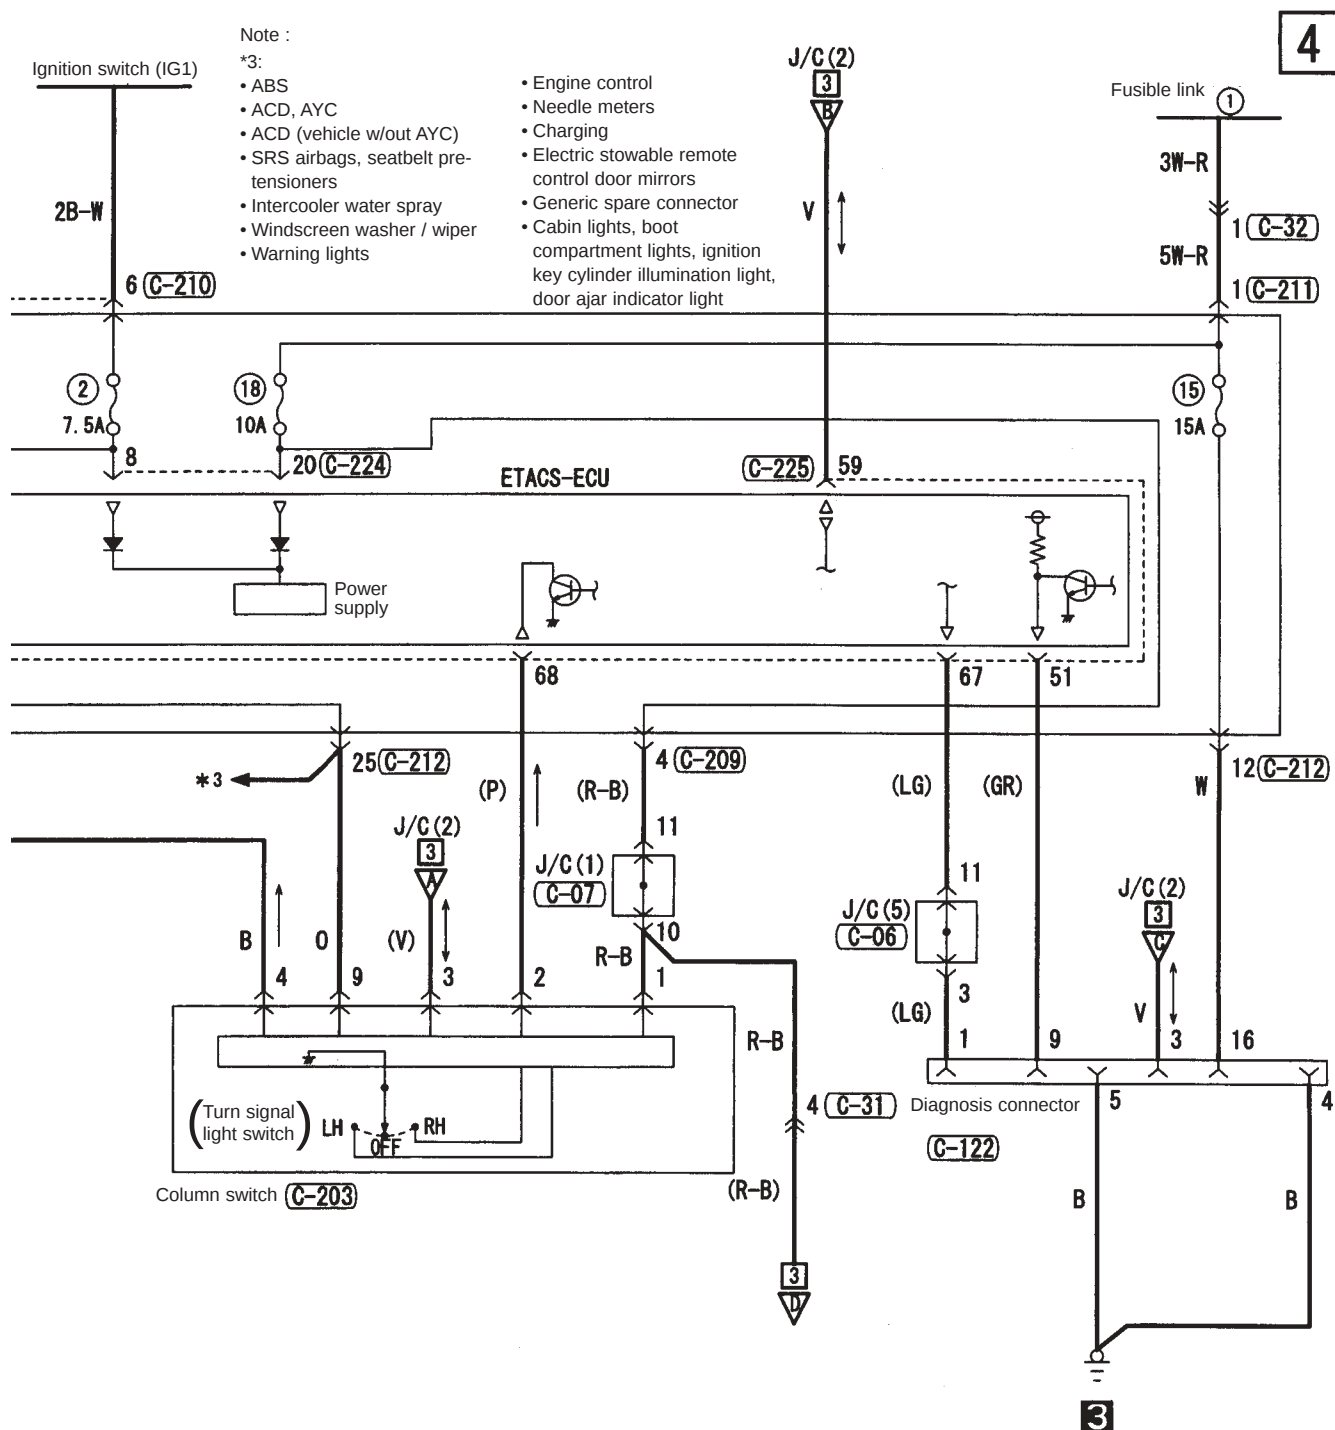

C-31



C-224 J/B side connector



C-32



C-107




C-225



Reversing Lights

M3030003100278

1

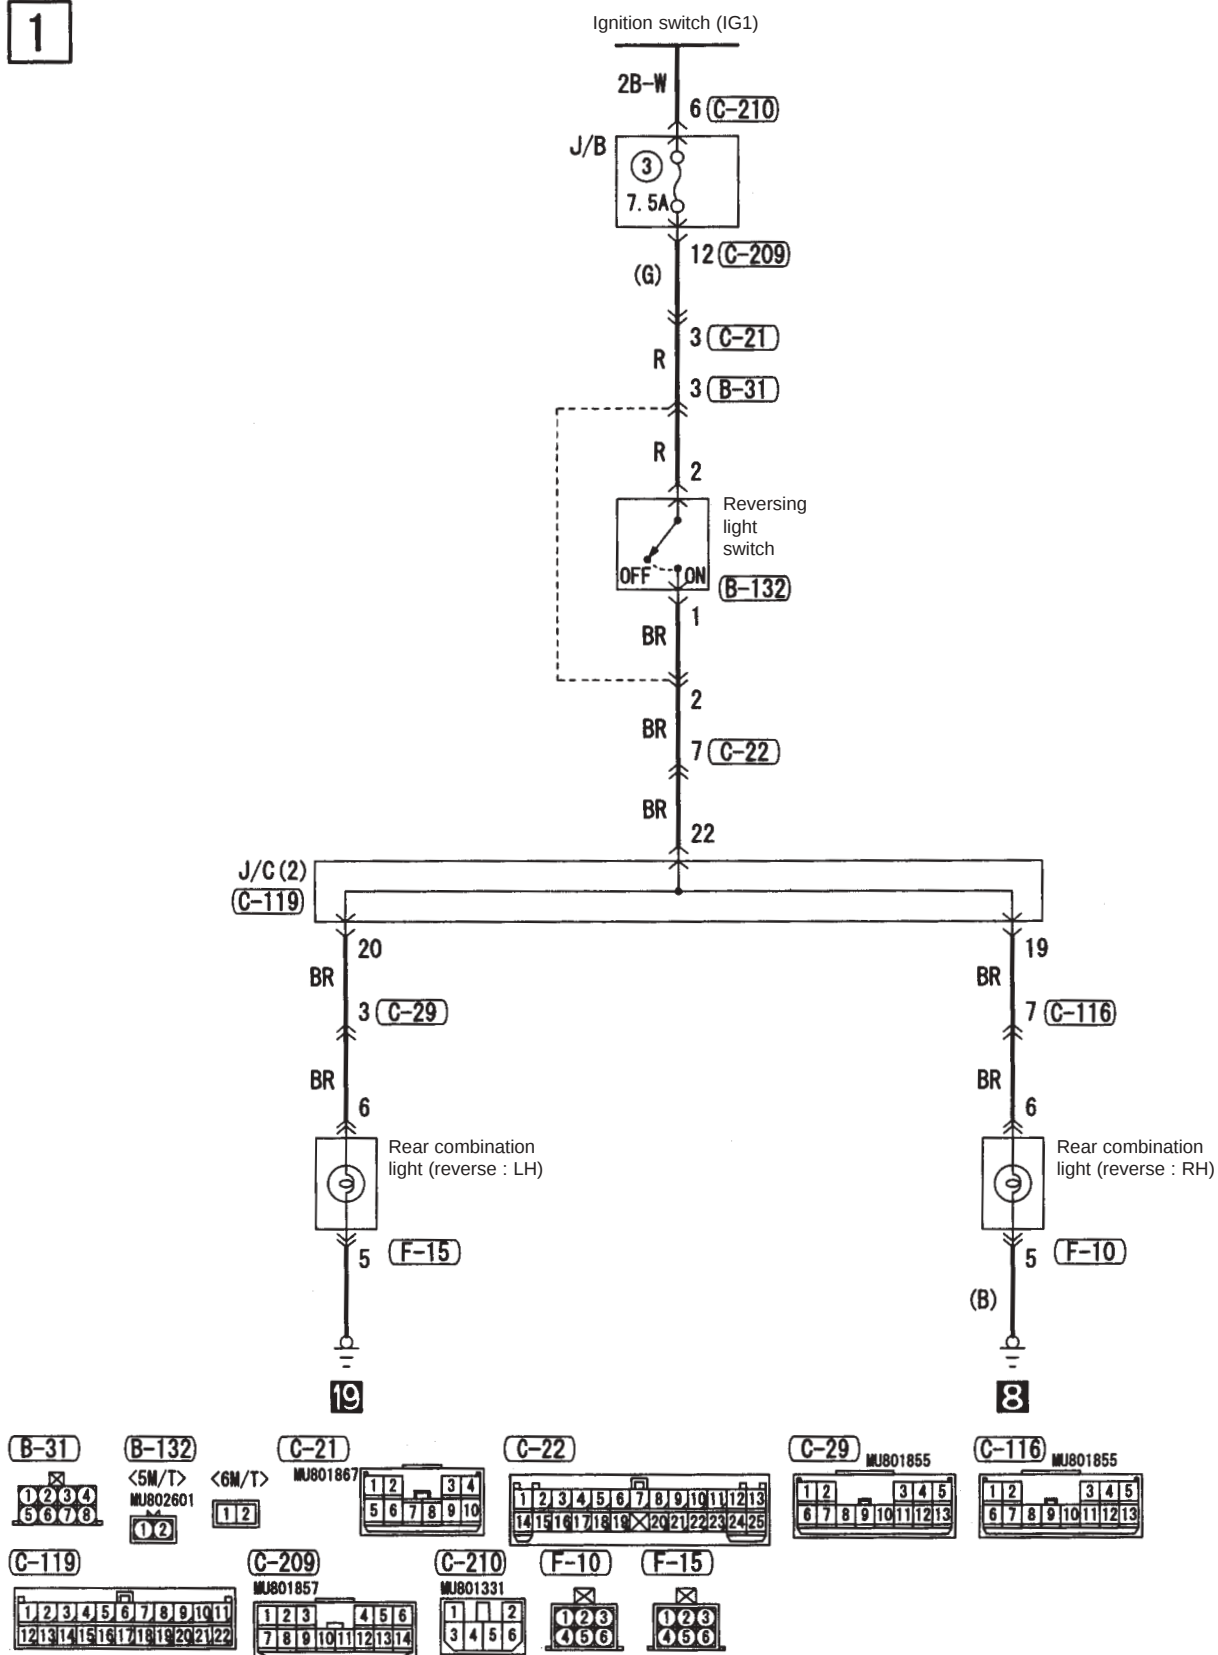


H5J09J02AA

Stop Lights

M3030003000657



1

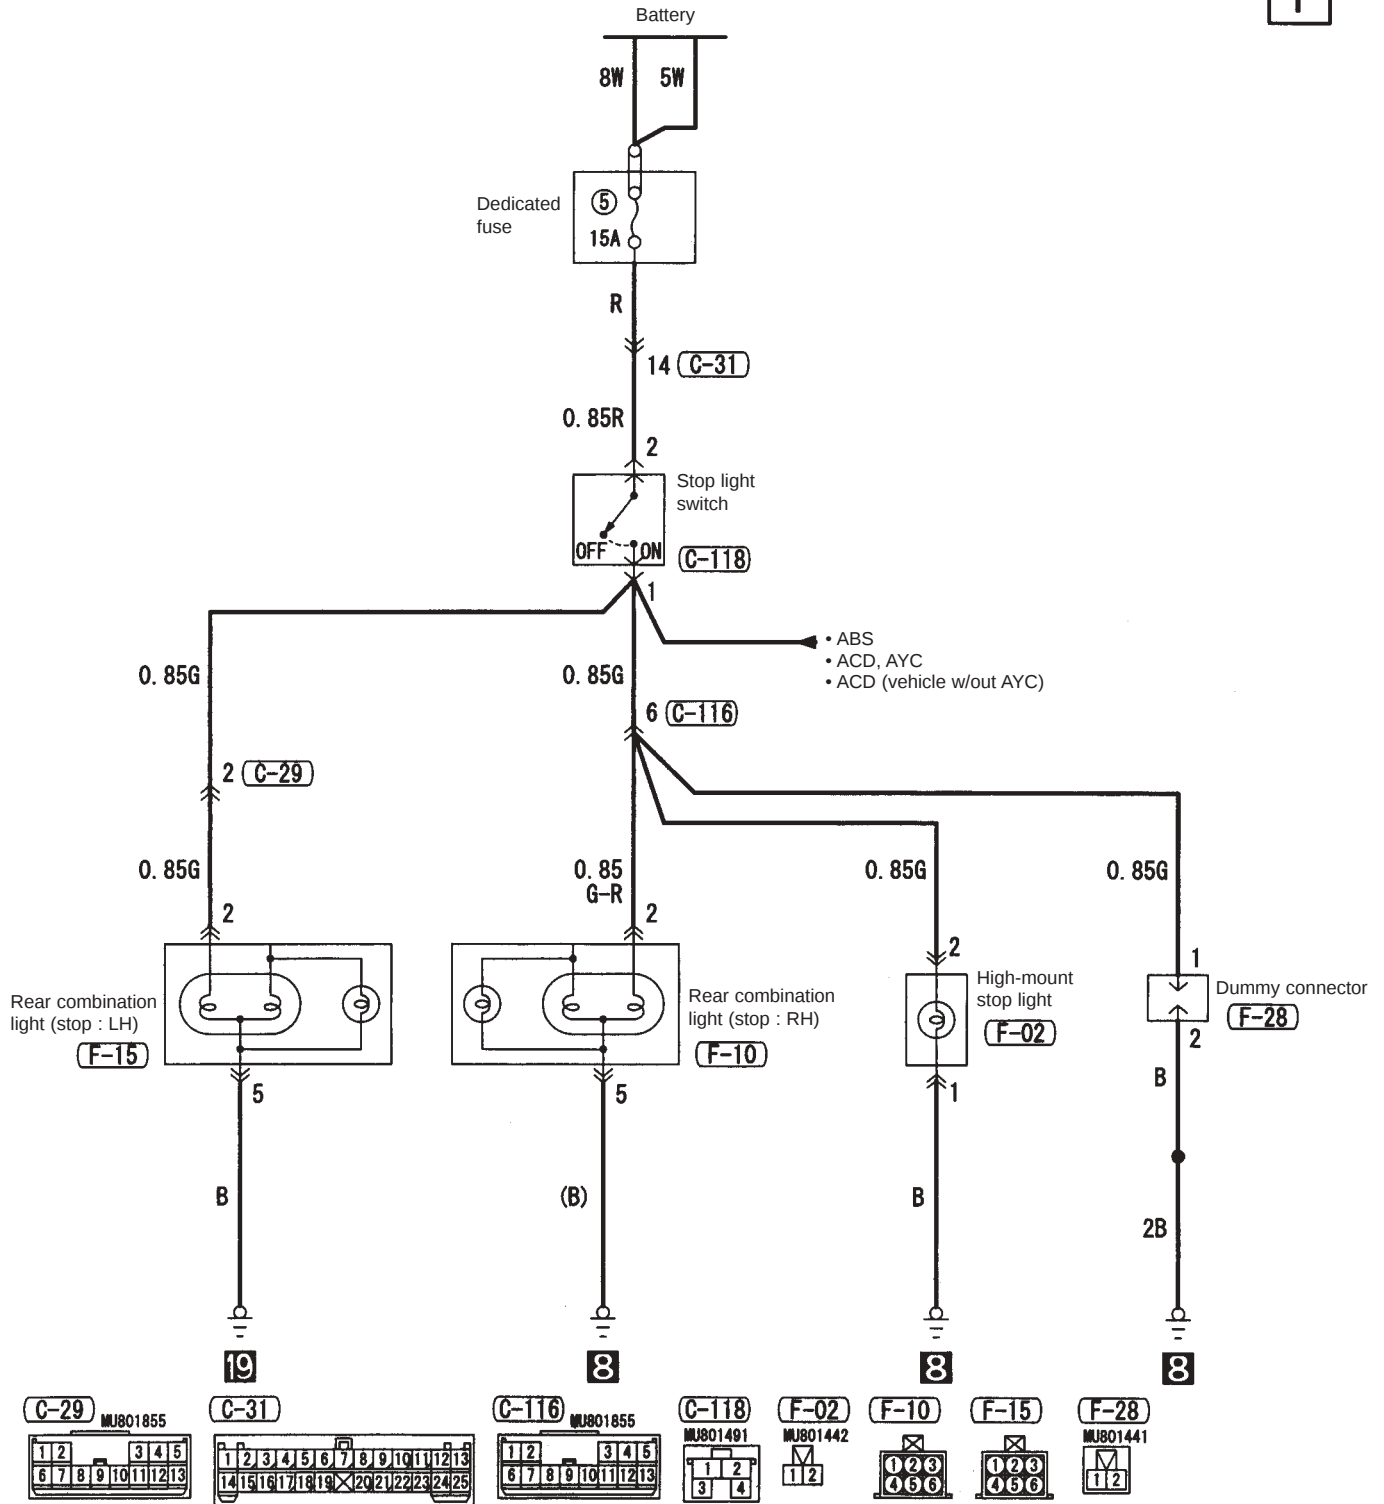

Horn

M3030003300528

1

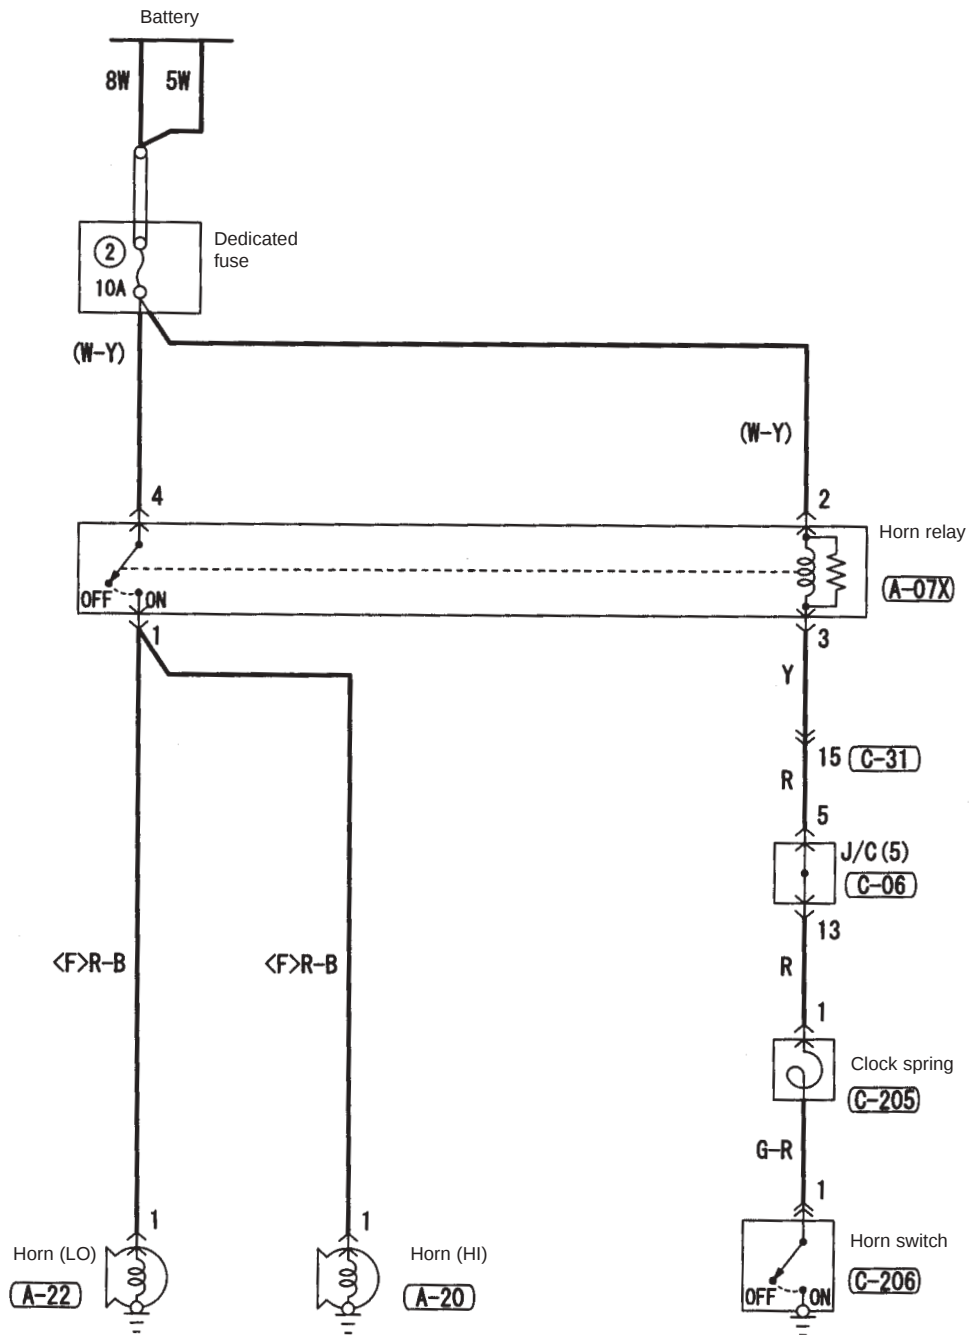


<Notes>

METERS


Needle meters

M3030003501042

1

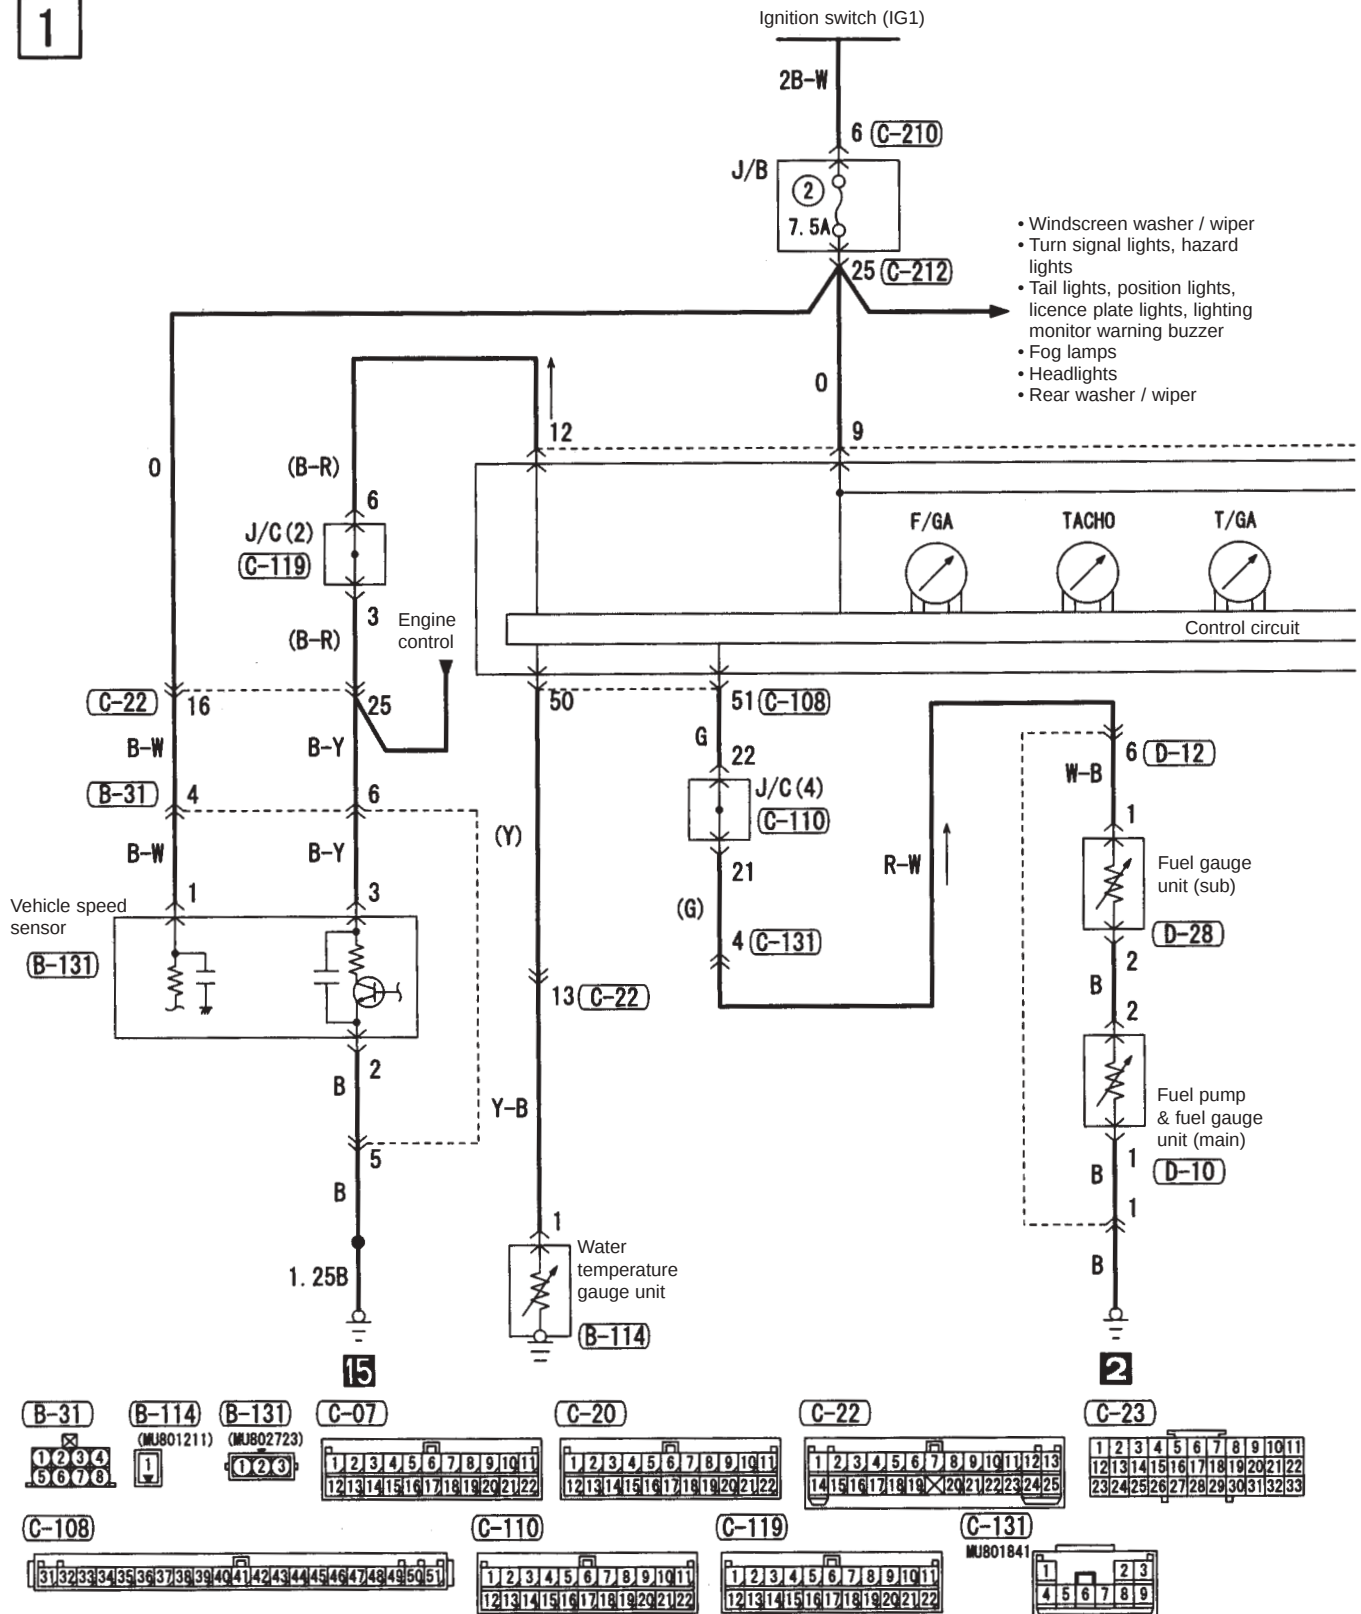

H5J10J02AA

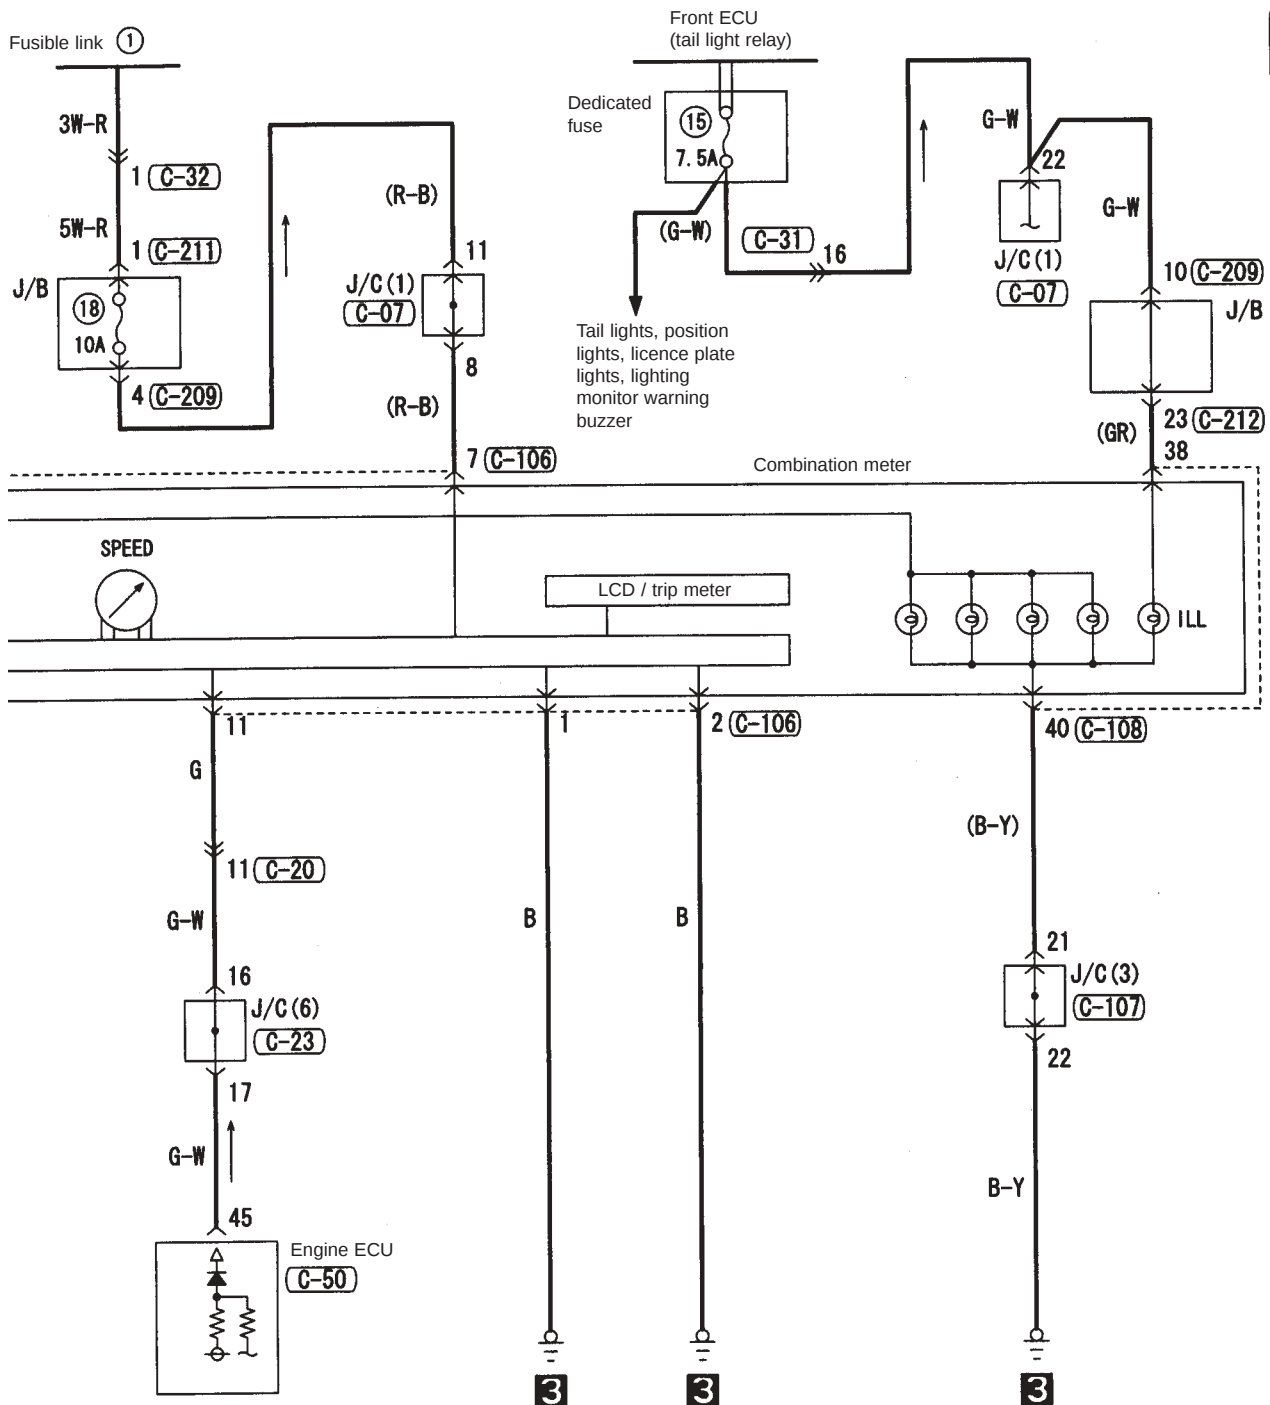

C-31



C-32



C-50



C-106



C-107



C-209



C-210



C-211



C-212



D-10



D-12




D-28




Fuel warning light, oil pressure warning light, brake warning light, seatbelt warning light

M3030017900039

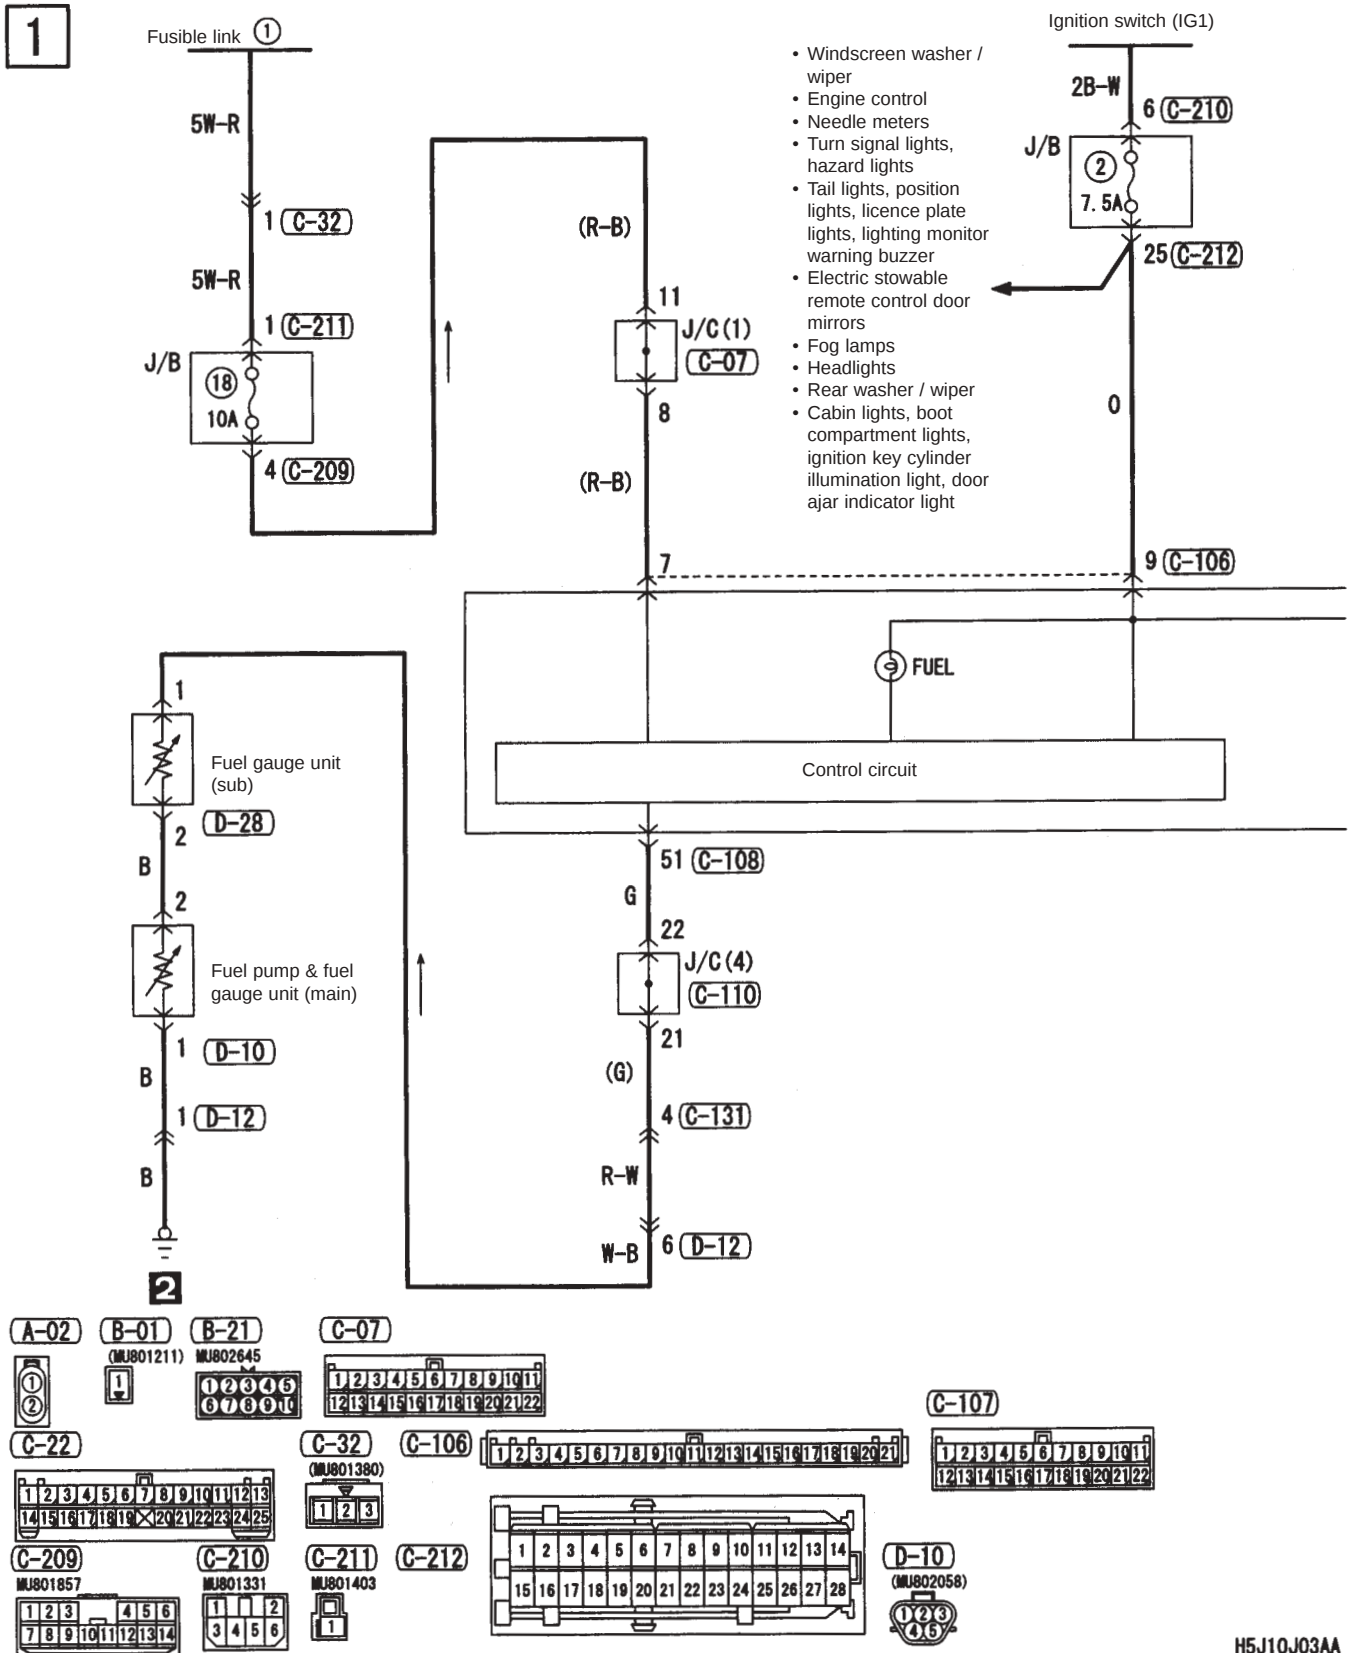

H5J10J03AA


2

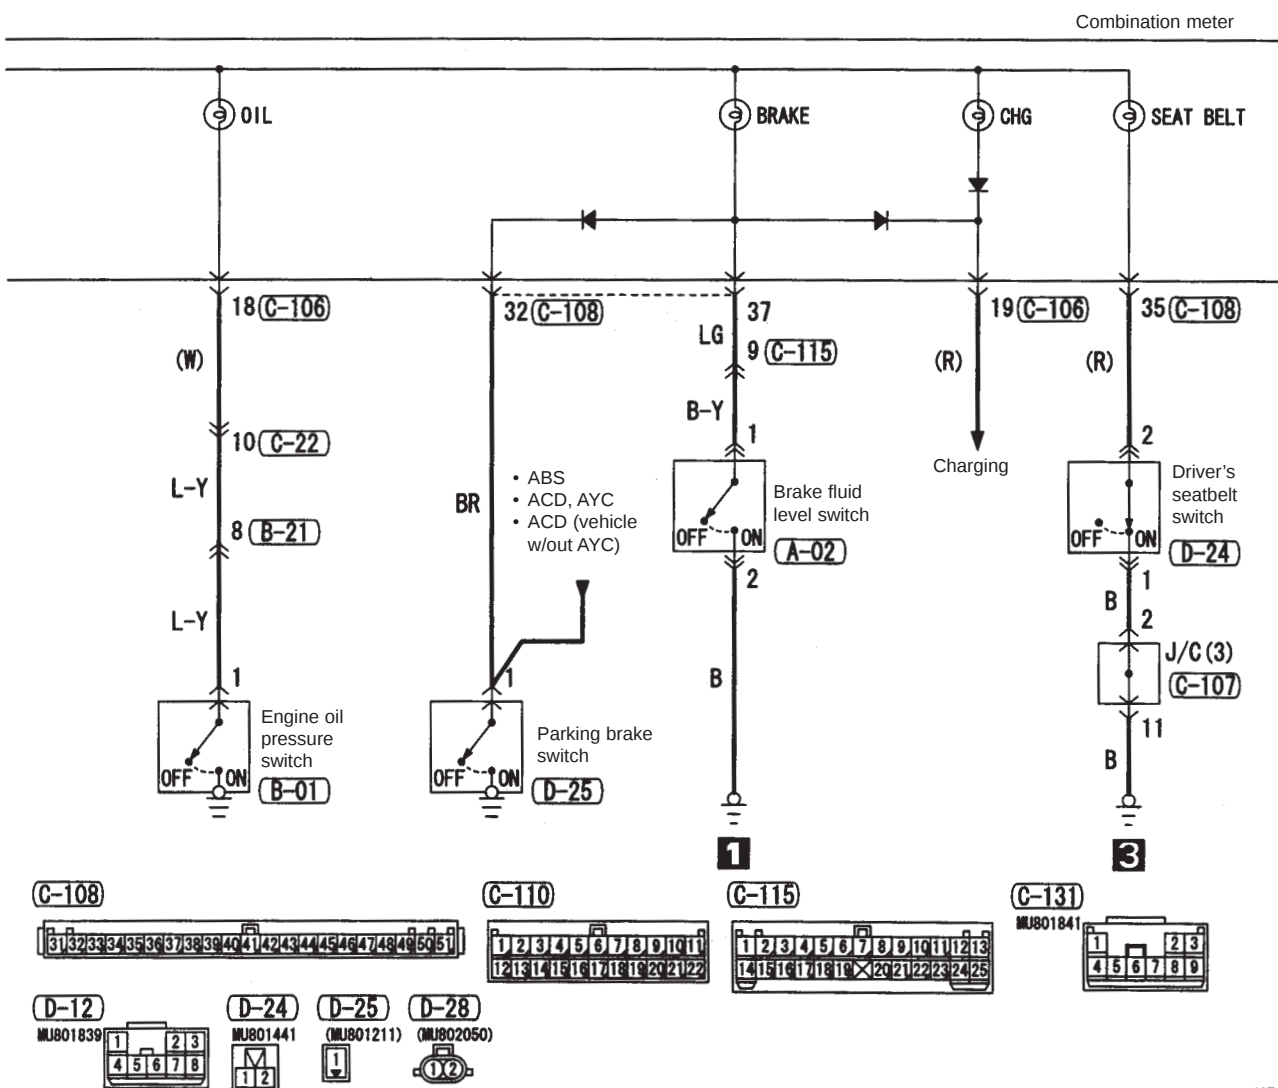

DOOR OPENING / CLOSING CONTROL

Power Windows

M3030004600737

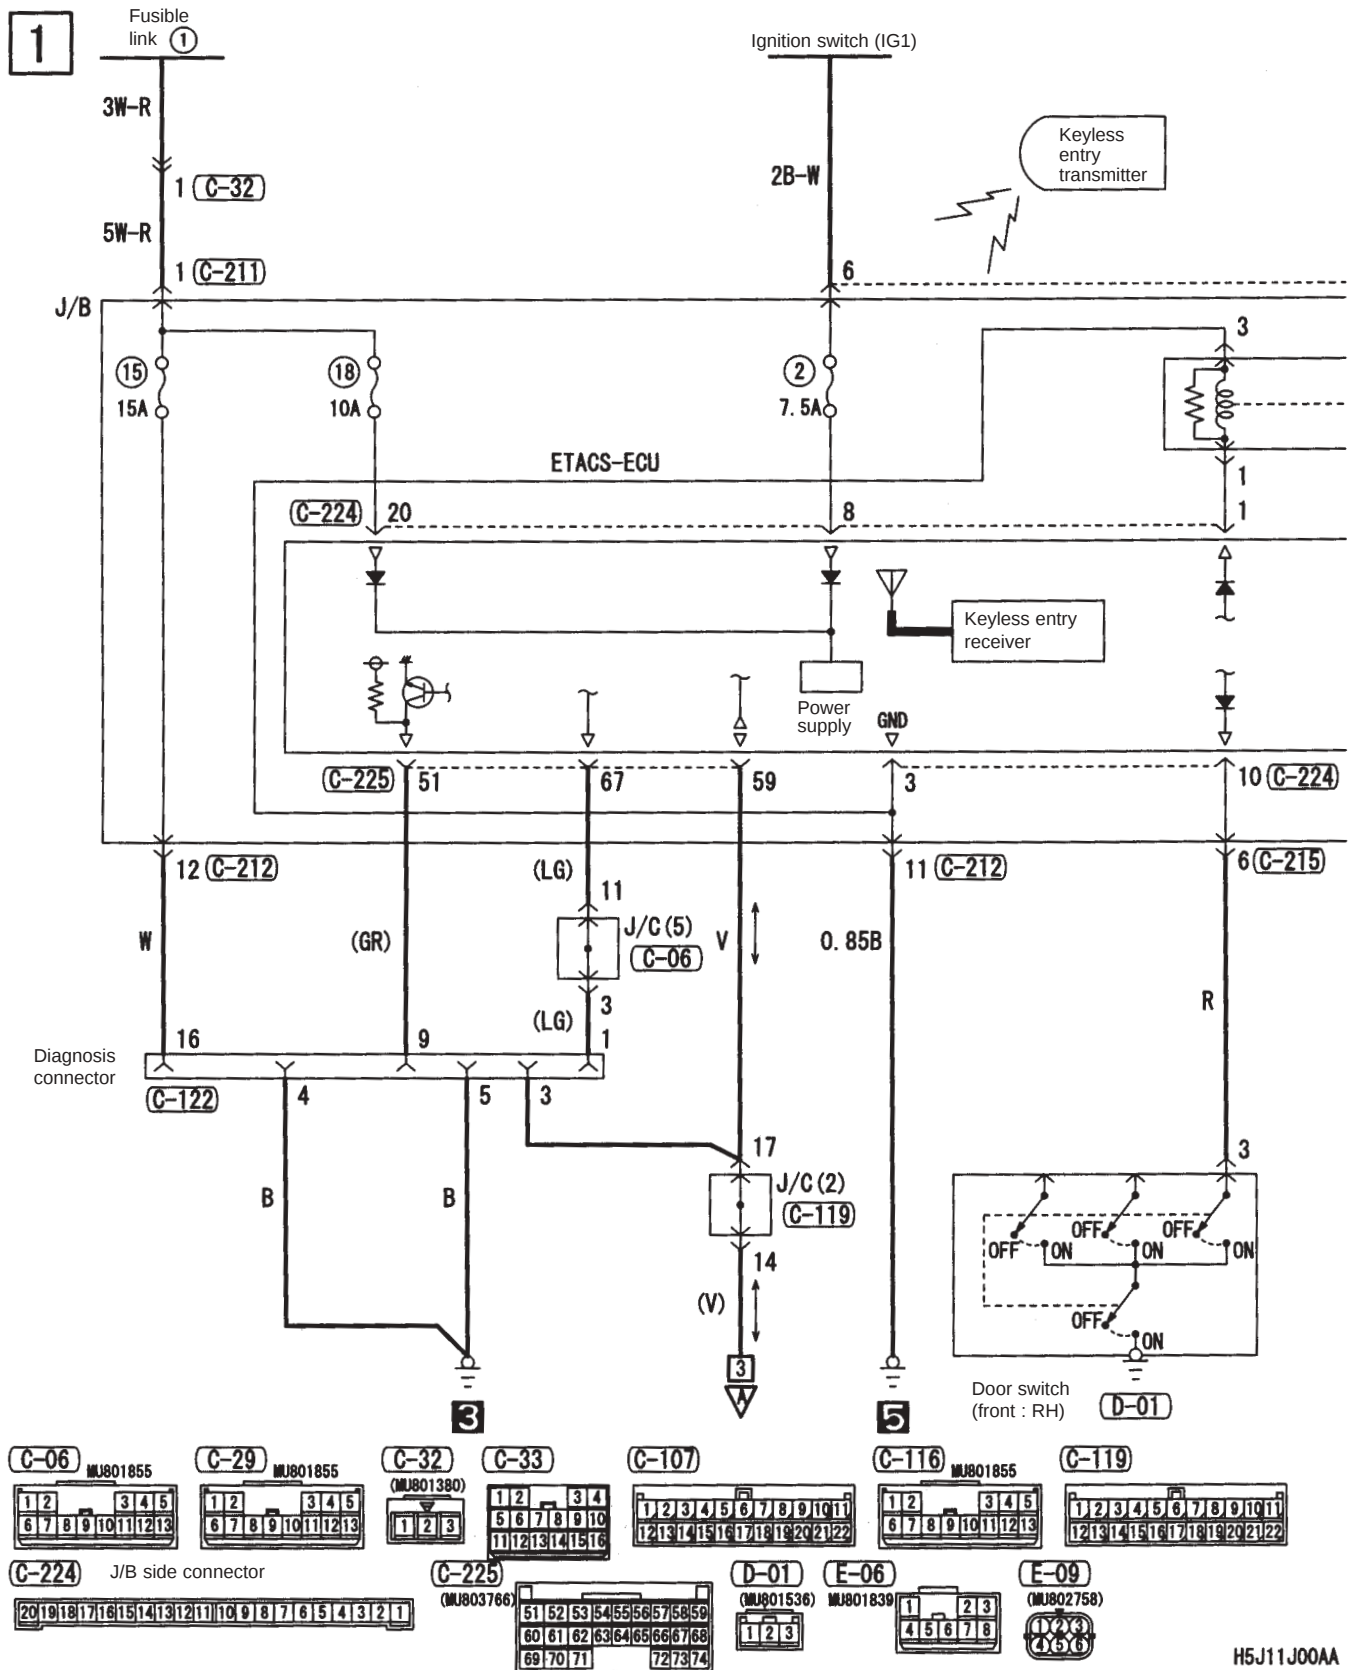


H5J11J00AA






3



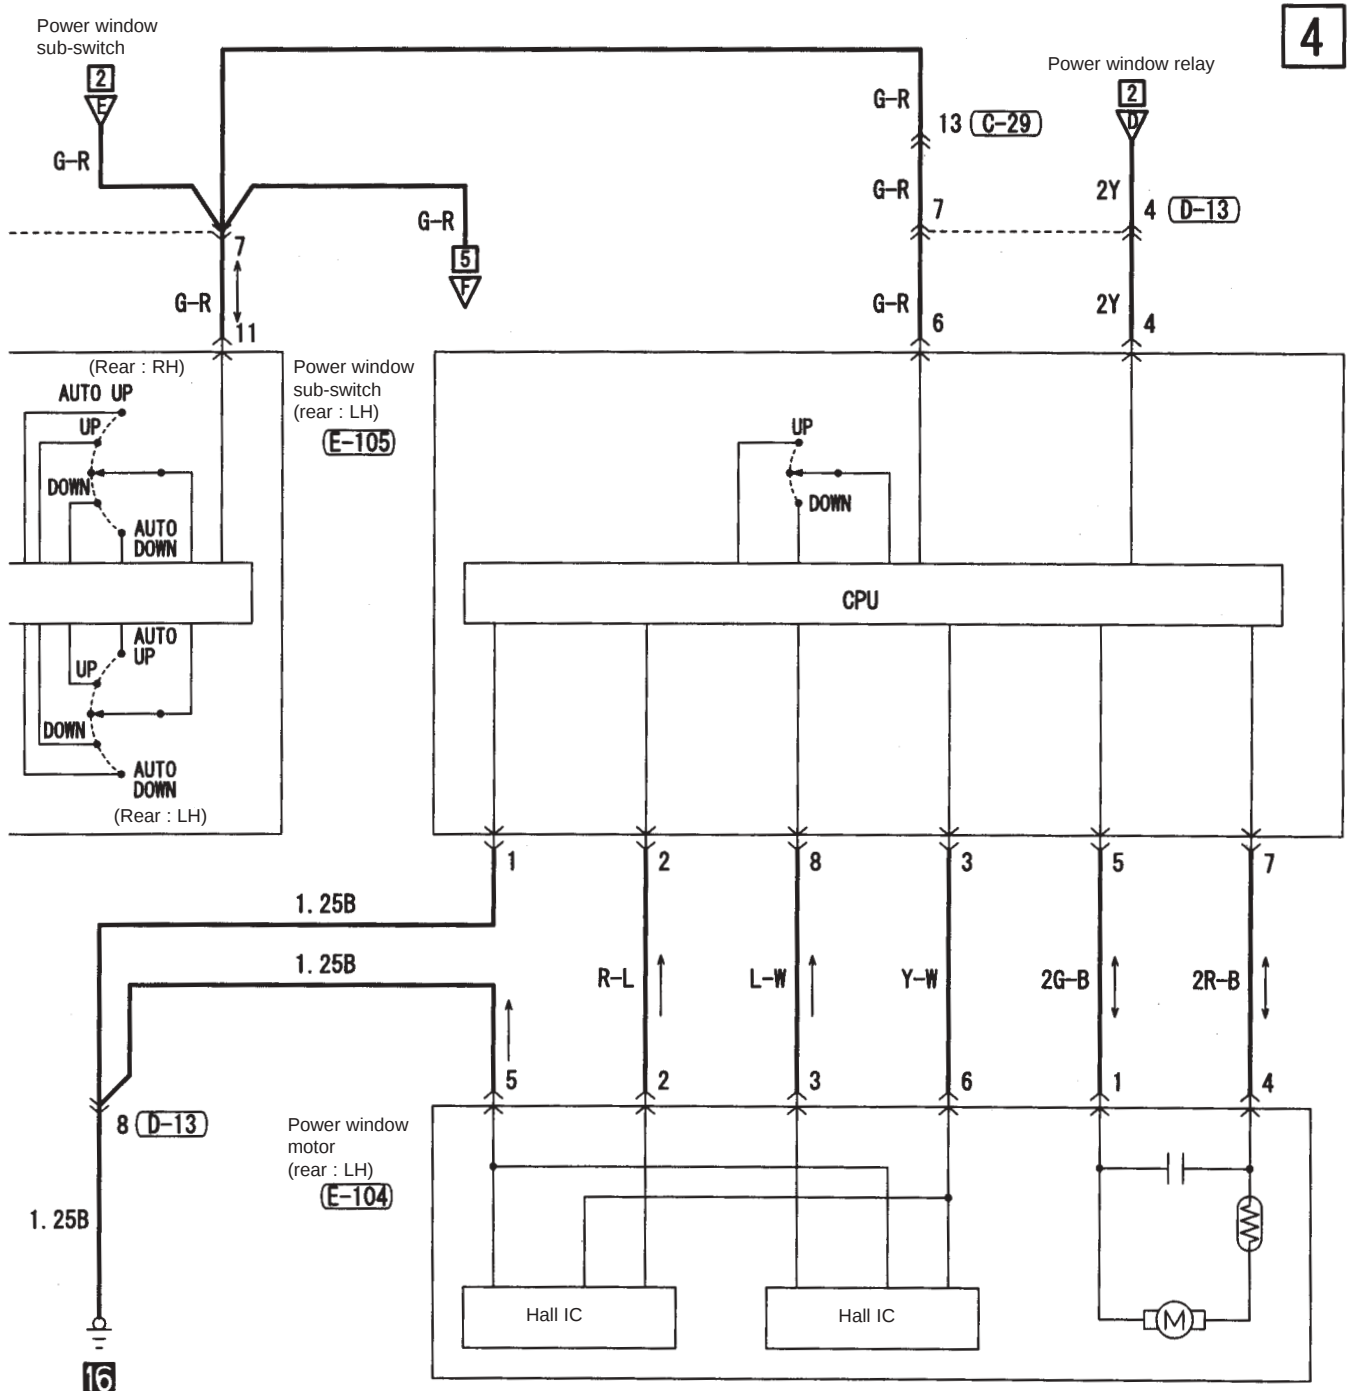

Power windows (cont'd)

5


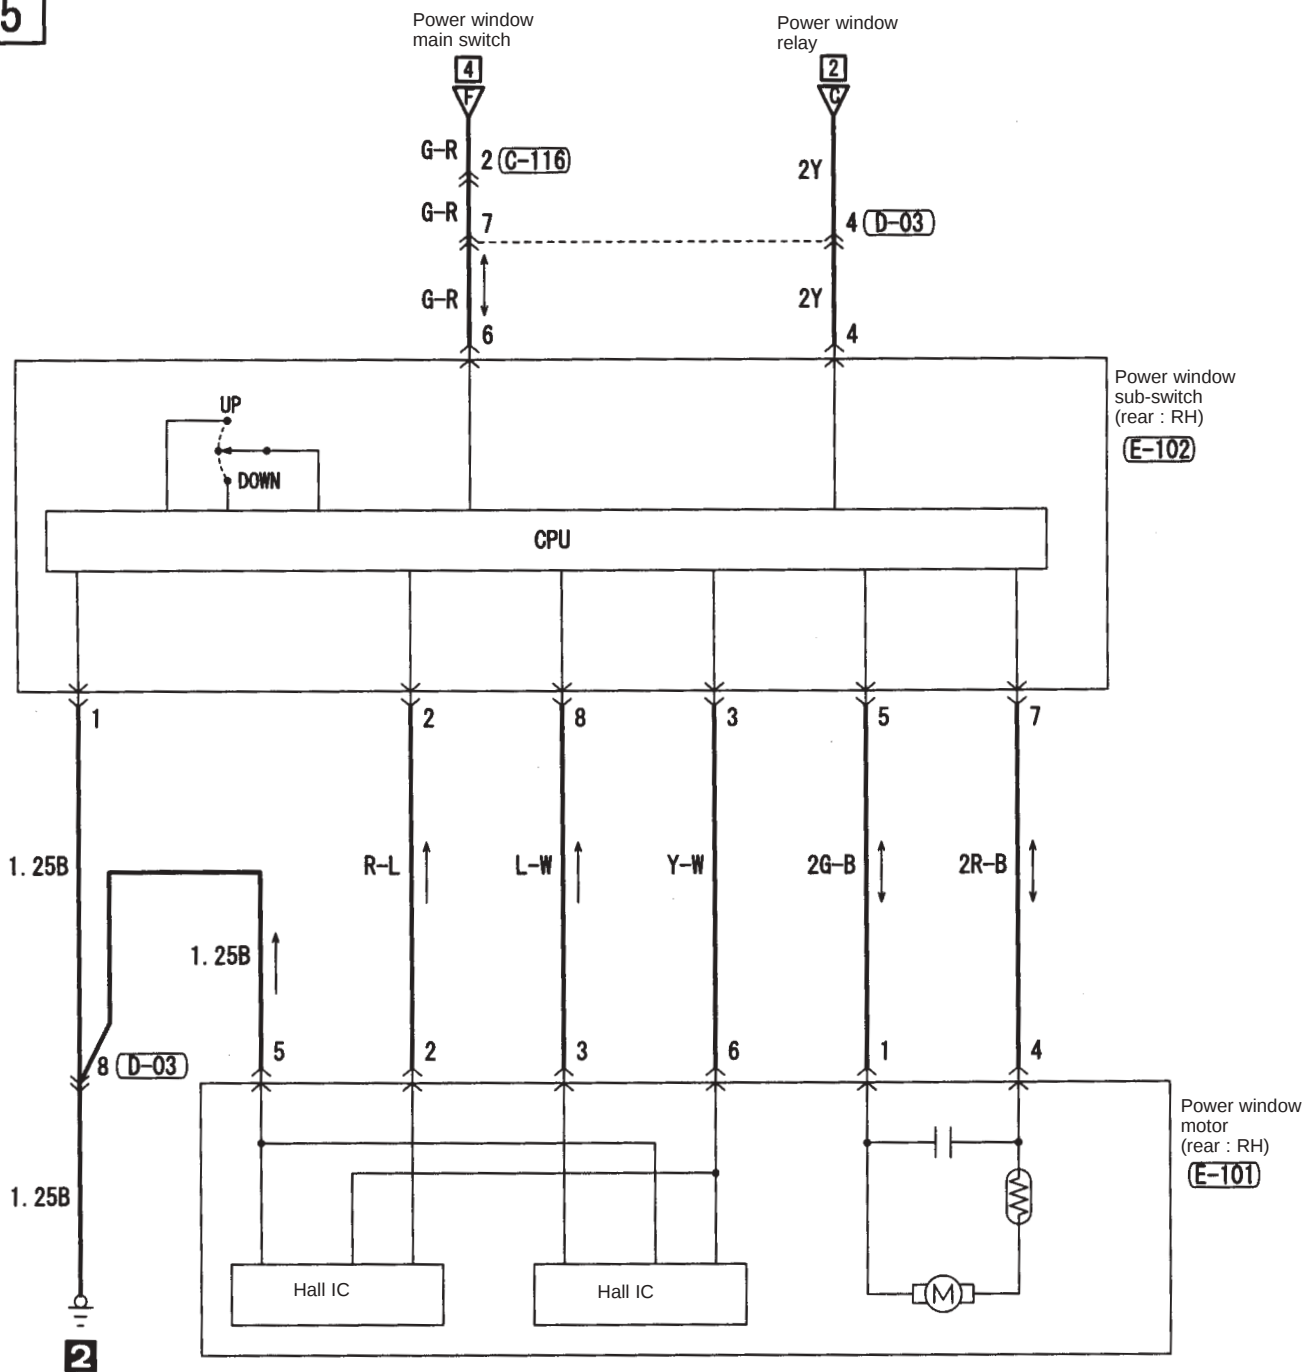


<Notes>



Central door locking (vehicle w/out keyless entry)

M3030004701049

1

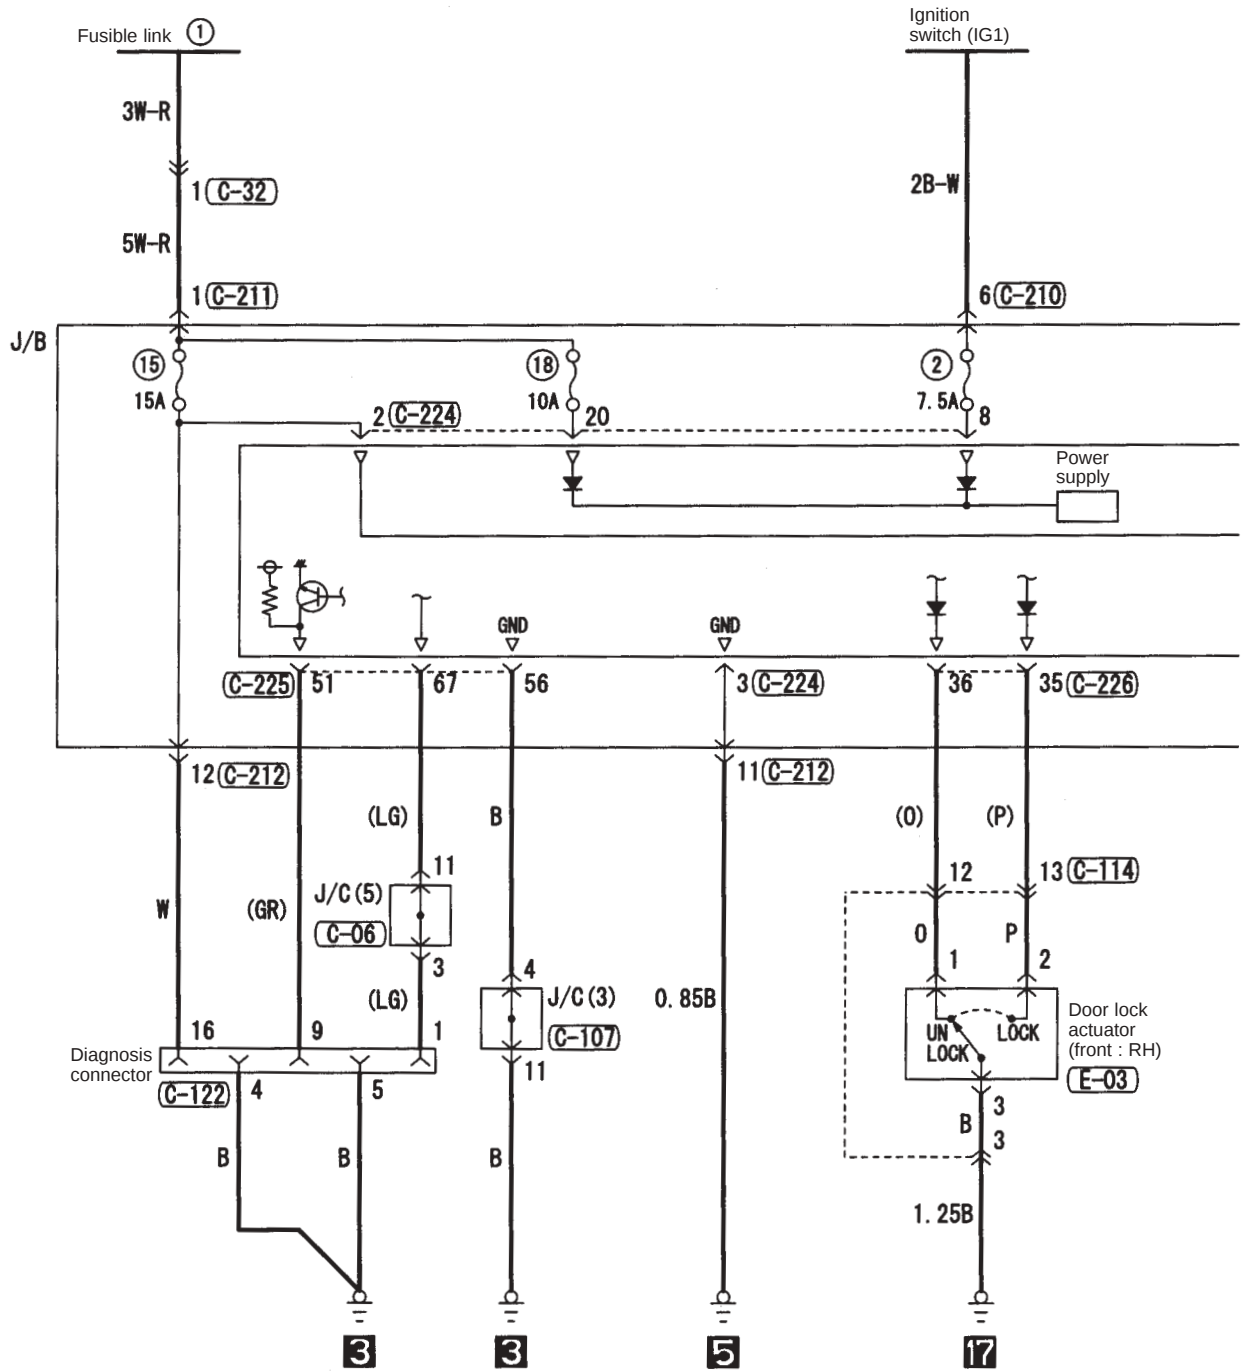


C-114



H5J11J01AA

2

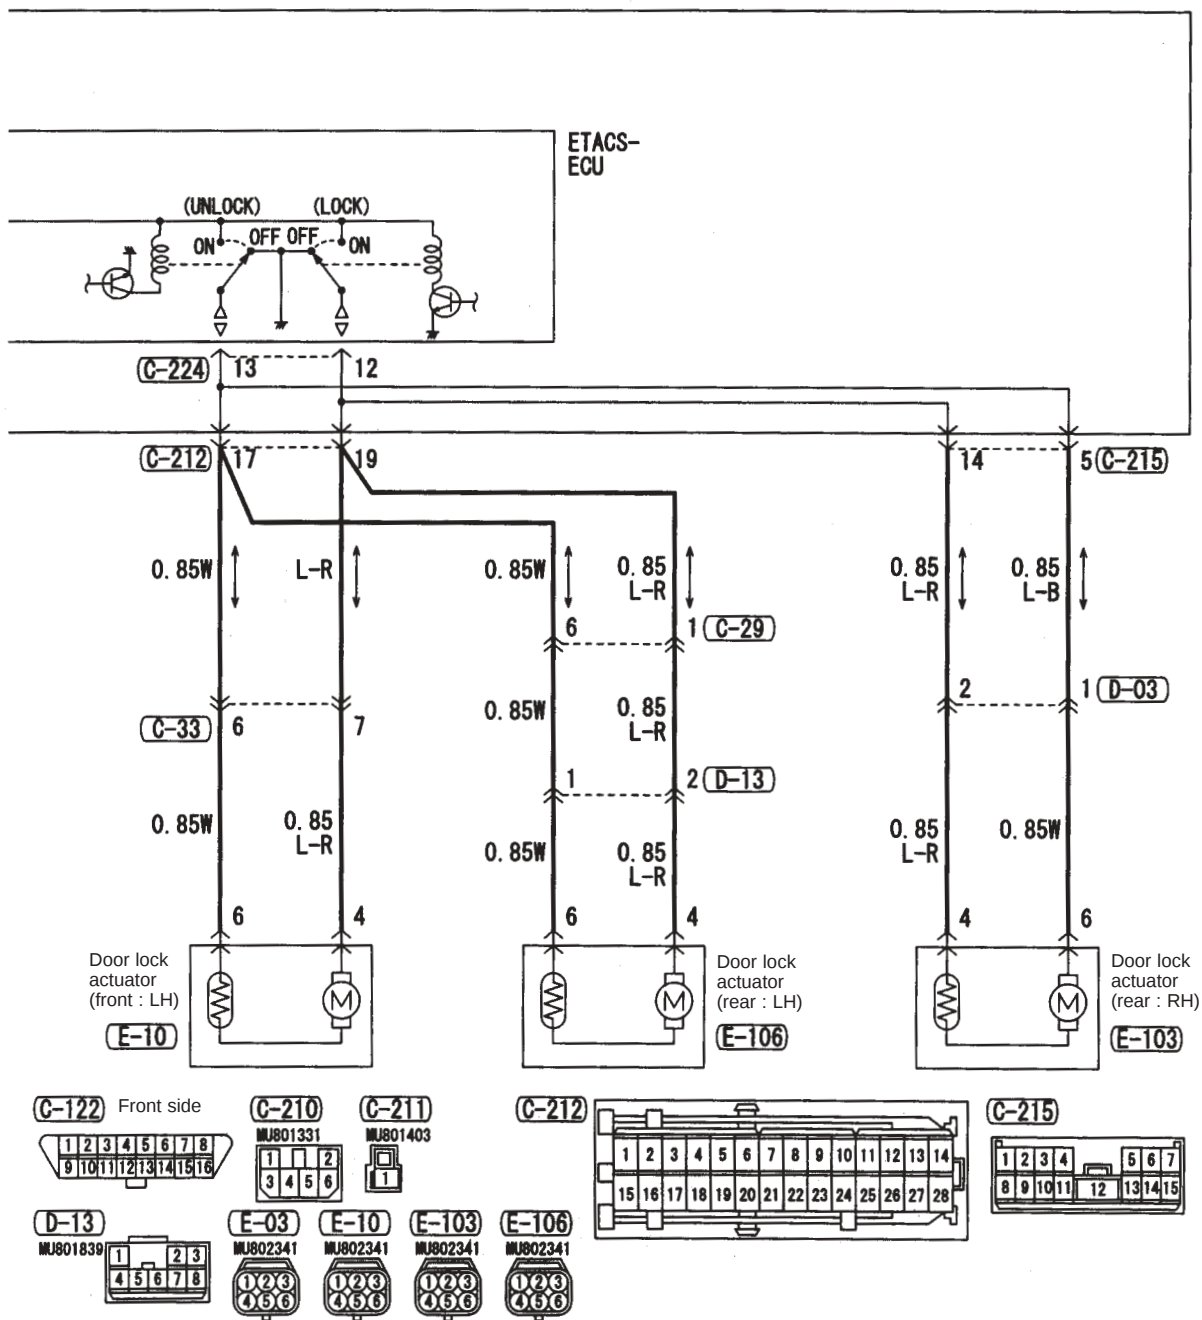


M3030004701050

1




2

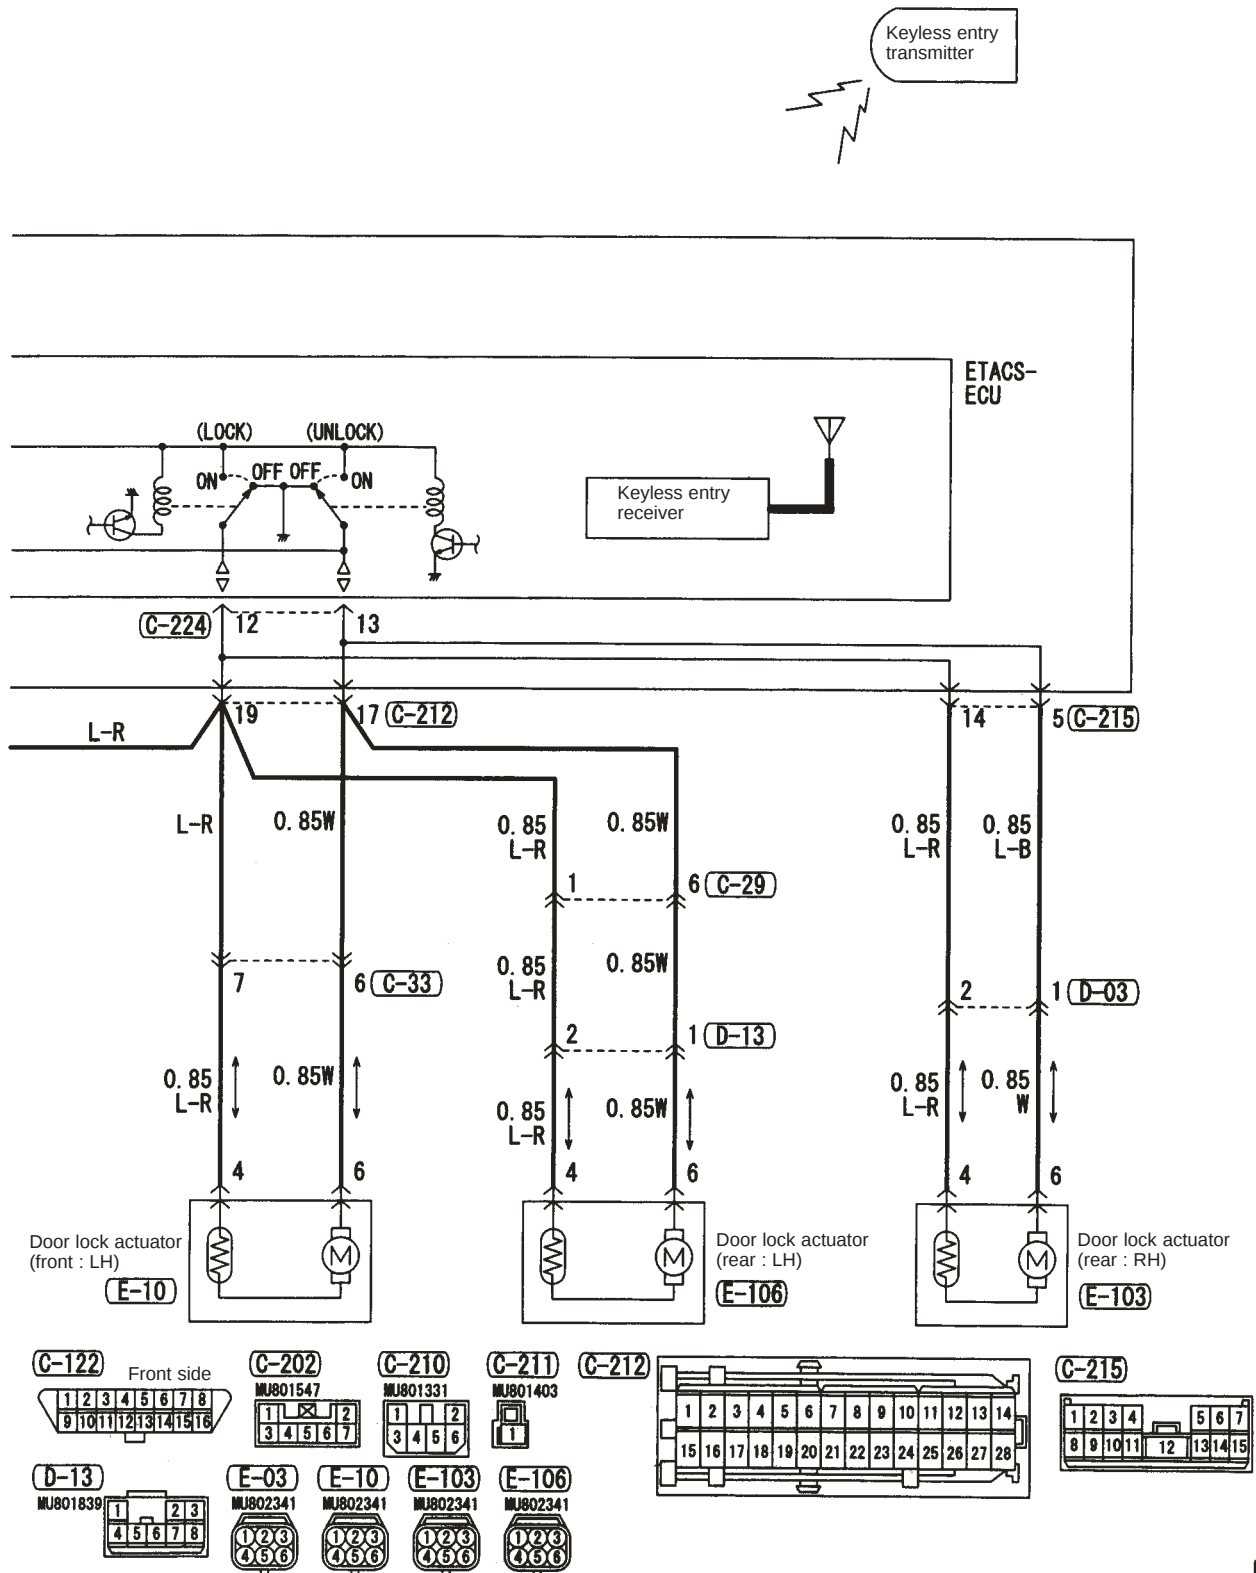


Central door locking (vehicle with keyless entry) (cont'd)

3

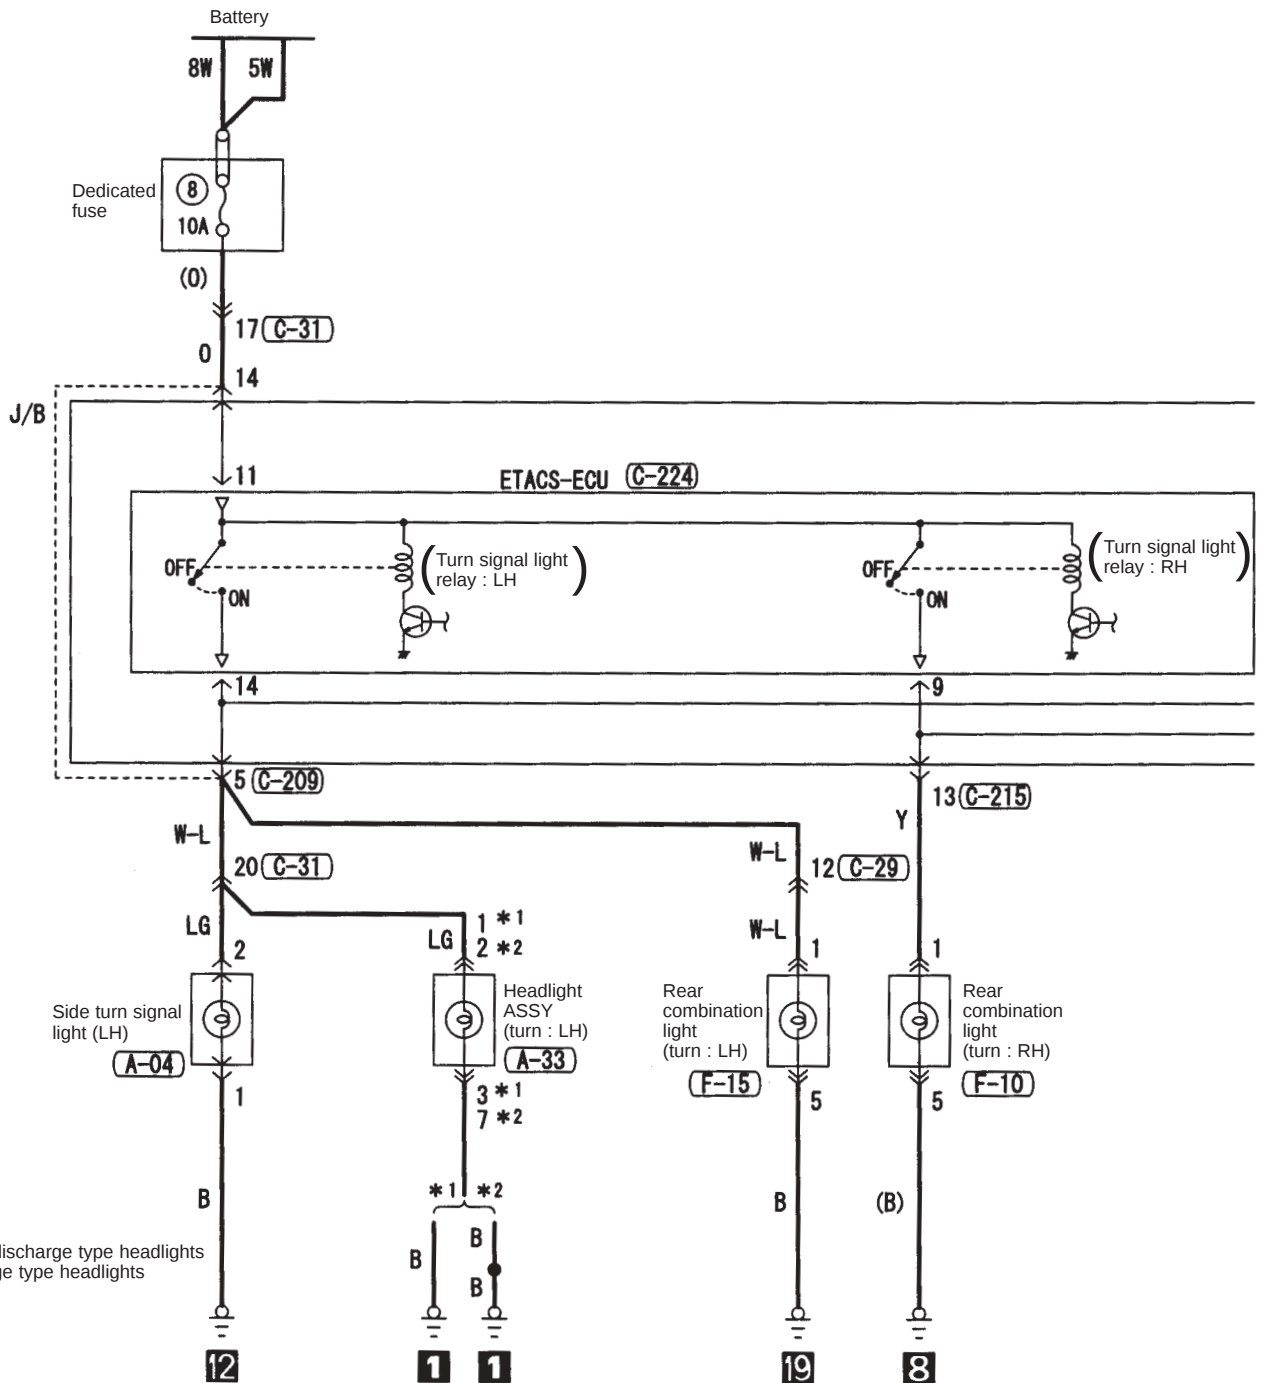

Note :
 *1 : Except discharge type headlights
 *2 : Discharge type headlights




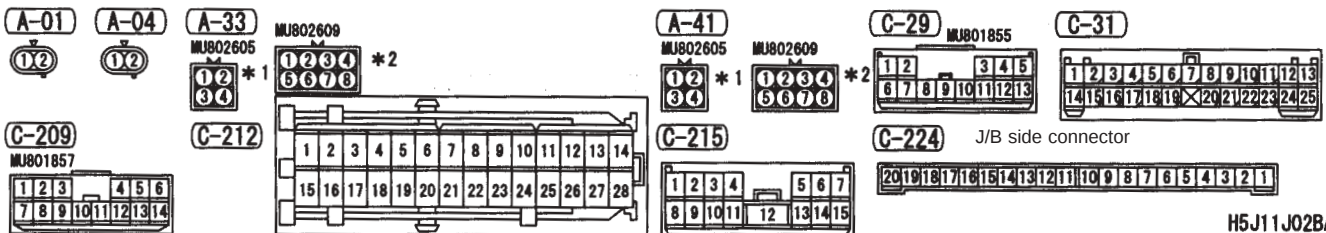


H5J11J02BA




Central door locking (wavelength with keyless entry) (cont'd)

5

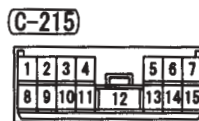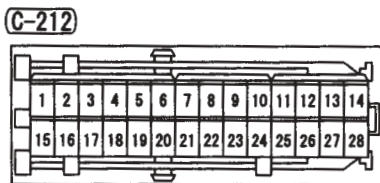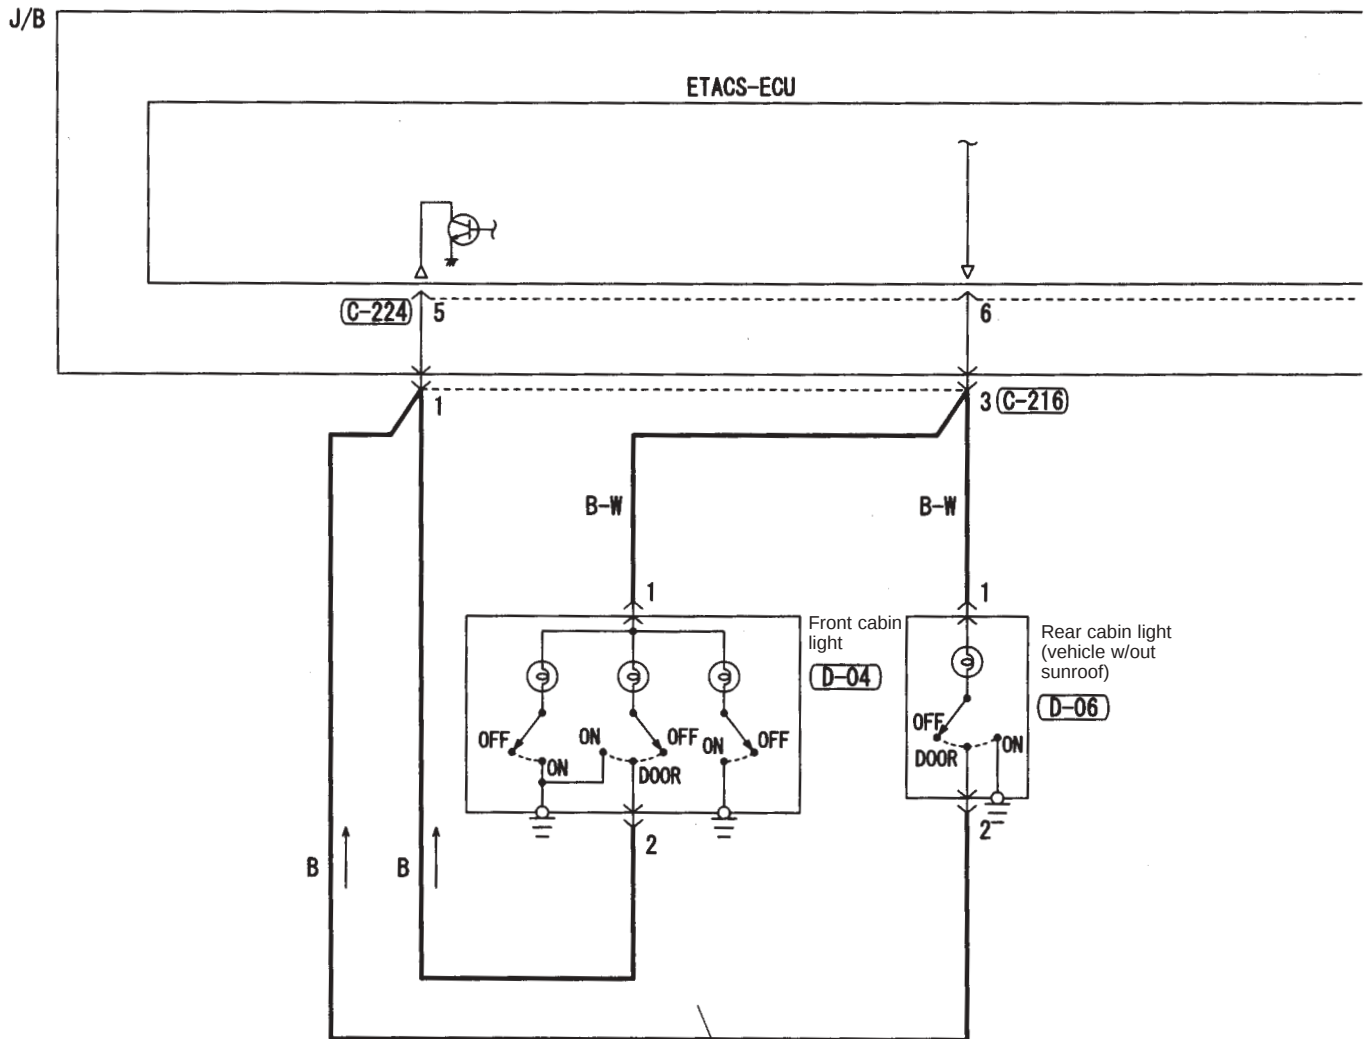

6

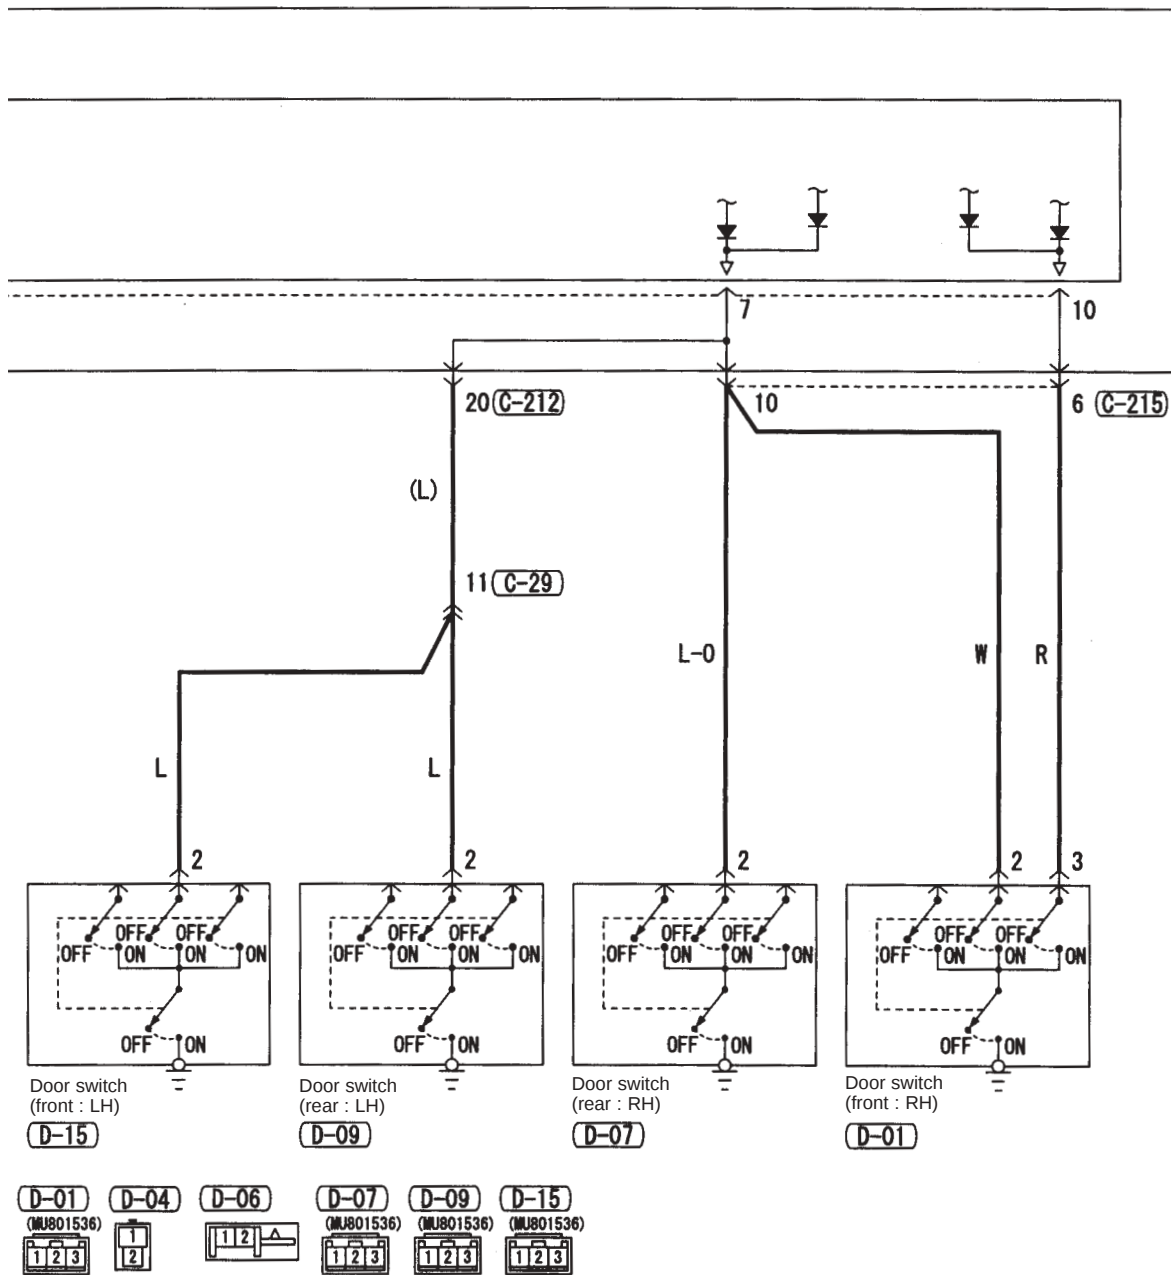


TEMPERATURE CONTROL

Heater

M3030013300079

1

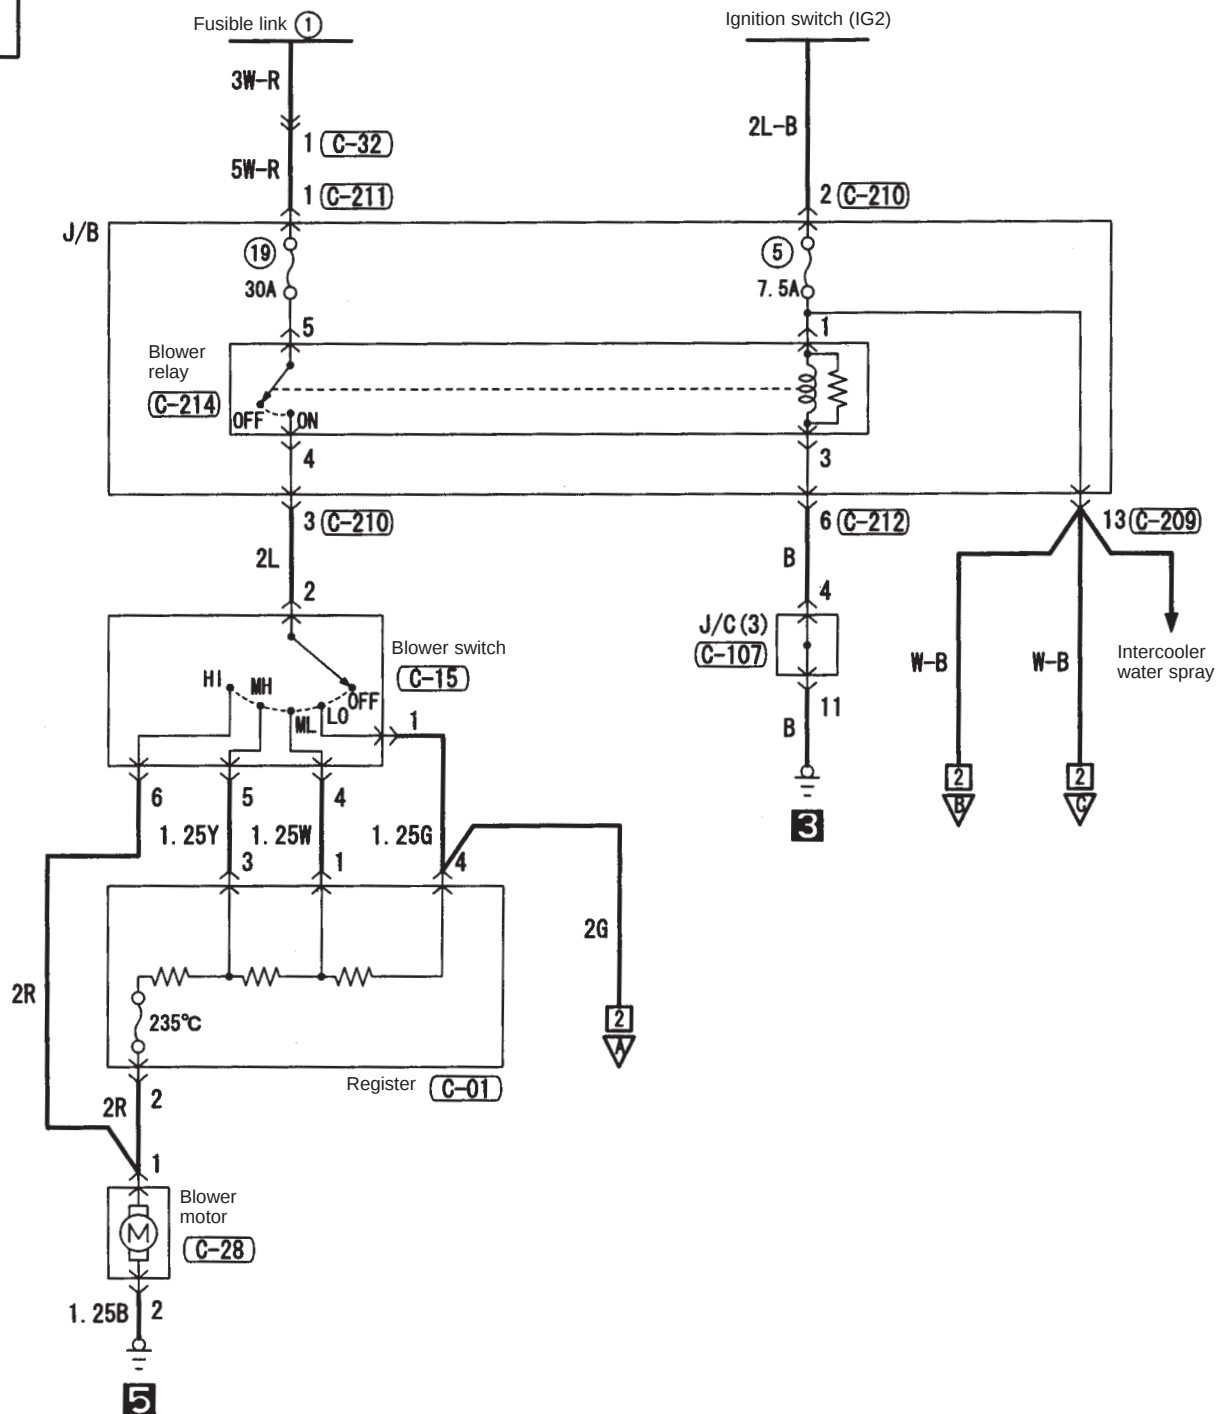

C-01

C-03

C-04

C-07

C-15

C-16

1 2 3 4

1 2 3 4 5 6 7

1 2 3 4 5 6 7

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

1 2 3 4 5 6

1 2 3 4 5 6 7 8 9 10 11 12

C-209

C-210

C-211

C-212

C-214

1 2 3 4 5 6 7 8 9 10 11 12 13 14

1 2 3 4 5 6


1 2 3 4 5 6

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28


1 2 3 4 5

H5J12J02AA

2

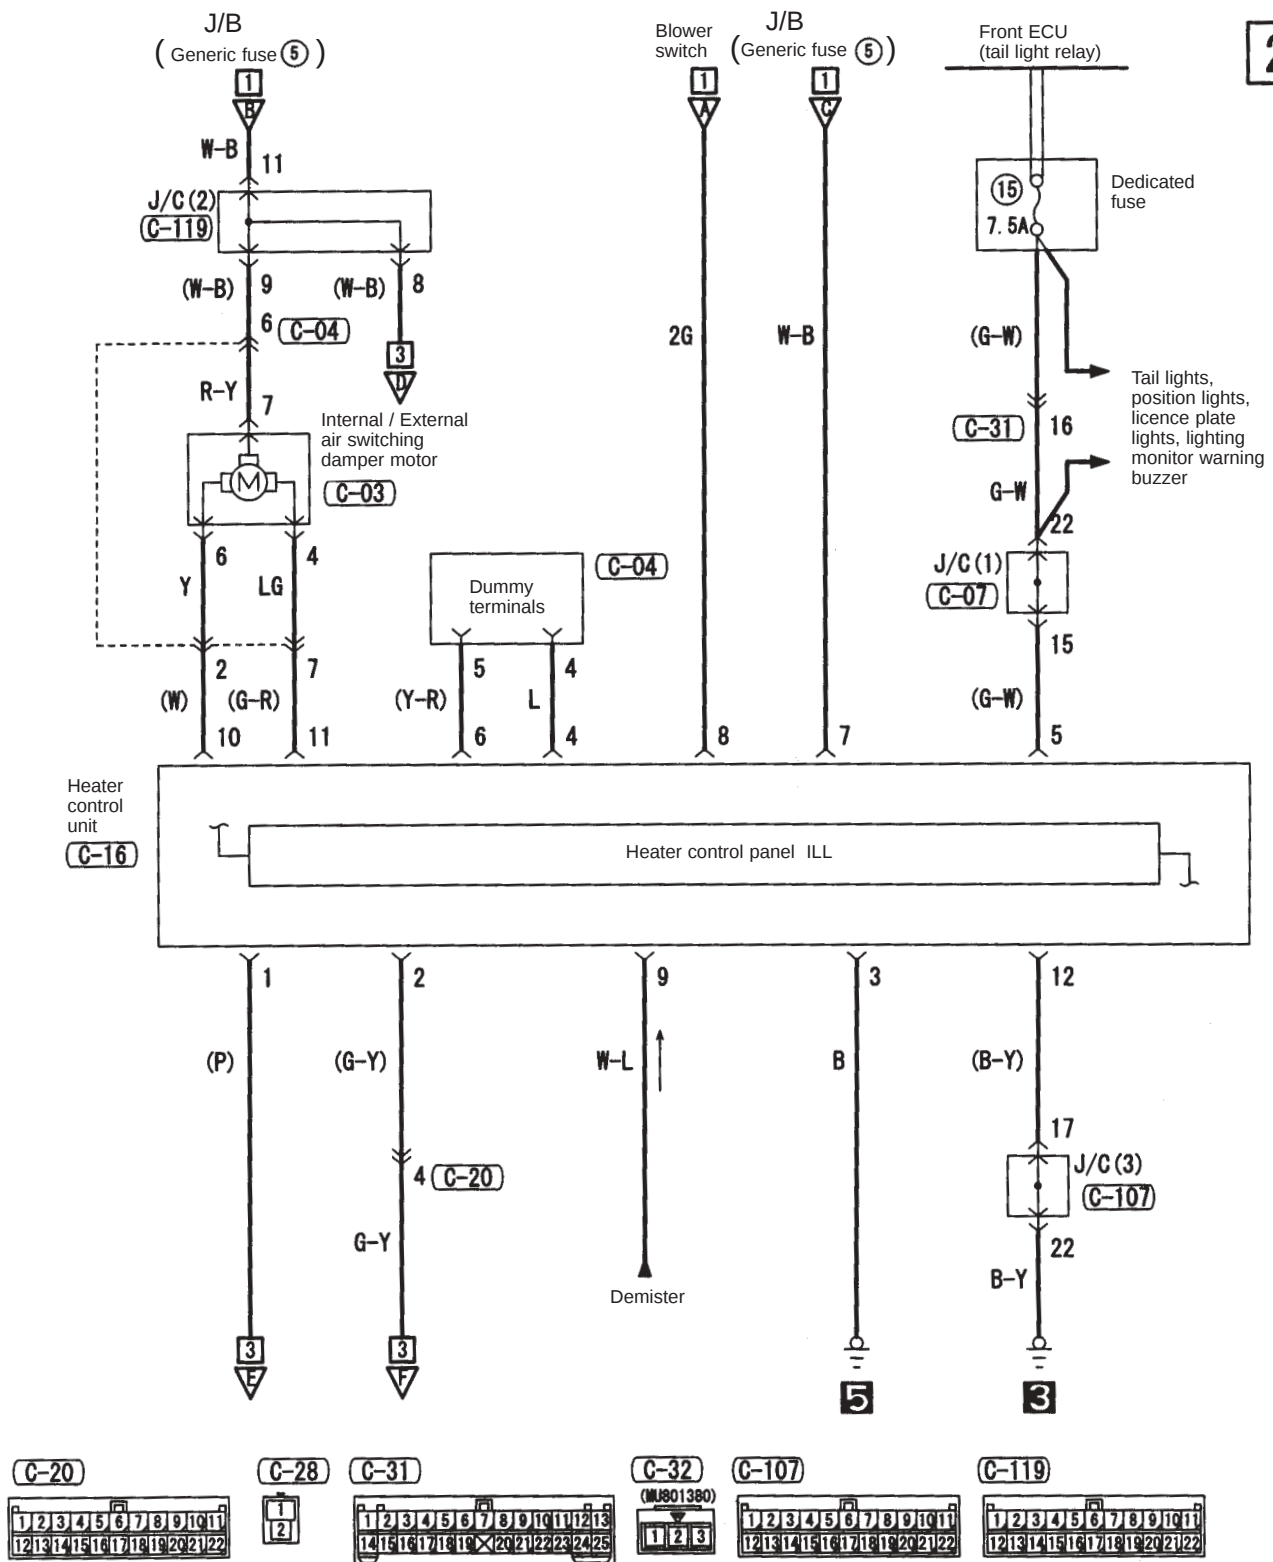

Heater (cont'd)

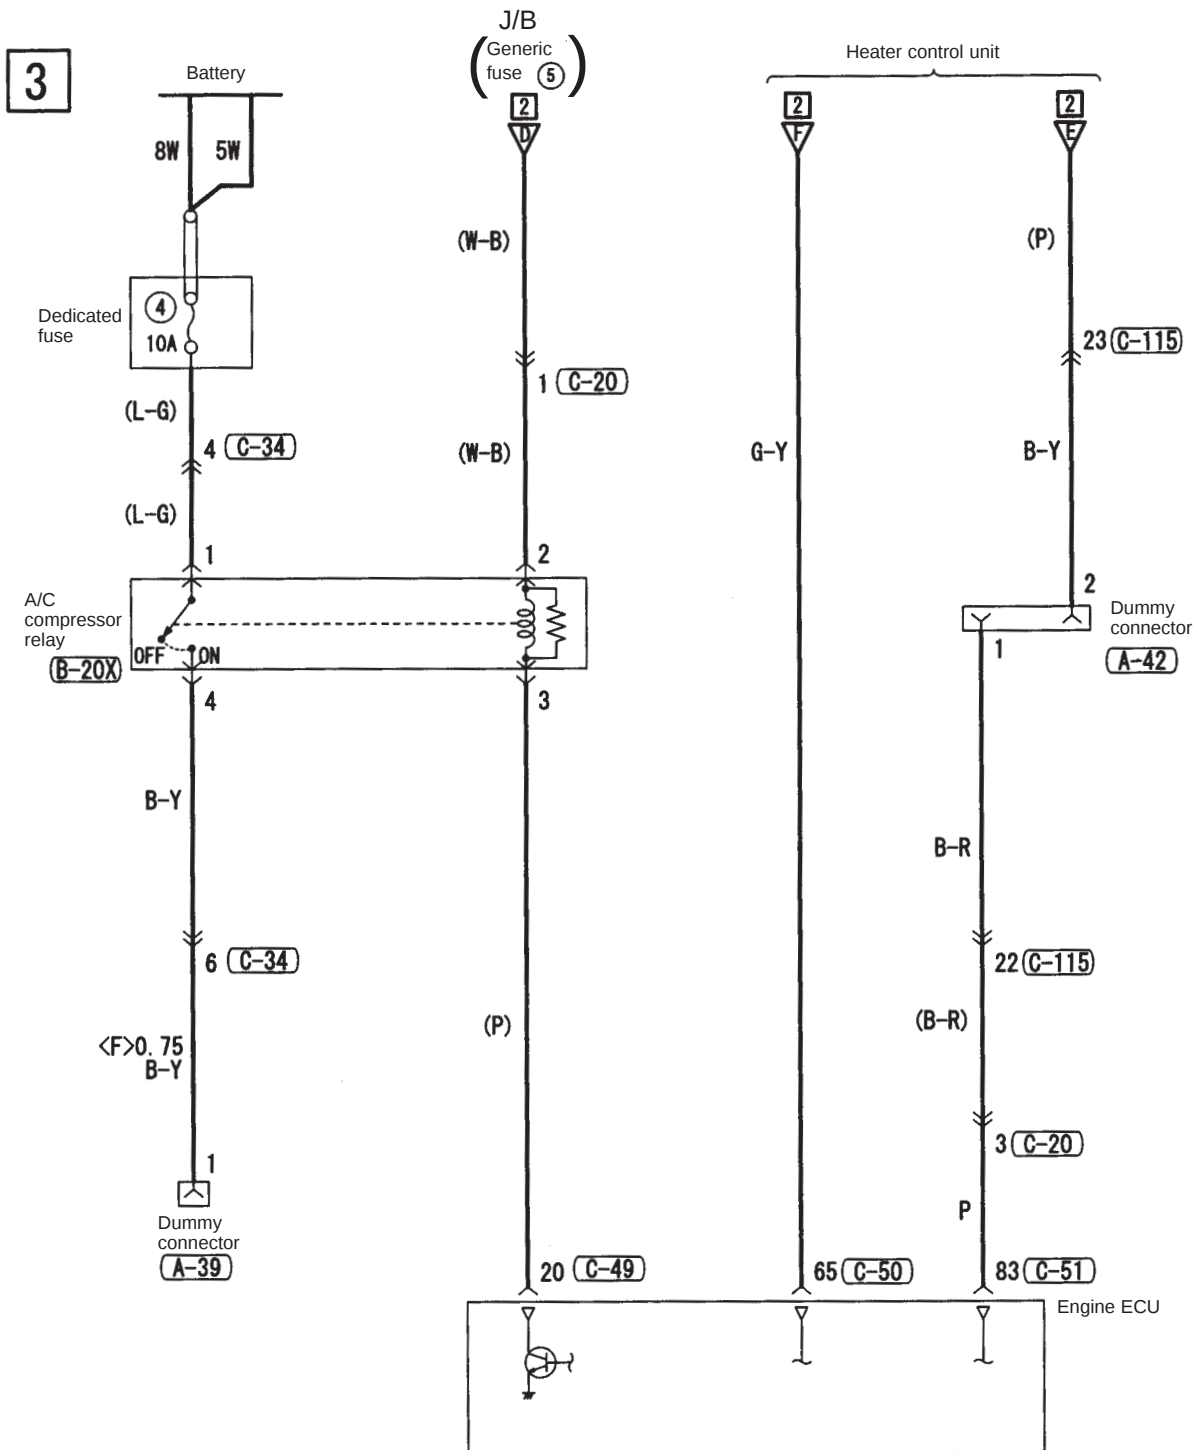

(A-39)

MU802654

①

(A-42)

①②

(B-20X)

1	2
3	4

(C-20)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

(C-34)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

(C-49)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

(MU803784)

(C-50)

41	42	43	44	45	46	47
48	49	50	51	52	53	54
55	56	57	58	59	60	61
62	63	64	65	66	67	68

(MU803782)

(C-51)

71	72	73	74	75	76	77
78	79	80	81	82	83	84
85	86	87	88	89	90	91
92	93	94	95	96	97	98
99	100					



(MU803783)

(C-115)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	

<Notes>

M3030005500669

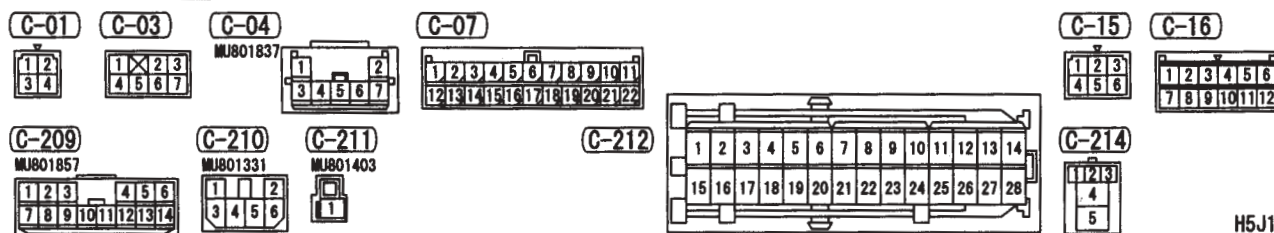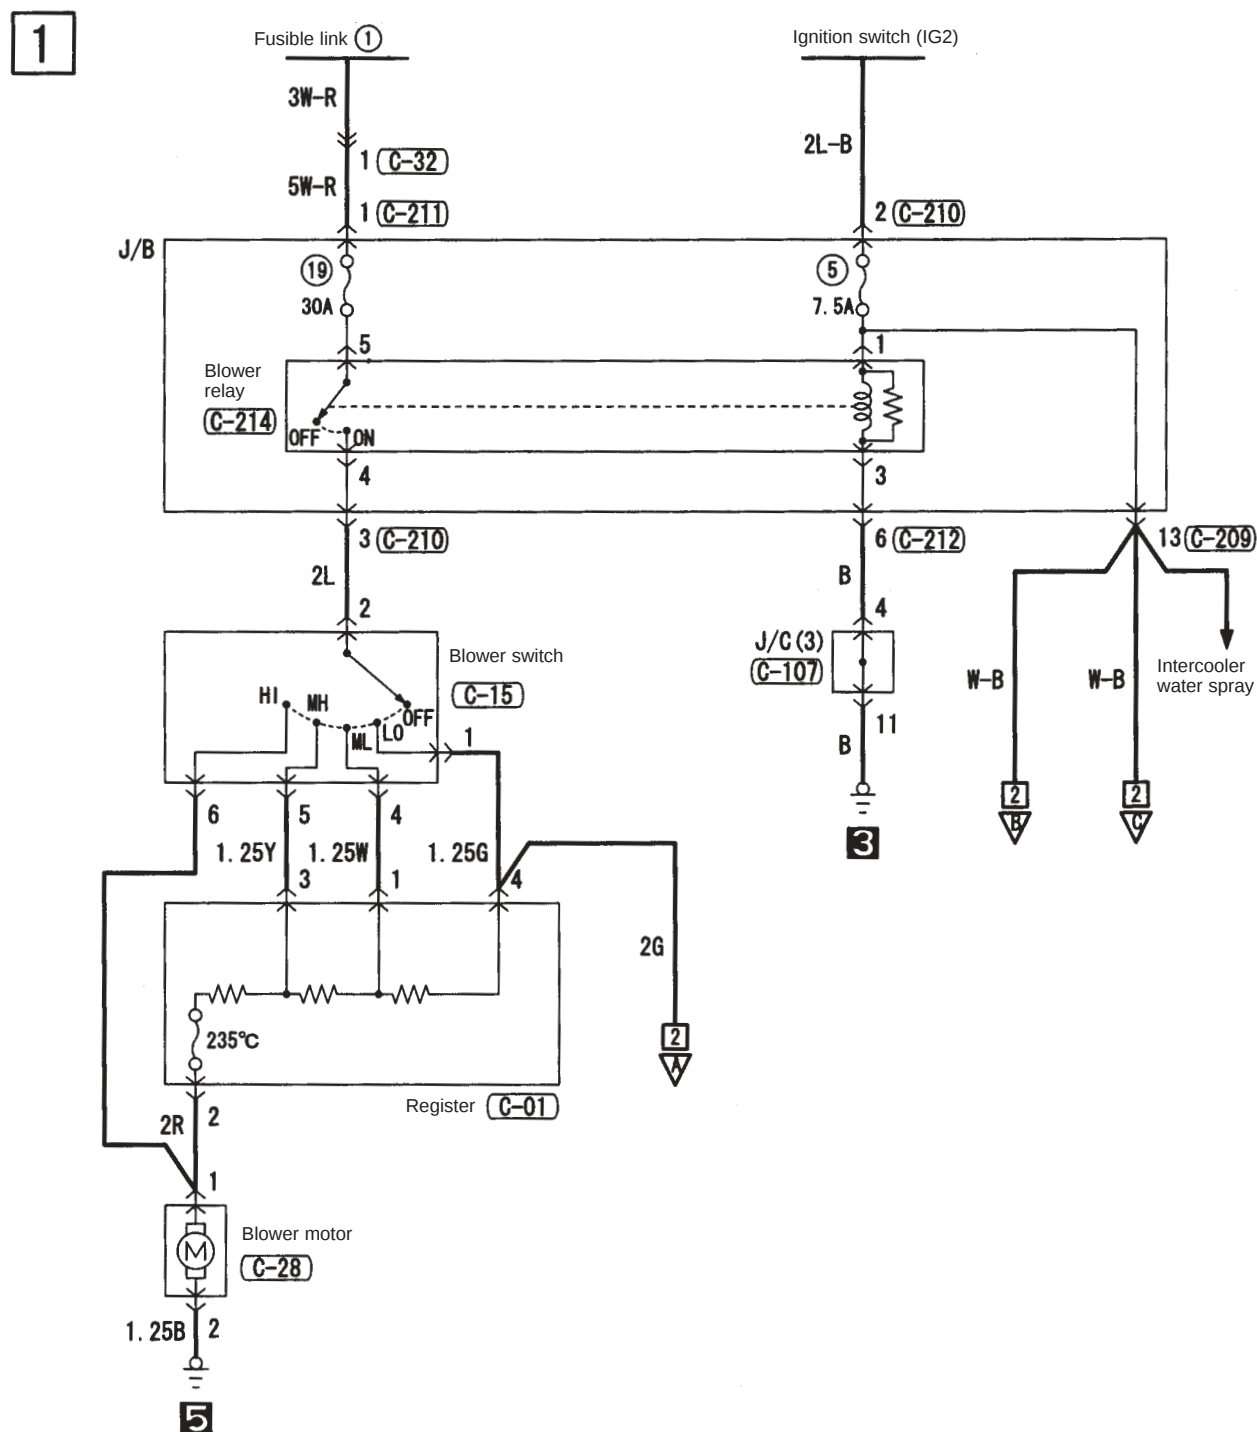


H5J12J03AA




Manual Air-Conditioning (cont'd)

3

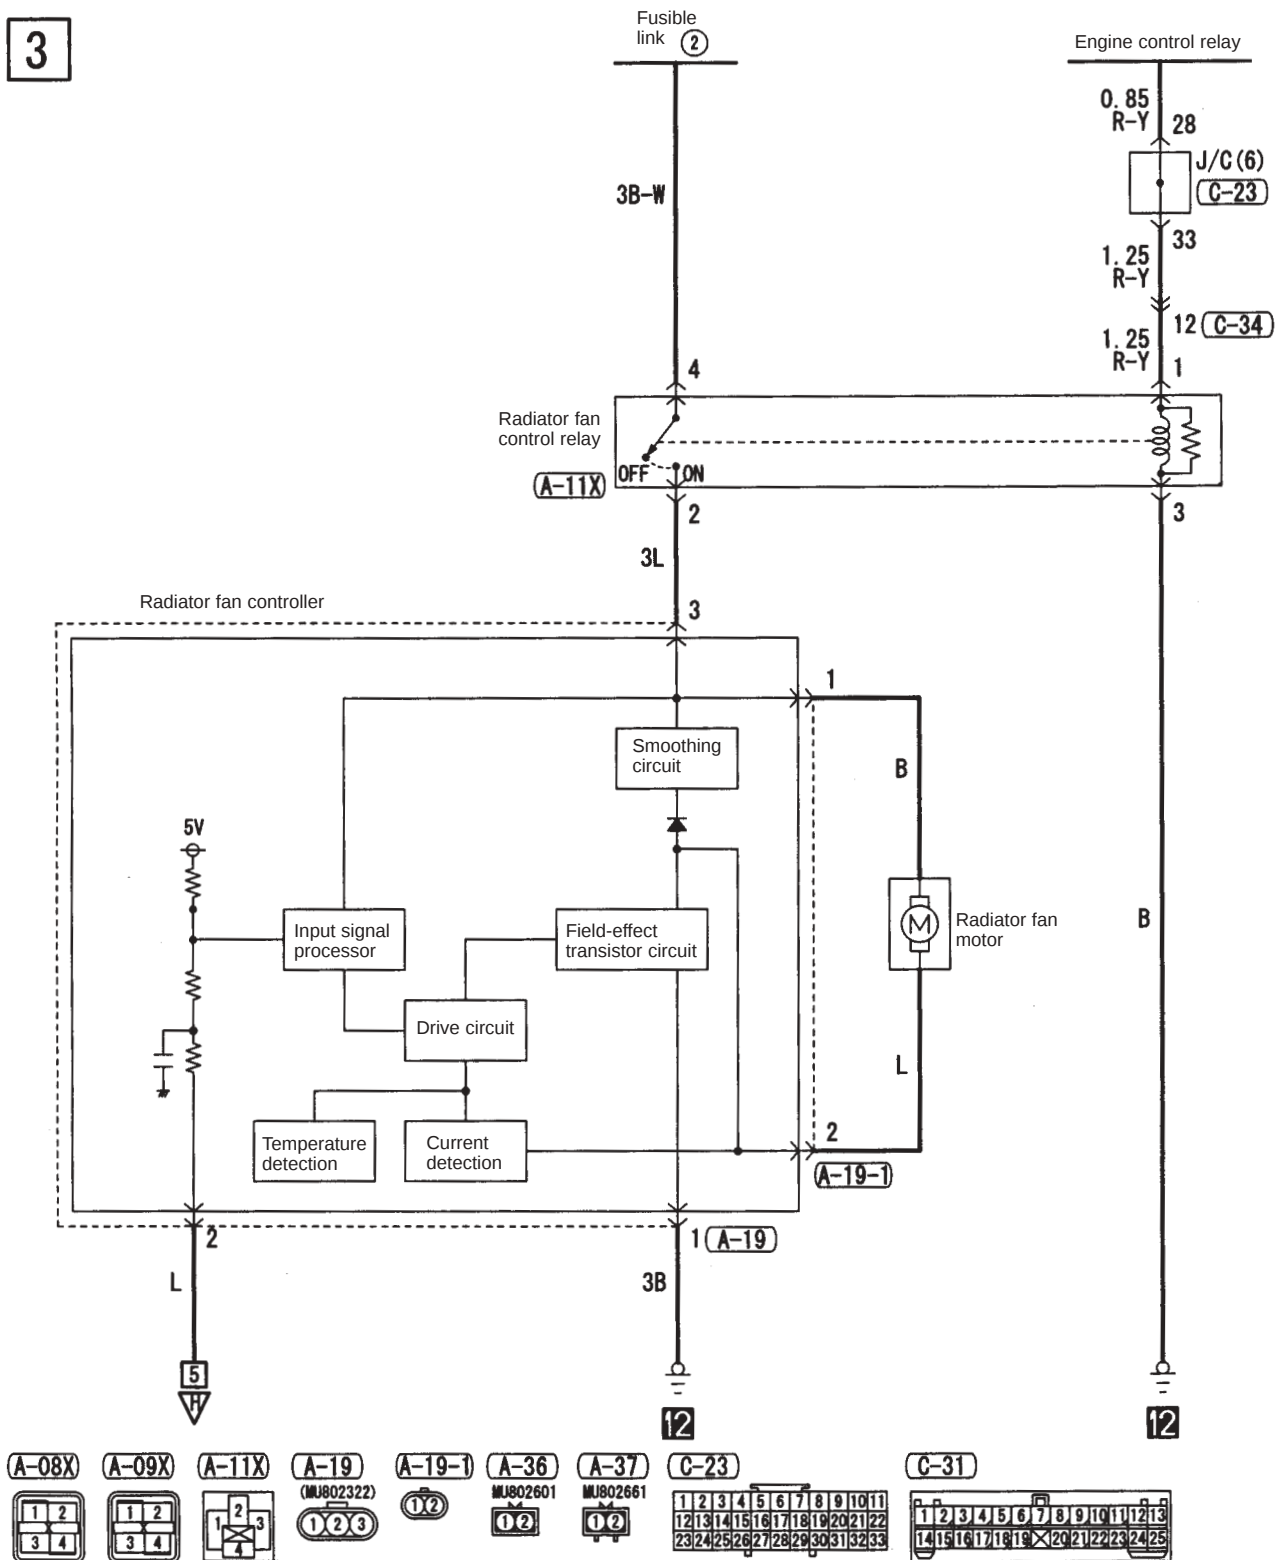



Manual Air-Conditioning (cont'd)

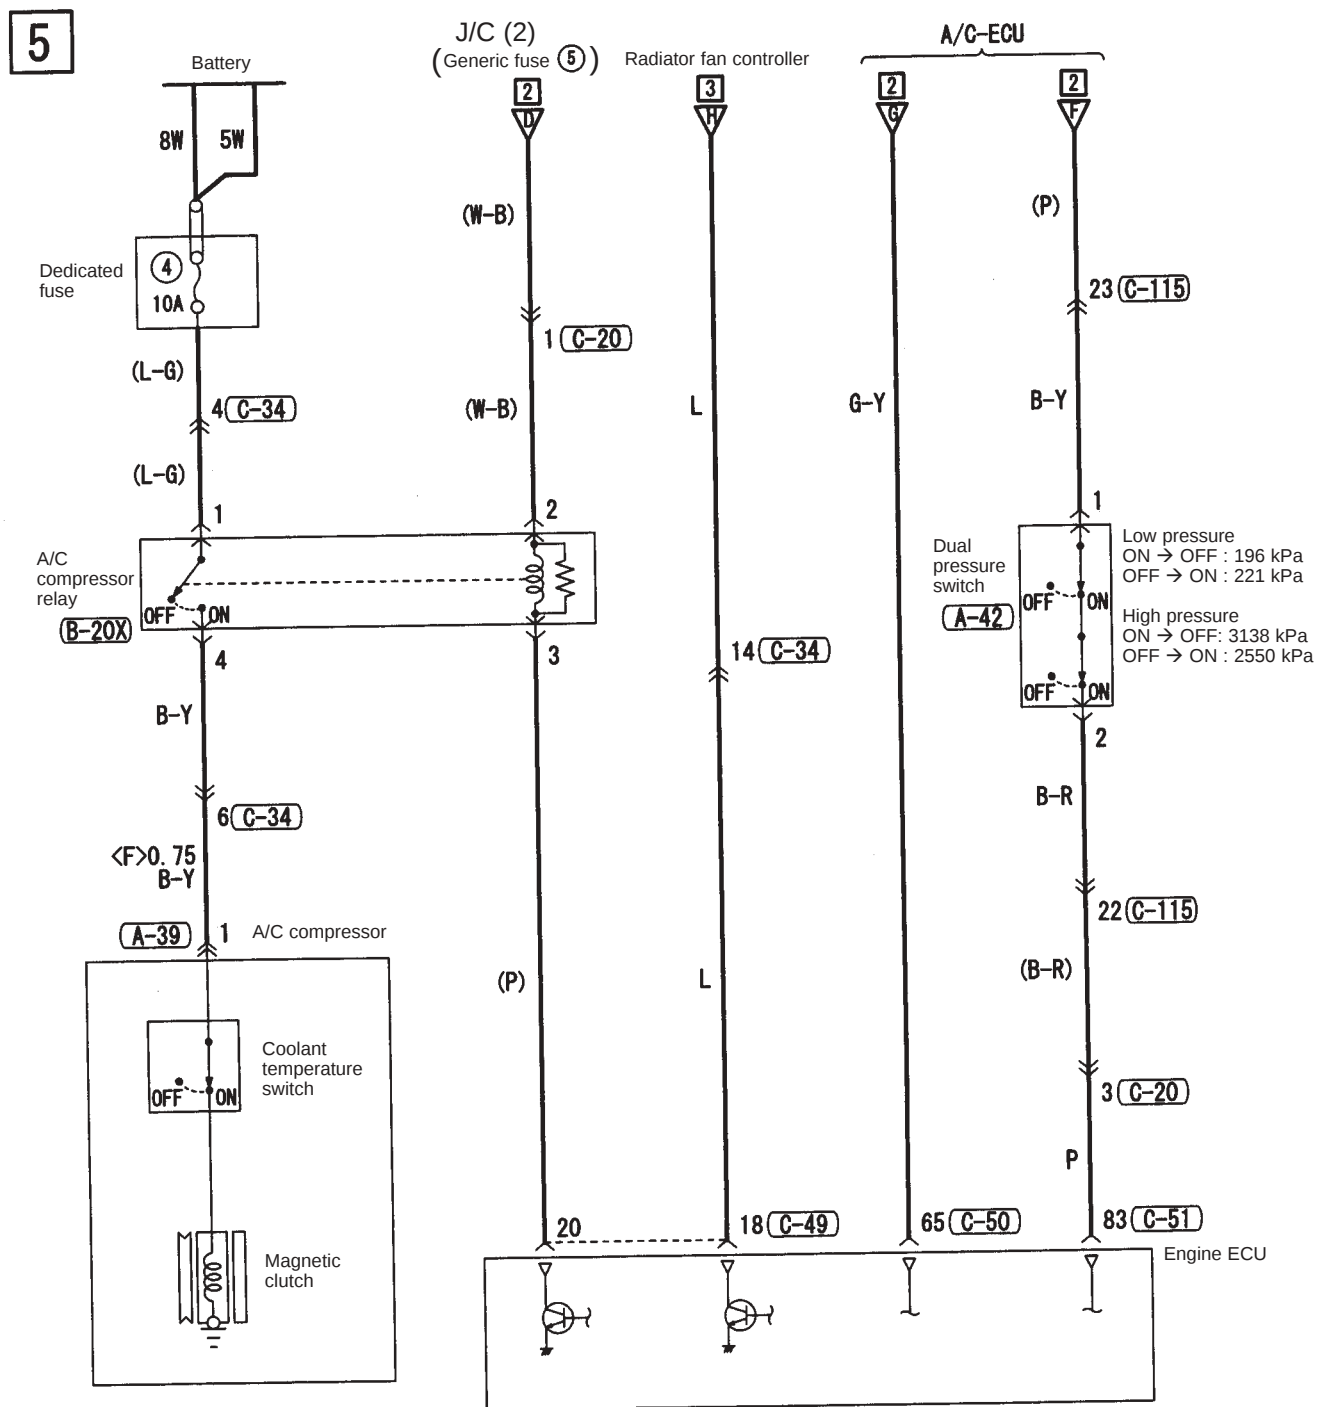

A-39
MU802653

1

A-42

1	2
---	---

B-20X

1	2
3	4

C-20

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-34

1	2	3	4	5	6	7
8	9	10	11	12	13	14

C-49
(MU803784)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35					

C-50
(MU803782)

41	42	43	44	45	46	47
48	49	50	51	52	53	54
55	56	57	58	59	60	61
62	63	64	65	66	67	68

C-51
(MU803783)

71	72	73	74	75	76	77
78	79	80	81	82	83	84
85	86	87	88	89	90	91
92	93	94	95	96	97	98
99	100					

C-115






1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	

<Notes>


Fully automatic air-conditioning

M3030005600321

1

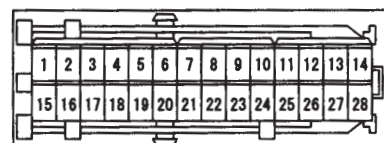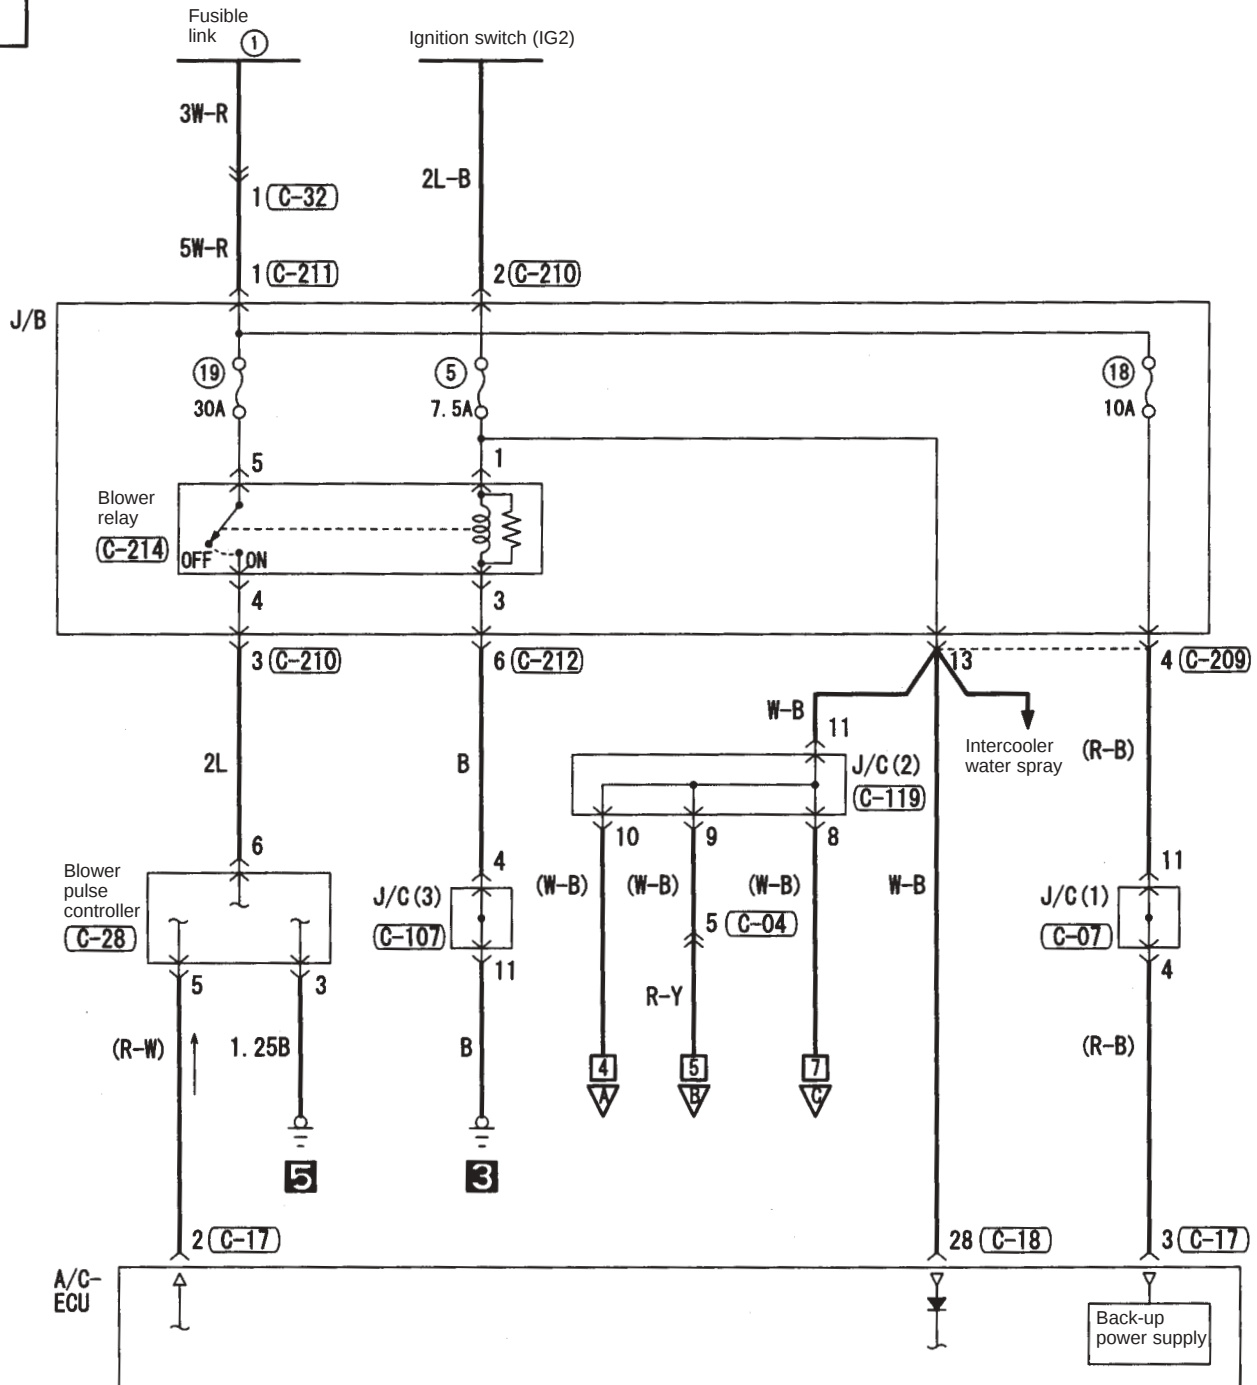

H5J12J04AA

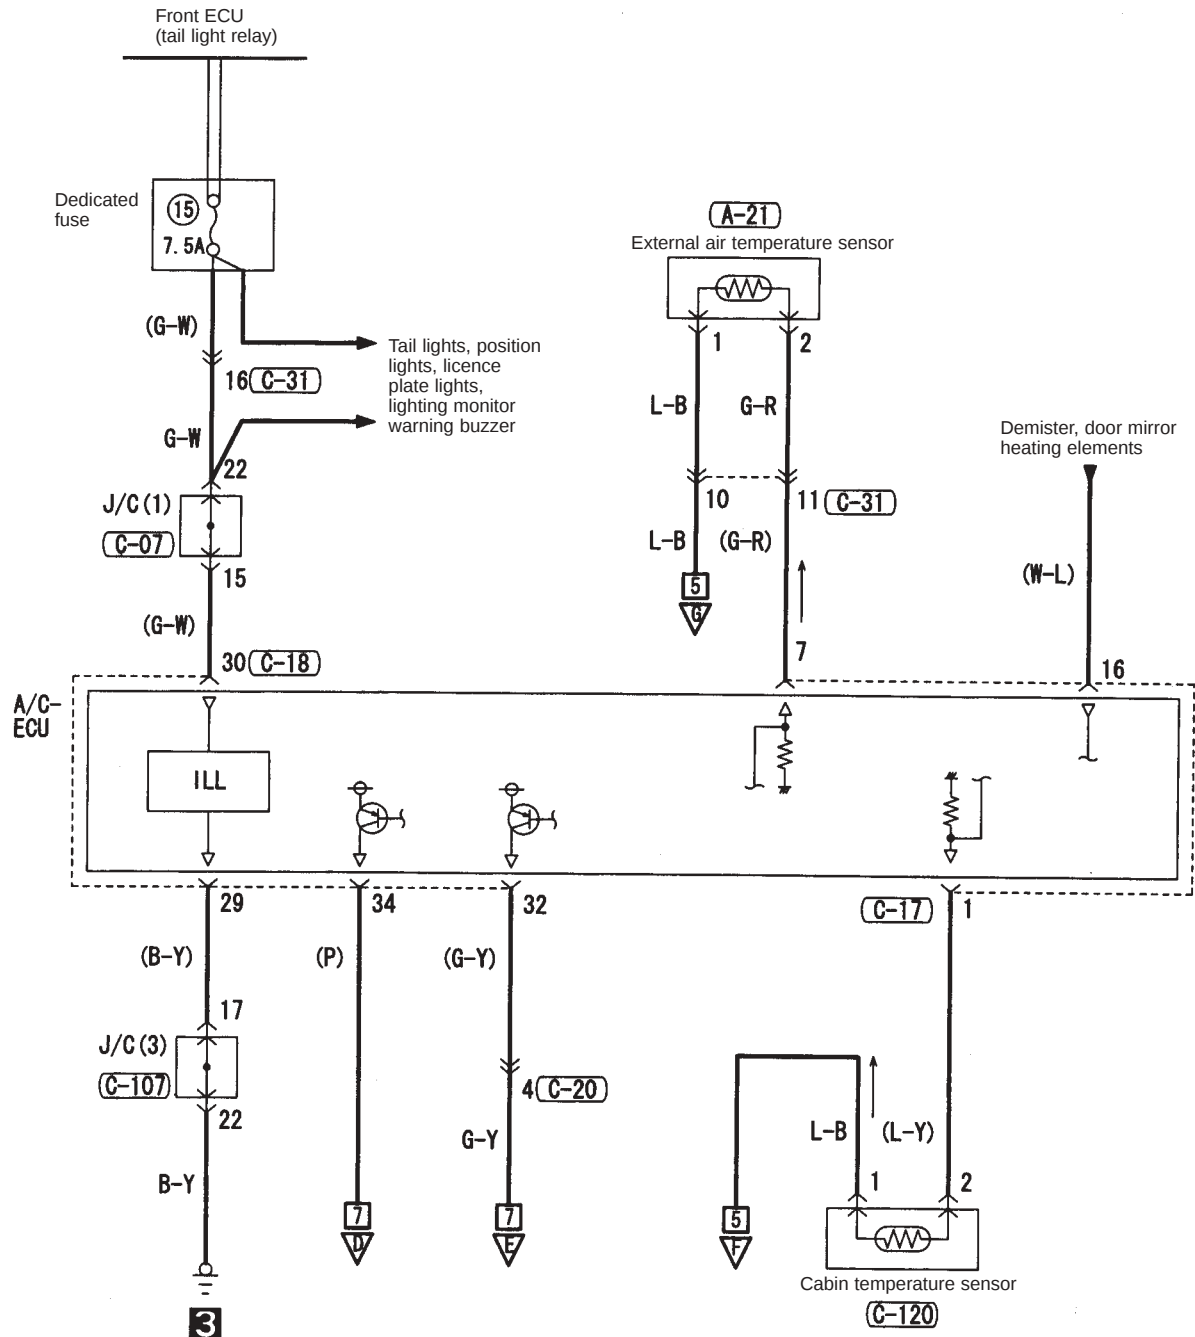

(C-18)
(MU801584)

21	22	23	24	25	26	27	28
29	30	31	32	33	34	35	36

(C-214)

1	2	3
4		
5		

(C-20)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

(C-28)

1		2
3	4	5

(C-31)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	

(C-32)


1	2	3
---	---	---

(C-107)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

Fully automatic air-conditioning (cont'd)




3

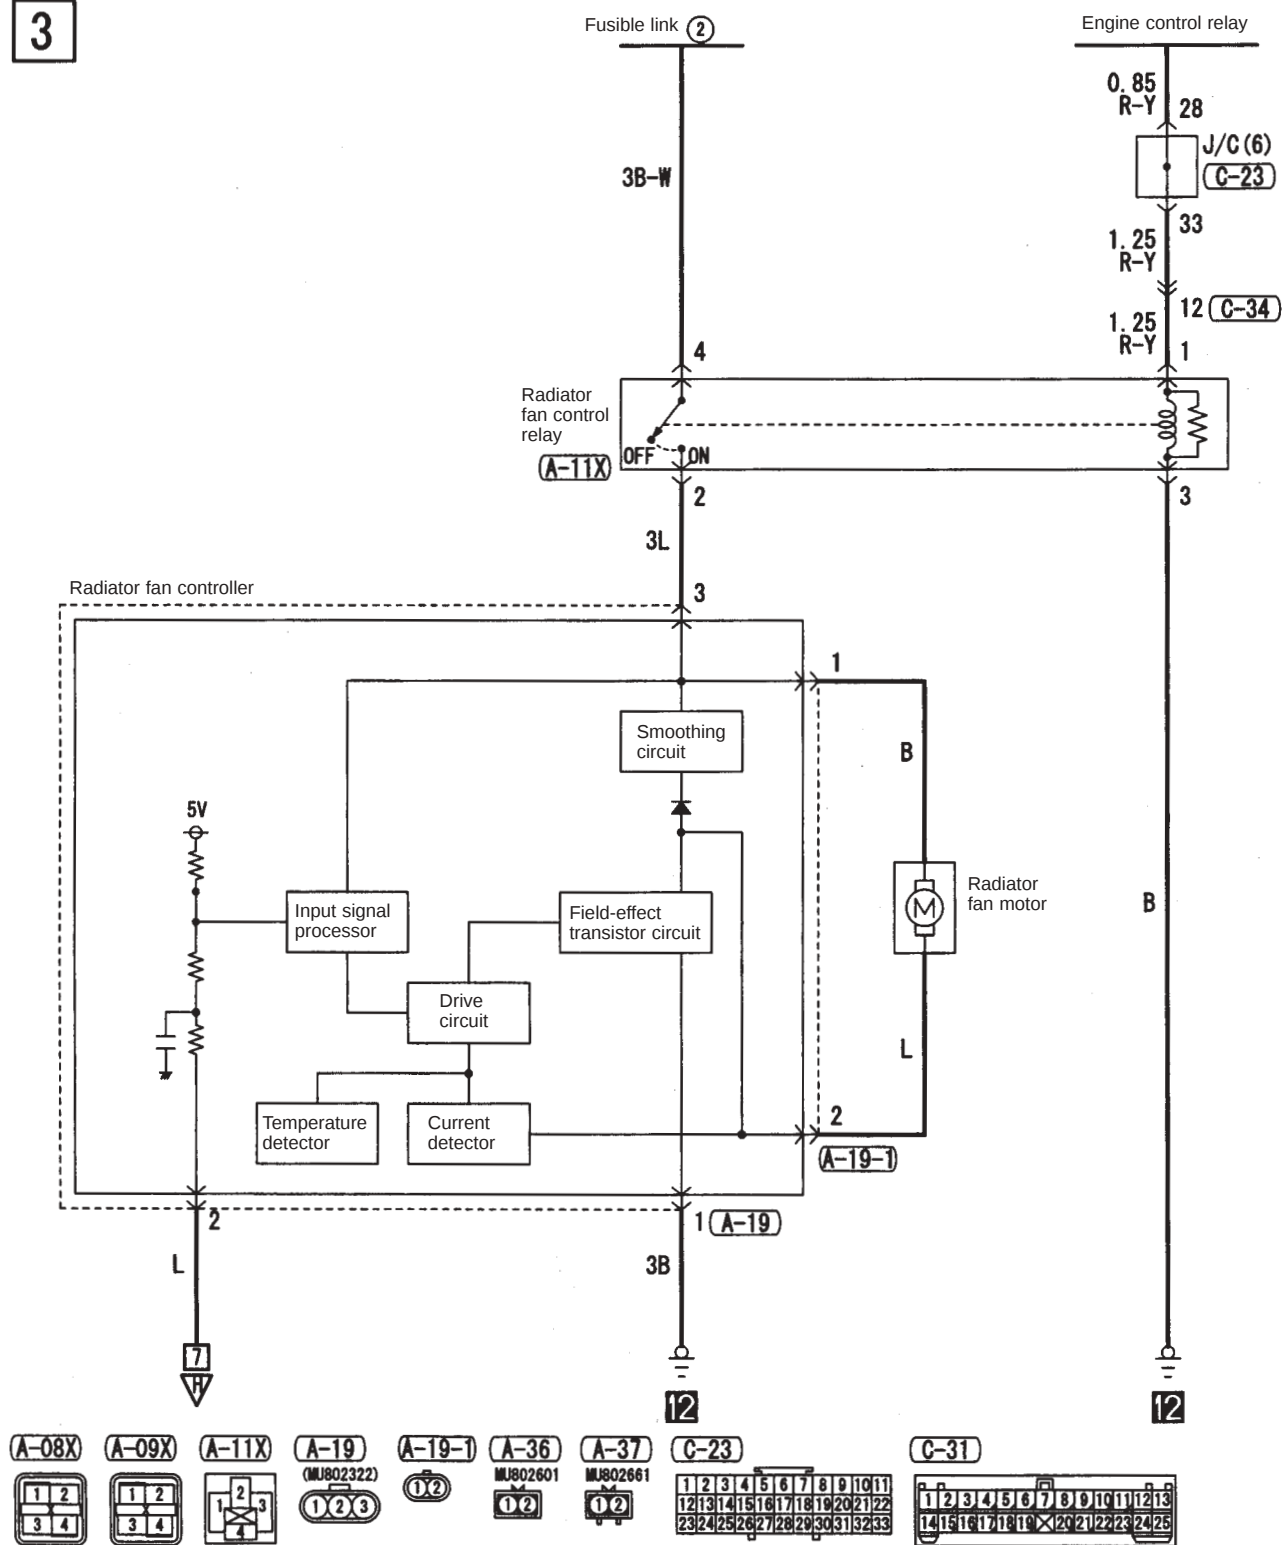







Fully automatic air-conditioning (cont'd)


5

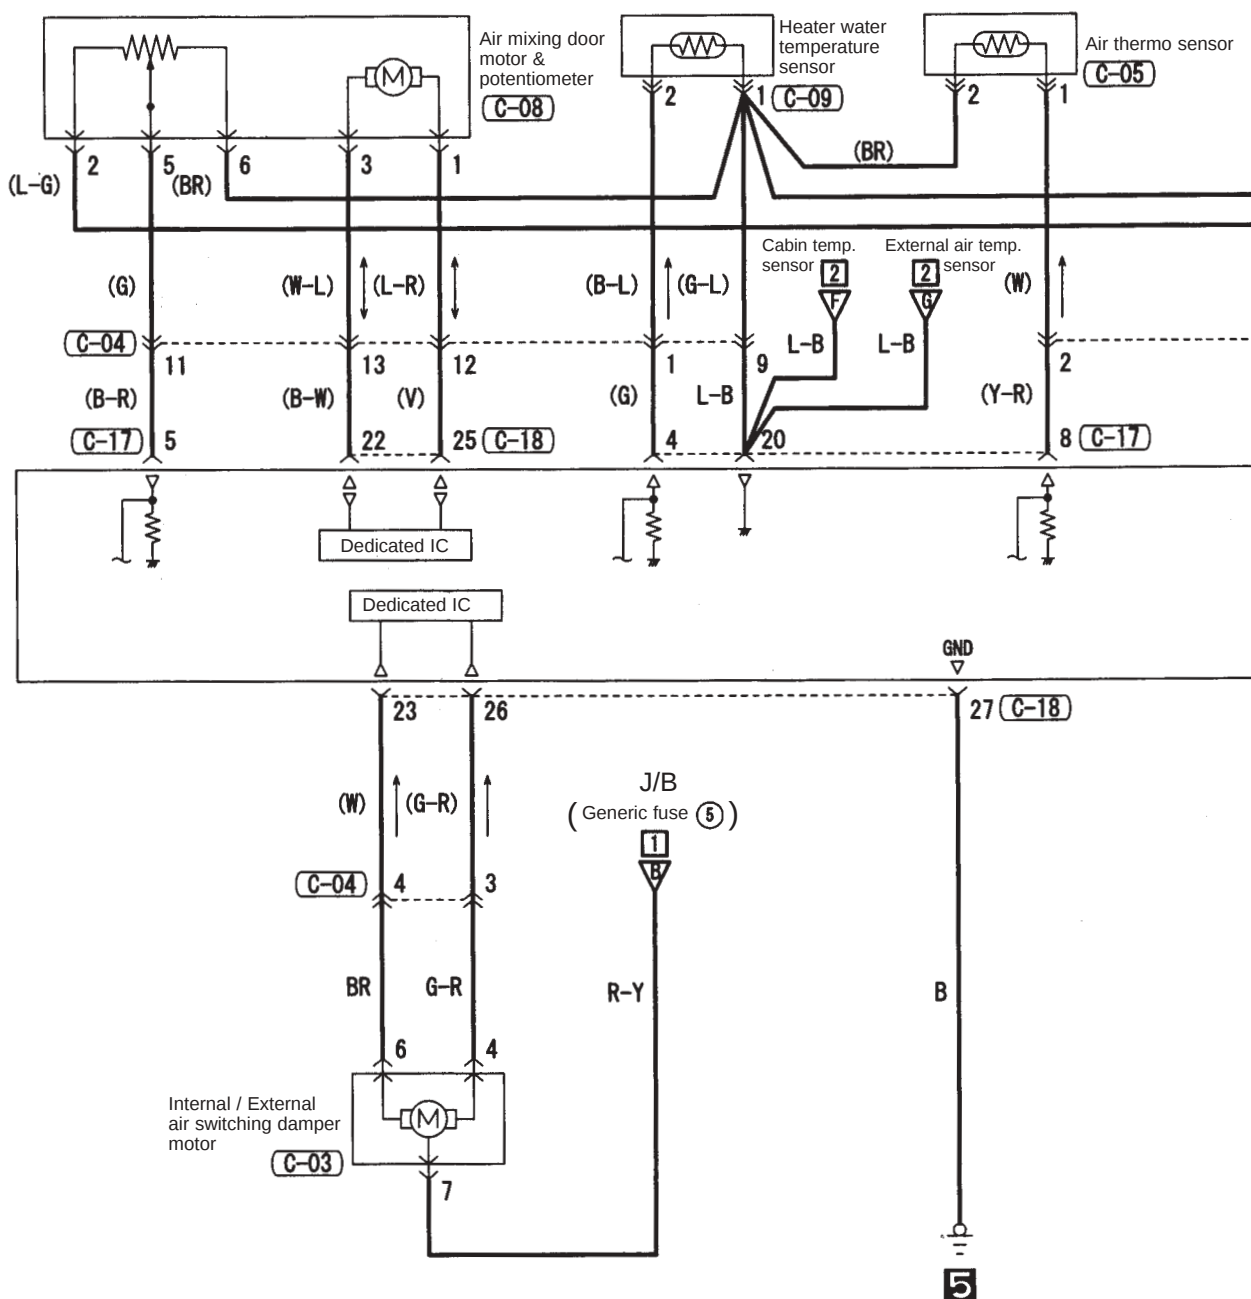

6

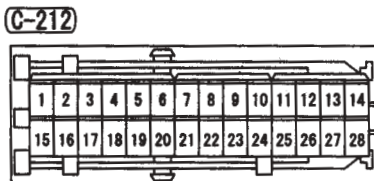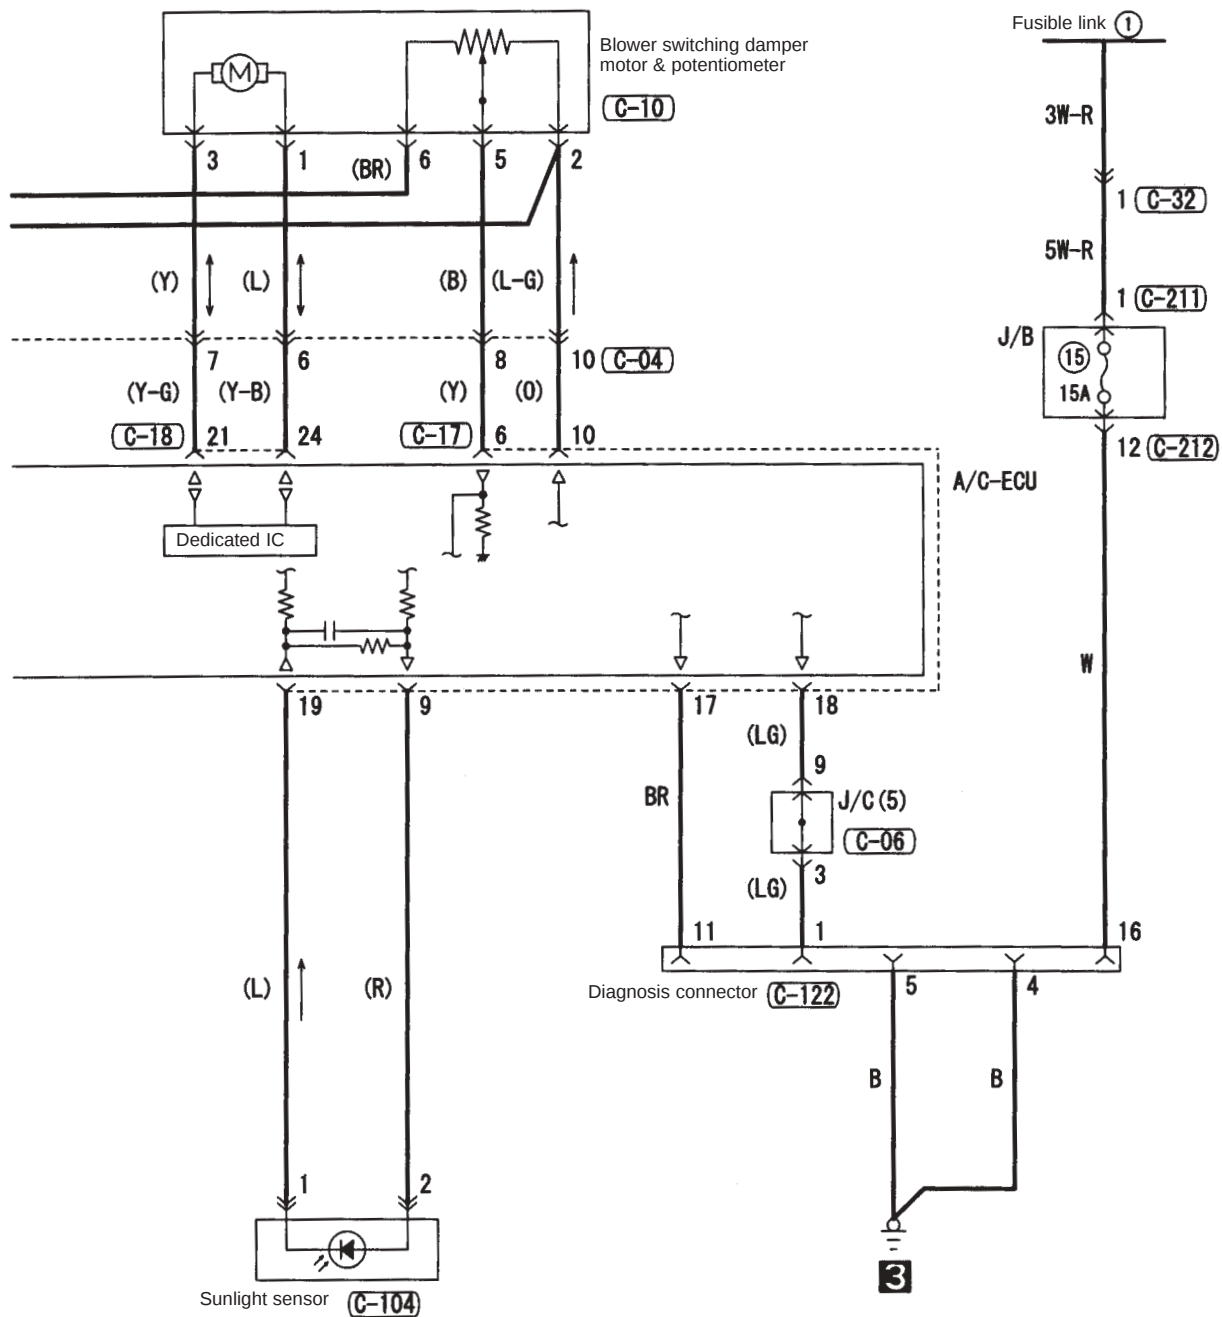

Fully automatic air-conditioning (cont'd)

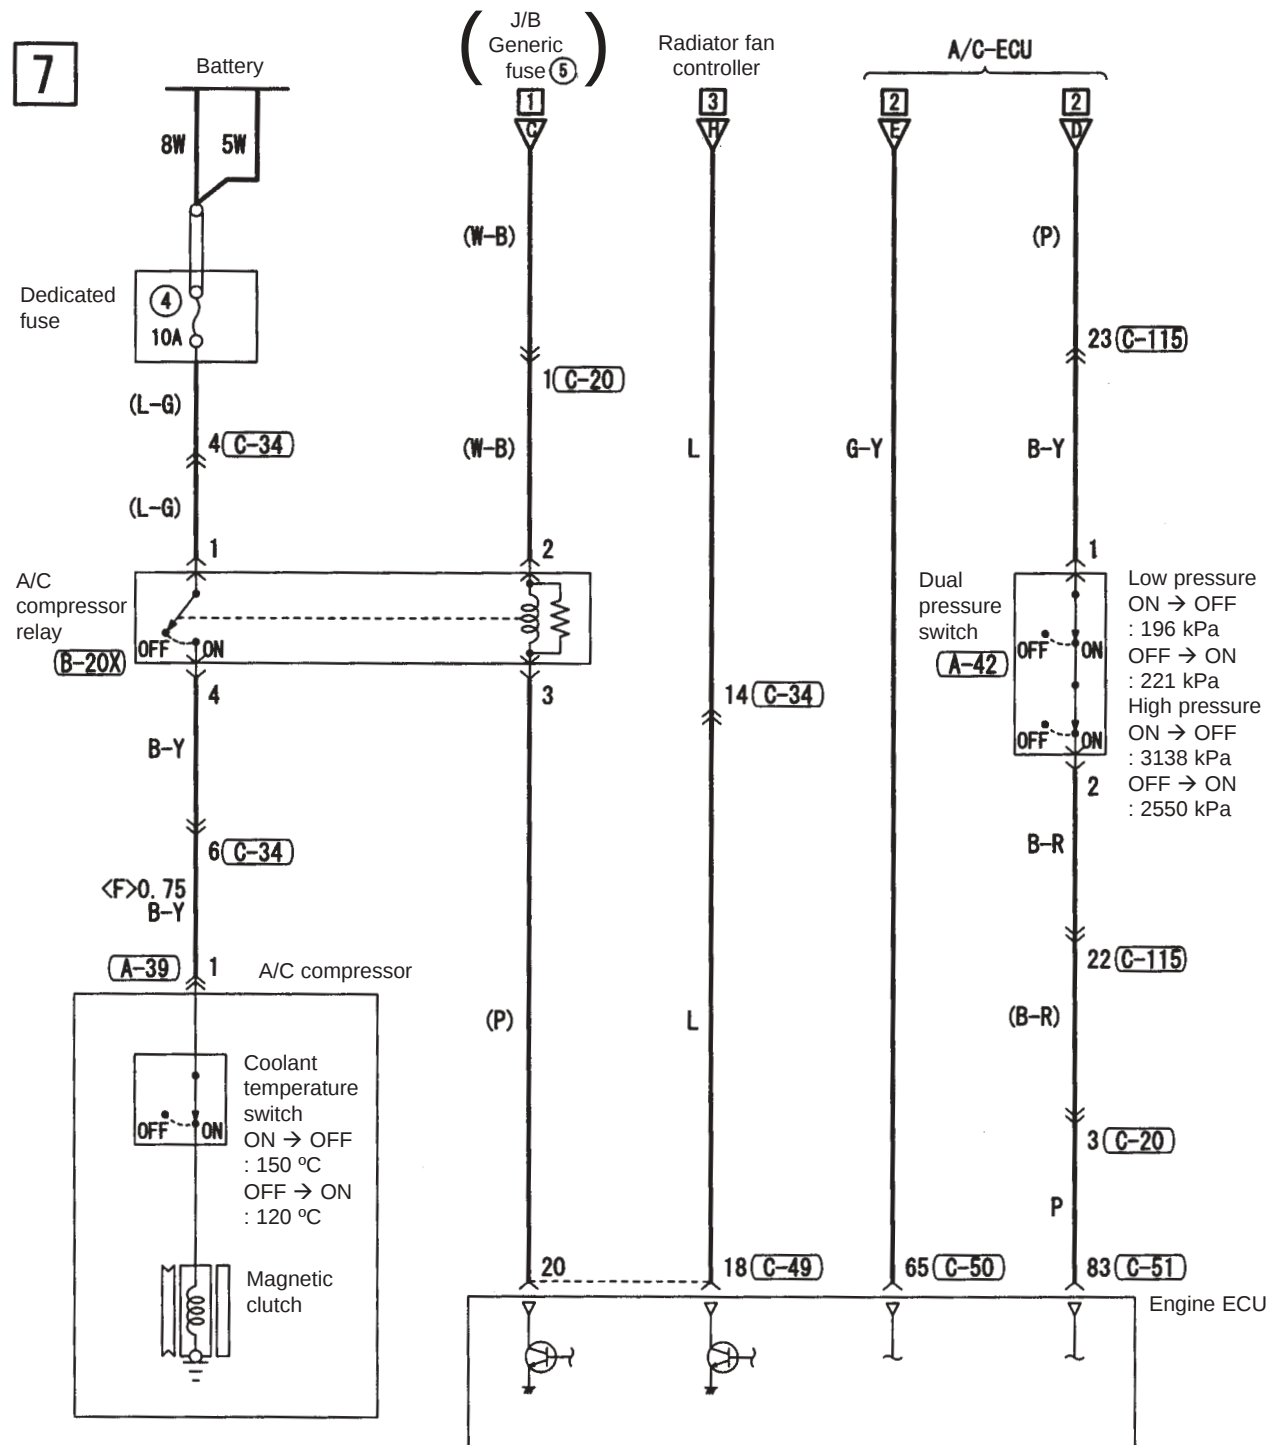

A-39

MU802653

1

A-42

1X2

B-20X

1 2

3 4

C-20

1 2 3 4 5 6 7 8 9 10 11

12 13 14 15 16 17 18 19 20 21 22

C-34

1 2 3 4 5 6 7

8 9 10 11 12 13 14 15 16

C-49

(MU803784)

1 2 3 4

5 6 7 8

9 10 11 12 13 14 15 16

17 18 19 20 21 22 23

24 25 26 27 28 29 30 31 32 33

34 35

C-50

(MU803782)

41 42 43 44

45 46 47

48 49 50 51

52 53 54 55

56 57 58 59

60 61 62 63

64 65 66

67 68

C-51

(MU803783)

71 72 73 74

75 76 77

78 79 80 81

82 83 84 85

86 87 88 89

90 91 92 93

94 95 96 97

98 99 100

C-115

1 2 3 4 5 6 7 8 9 10 11 12 13

14 15 16 17 18 19

20 21 22 23 24 25

H5J12J04DA


<Notes>

VISION / SAFETY

Windscreen washer / wiper

M3030008100738

1

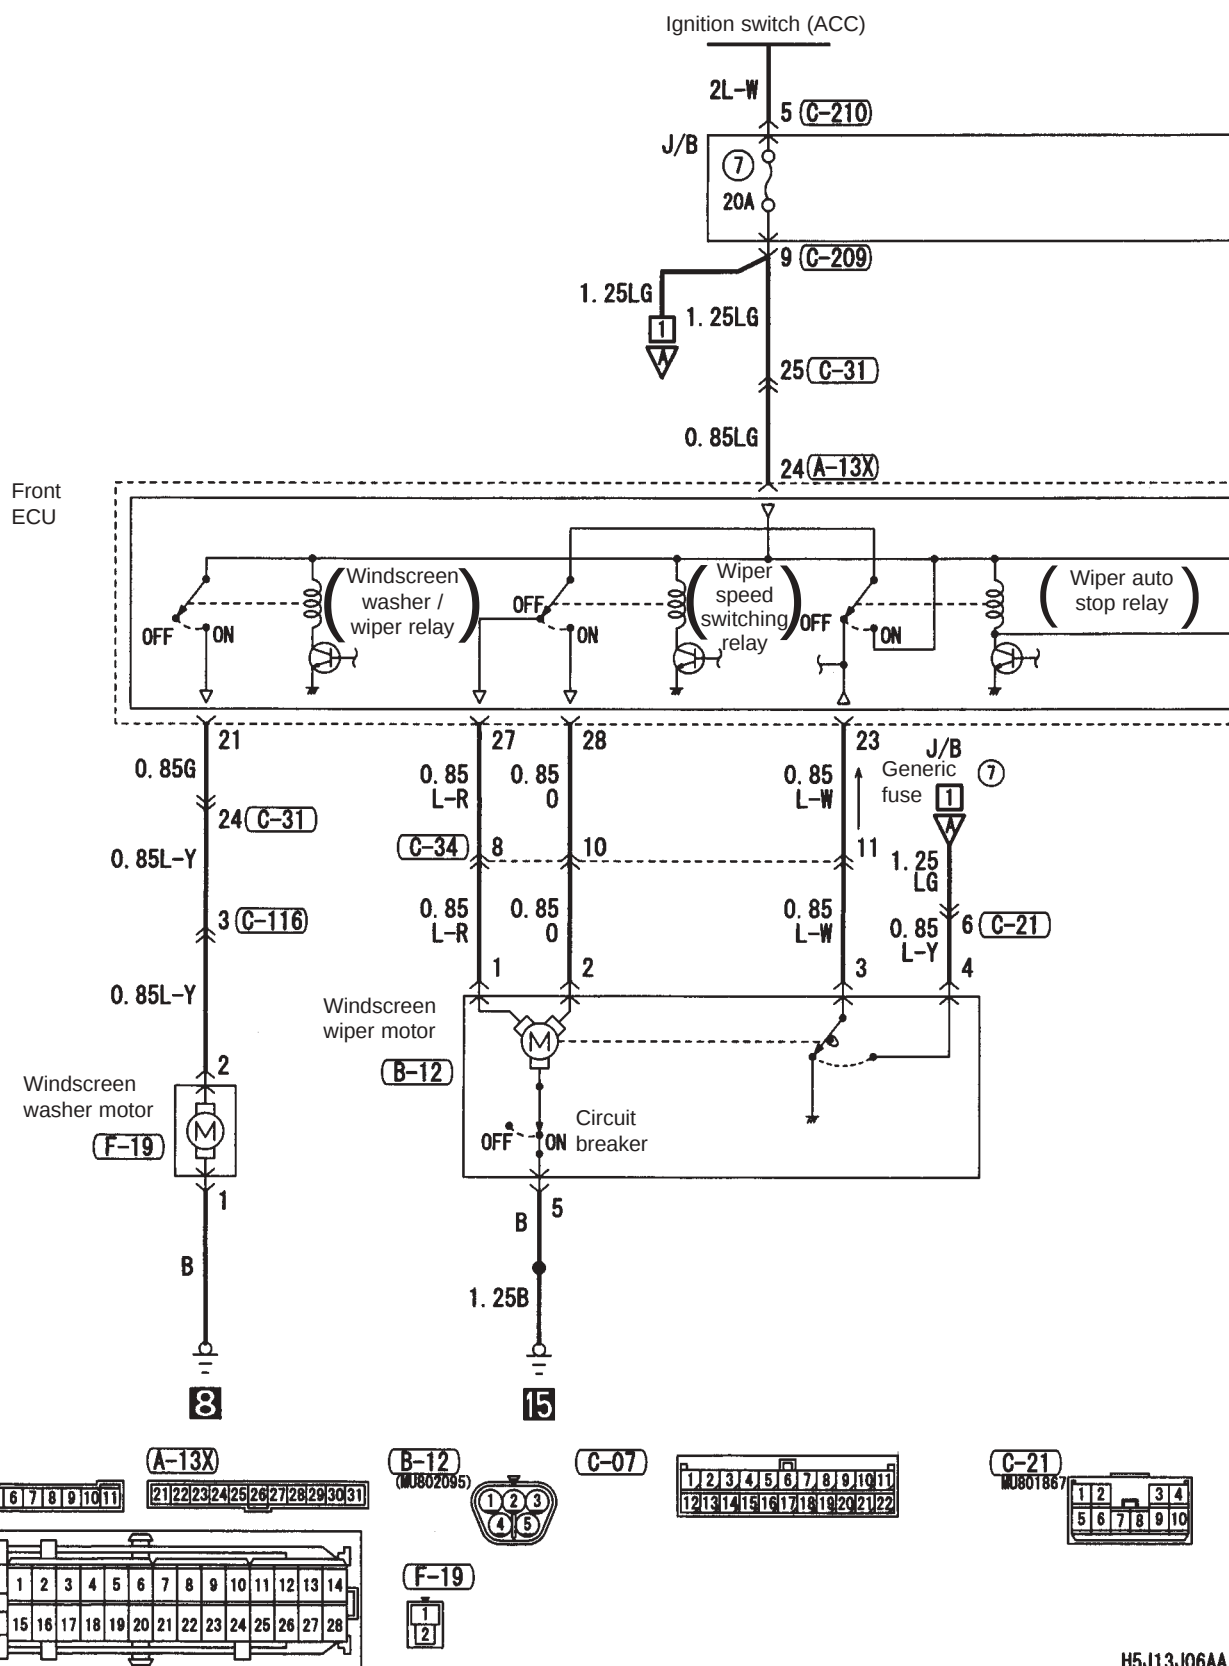


H5J13J06AA



Windscreen washer / wiper (cont'd)

3

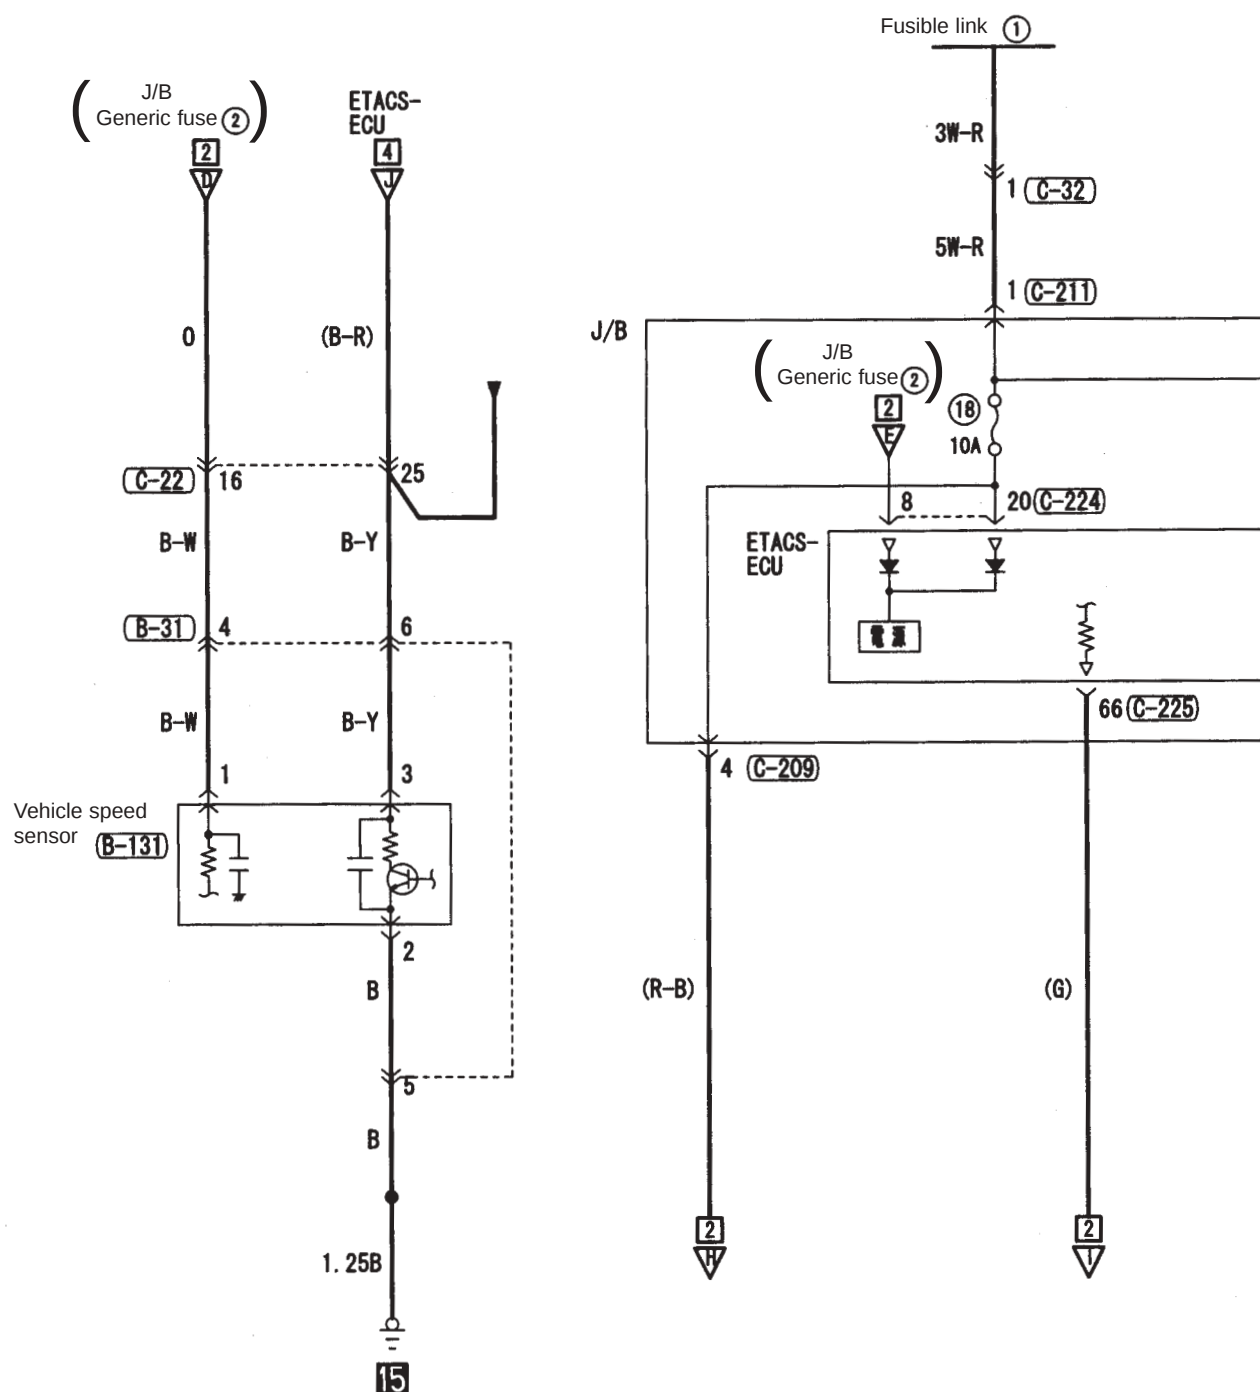

B-31
1 2 3 4
5 6 7 8

B-131
(MU802723)
1 2 3

C-06
(MU801855)
1 2 3 4 5
6 7 8 9 10 11 12 13

C-22
(MU801380)
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25

C-32
(MU801380)
1 2 3


C-107
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22

C-119
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22

C-224
J/B side connector
20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

C-225
(MU803766)
51 52 53 54 55 56 57 58 59
60 61 62 63 64 65 66 67 68
69 70 71 72 73 74

4

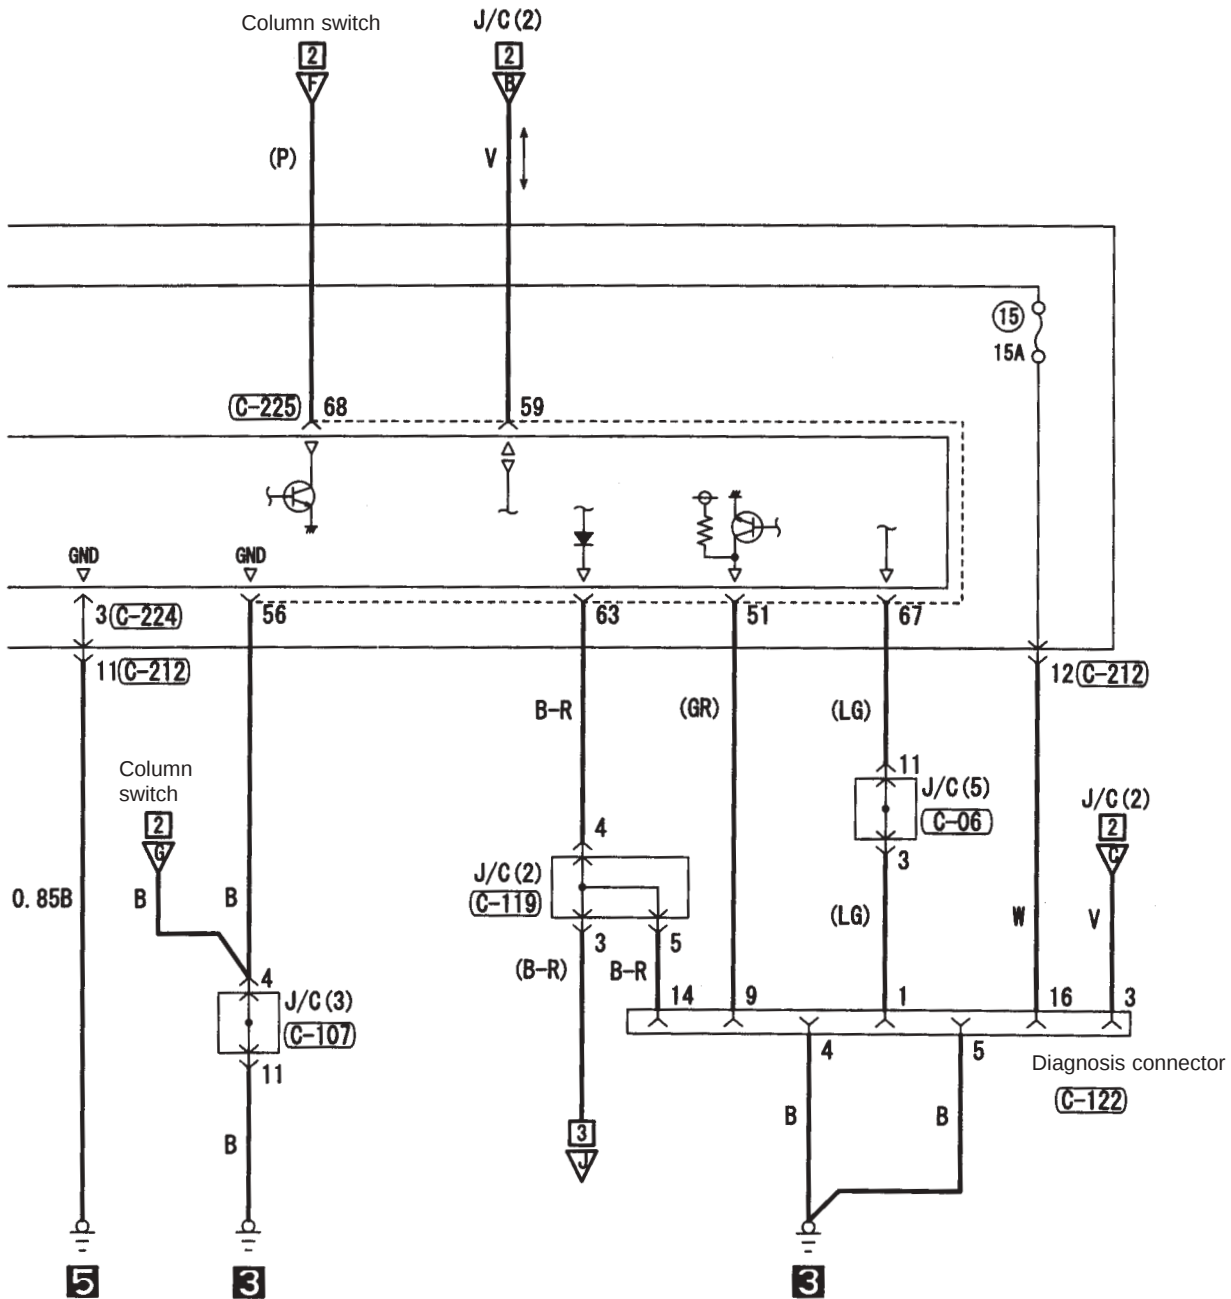

C-122 Front side




C-209




C-211




C-212

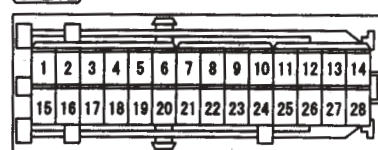

Rear washer / wiper

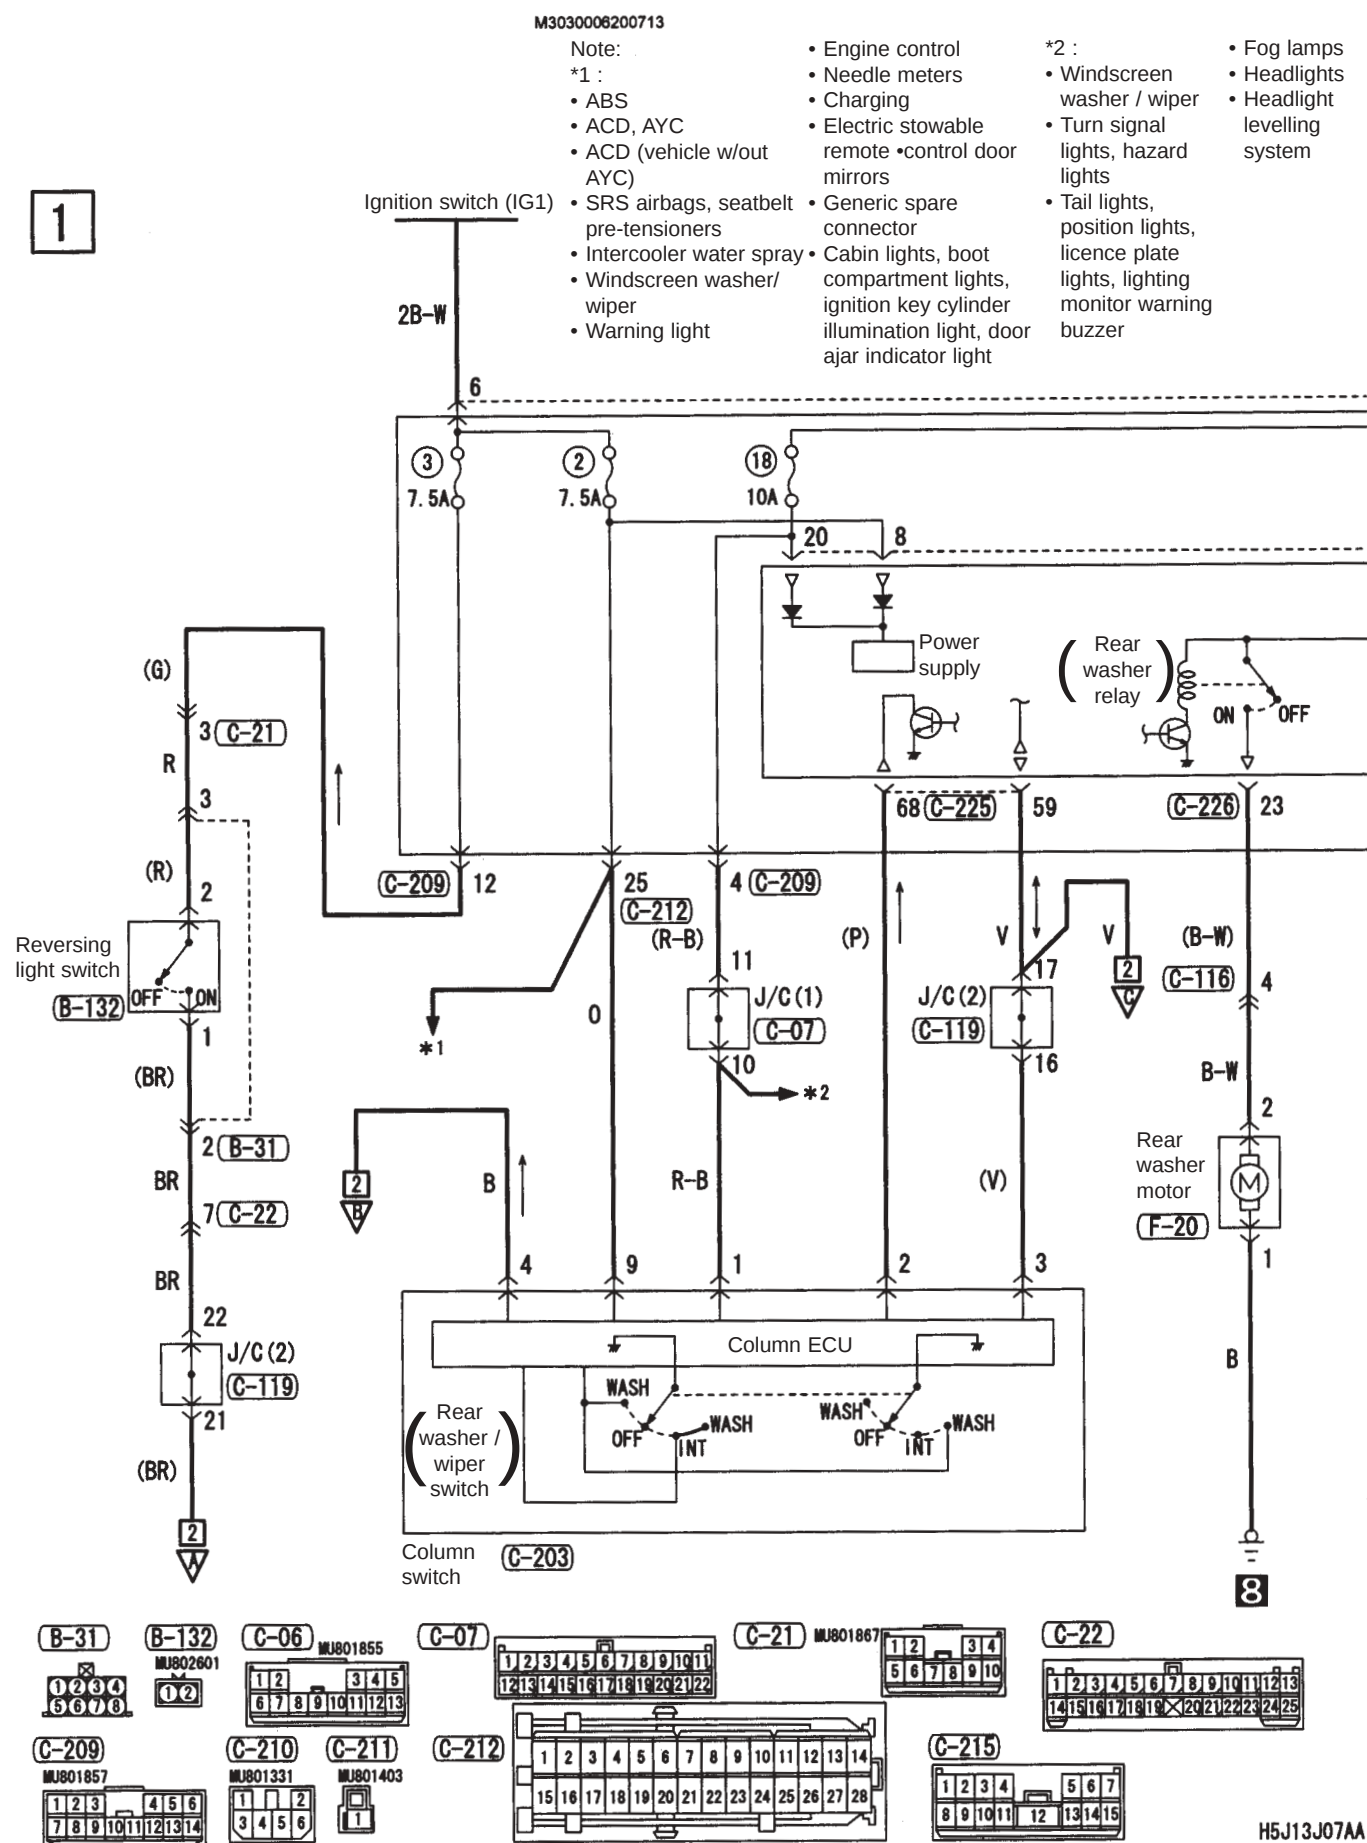


H5J13J07AA

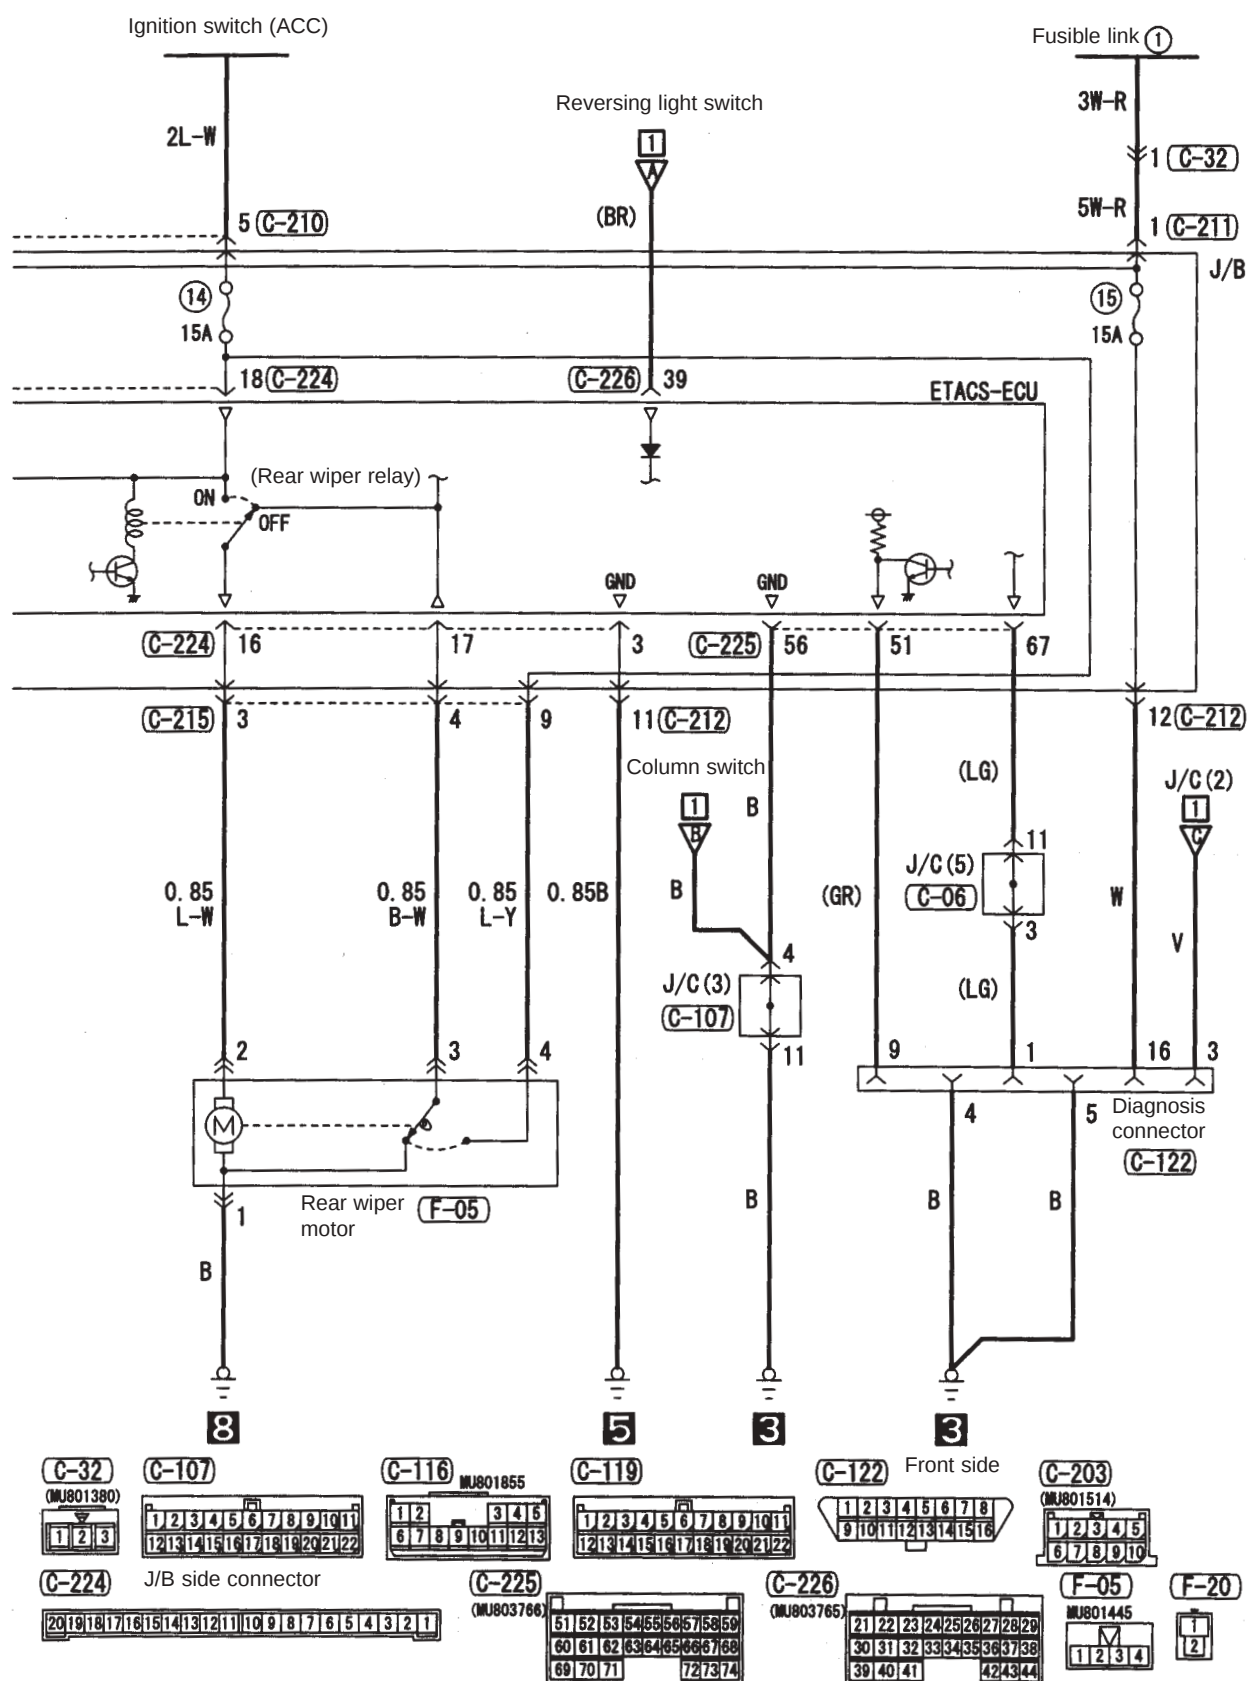

Demister (vehicle with heater or manual air-conditioning)

M3030020100679

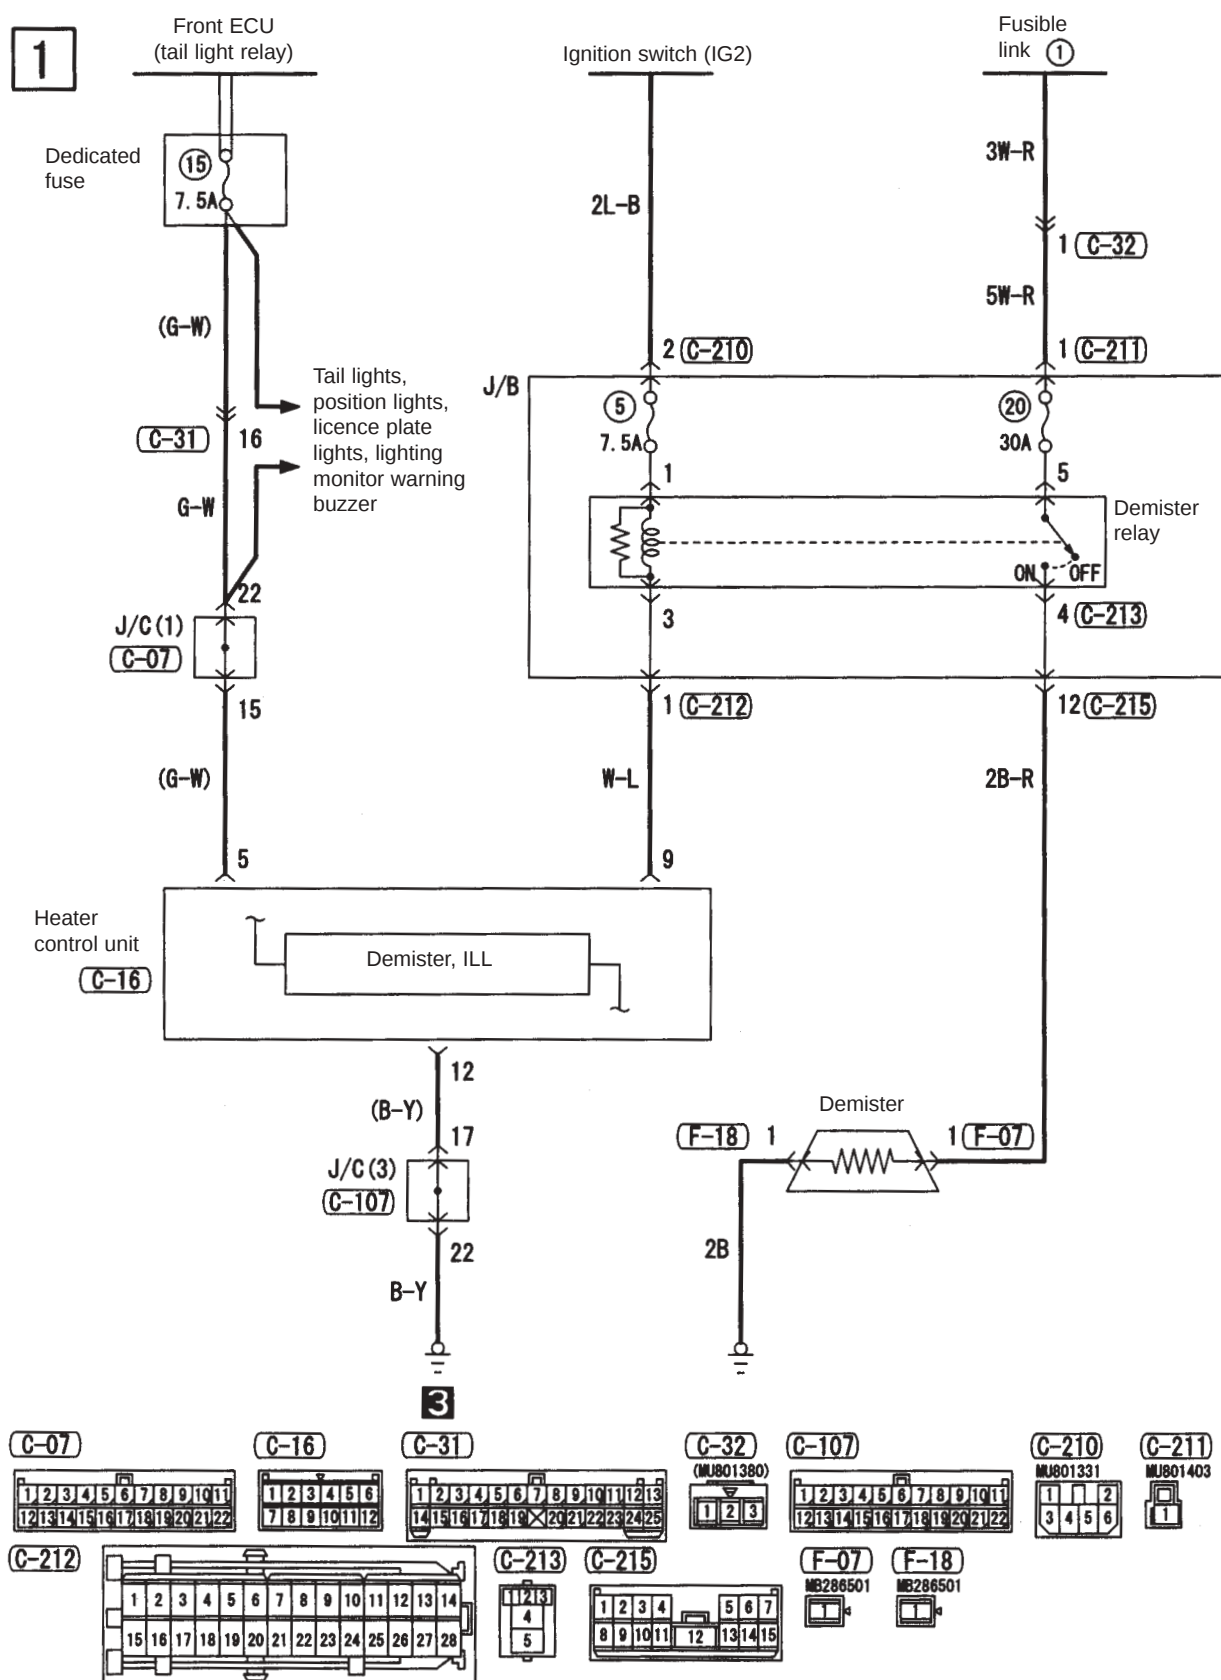


H5J13J08AA


<Notes>

Demister, door mirror heating elements (vehicle with fully automatic A/C)

M3030006400193

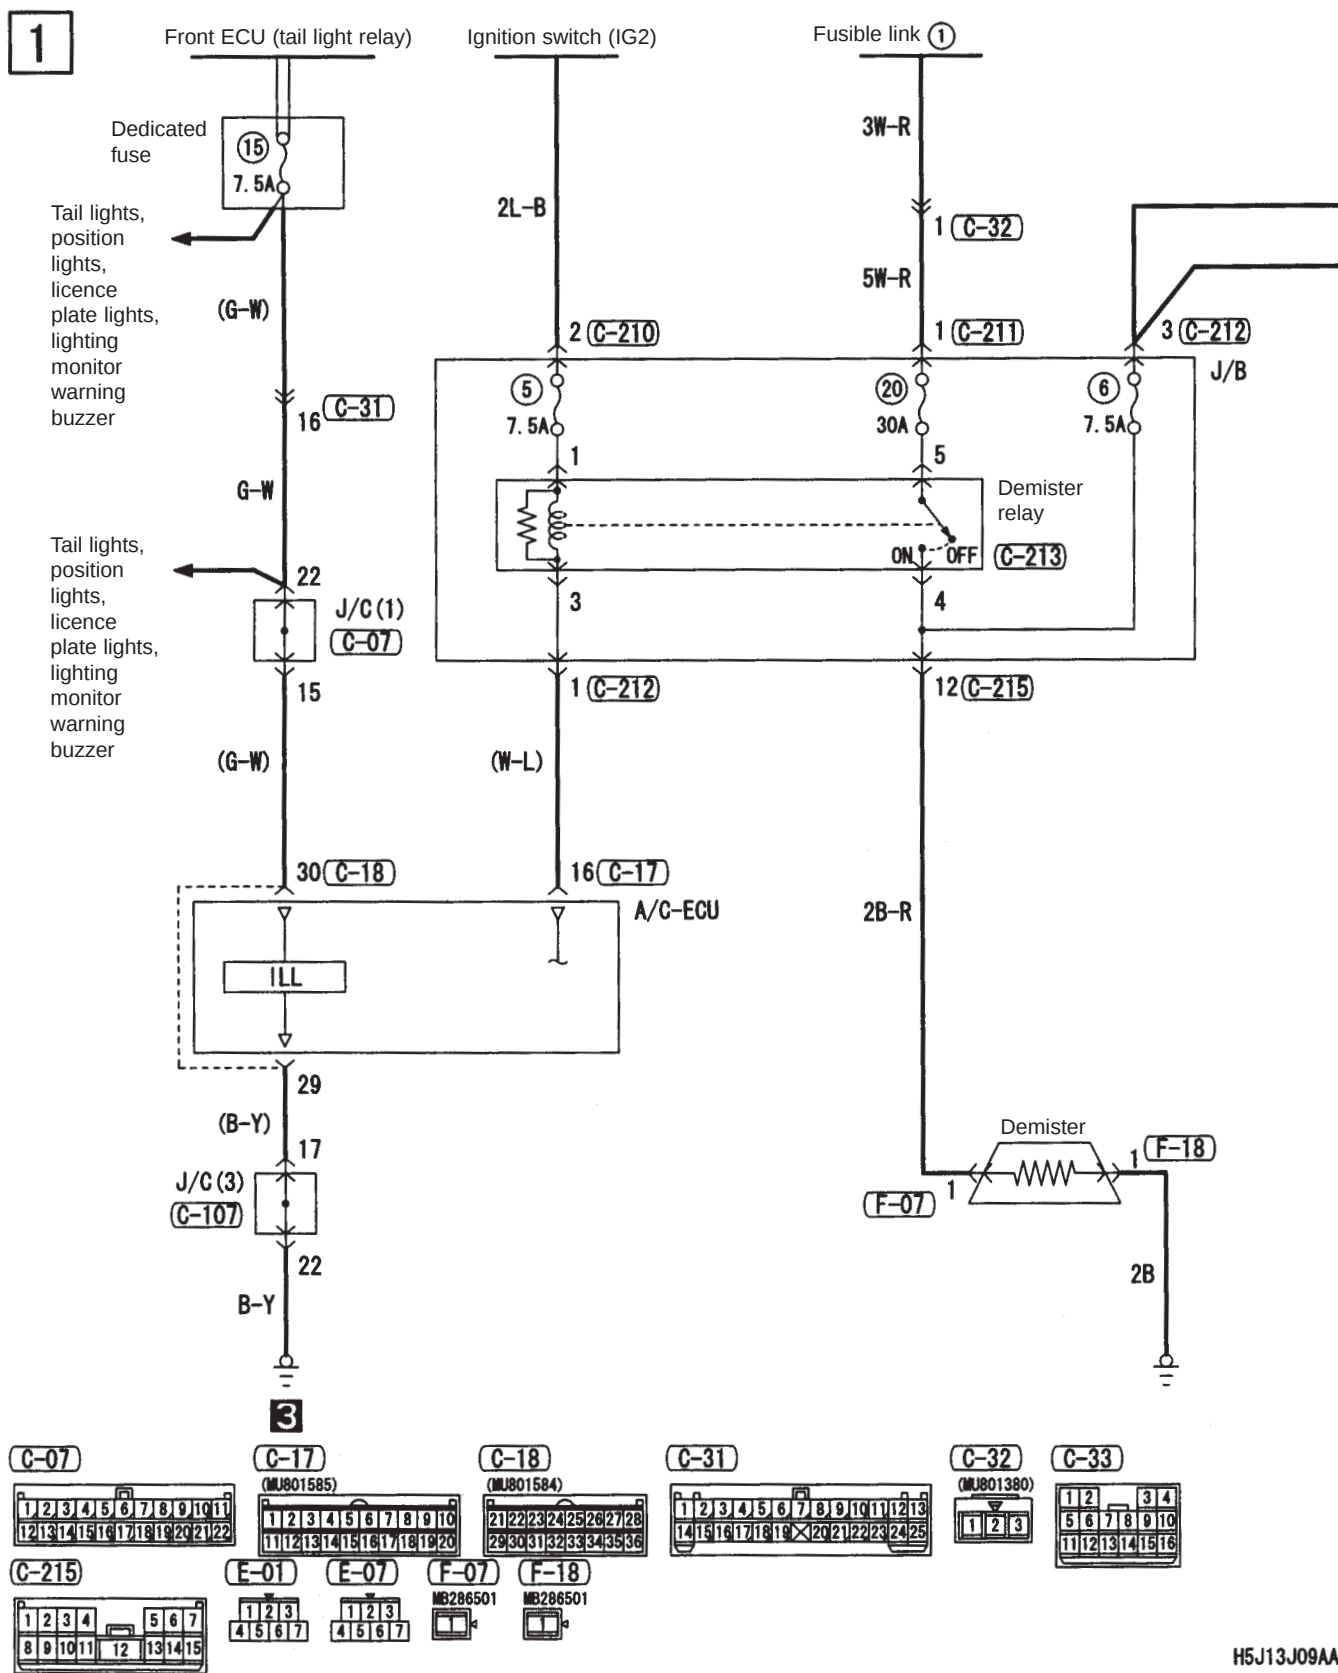

2

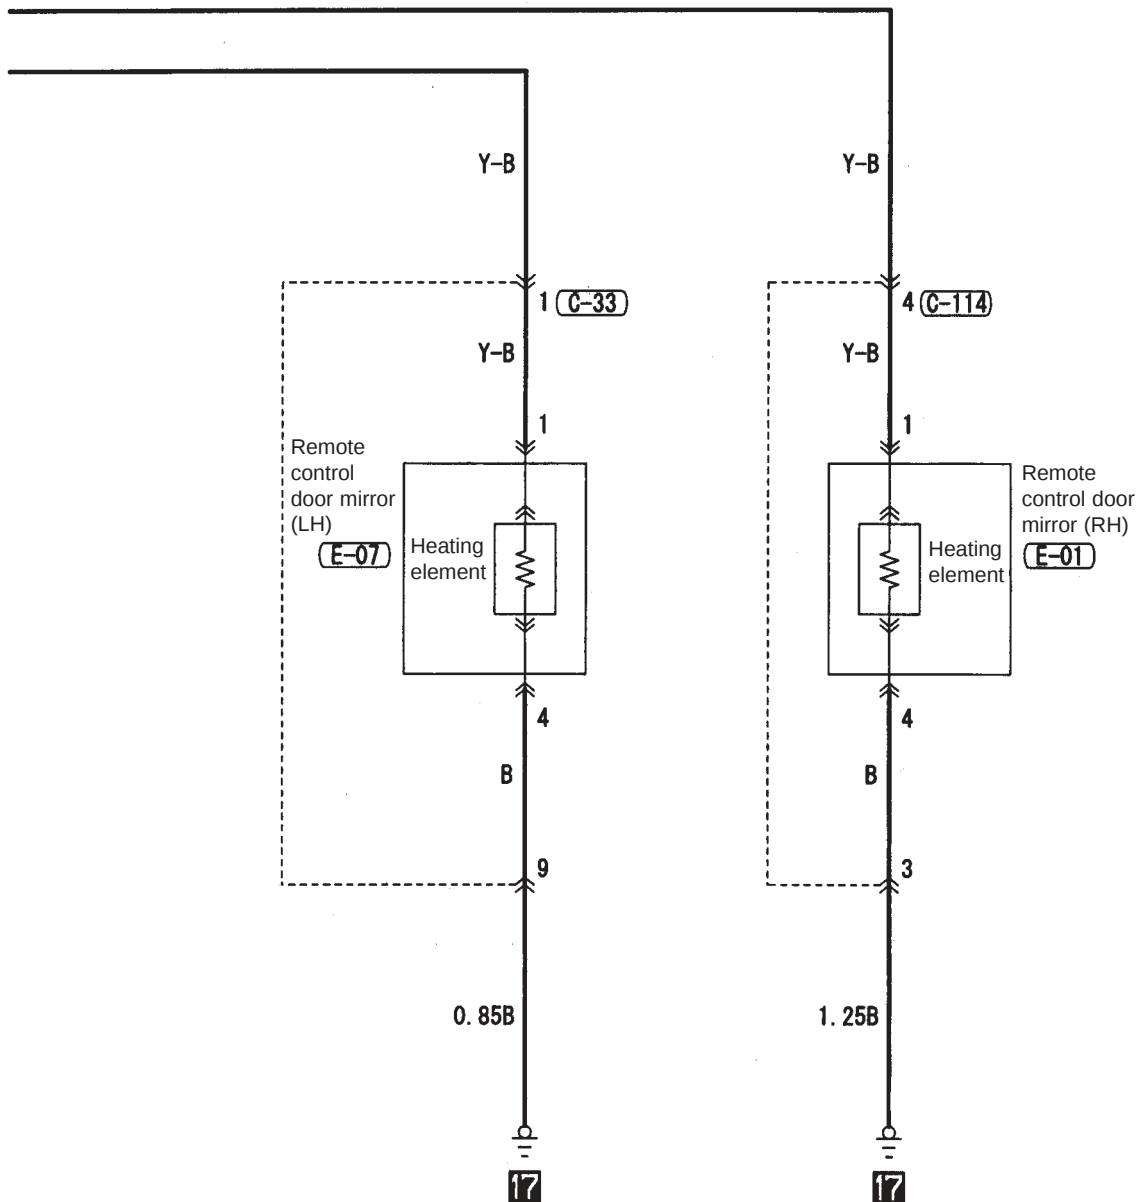

C-107



C-114




C-210



C-211



C-212

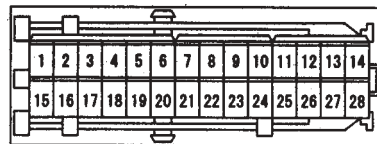


C-213




Electric stowable remote control door mirrors


M3030008600539

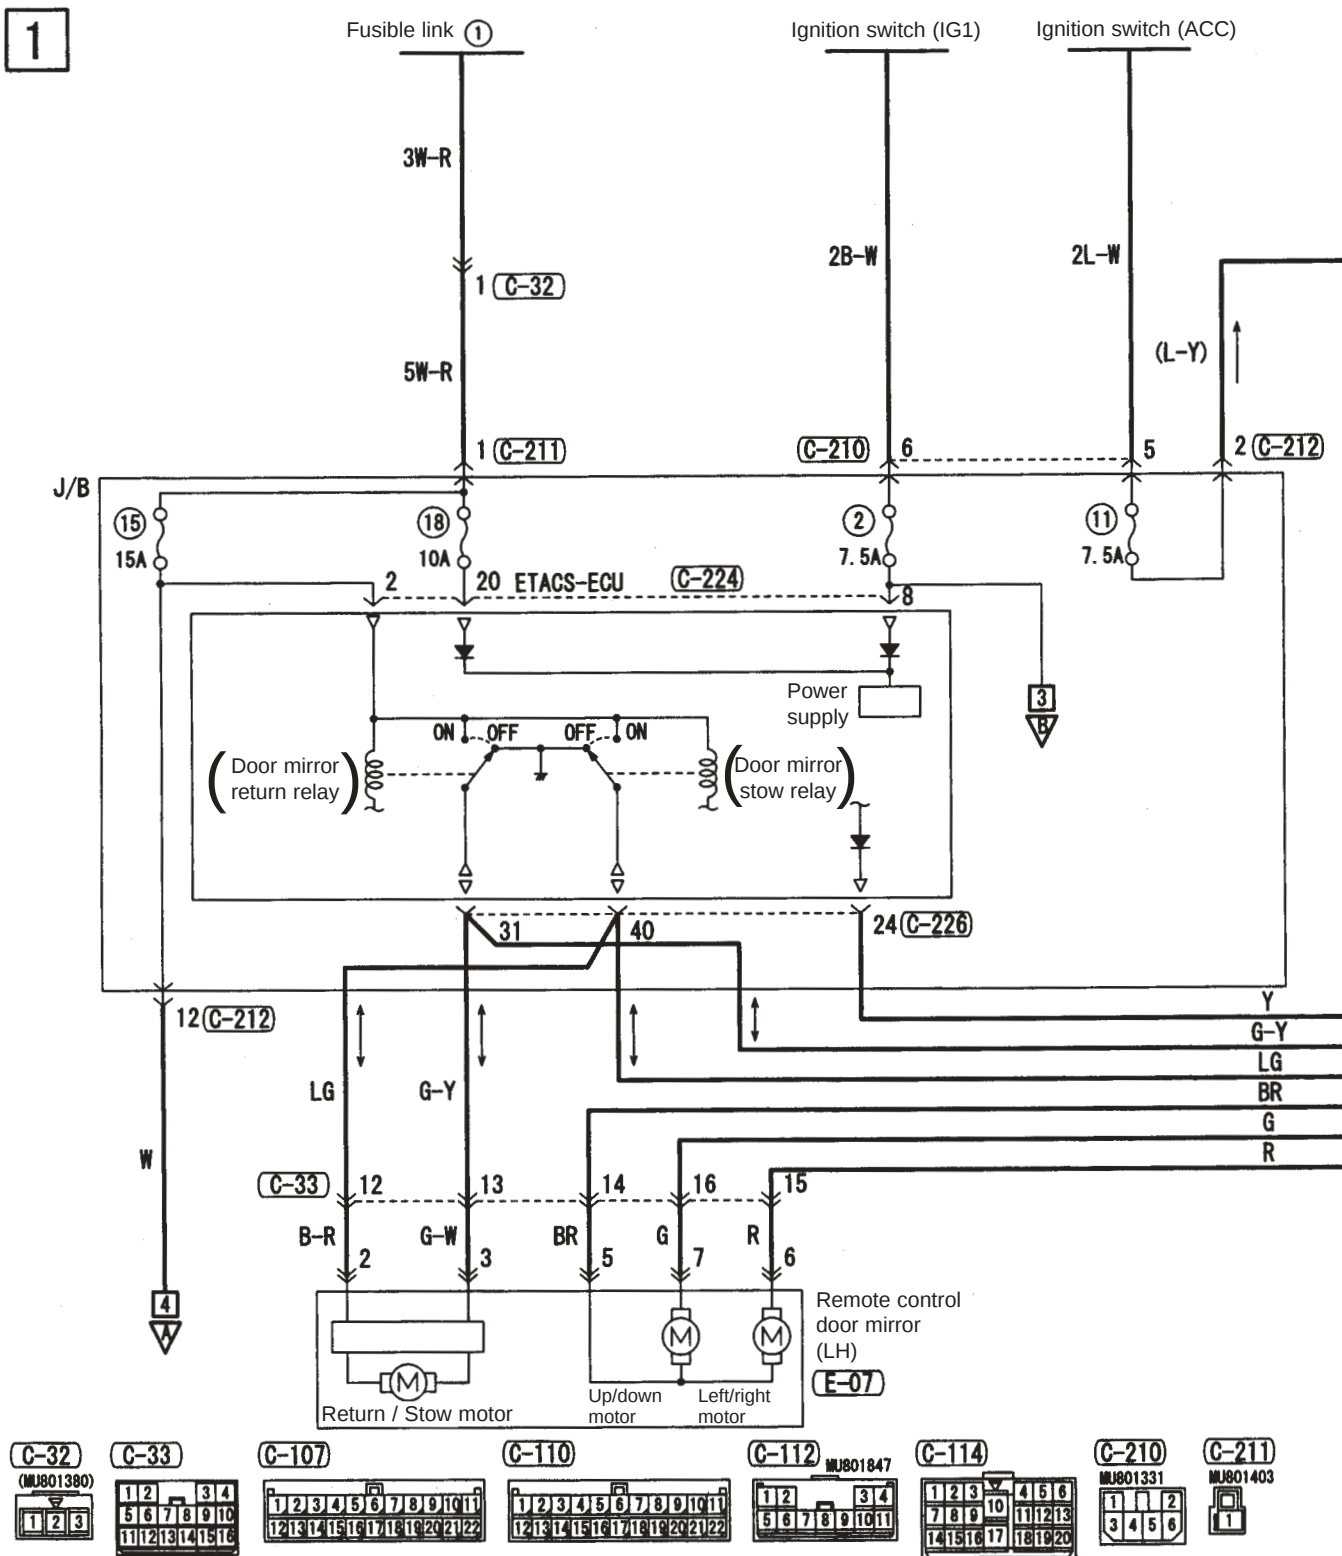

2

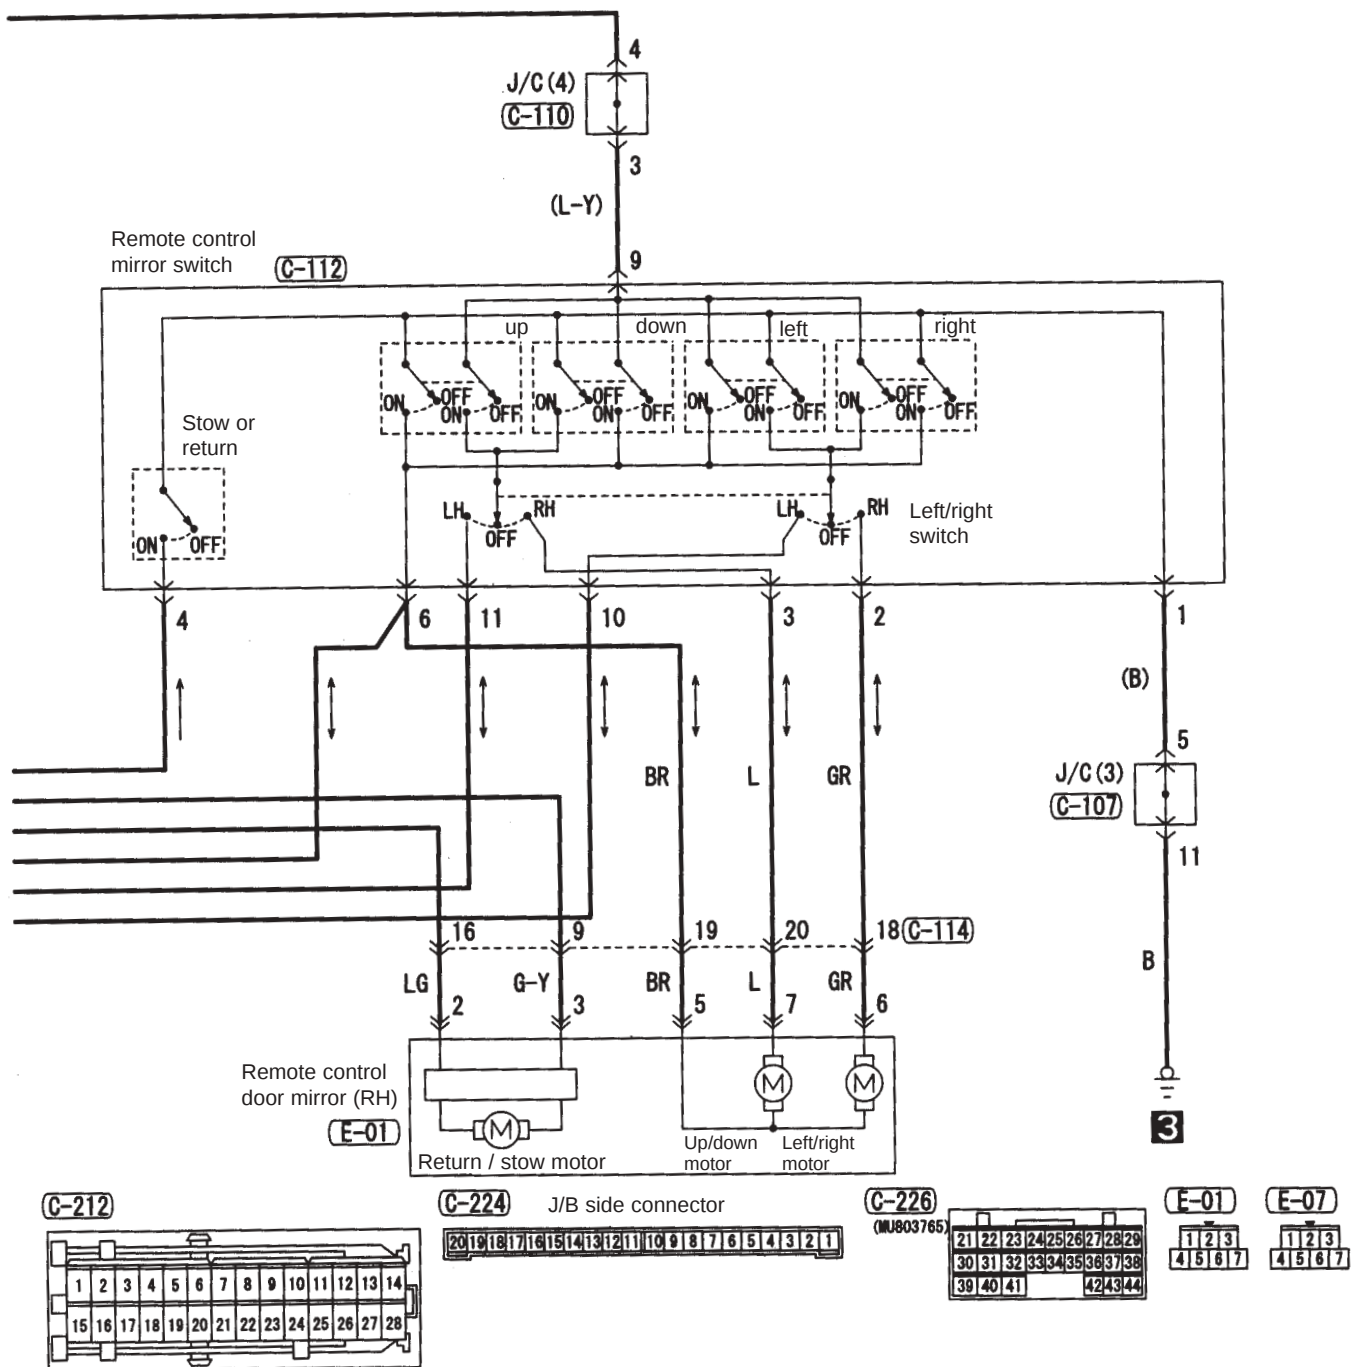

Electric stowable remote control door mirrors (cont.)

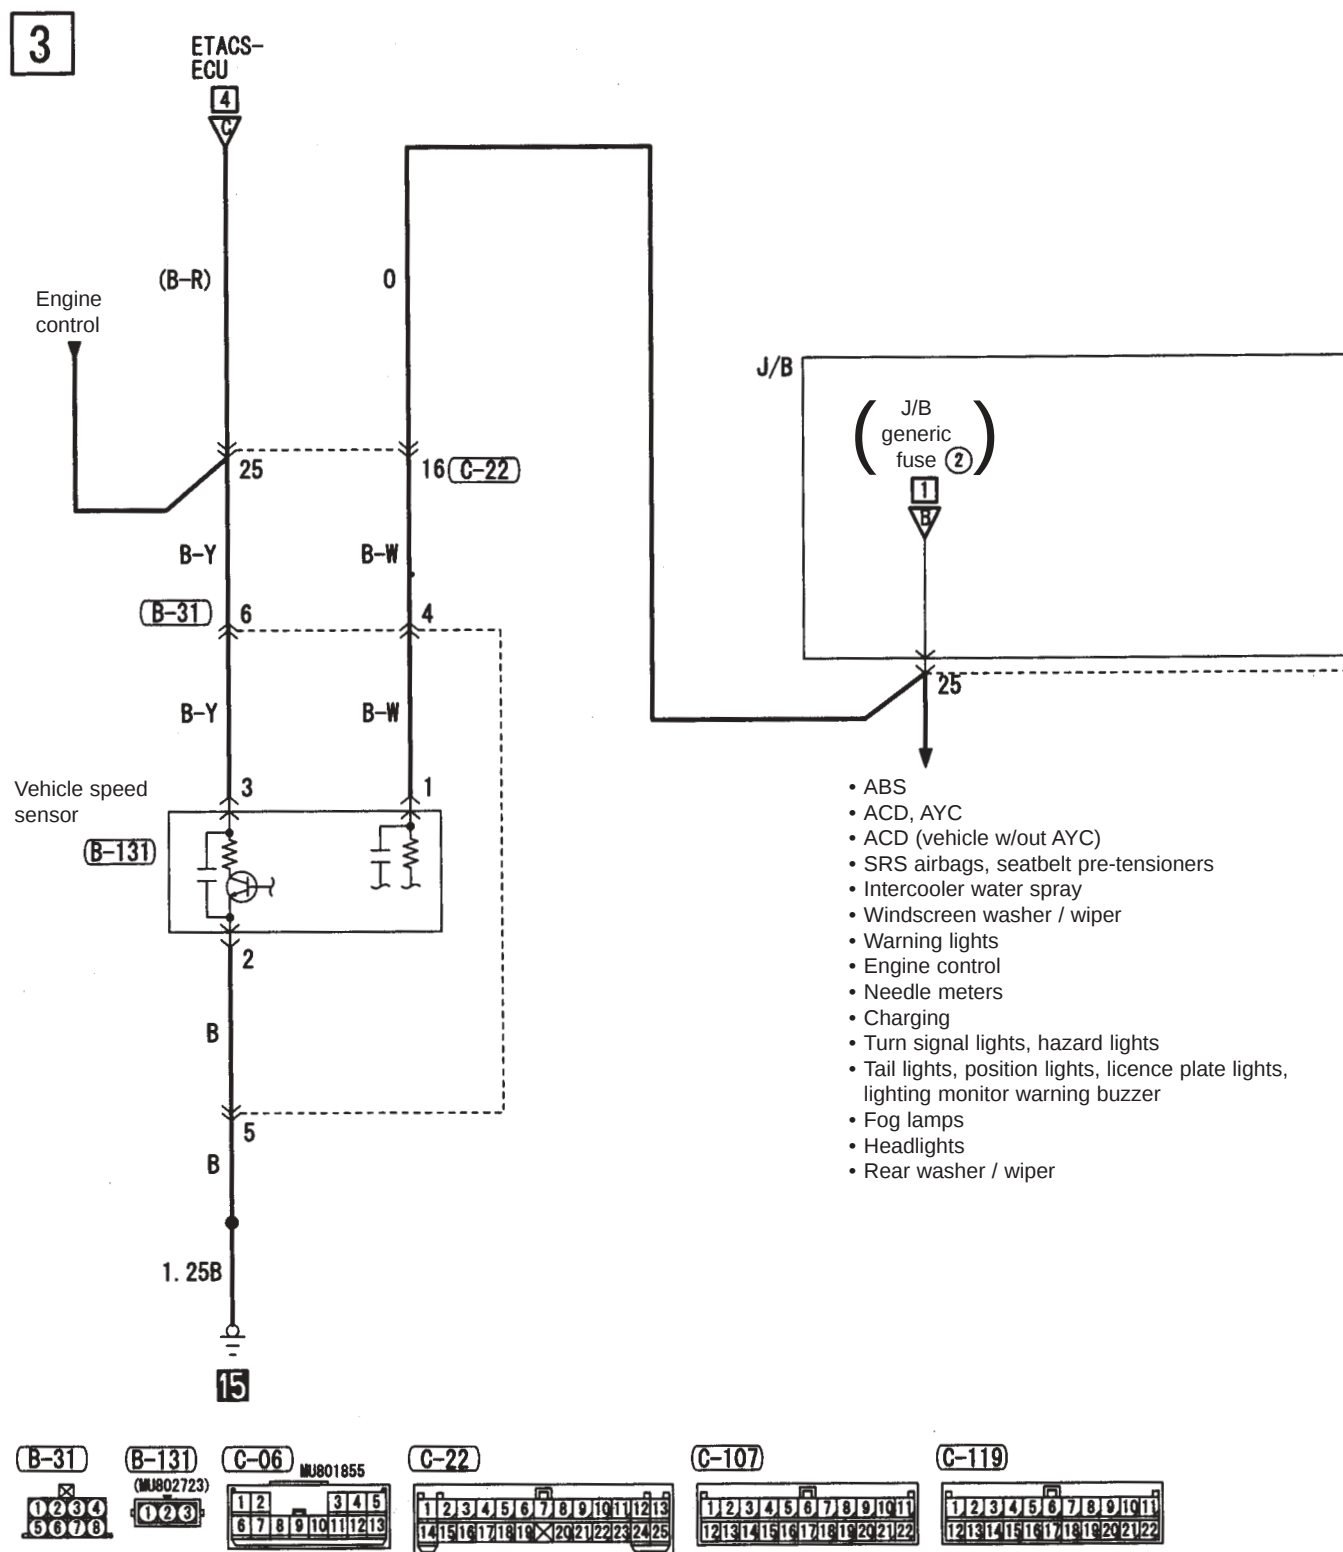




ACCESSORIES

Spare audio connectors

M3030018100036

1

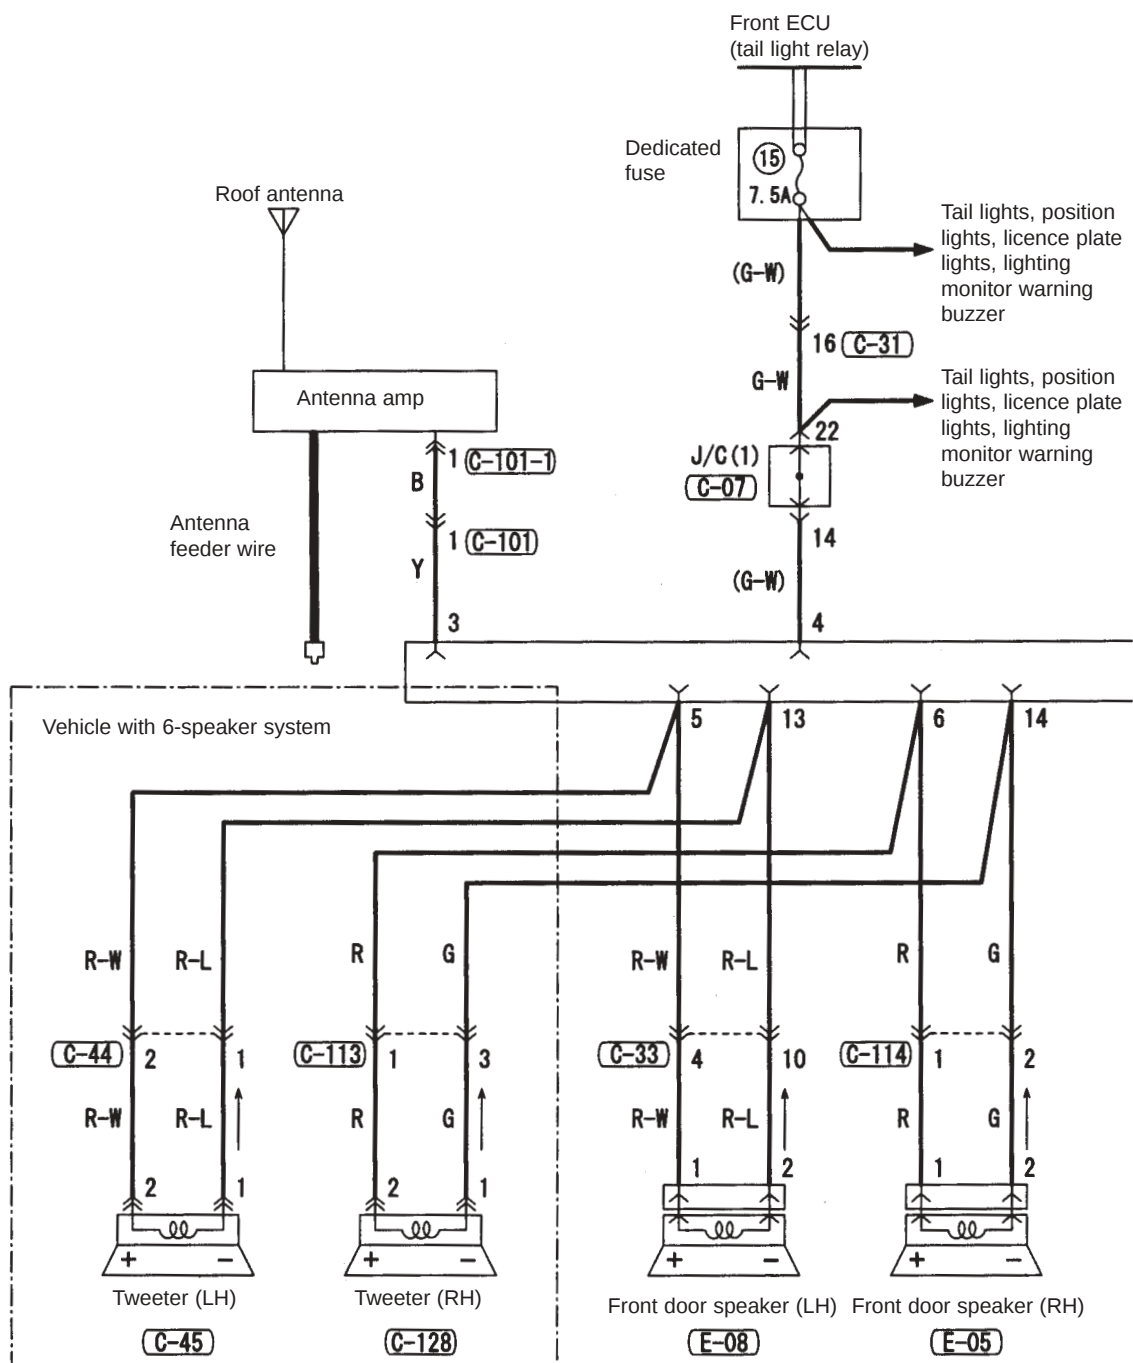

C-07



C-29



C-31



C-32



C-33



C-44



C-45



C-101



C-210



C-211



E-05



E-08




F-06



F-16



2

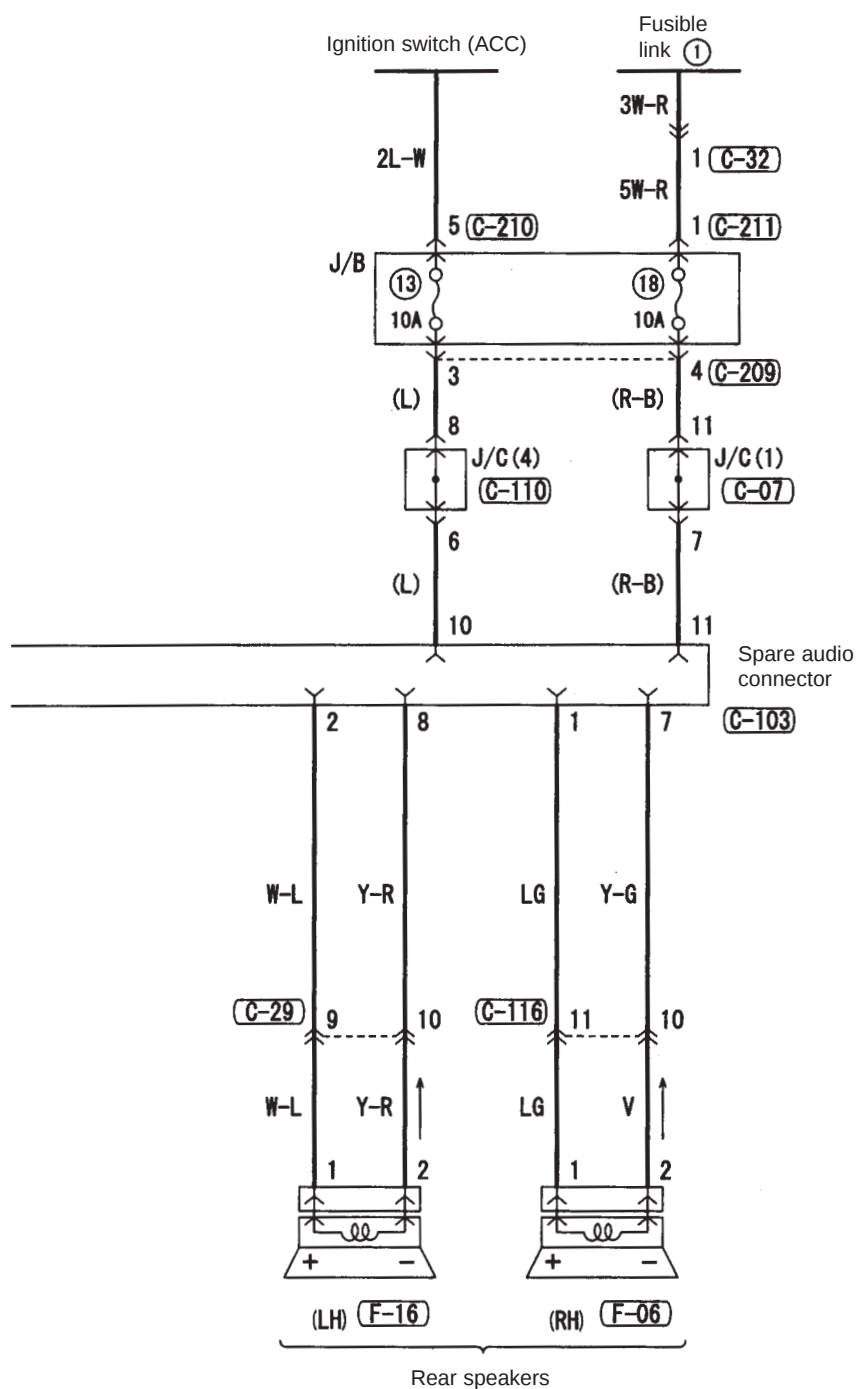

C-101-1



C-103

MU801453

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18

C-110

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-113

MU801697

1	2
3	4
5	6

C-114

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24

C-116

MU801855

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15

C-128

MU801857

1	2
---	---

C-209


MU801857

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18

Clock

M3030007700380

1

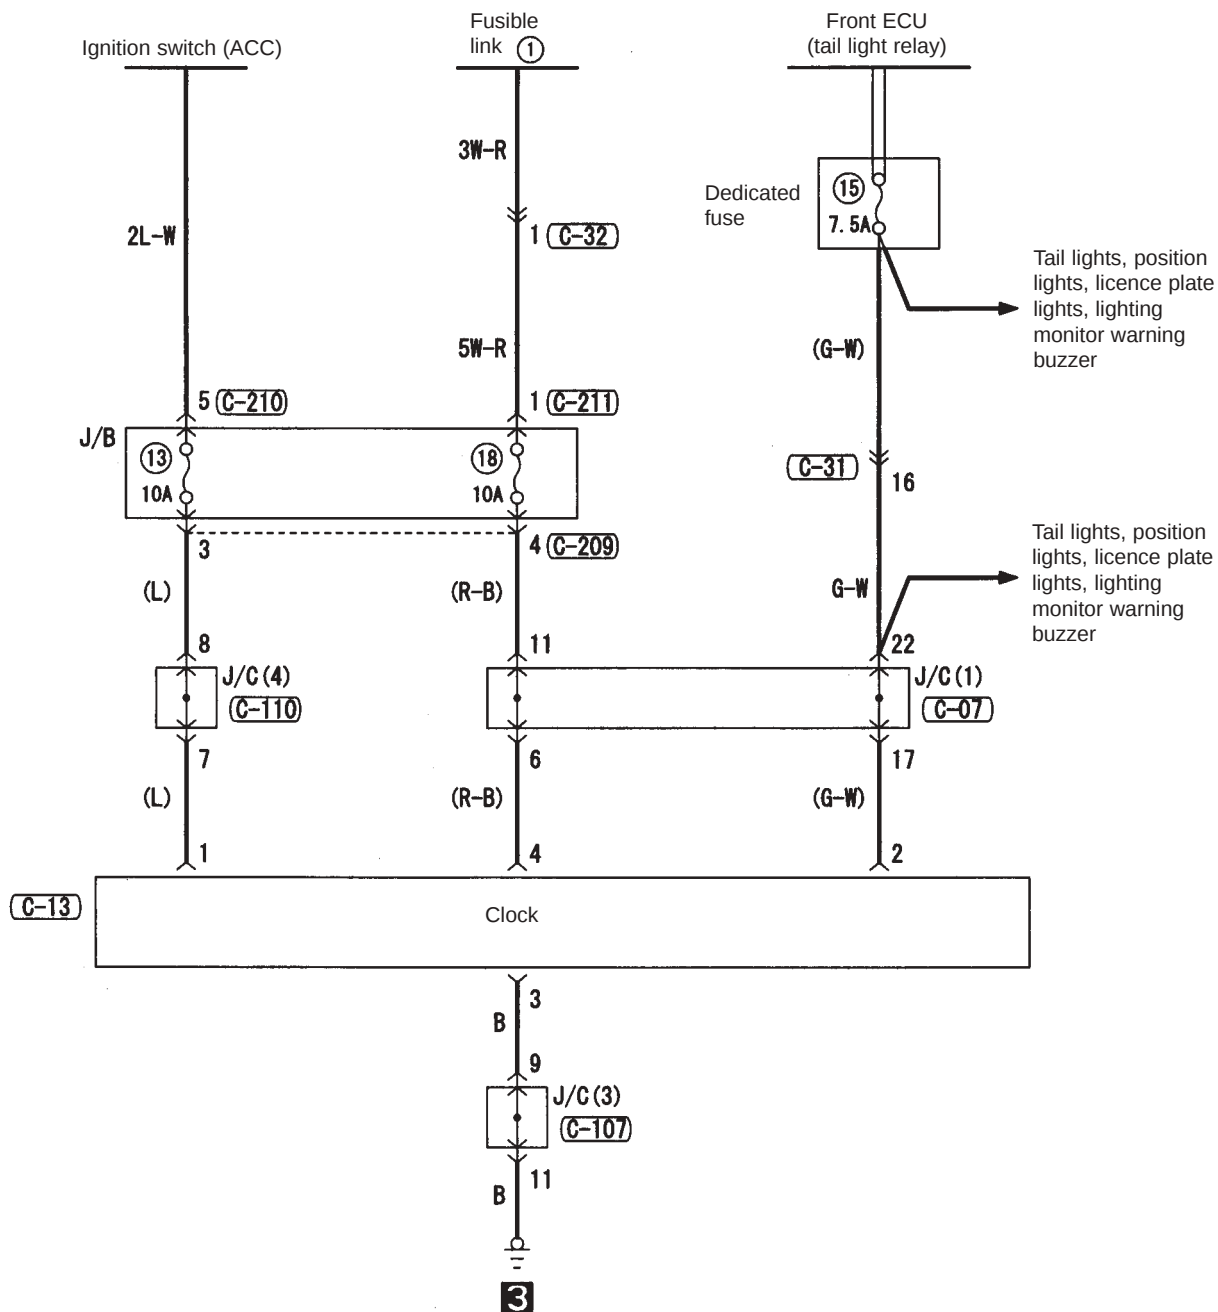

C-07



C-13



C-31



C-32



C-107



C-110



C-209



C-210



C-211




H5J14J03AA

Cigarette lighter, ashtray illumination lights

M3030007800354

1

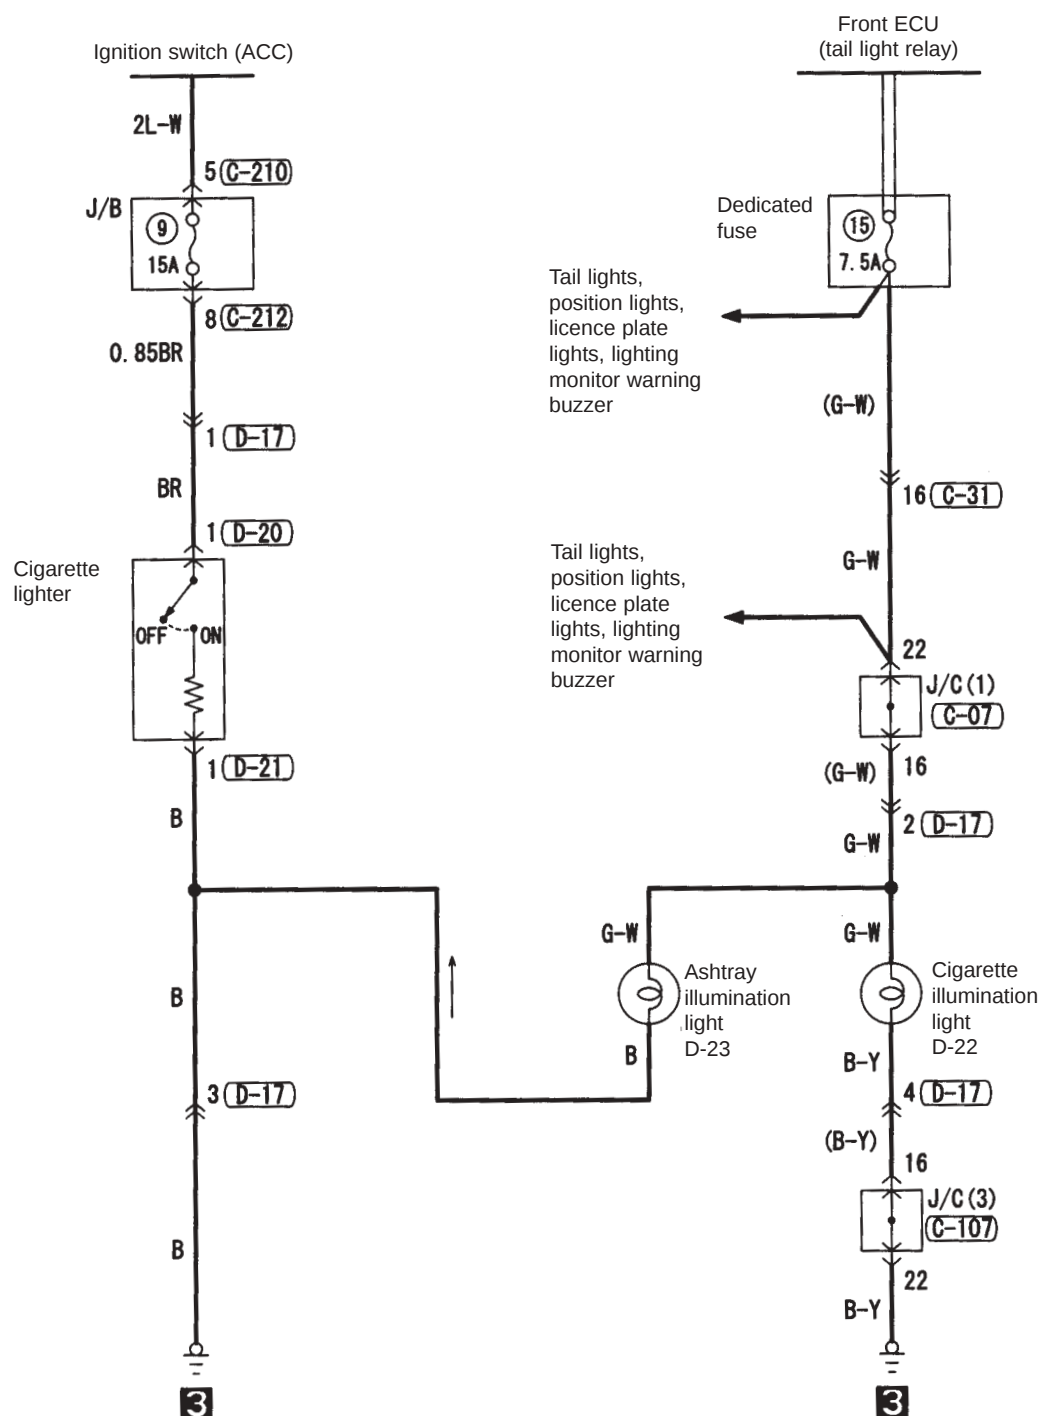

C-07



C-31




C-107



C-210



C-212

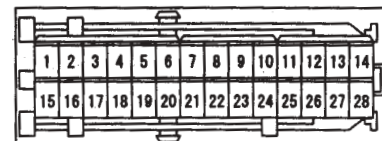

D-17



D-20



D-21




H5J14J04AA


Equipment

ABS

M3030008400724

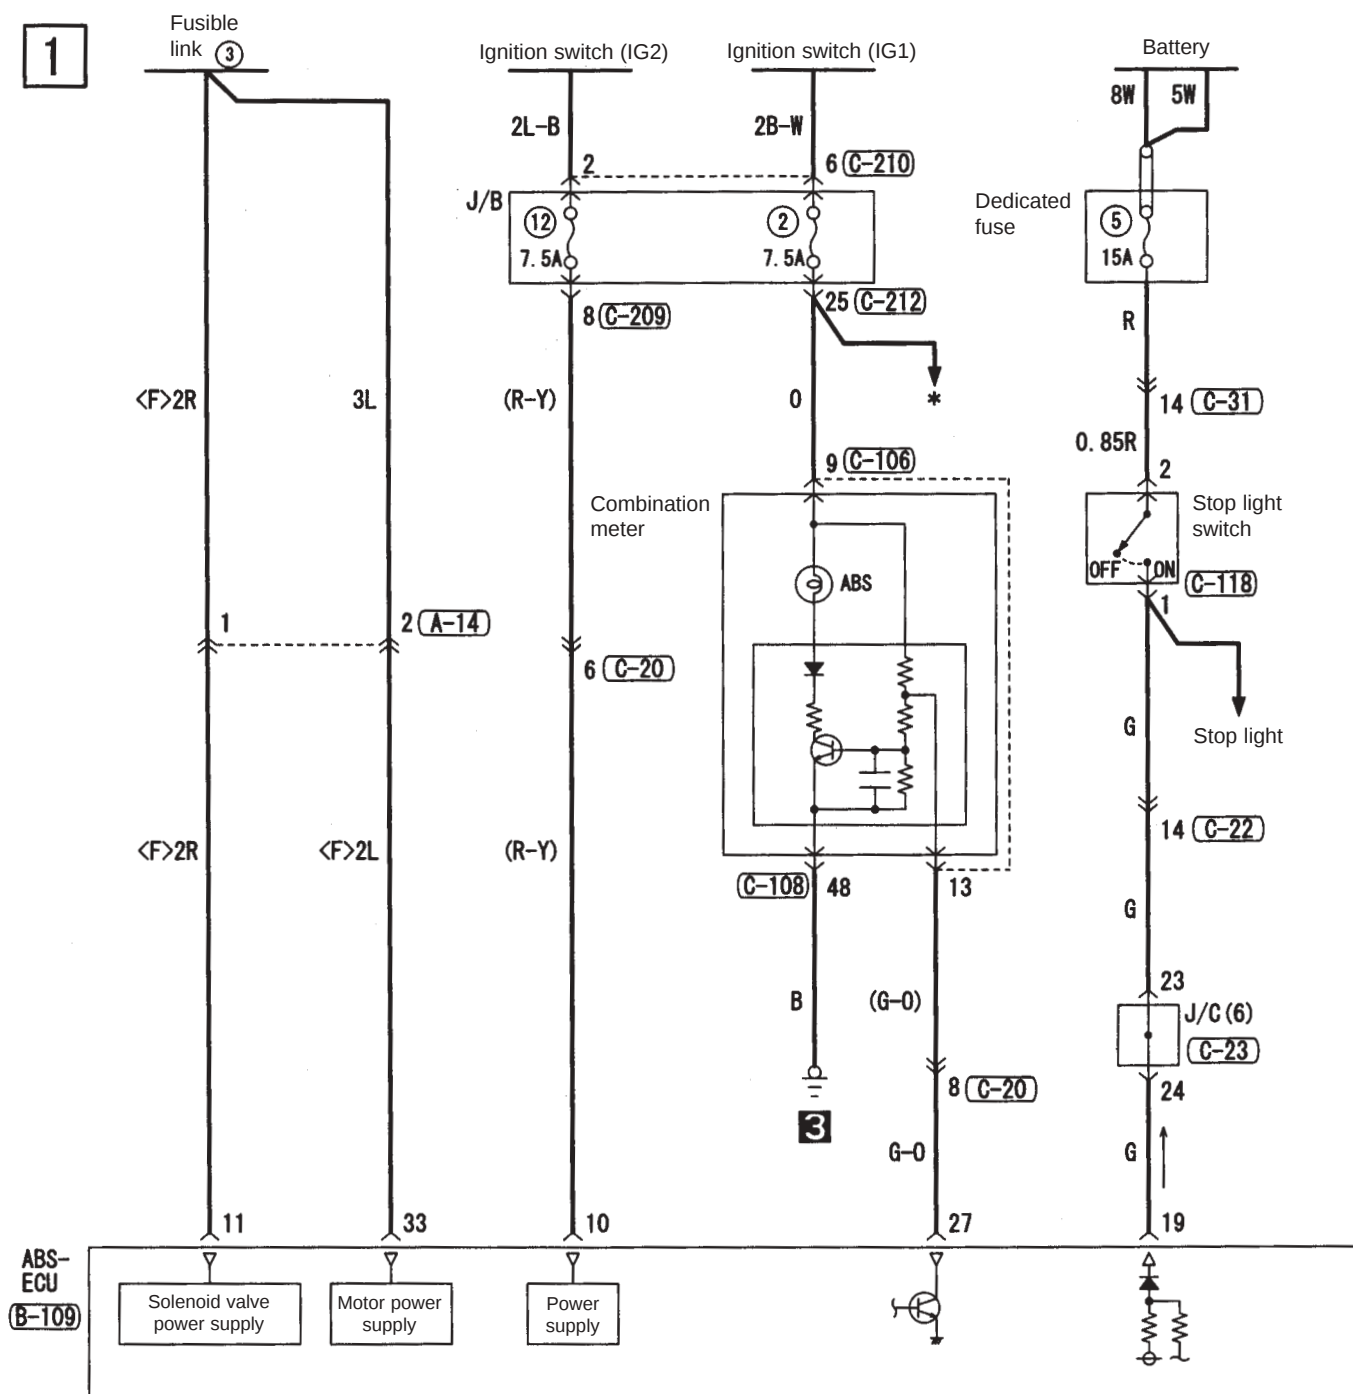

B-109



C-20



C-22



C-23



C-118



C-209



C-210




H5J15J04AA

2


Note : *

- Windscreen washer / wiper
- Engine control
- Needle gauges
- Turn signal lights, hazard lights
- Tail lights, position lights, licence plate lights, lighting monitor warning buzzer
- Electric stowable remote control door mirrors
- Generic spare connector
- Fog lamps
- Headlights
- Rear washer / wiper
- Cabin lights, boot compartment lights, ignition key cylinder illumination light, door ajar indicator light

Hydraulic unit

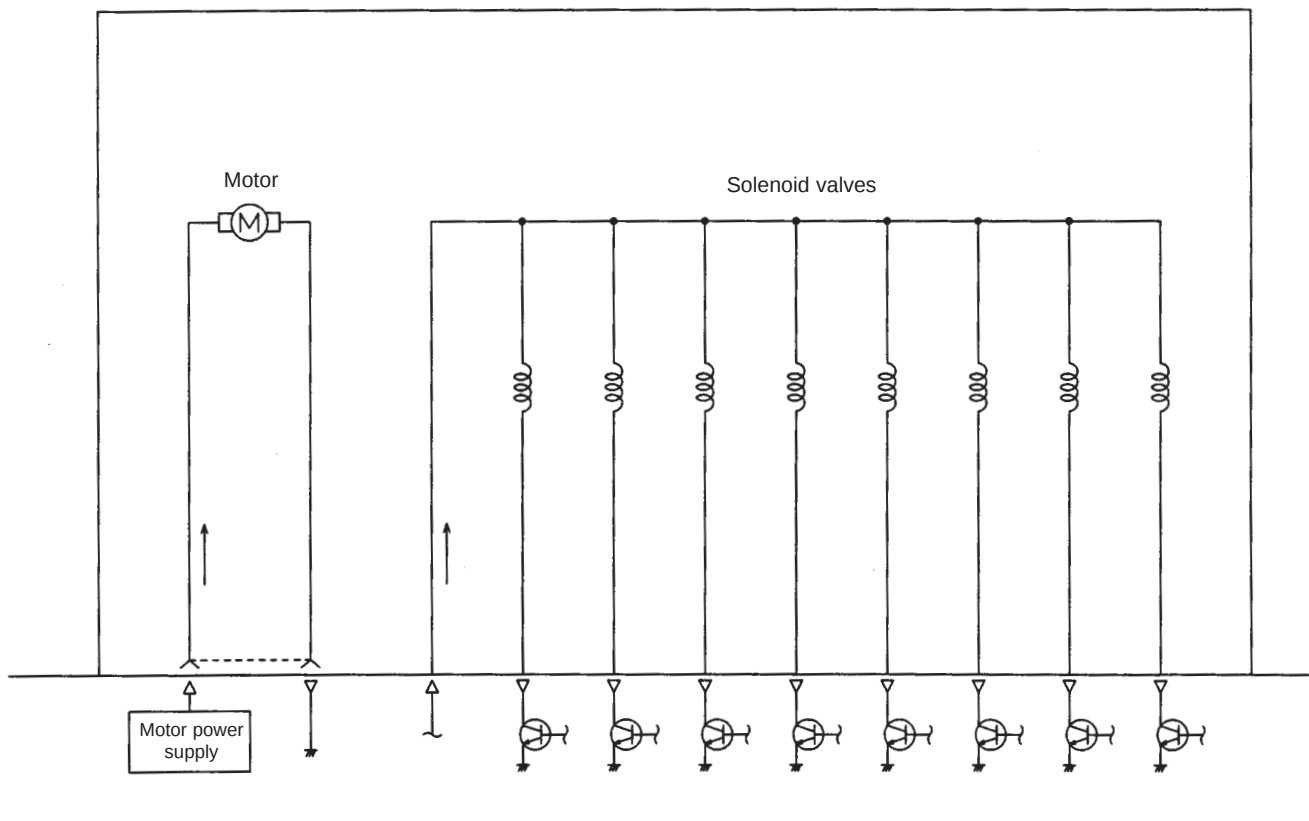

C-31




C-106



C-108




C-212

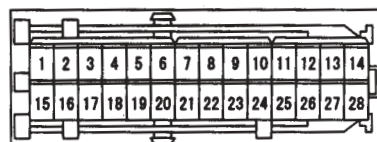


ABS (cont'd)

3

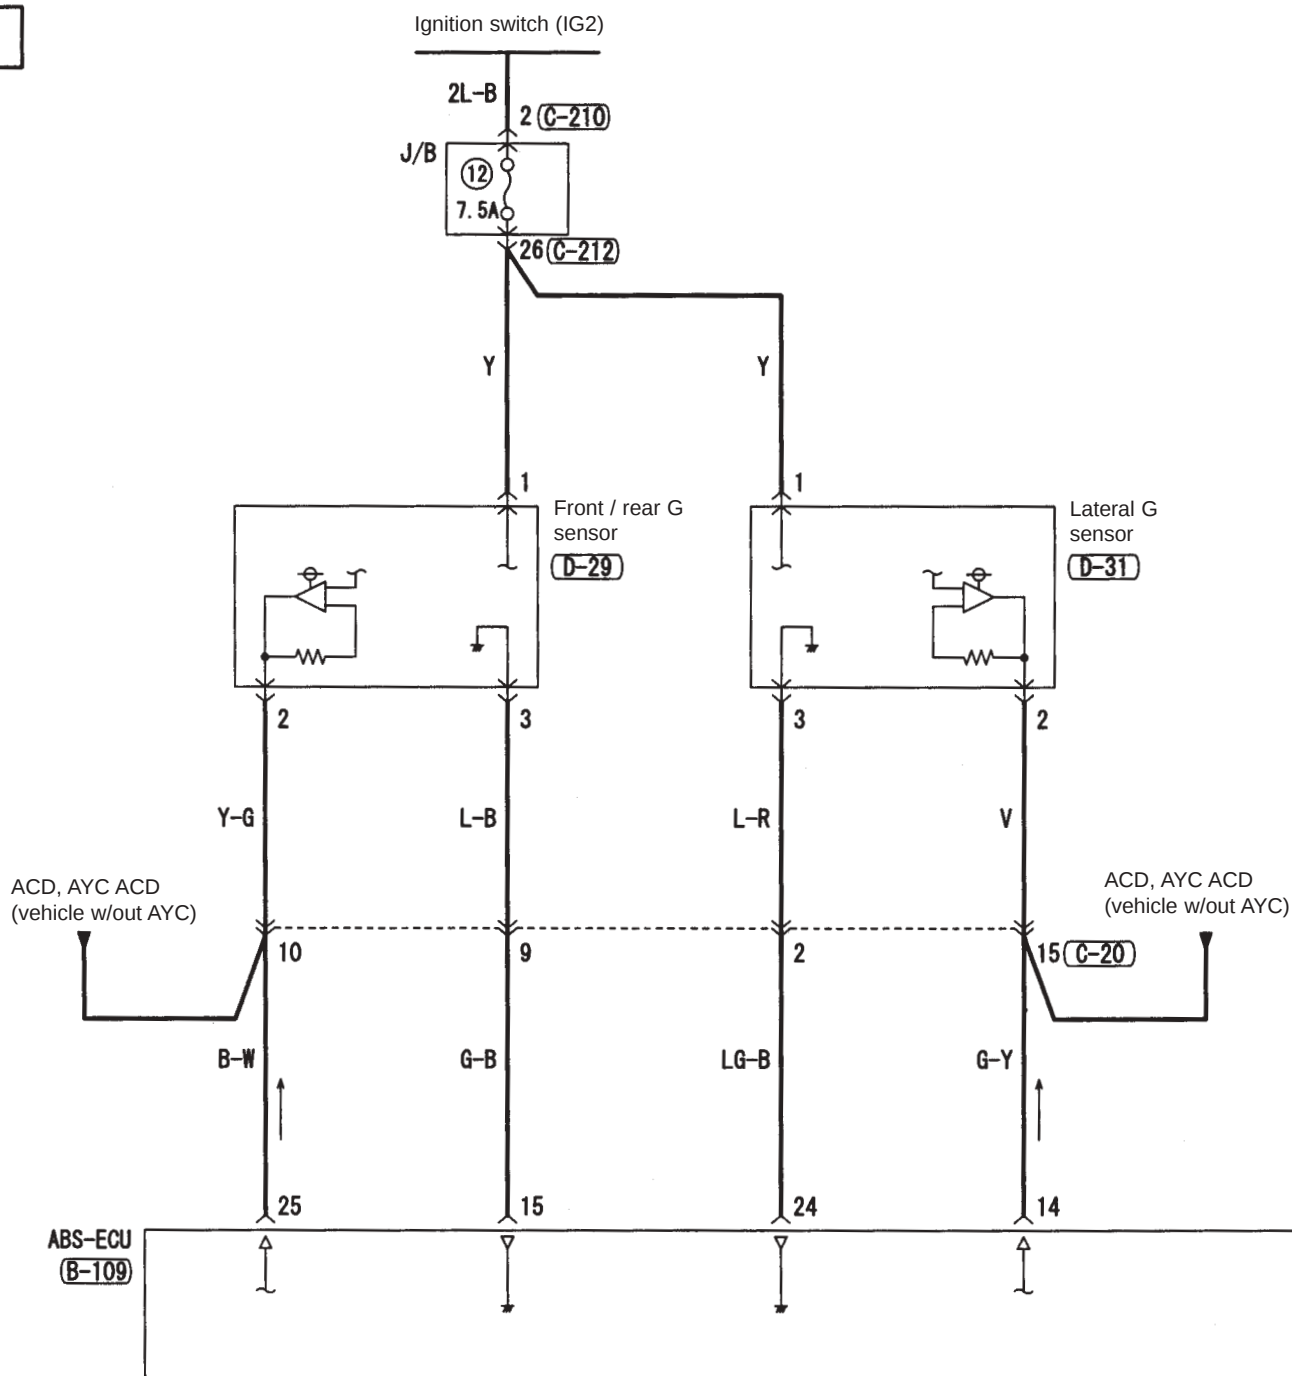


(B-109)



(C-20)



(C-37)




(C-38)



ABS (cont'd)


4

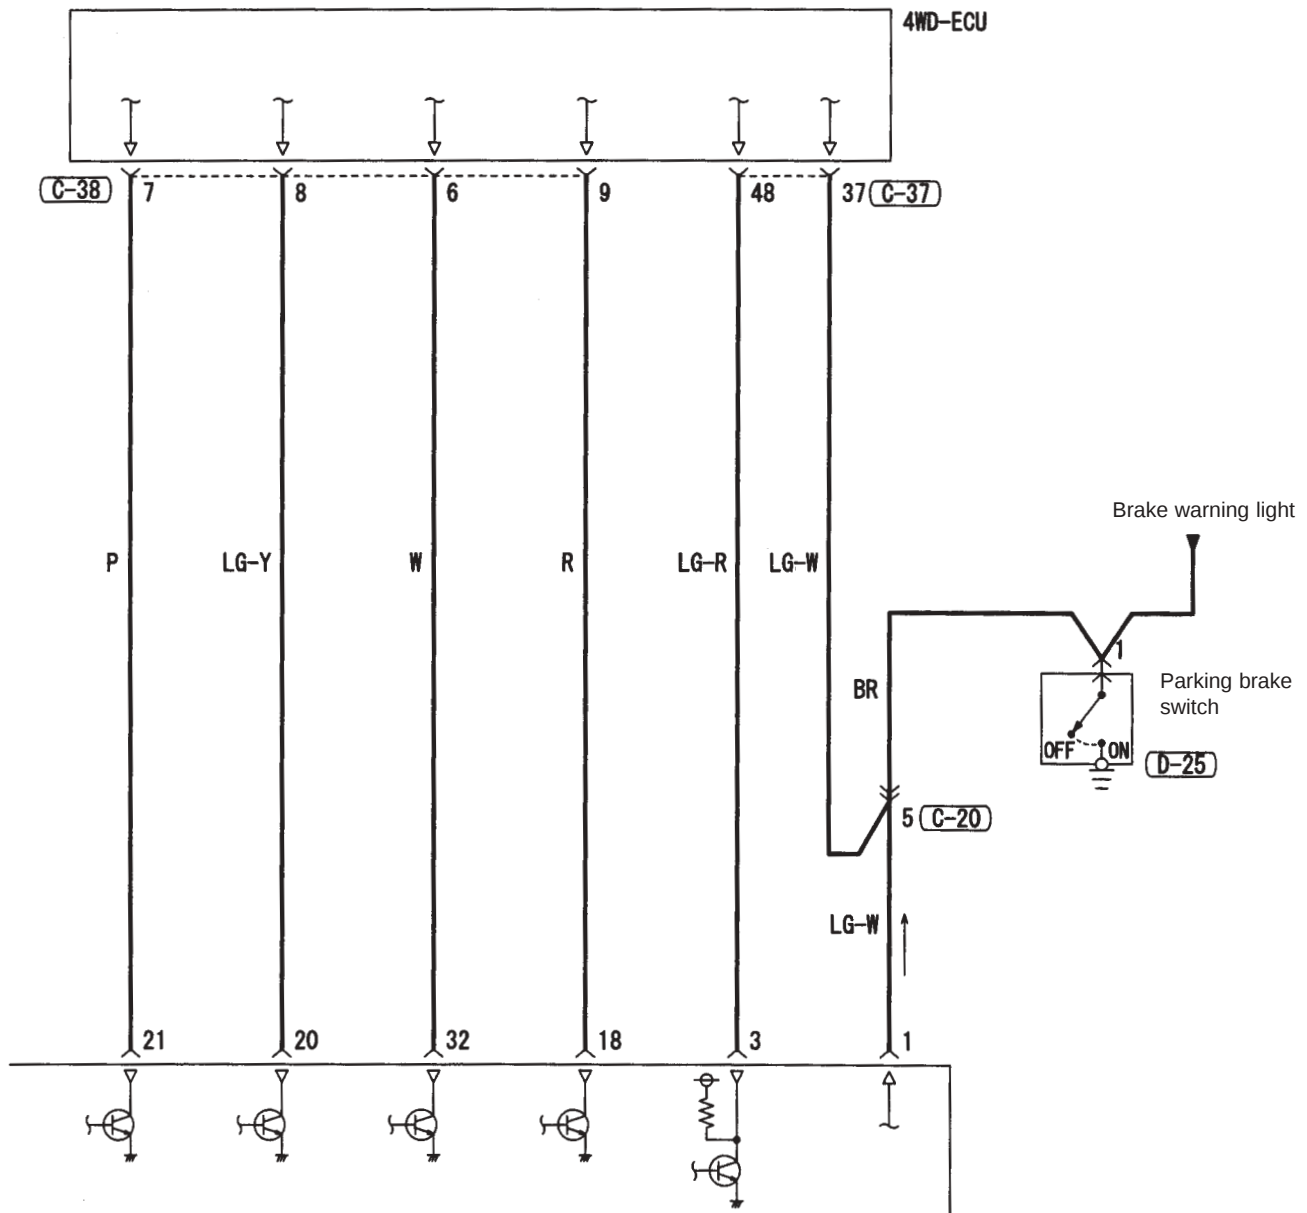

H5J15J04BB

ABS (cont'd)

5

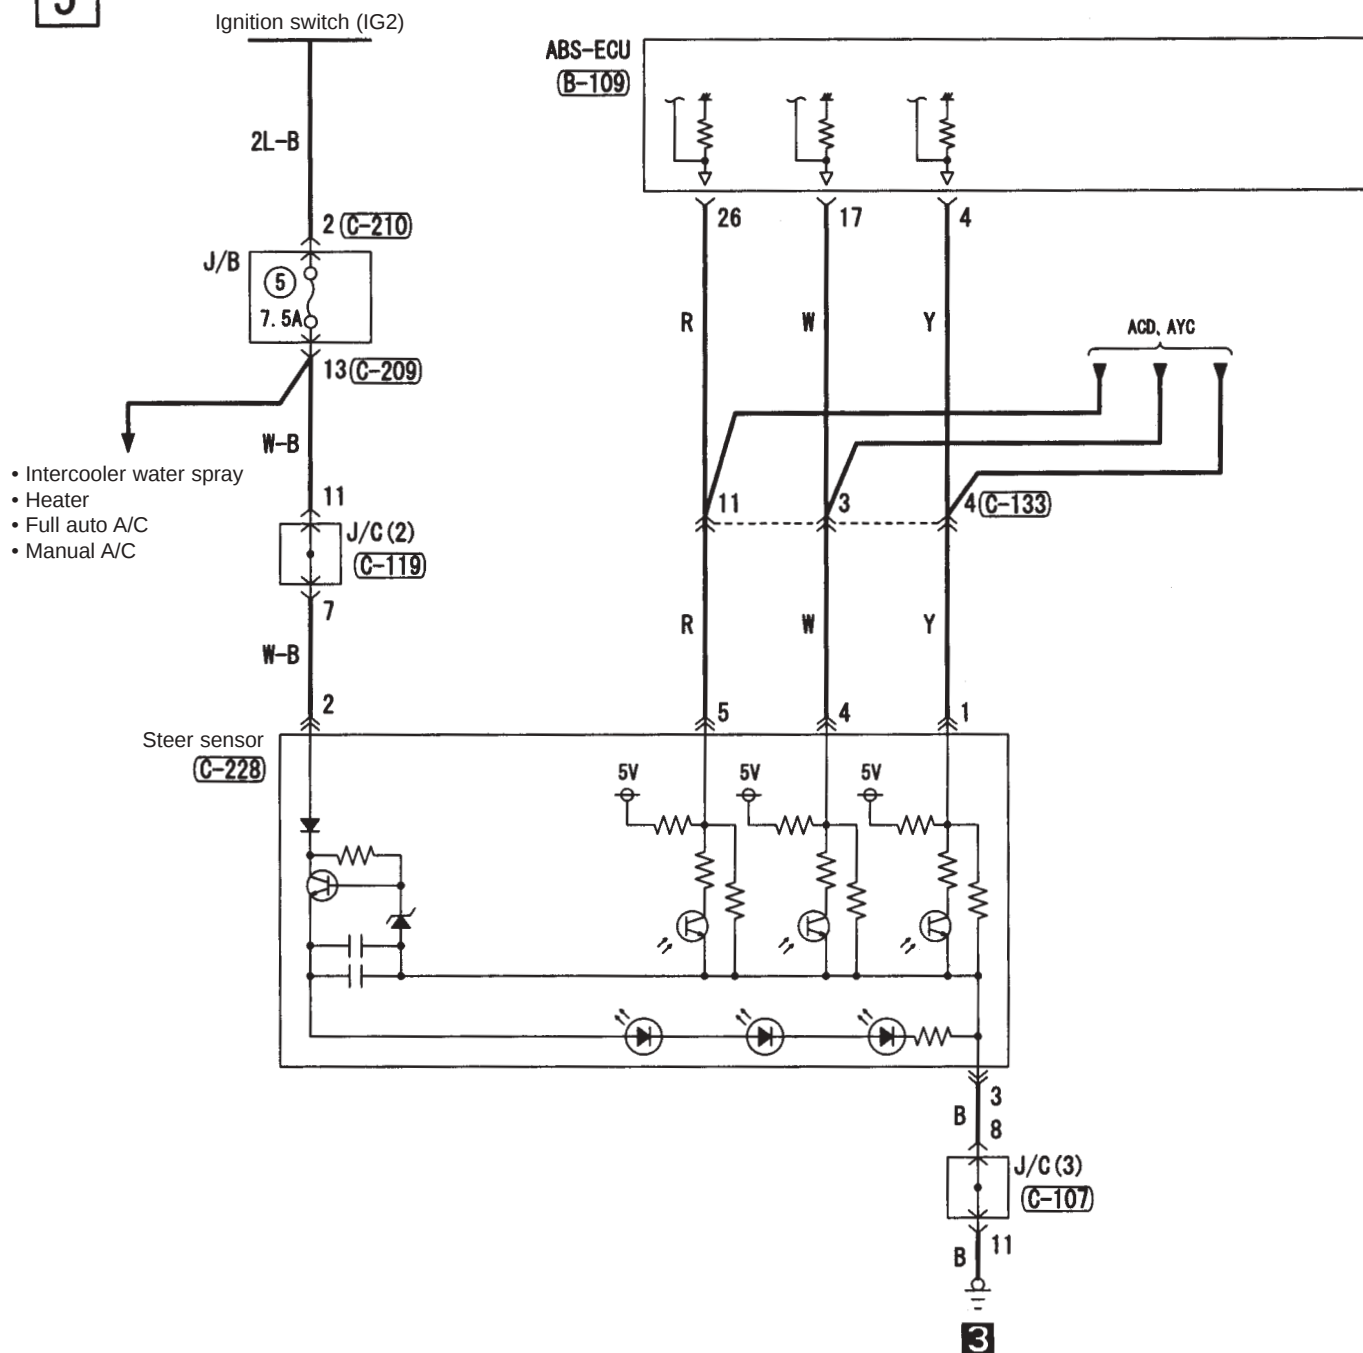

A-05

MU802601


1 2

A-31

MU802601

1 2

B-109



C-20



C-34



C-107



C-228

MU801545

1 2 3 4 5

D-05

MU802602

1 2

D-11

MU802602


1 2

D-12

MU801839

1 2 3 4 5 6 7 8

6

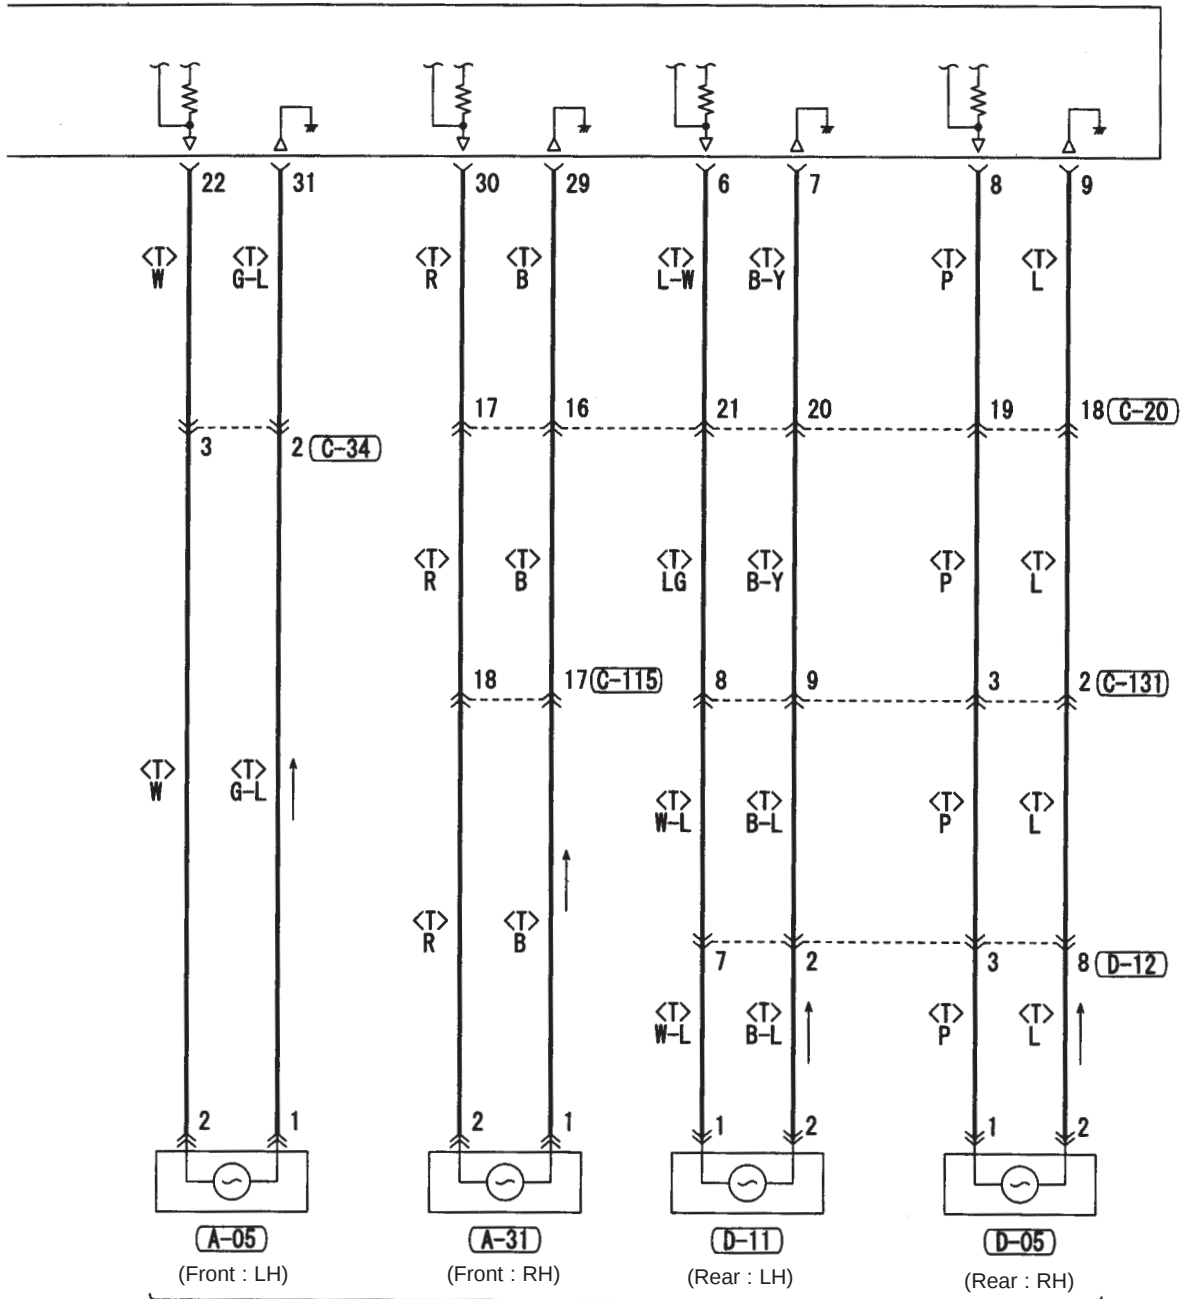

ABS sensors

C-115



C-119



C-131



C-133








C-209



C-210





7

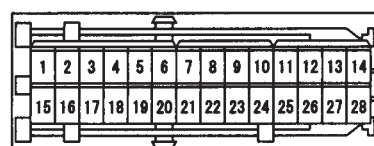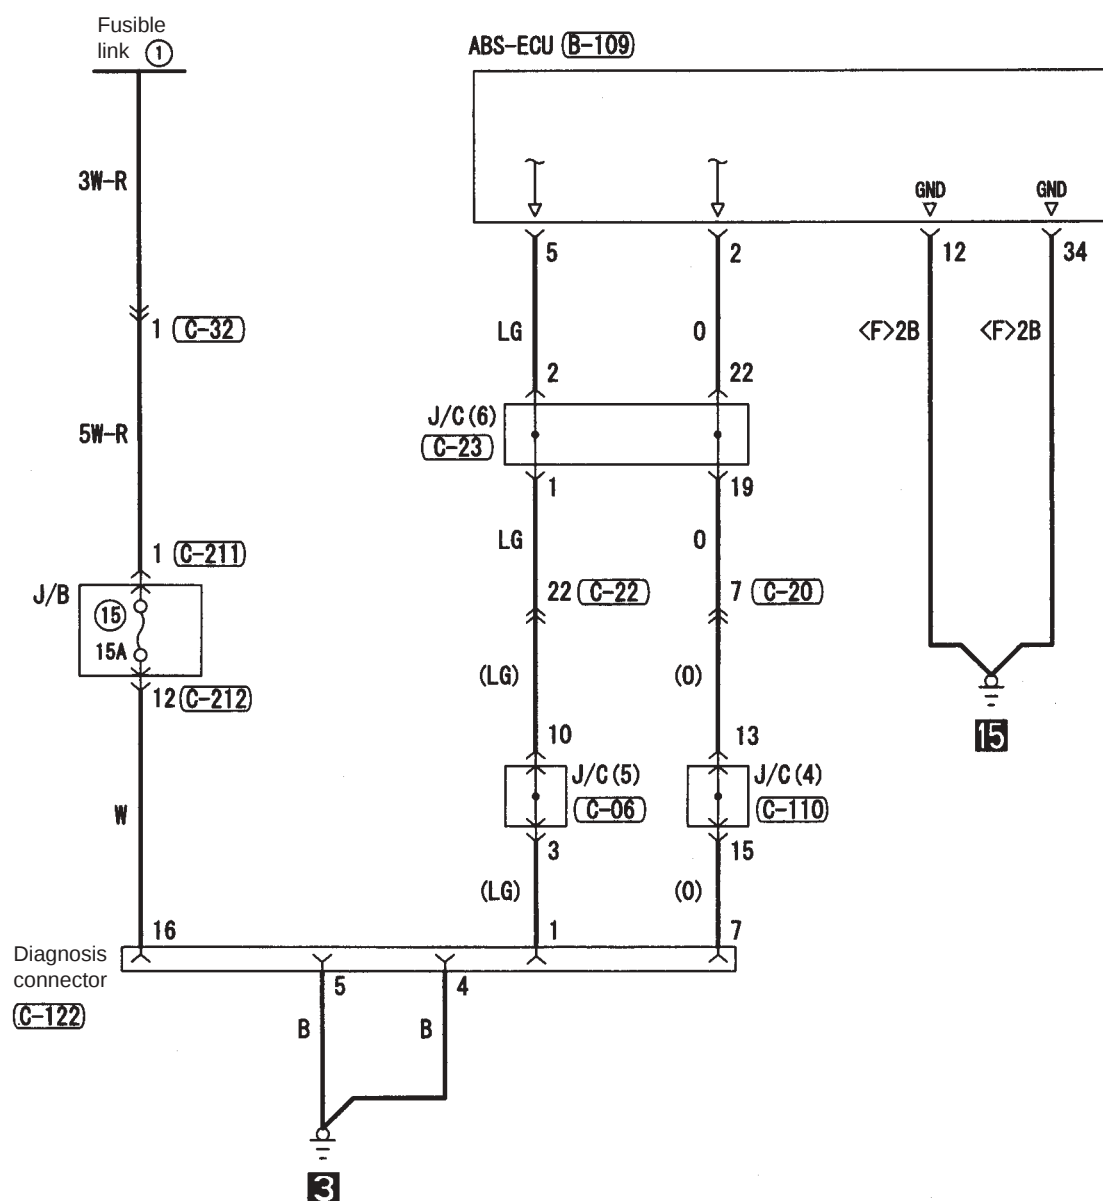


<Notes>

ACD (vehicle without AYC)

M3030018300041

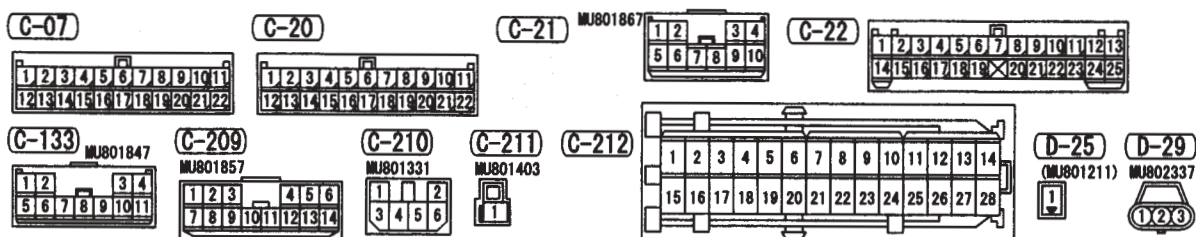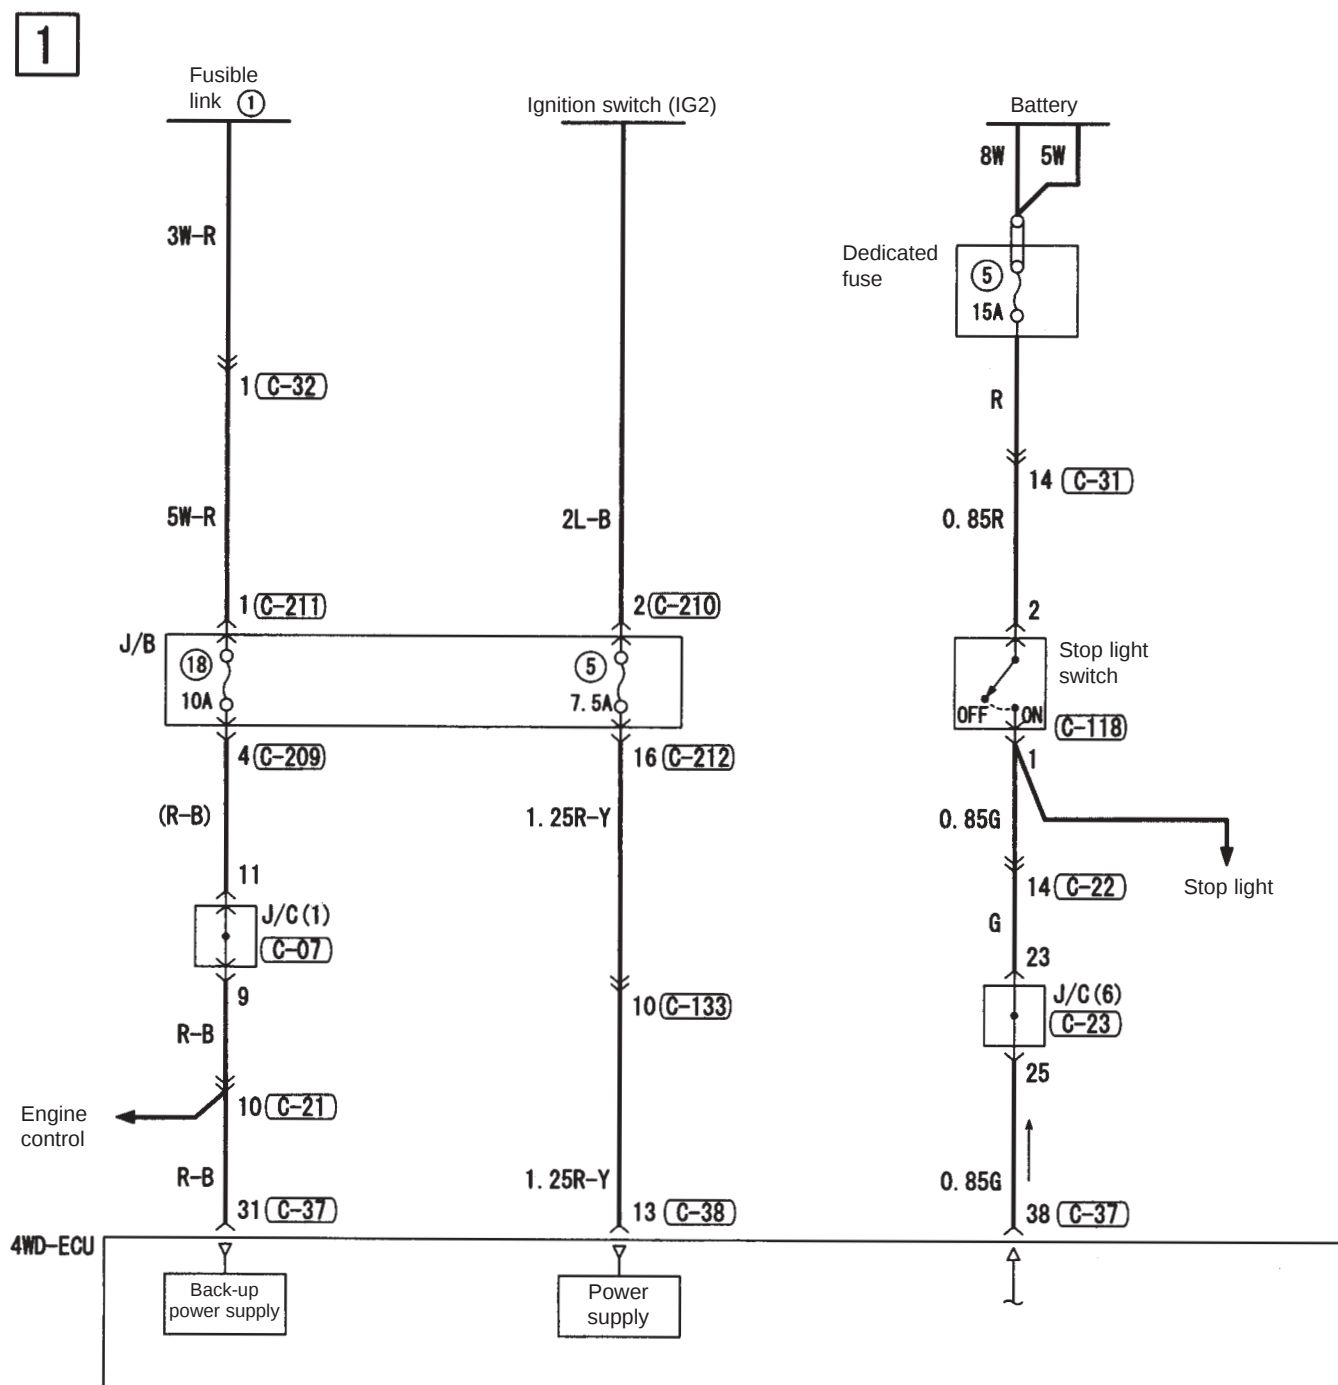

2

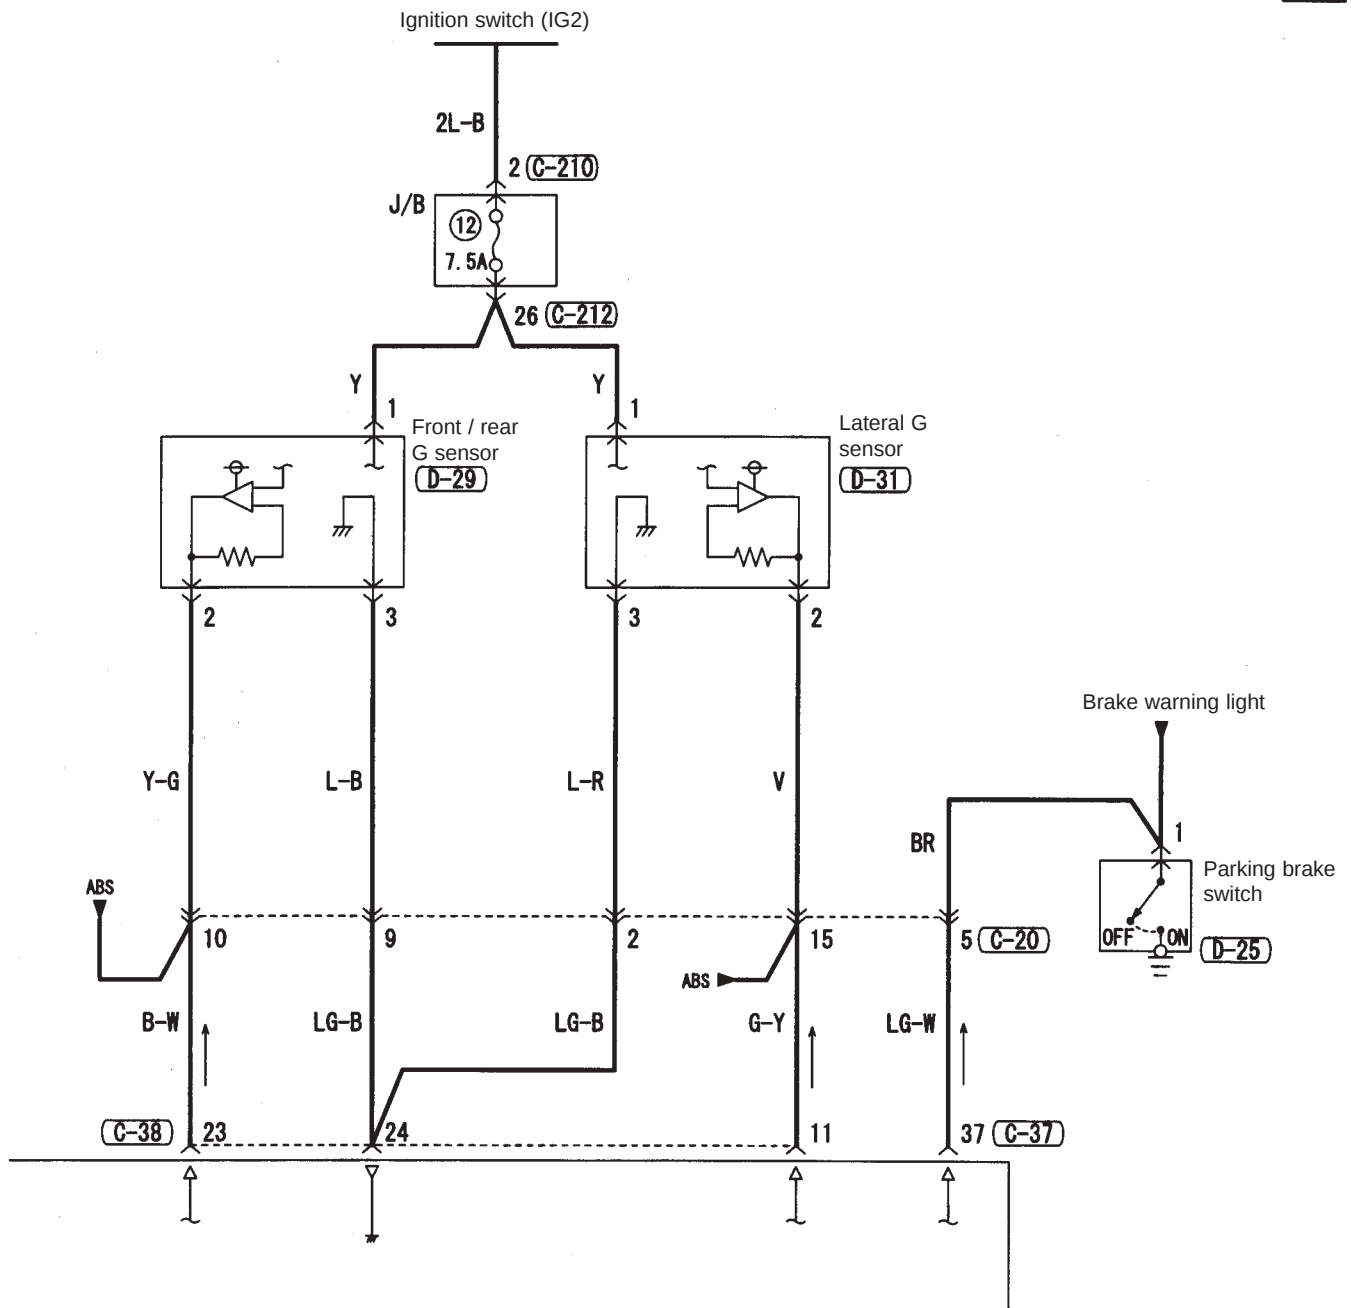

(C-23)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

(C-31)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	

(C-32)

1	2	3
---	---	---

(C-37)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52

(C-38)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-118)




1	2	3	4
---	---	---	---

(D-31)


MU802337




ACD (vehicle not fitted with AYC) (cont'd)

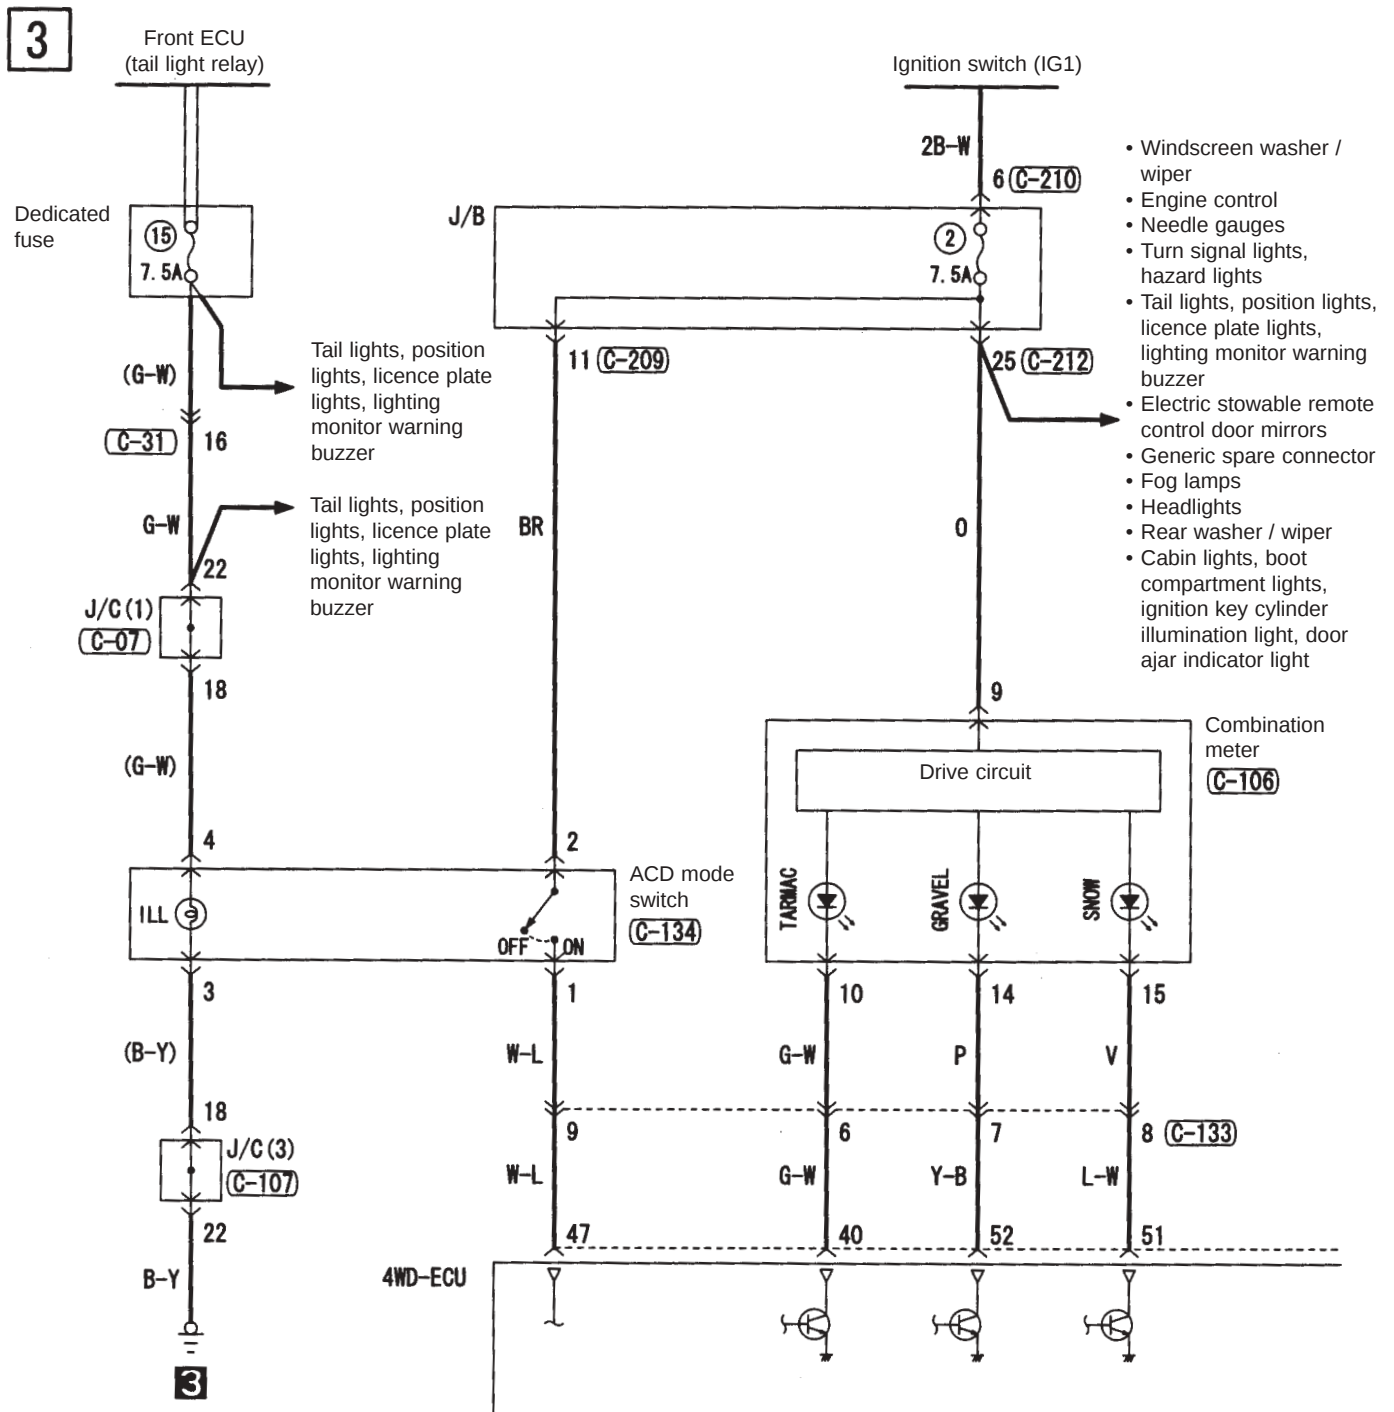


(C-212)

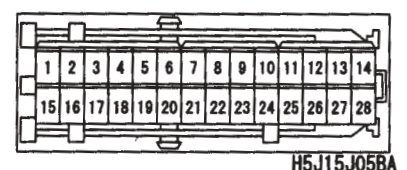

4

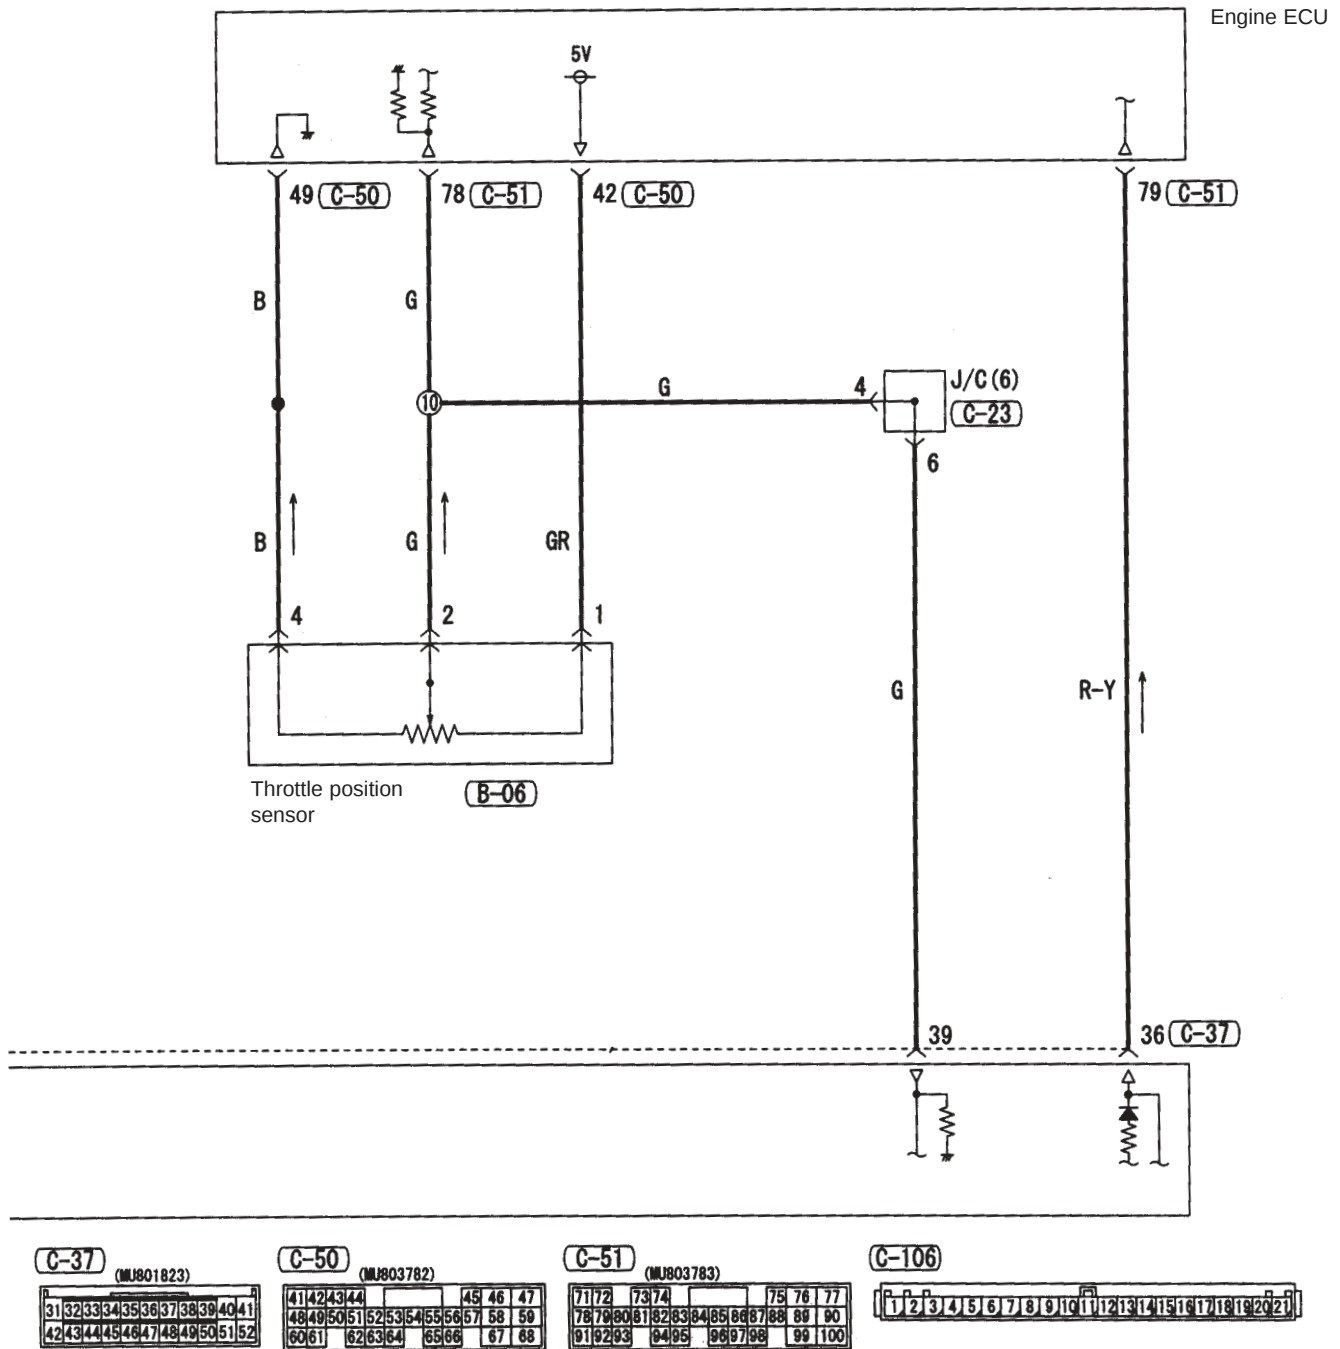

ACD (vehicle without AYC) (cont'd)

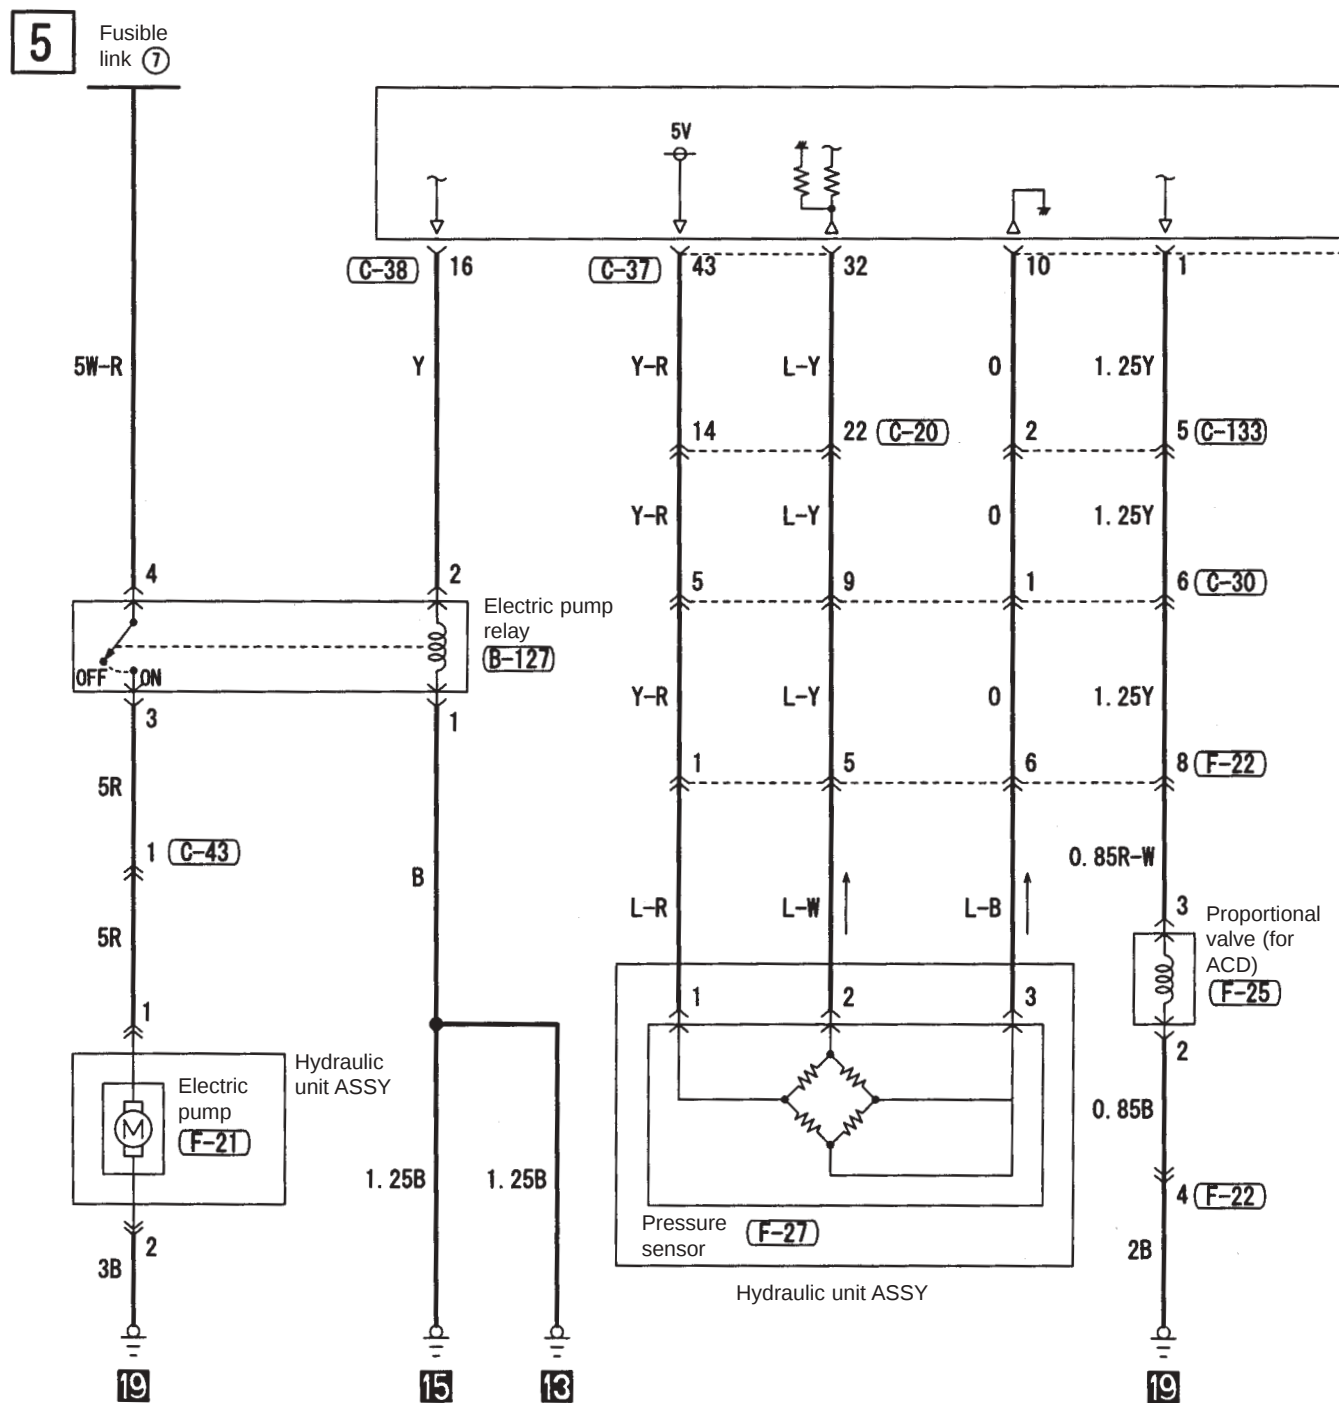

A-05

MU802601

02

A-31

MU802601

02

B-127

1 2

3 4

C-20

1 2 3 4 5 6 7 8 9 10 11

12 13 14 15 16 17 18 19 20 21 22

C-30

1 2 3 4

5 6 7 8 9 10 11

MU801847

C-34

1 2 3 4 5 6 7

8 9 10 11 12 13 14 15 16

C-37

31 32 33 34 35 36 37 38 39 40 41

42 43 44 45 46 47 48 49 50 51 52

(MU801823)

D-12

MU801839

1 2 3

4 5 6 7 8

F-21

1 2

3 4

F-22

MU802749

1 2 3 4

5 6 7 8

F-25

MU802337

1 2 3

4 5 6


F-27

(MU802408)

1 2 3

4 5 6

6

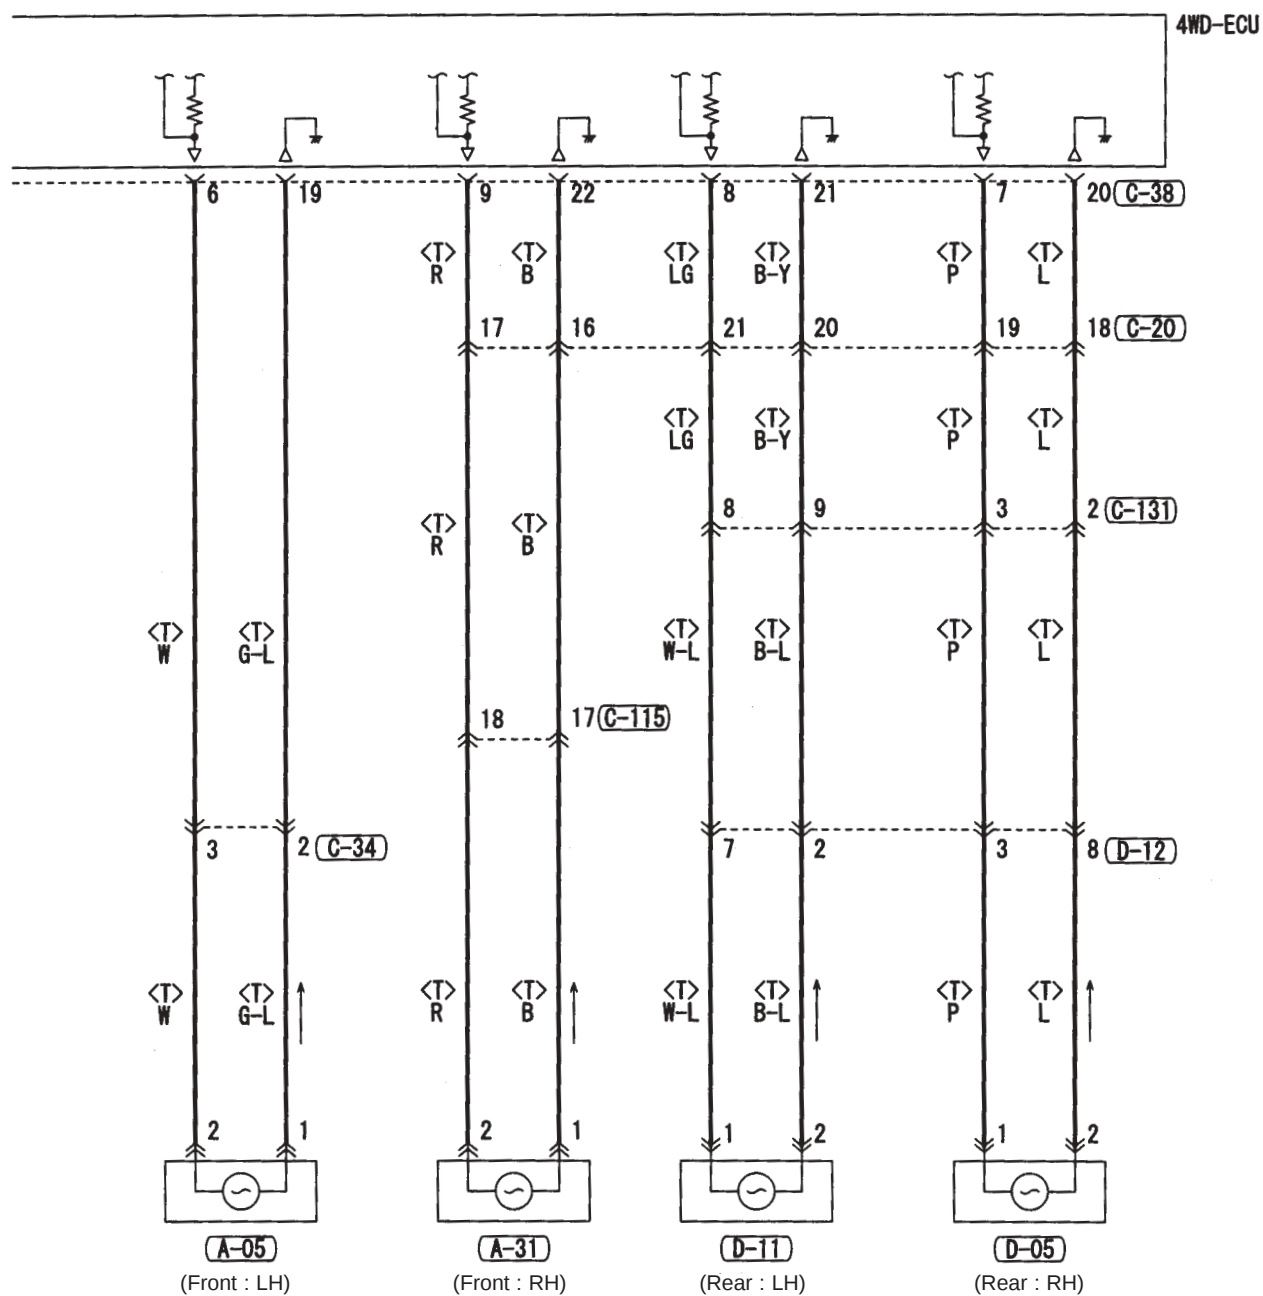

ABS sensors

C-38
(MU801824)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

C-43



C-115

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	

C-131
(MU801841)

1	2	3
4	5	6
7	8	9










C-133
(MU801847)

1	2	3	4
5	6	7	8
9	10	11	


D-05
(MU802602)D-11
(MU802602)

ACD (vehicle without AYC) (cont'd)

7

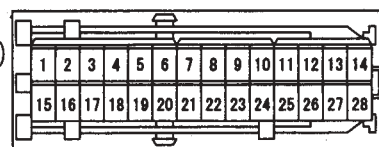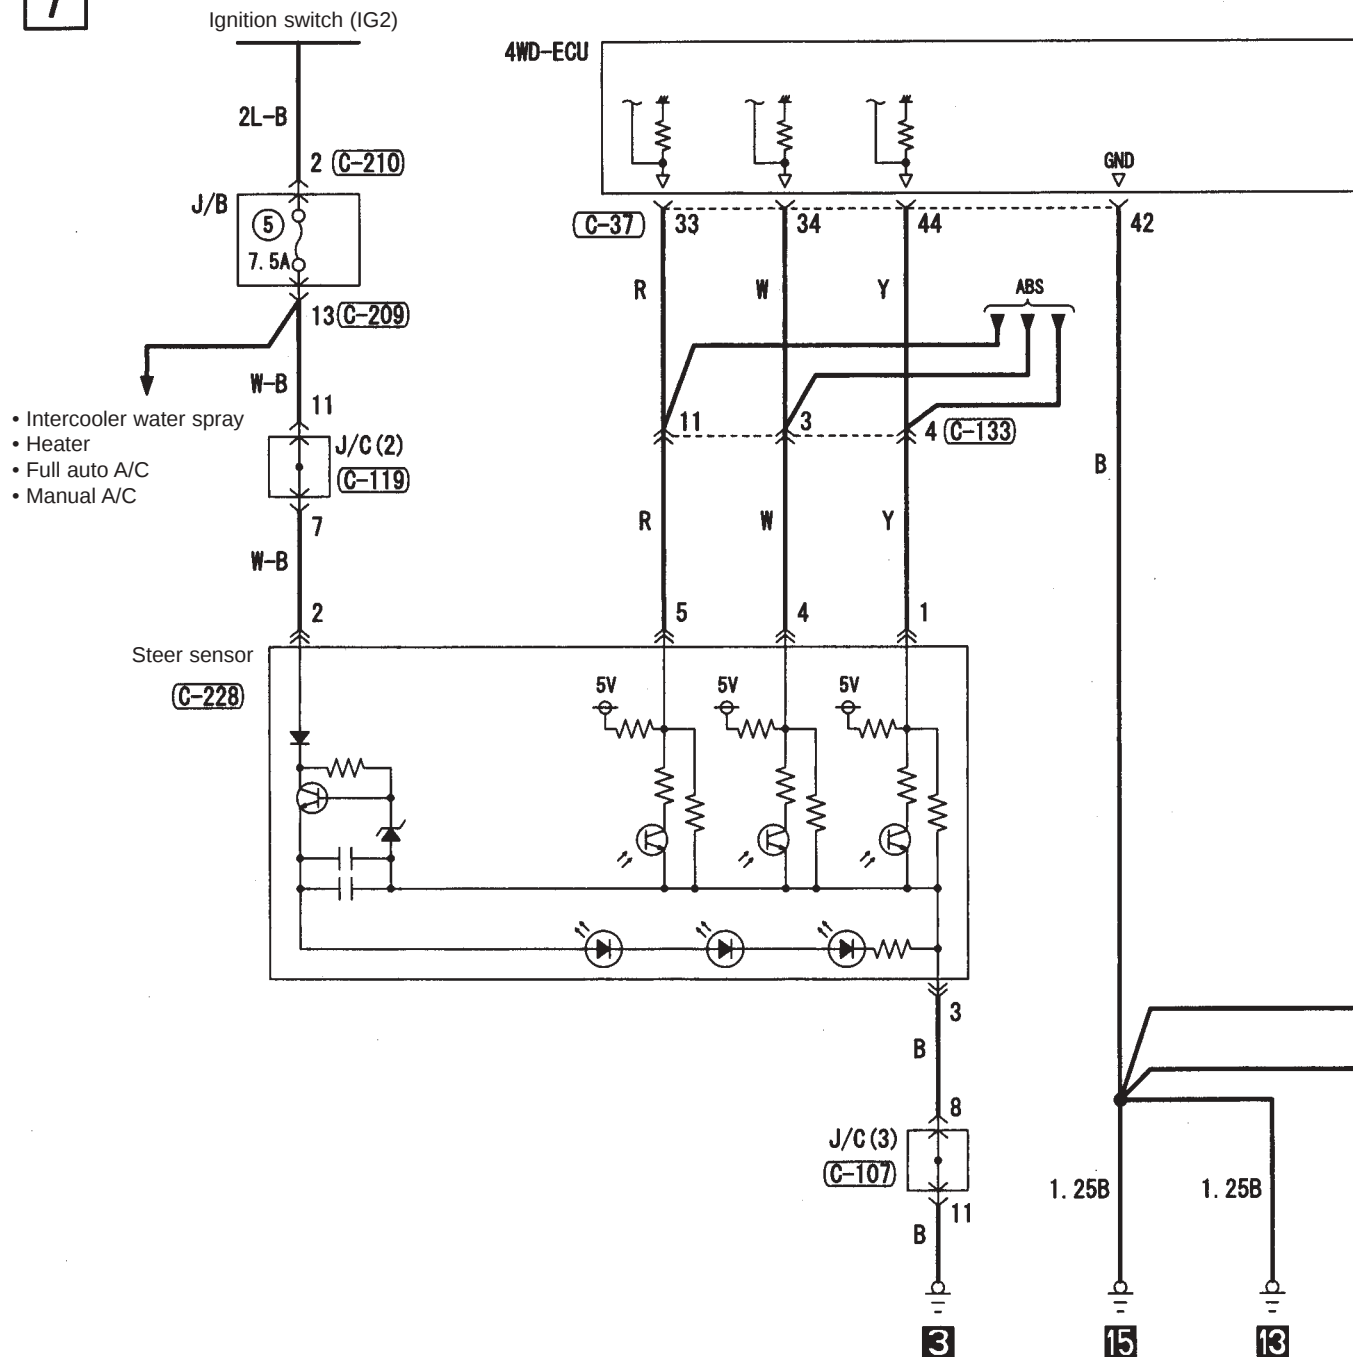

H5J15J05DA

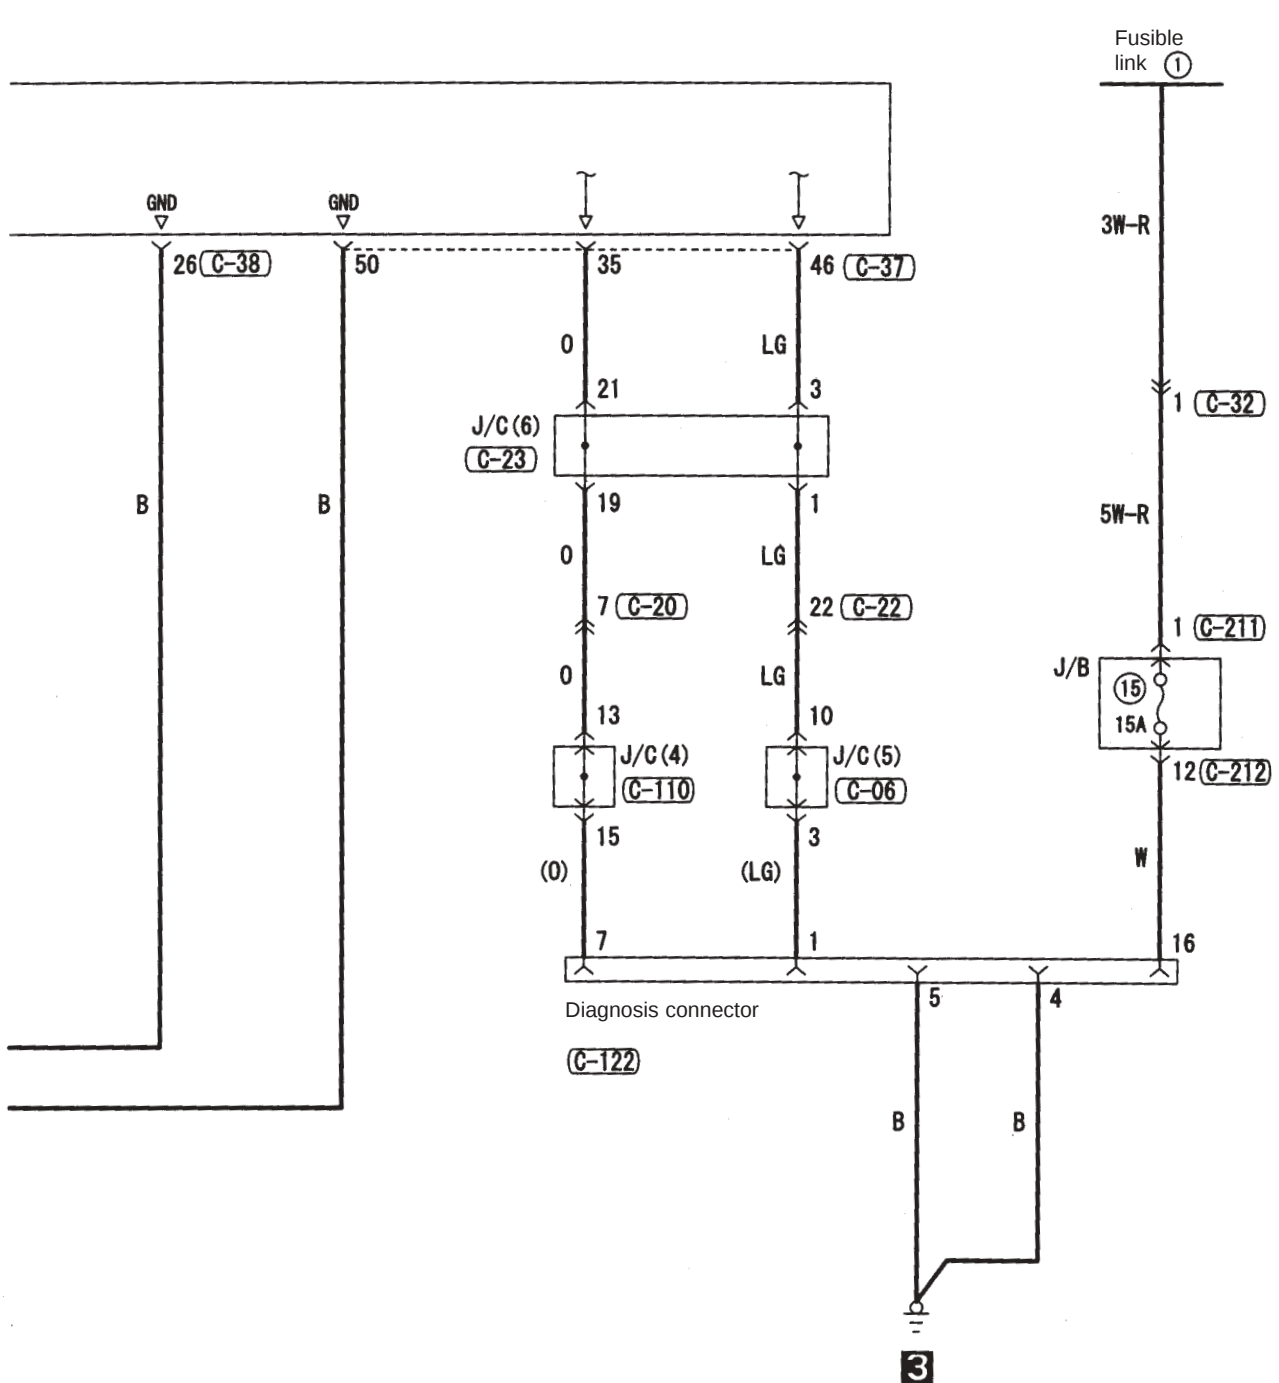

C-37 (MU801823)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52

C-38 (MU801824)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

C-107

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-110

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-119

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22


C-228
MU801545

1	2	3	4	5
---	---	---	---	---


ACD, AYC

M3030018400060

1

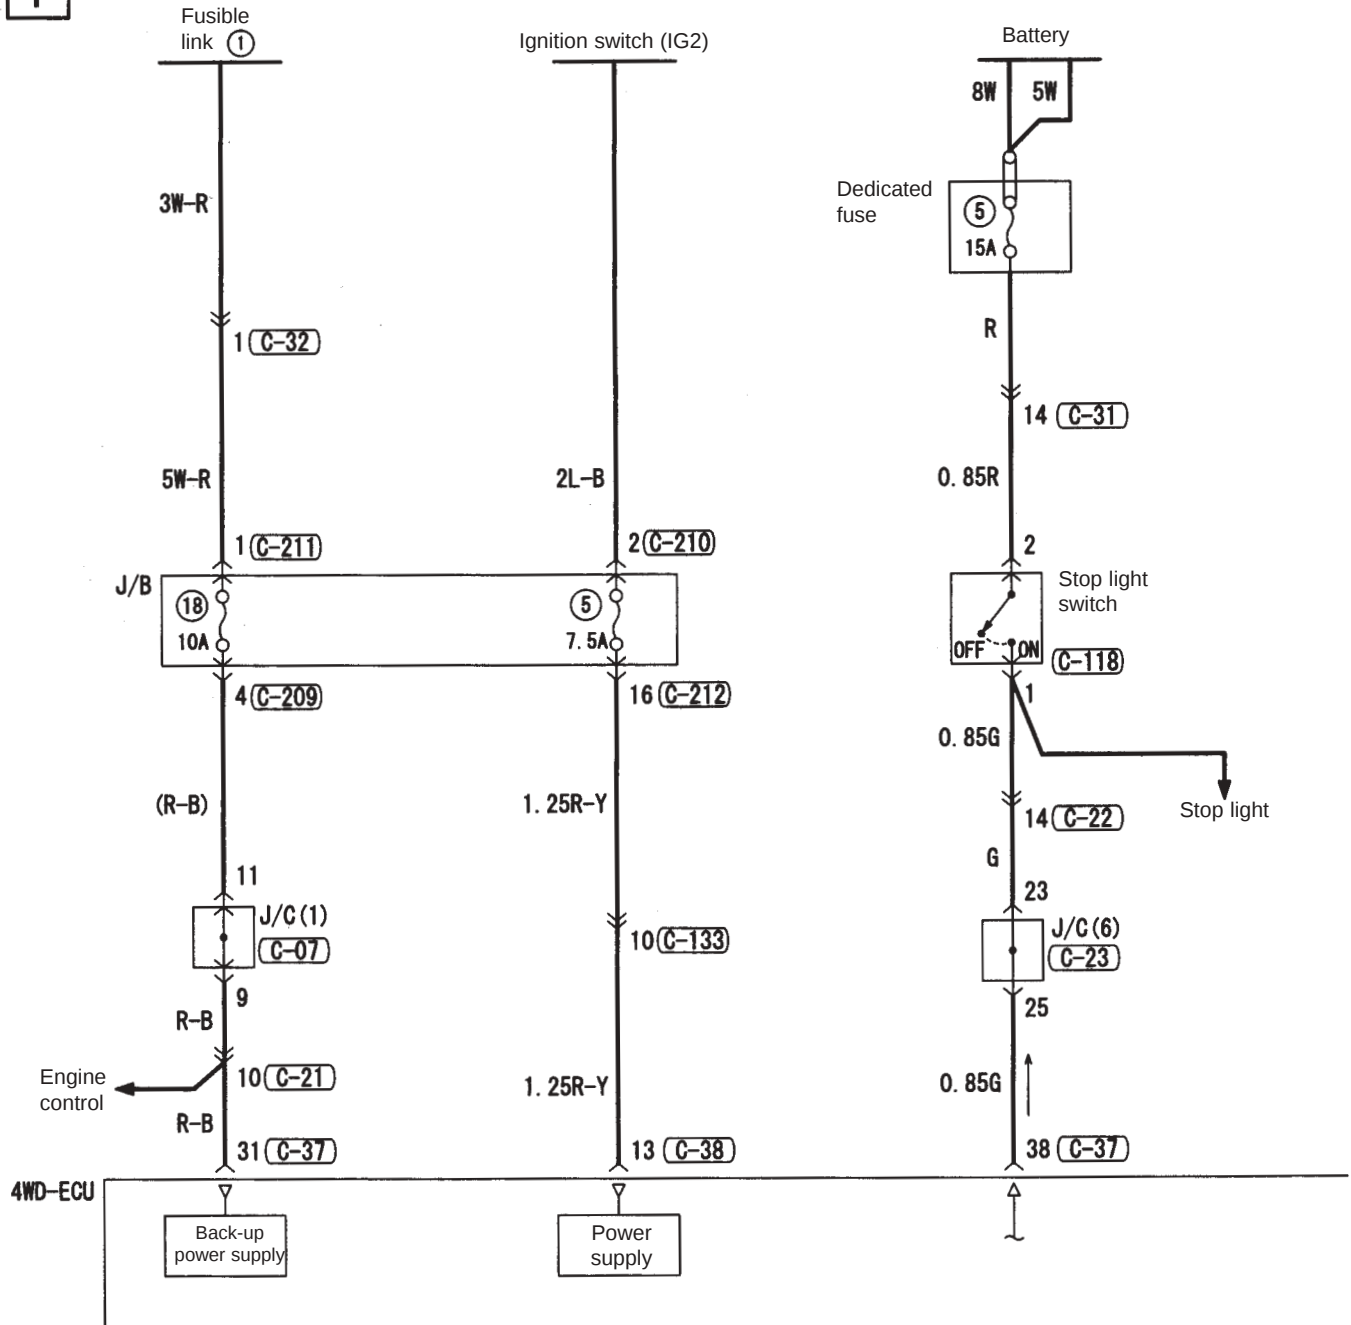

B-109



C-07



C-20



C-21



C-37



C-38



C-118




C-133



H5J15J06AA

2

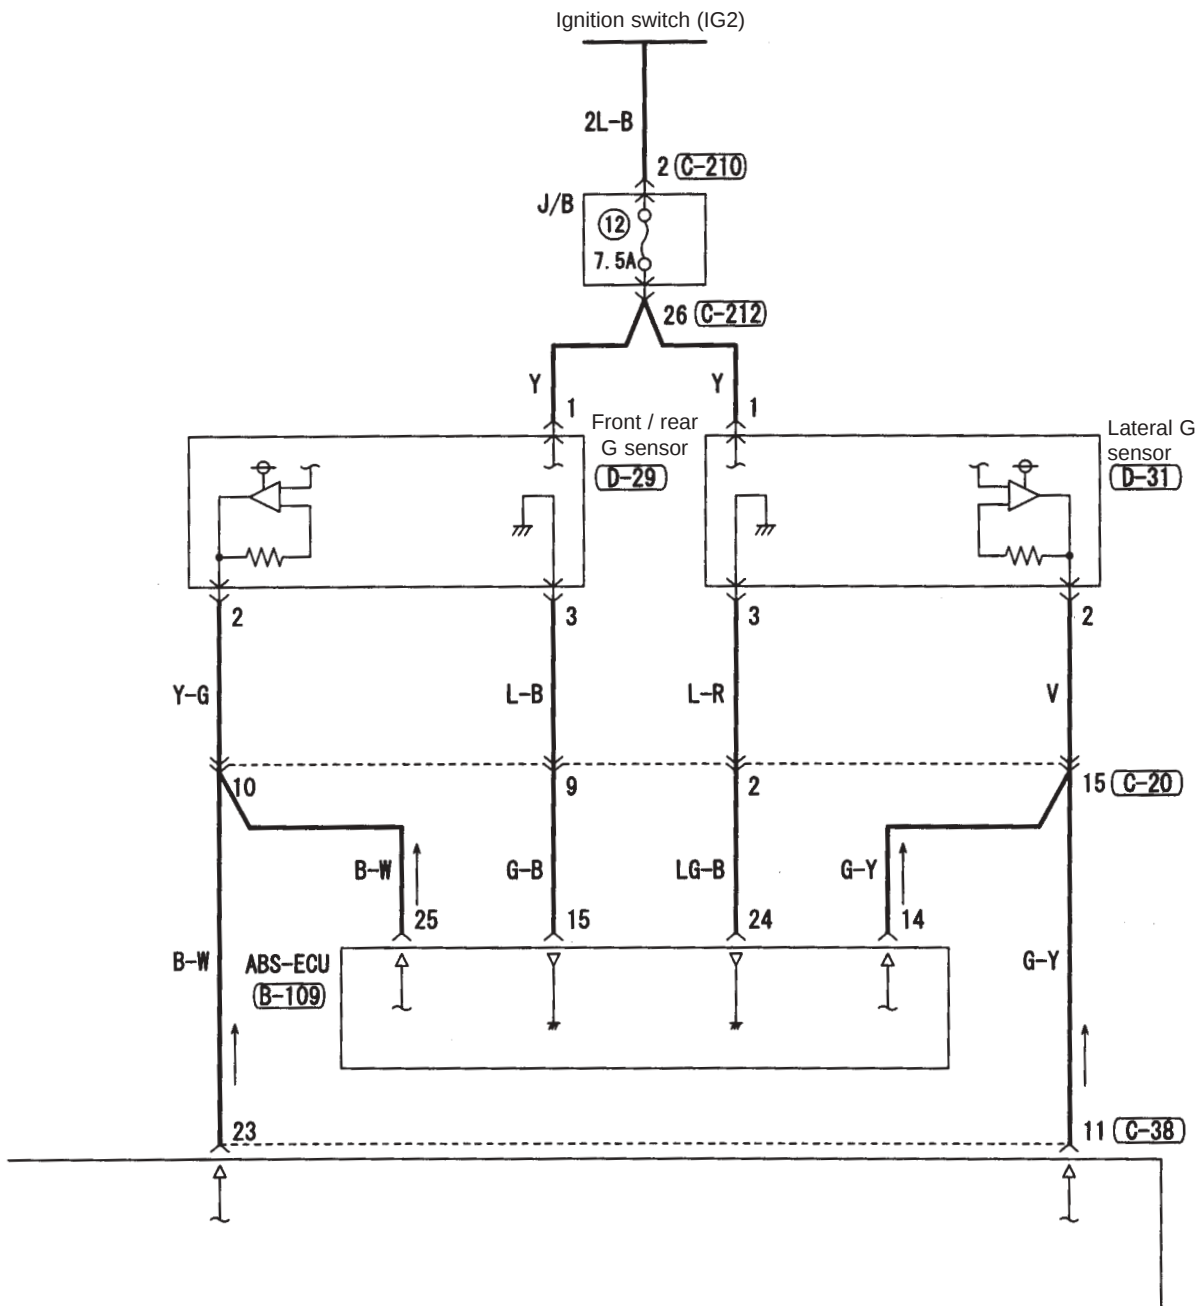

C-22



C-23



C-31



C-32

(MU801380)



C-209

MU801857



C-210

MU801331




C-211

MU801403



C-212

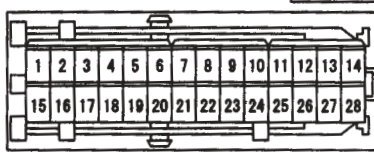

D-29

MU802337








D-31

MU802337




H5J15J06AB

ACD, AYC (cont'd)

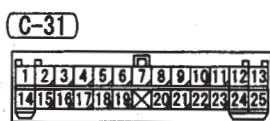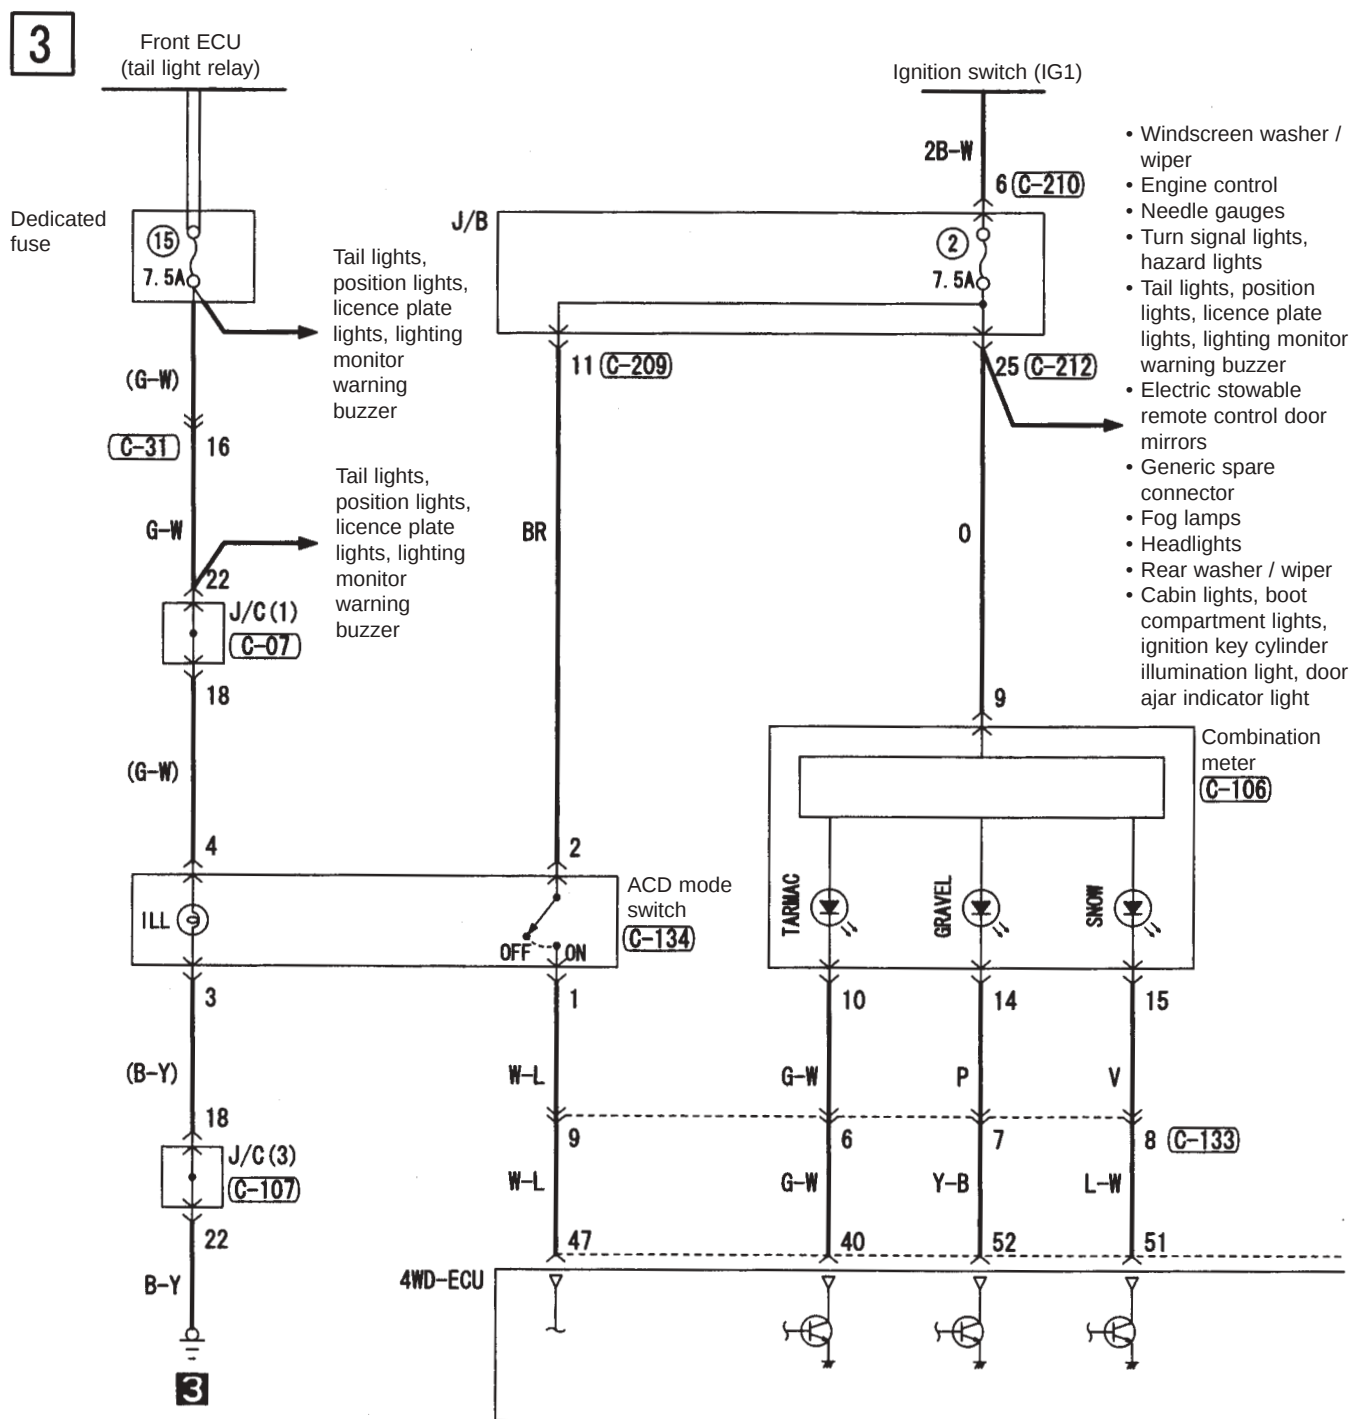


C-212

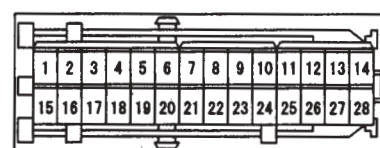


H5J15J06BA

4


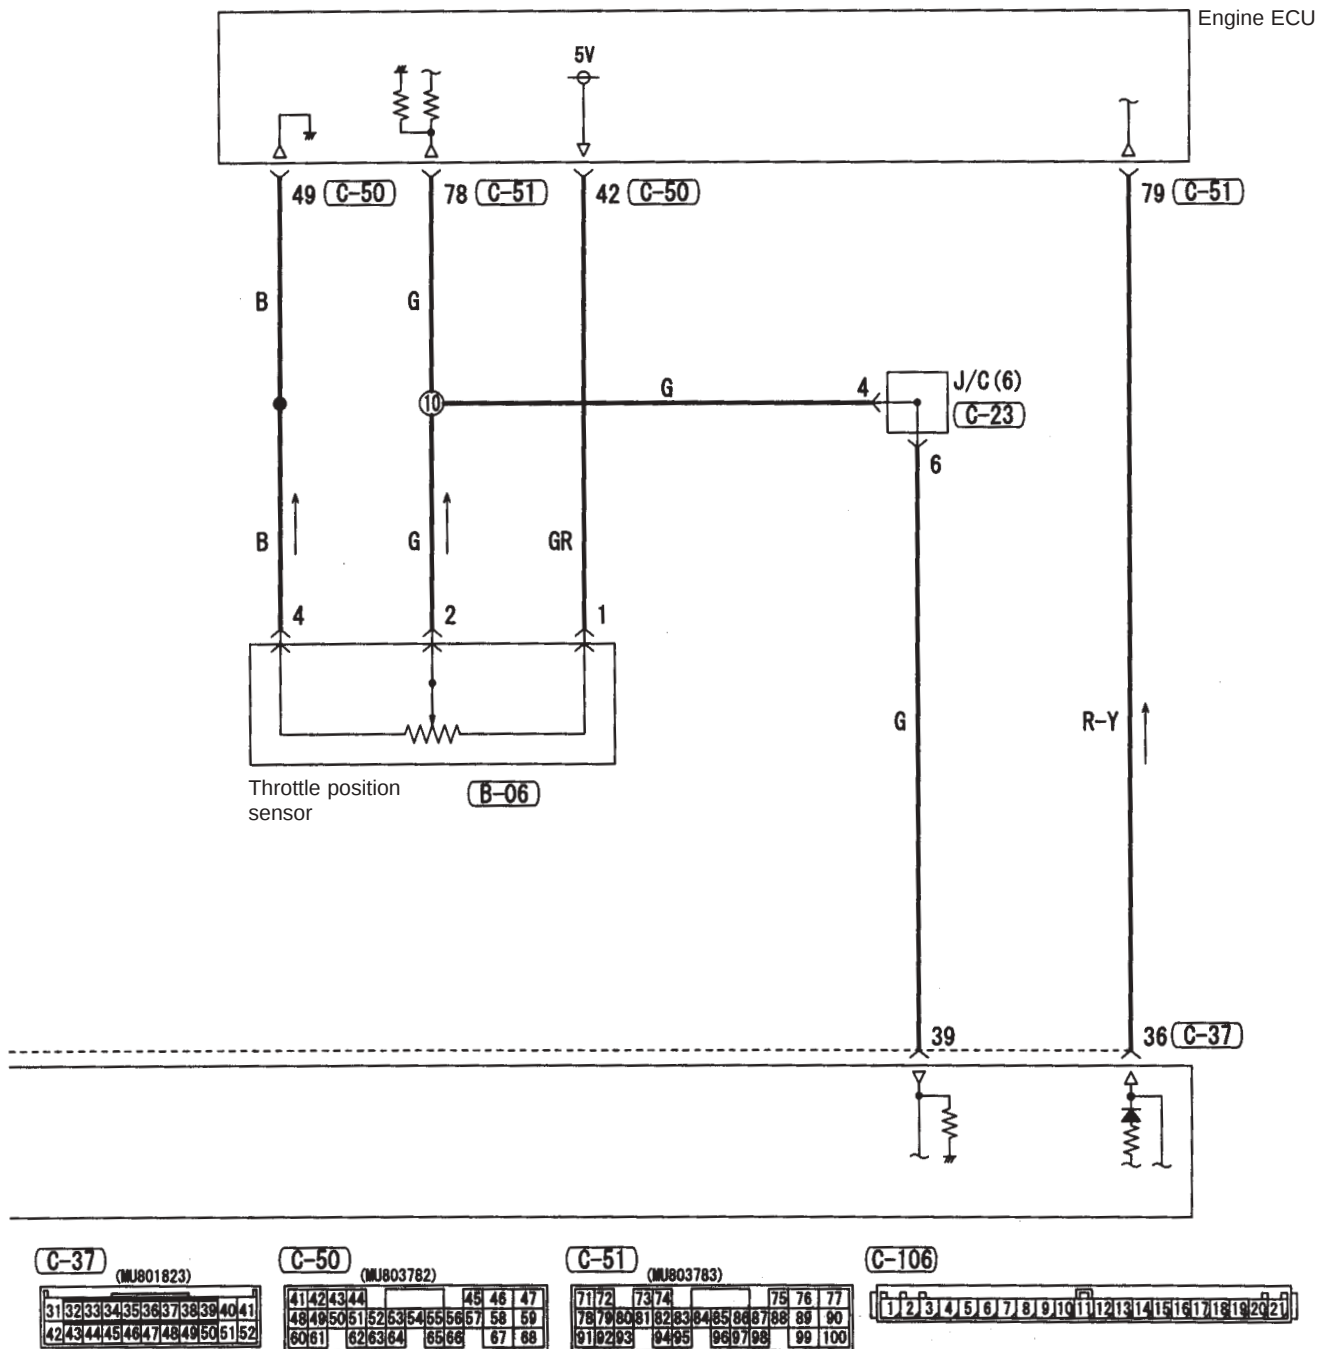


ACD, AYC (cont'd)

5

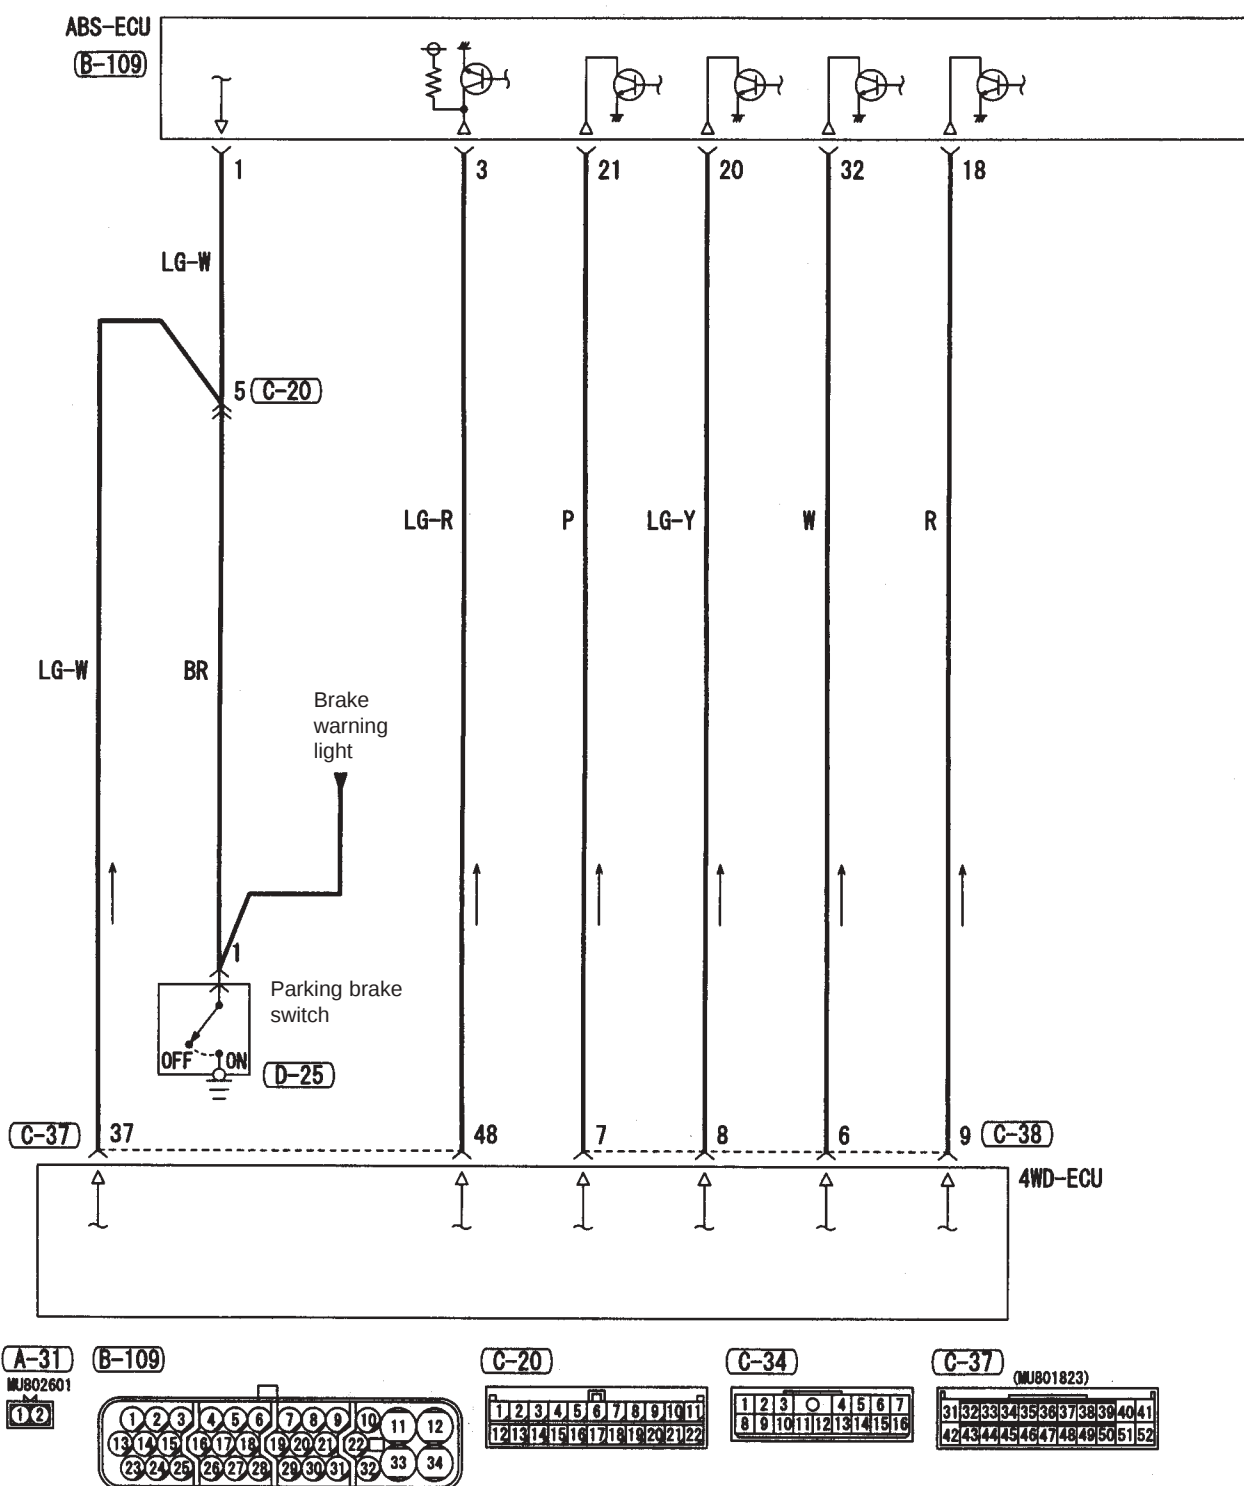


6

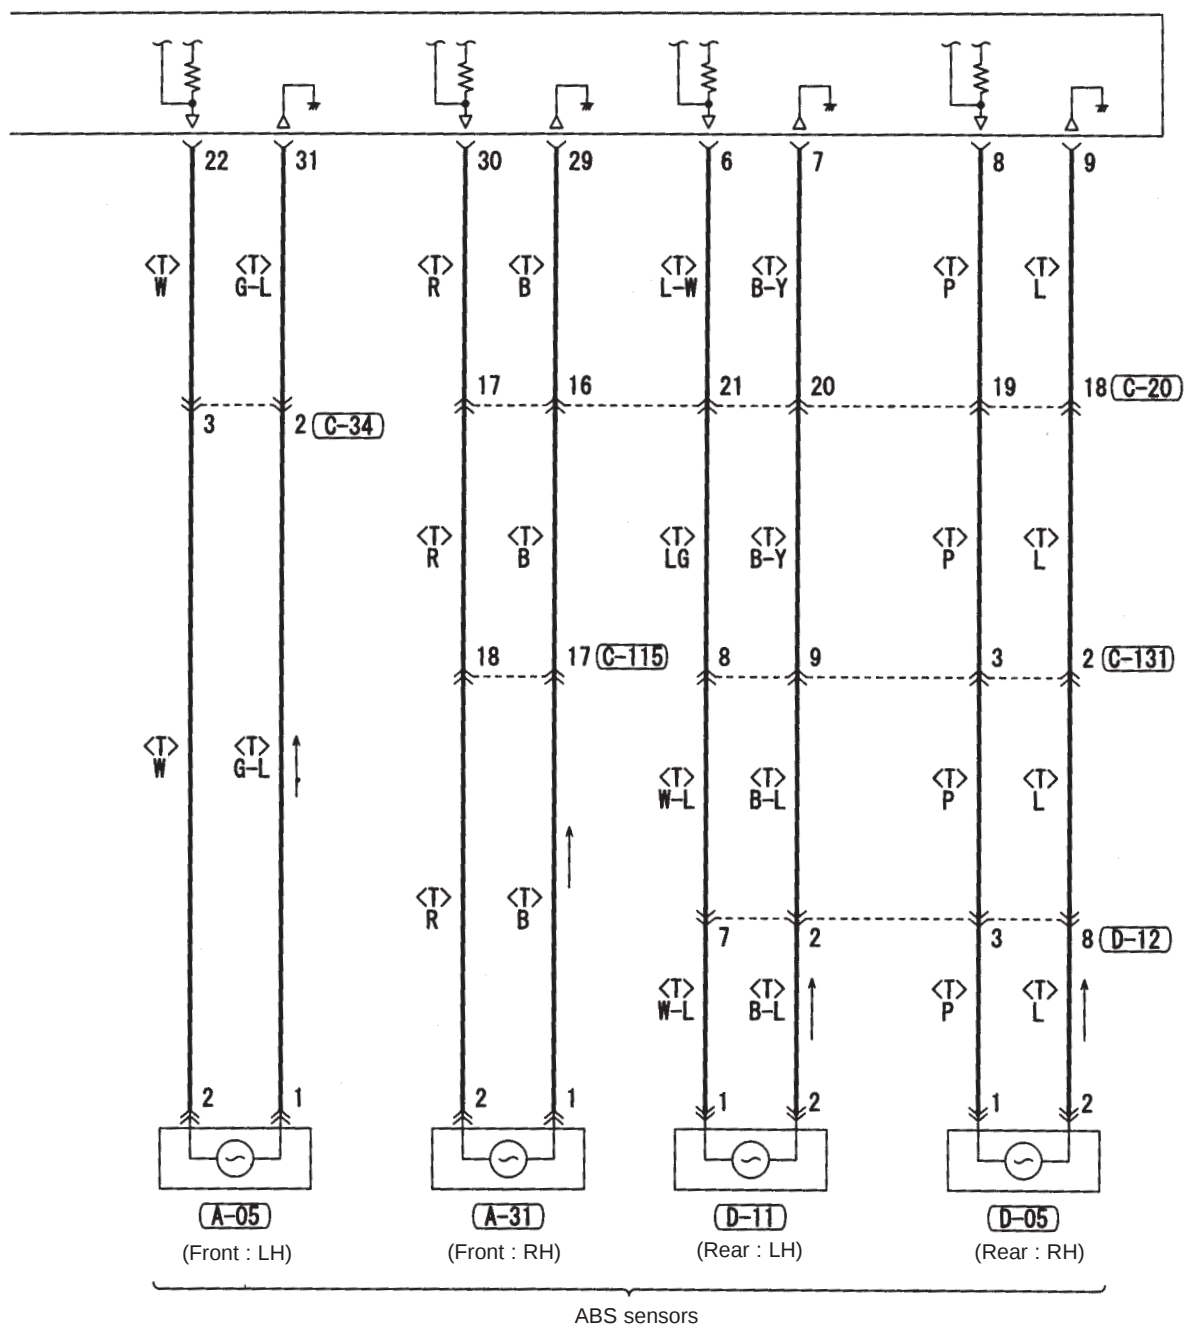

7 Fusible link (7)




8

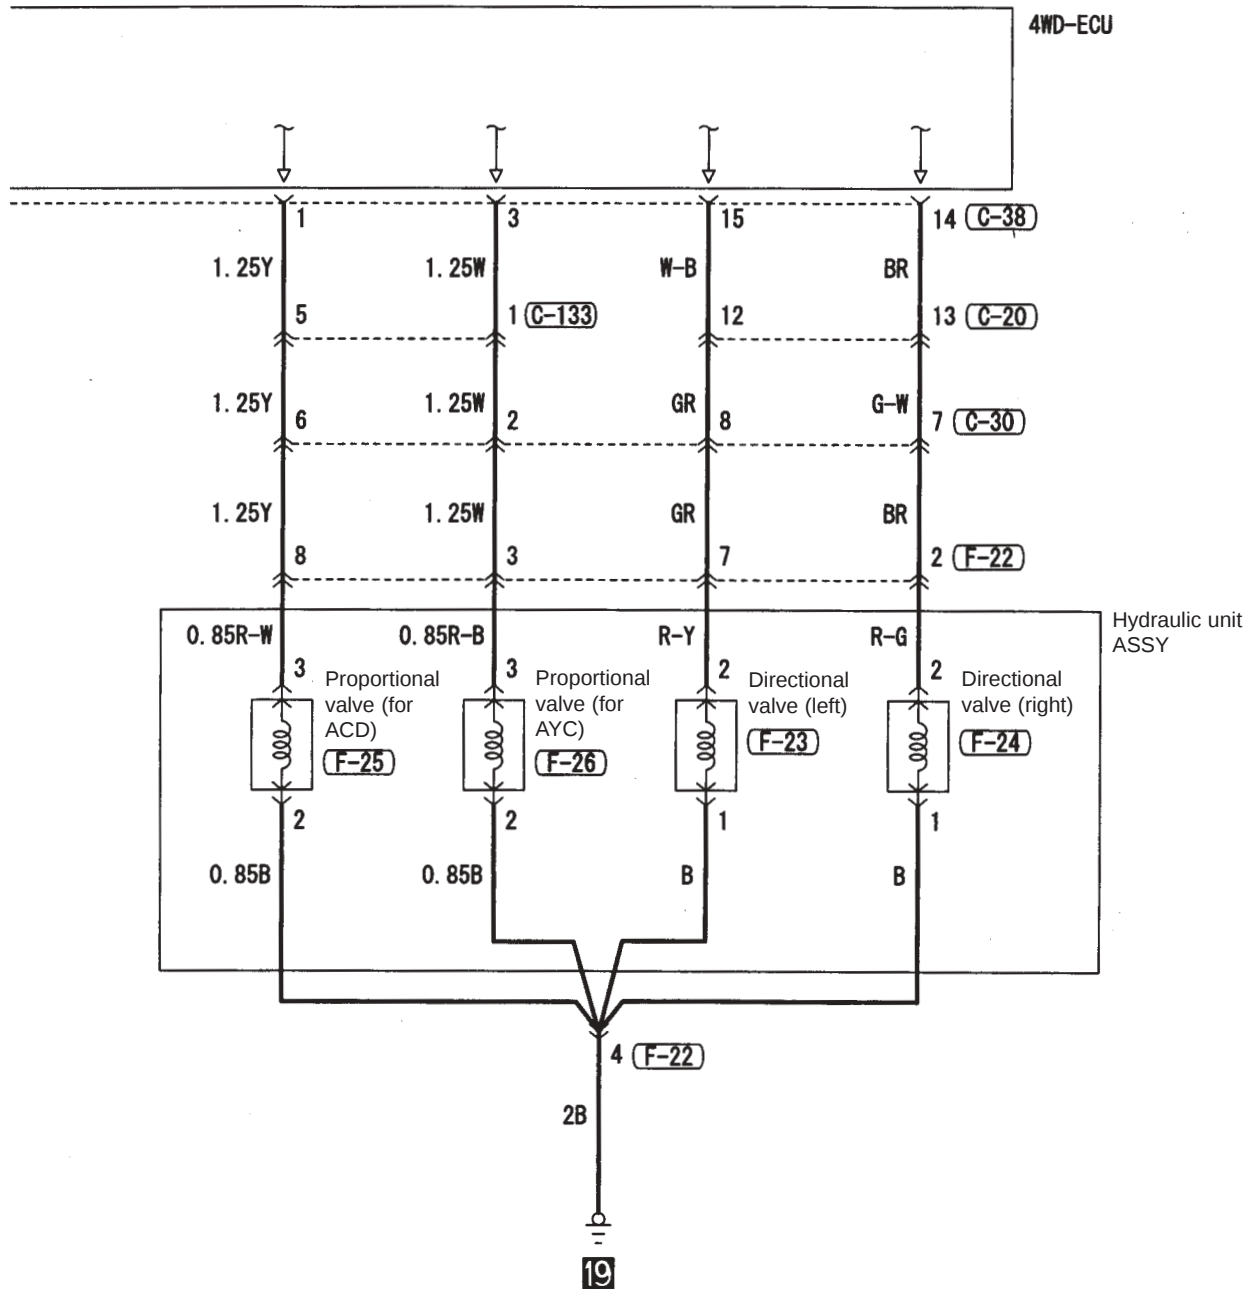

ACD, AYC (cont'd)

9

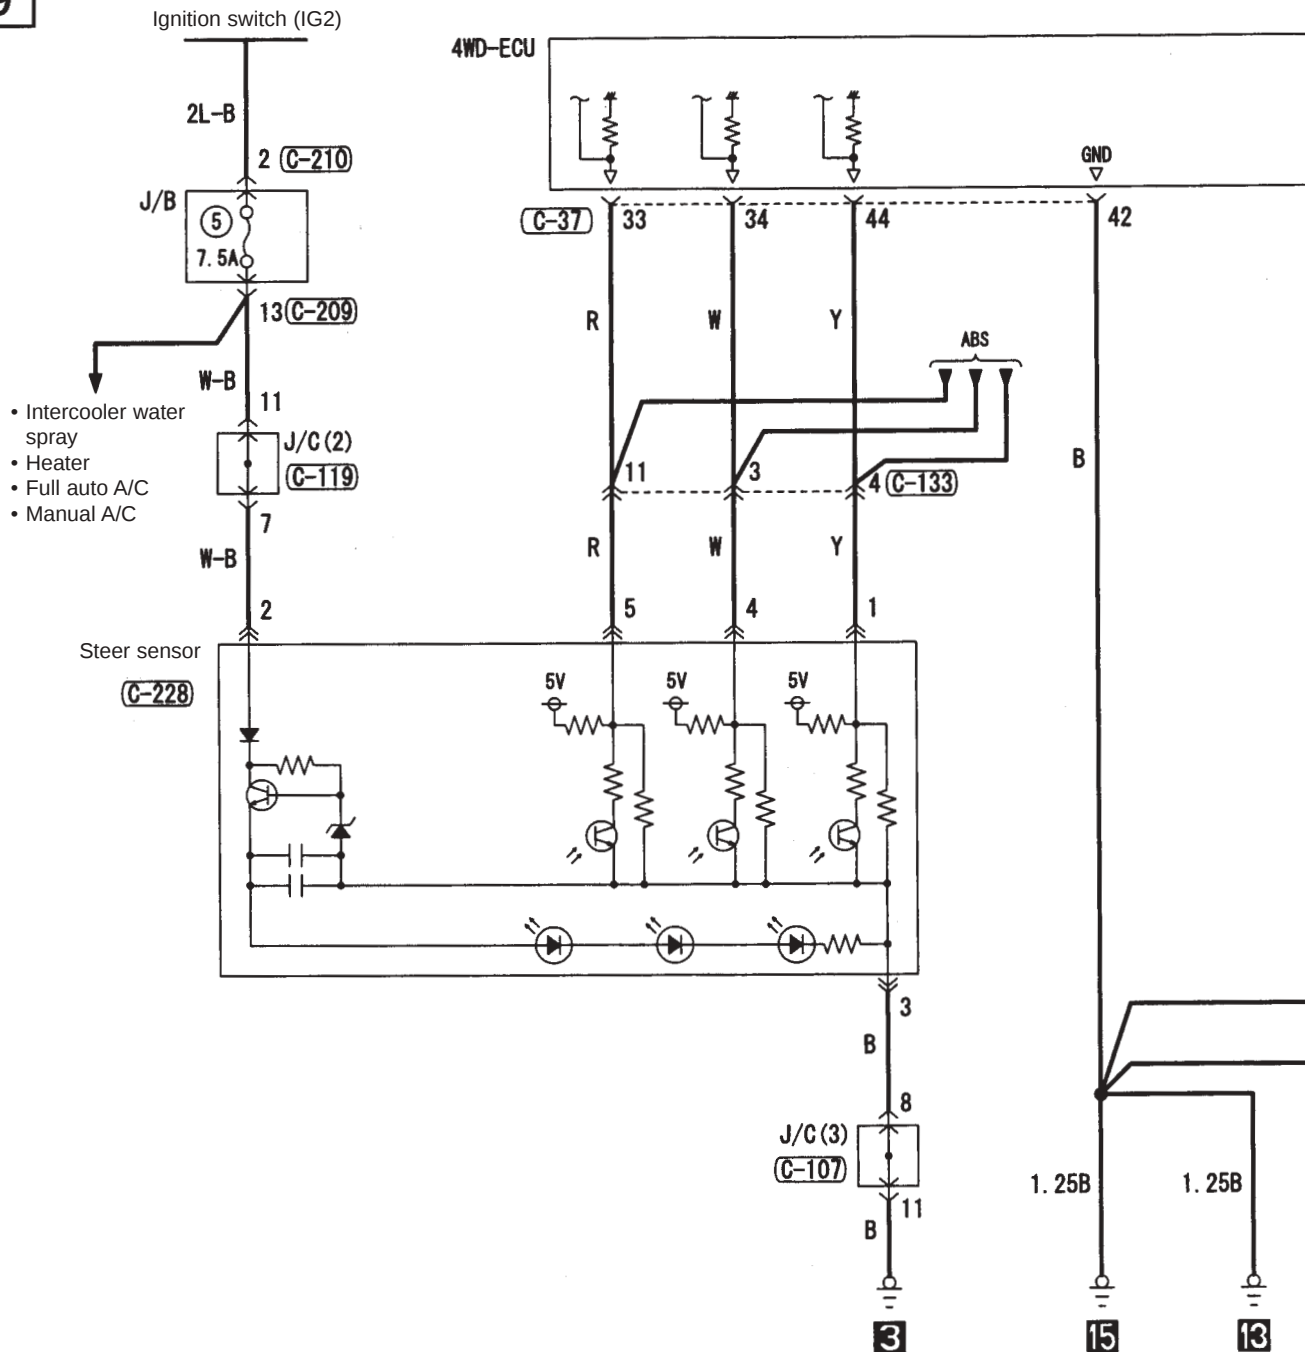

(C-06) MU801855



(C-20)



(C-22)



(C-23)



(C-32)



(C-122) Front side



(C-133)

MU801847



(C-209)

MU801857



(C-210)

MU801331




(C-211)


MU801403



(C-212)

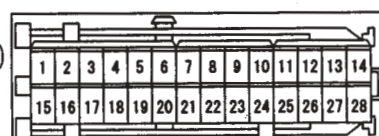

H5J15J06EA

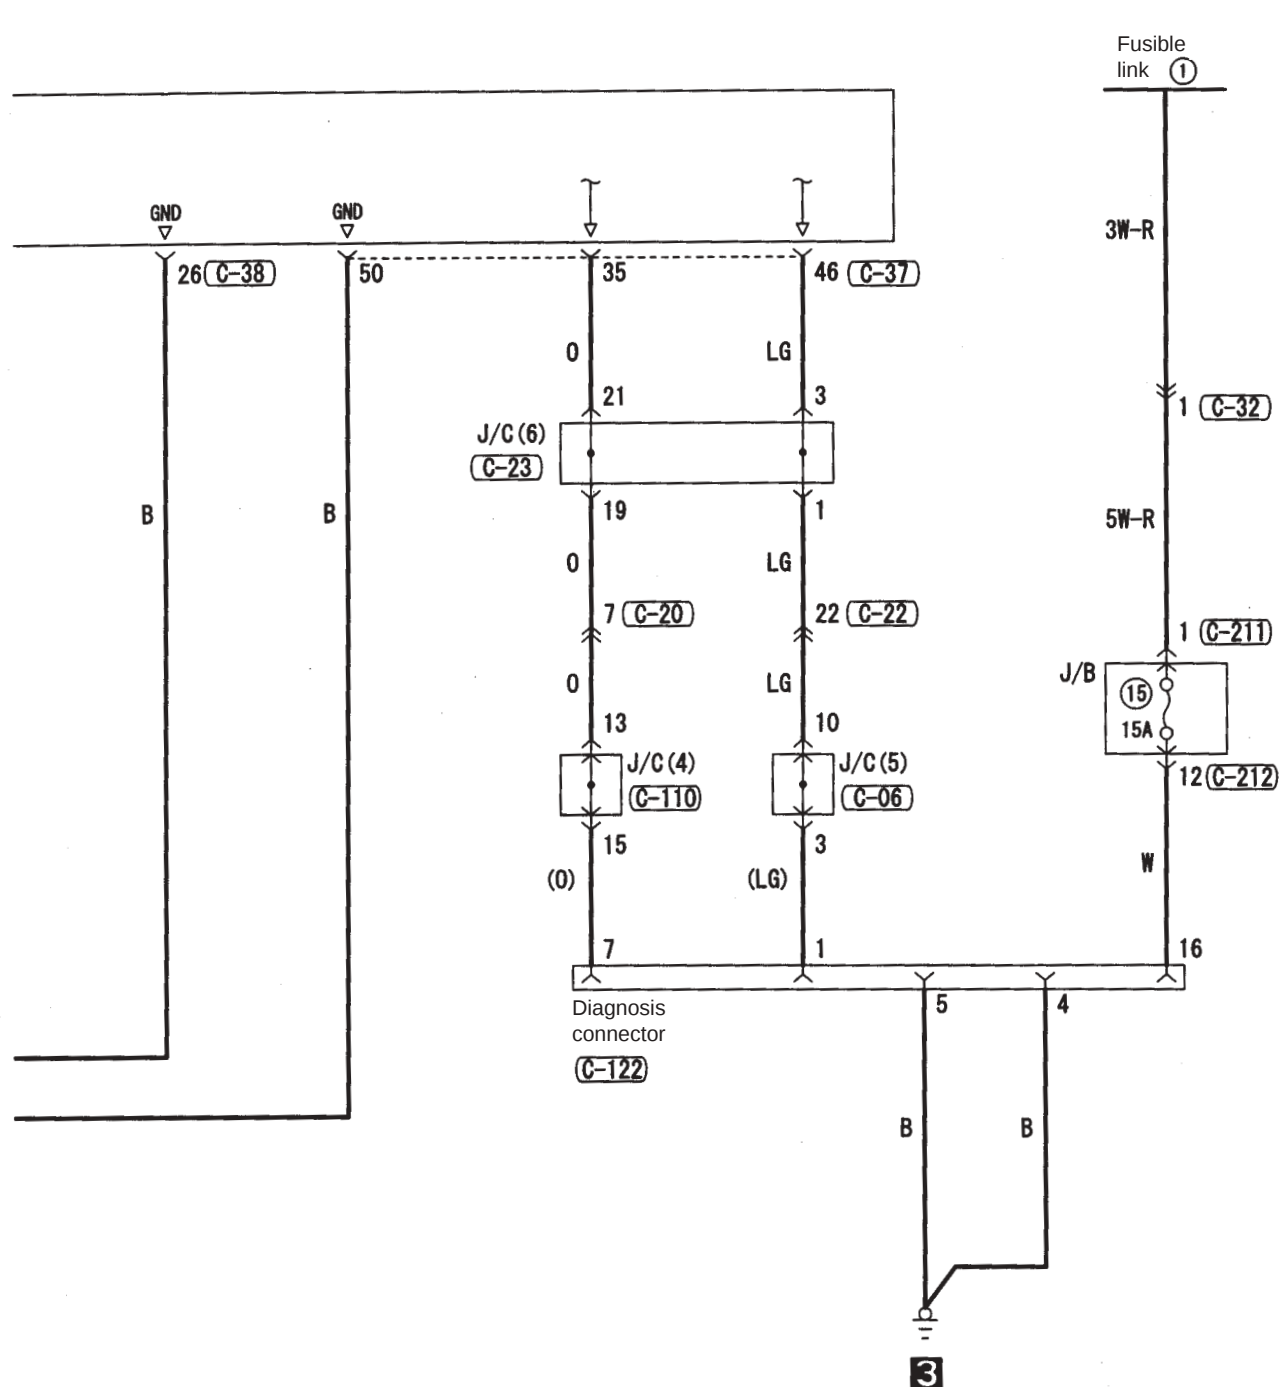

C-37

(MU801823)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52

C-38

(MU801824)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

C-107

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-110

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-119

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

C-228


MU801545

1	2	3	4	5
---	---	---	---	---

SRS airbags, seatbelt pre-tensioners (vehicle without front passenger airbag)


M3030009800305

1

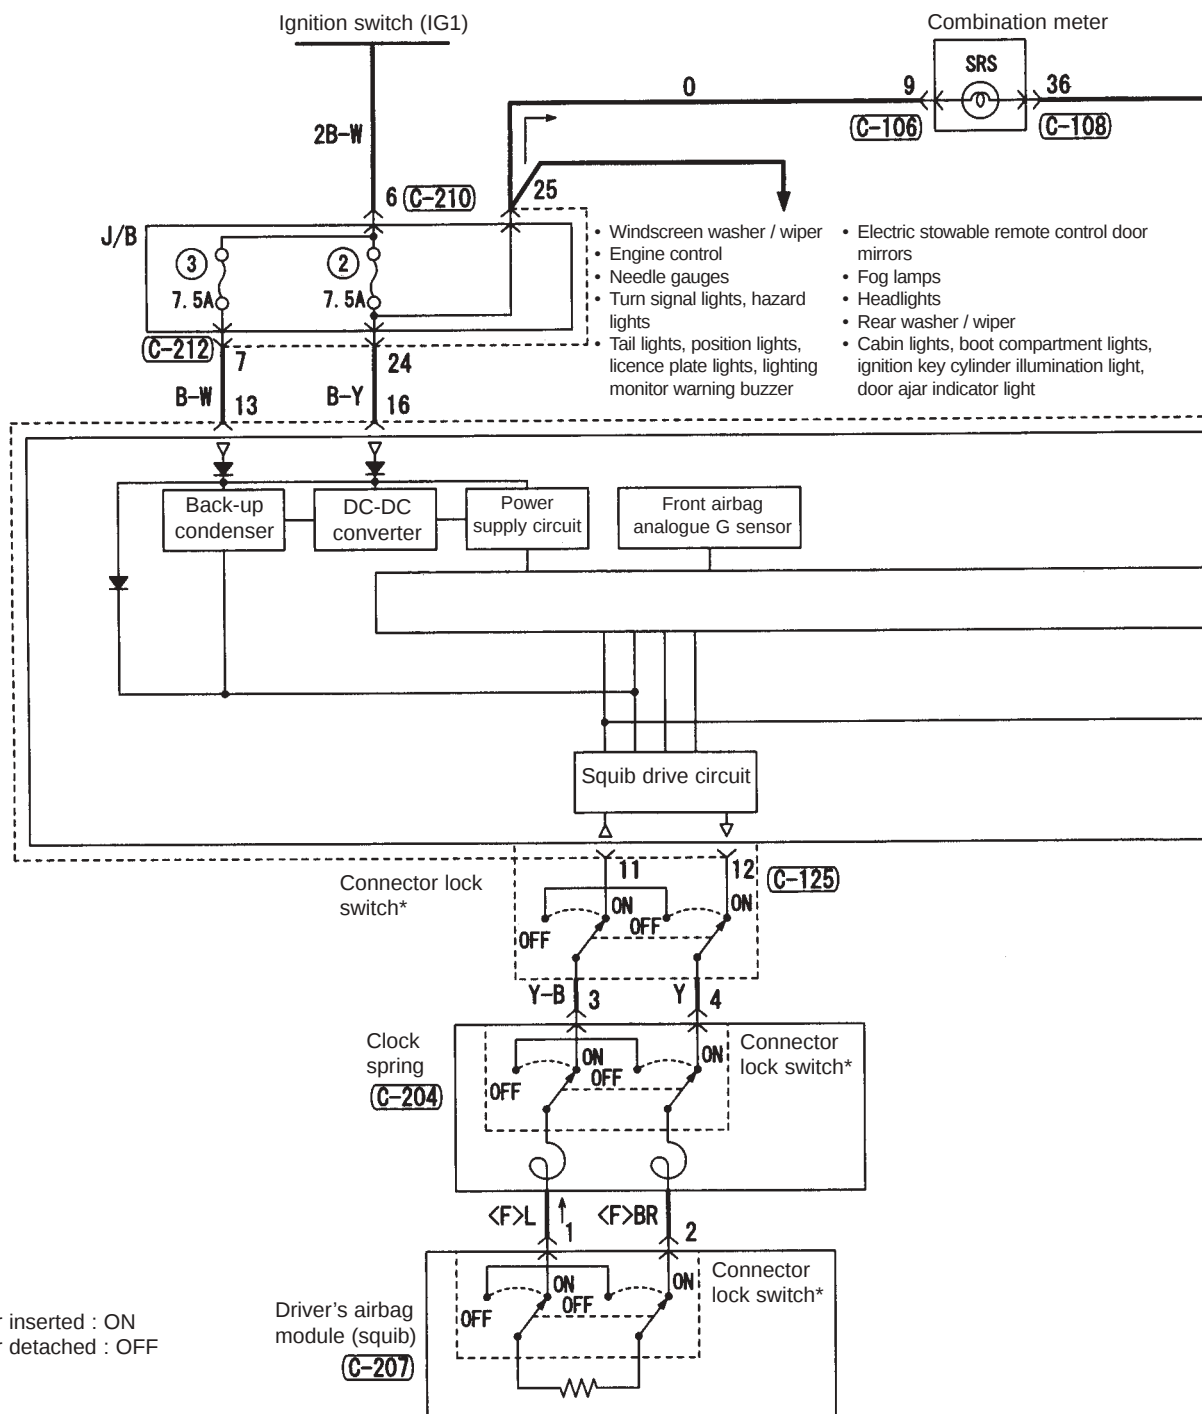


Note :

* : Connector inserted : ON
 : Connector detached : OFF




H5J15J07AA

2

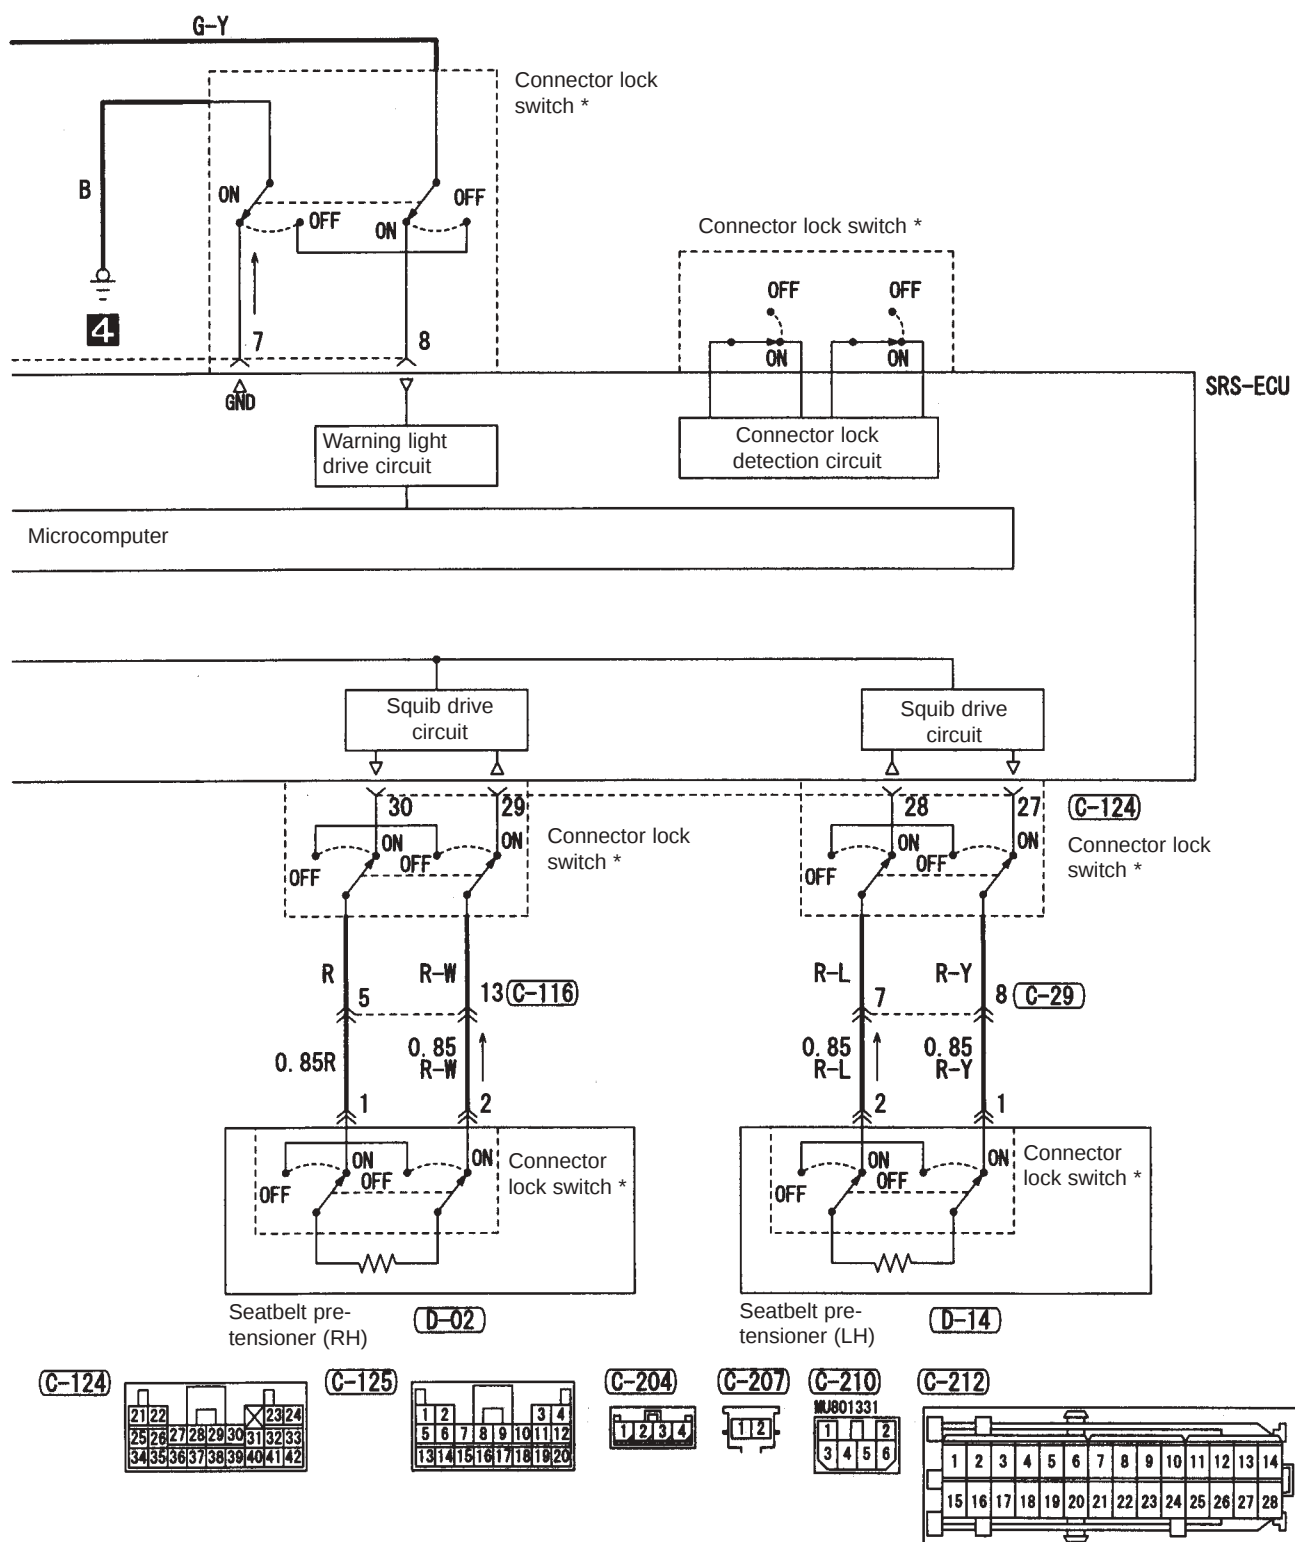

SRS airbags, seatbelt pre-tensioners (vehicle without front passenger's airbag) (cont'd)


3

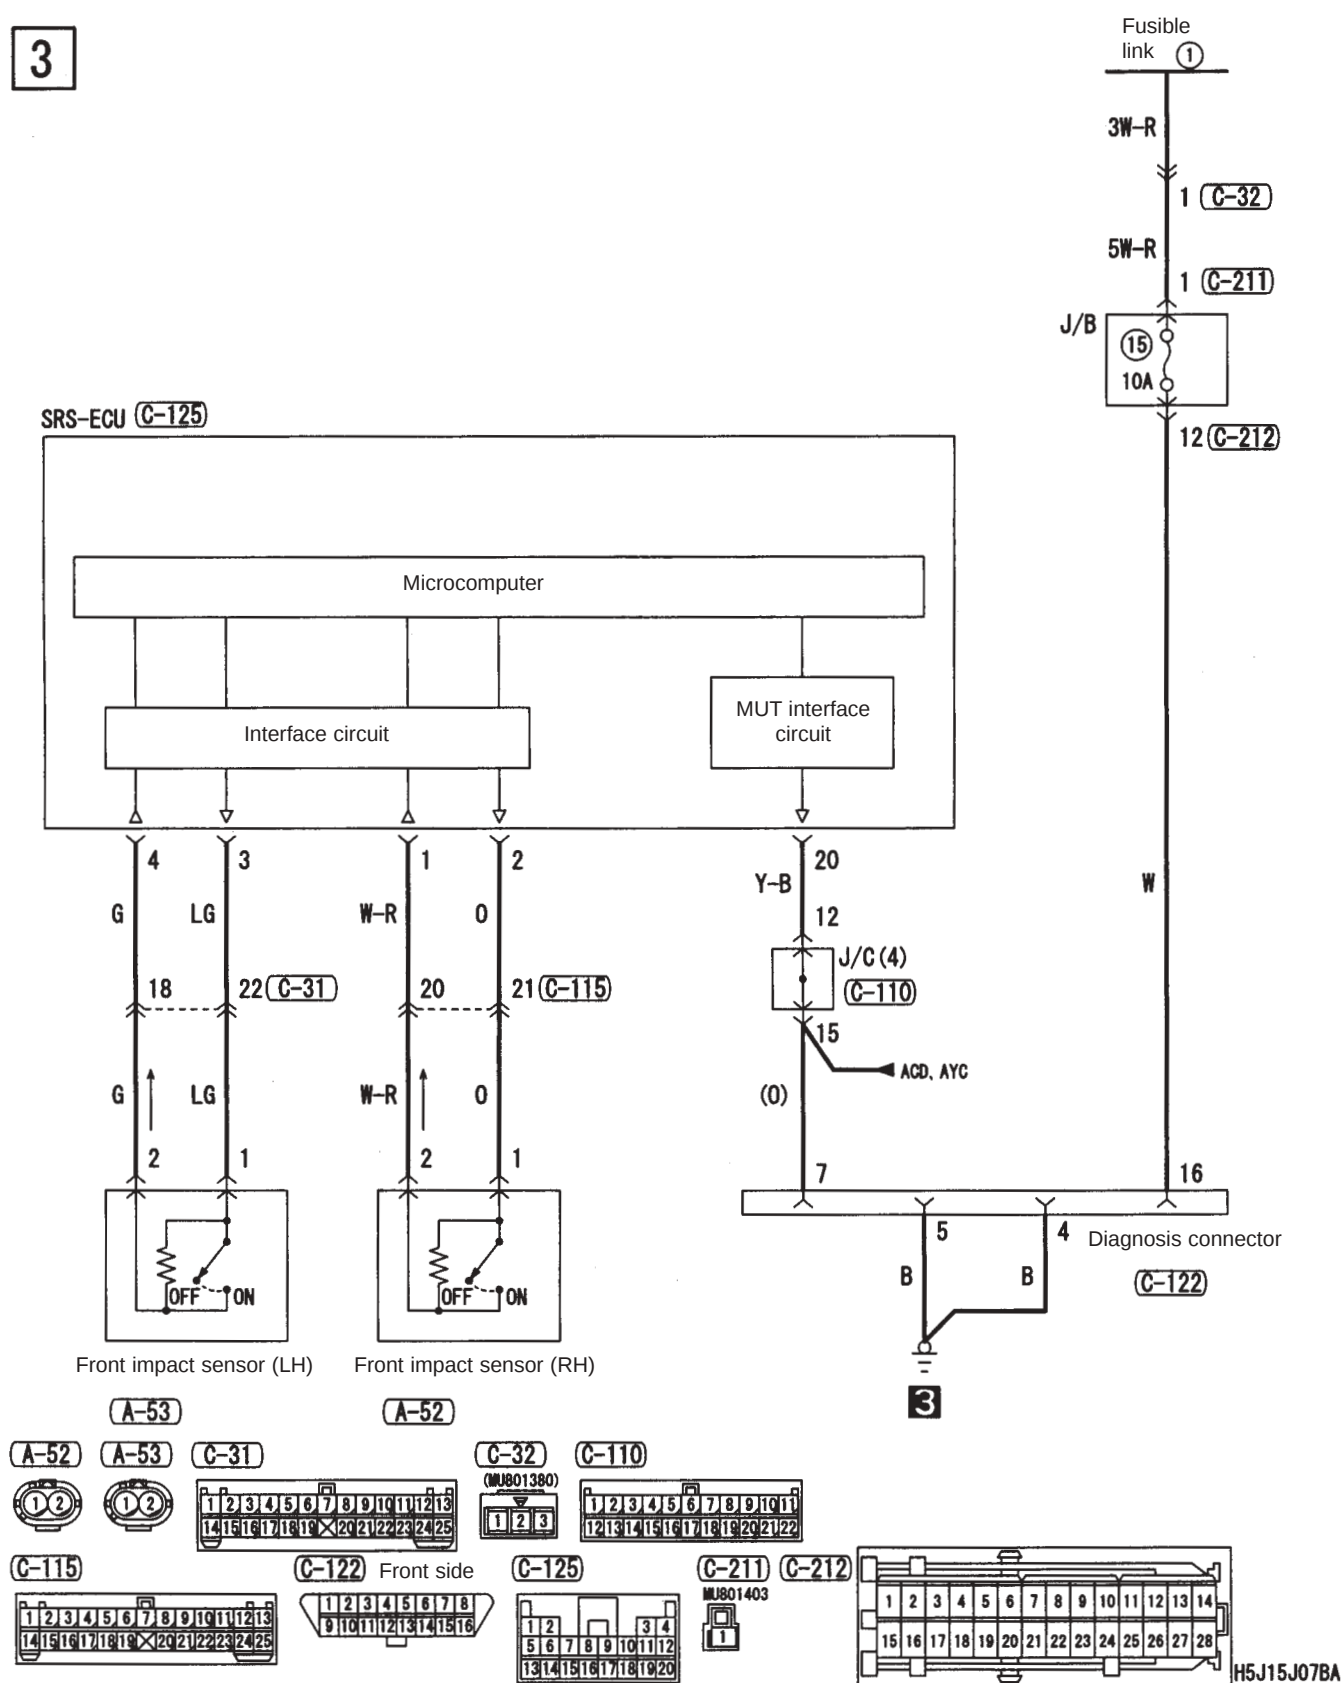


<Notes>

SRS airbags, seatbelt pre-tensioners (vehicle with front passenger airbag)

M3030009800316

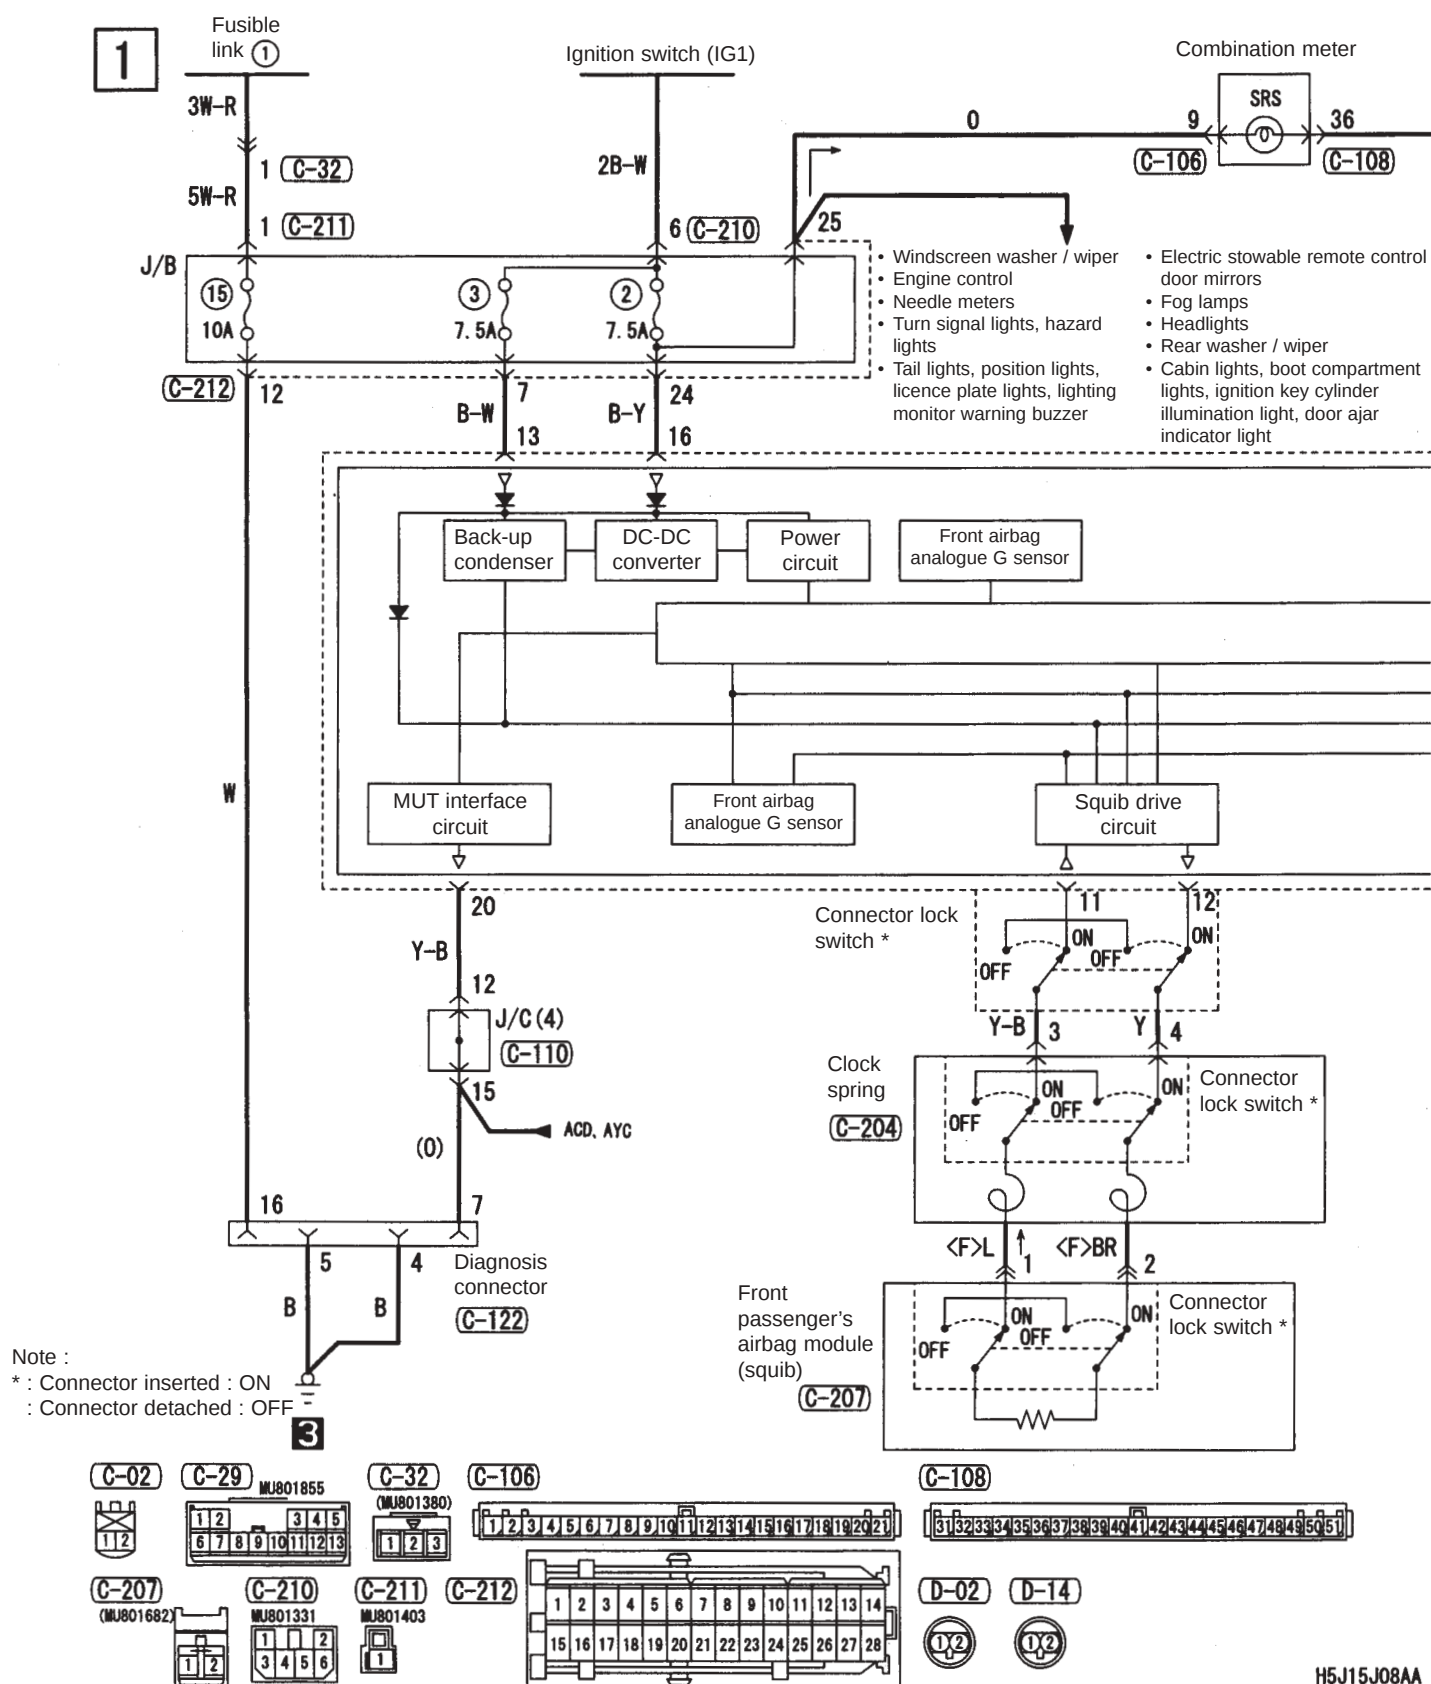



2

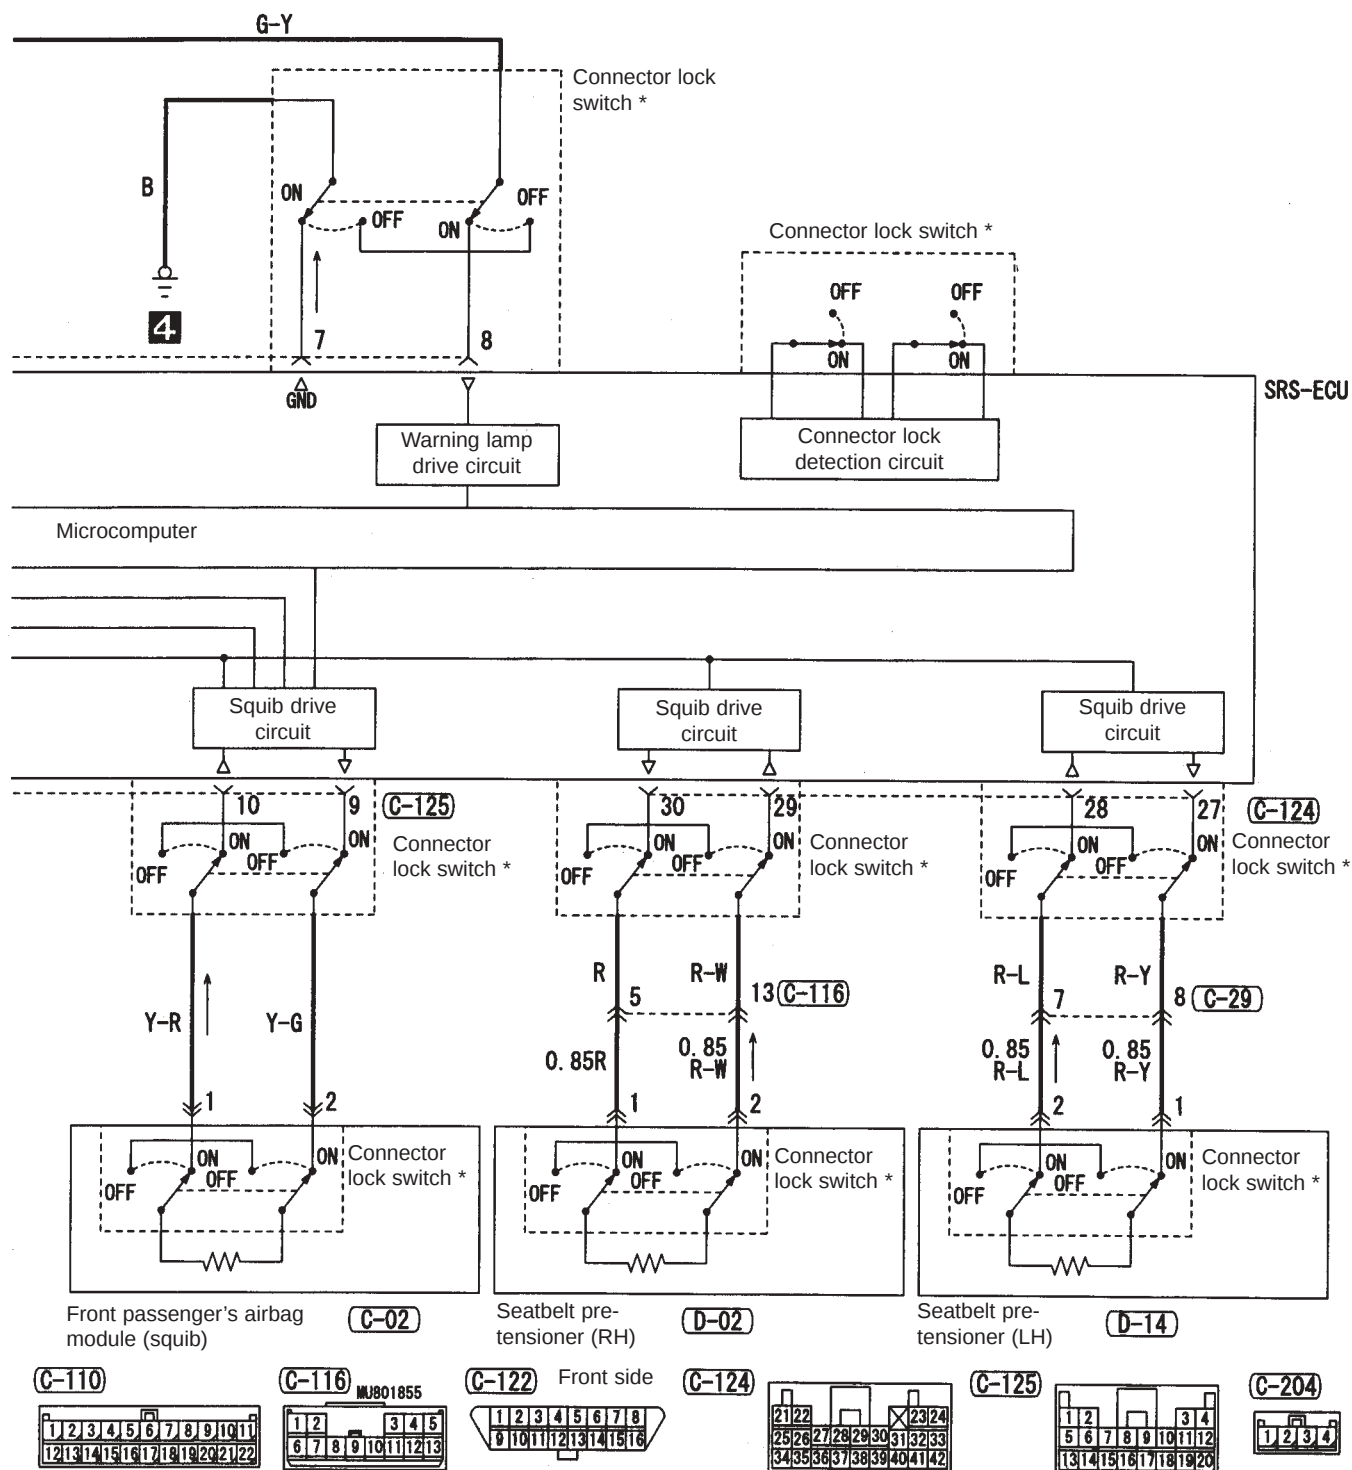


Sunroofs

M3030009900335

1

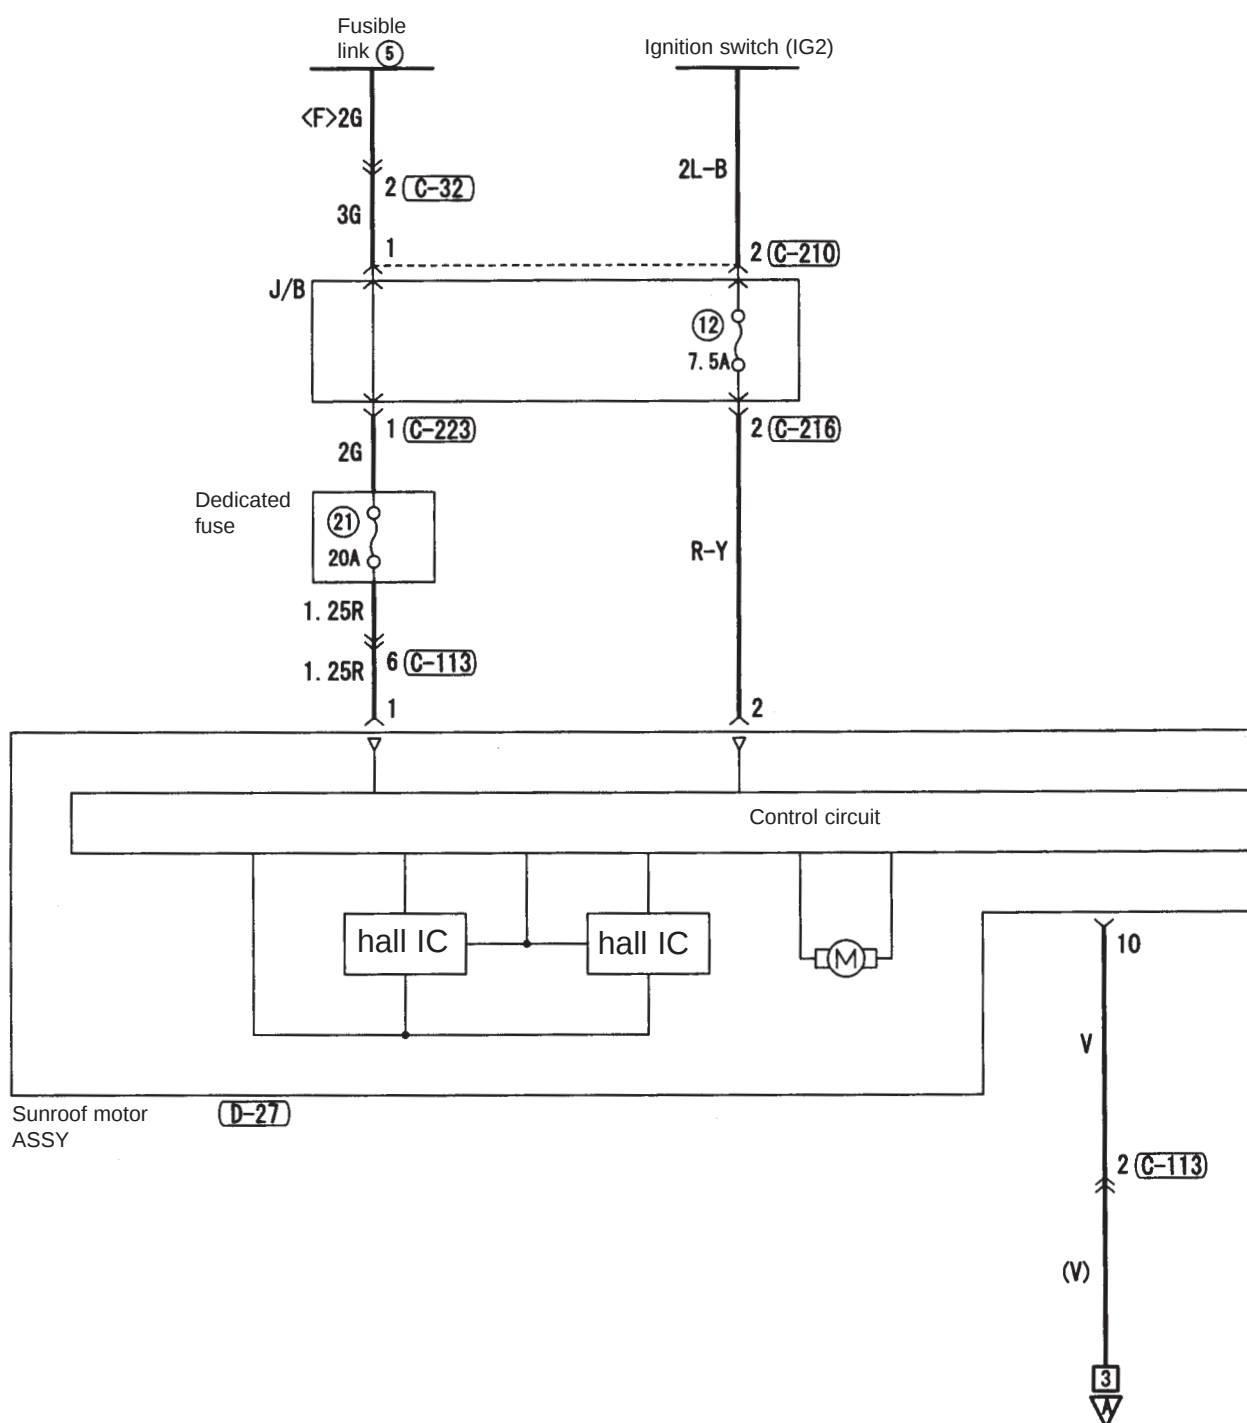


2

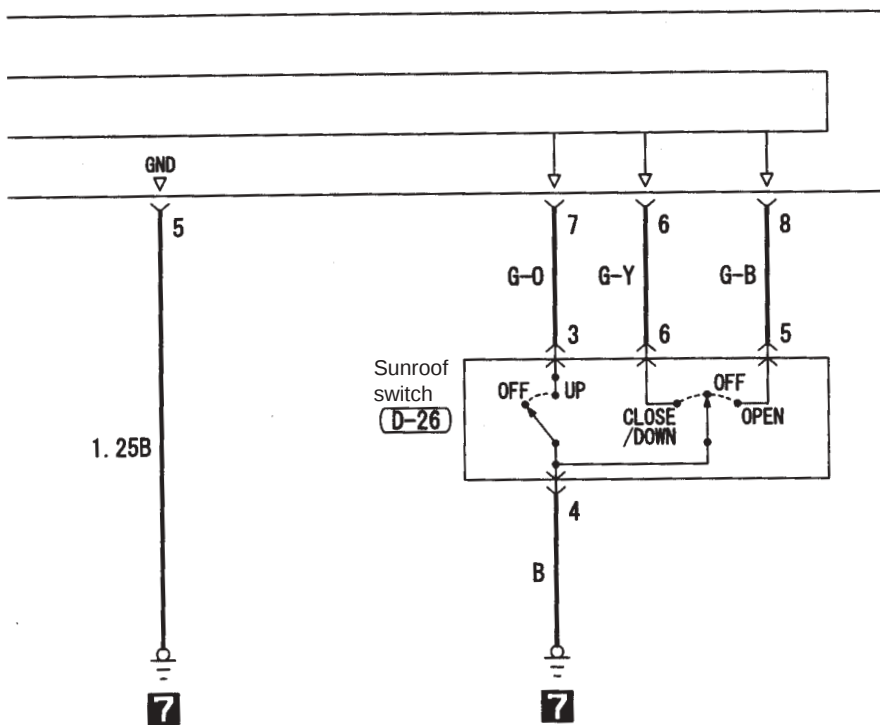

Sunroof (cont'd)


3

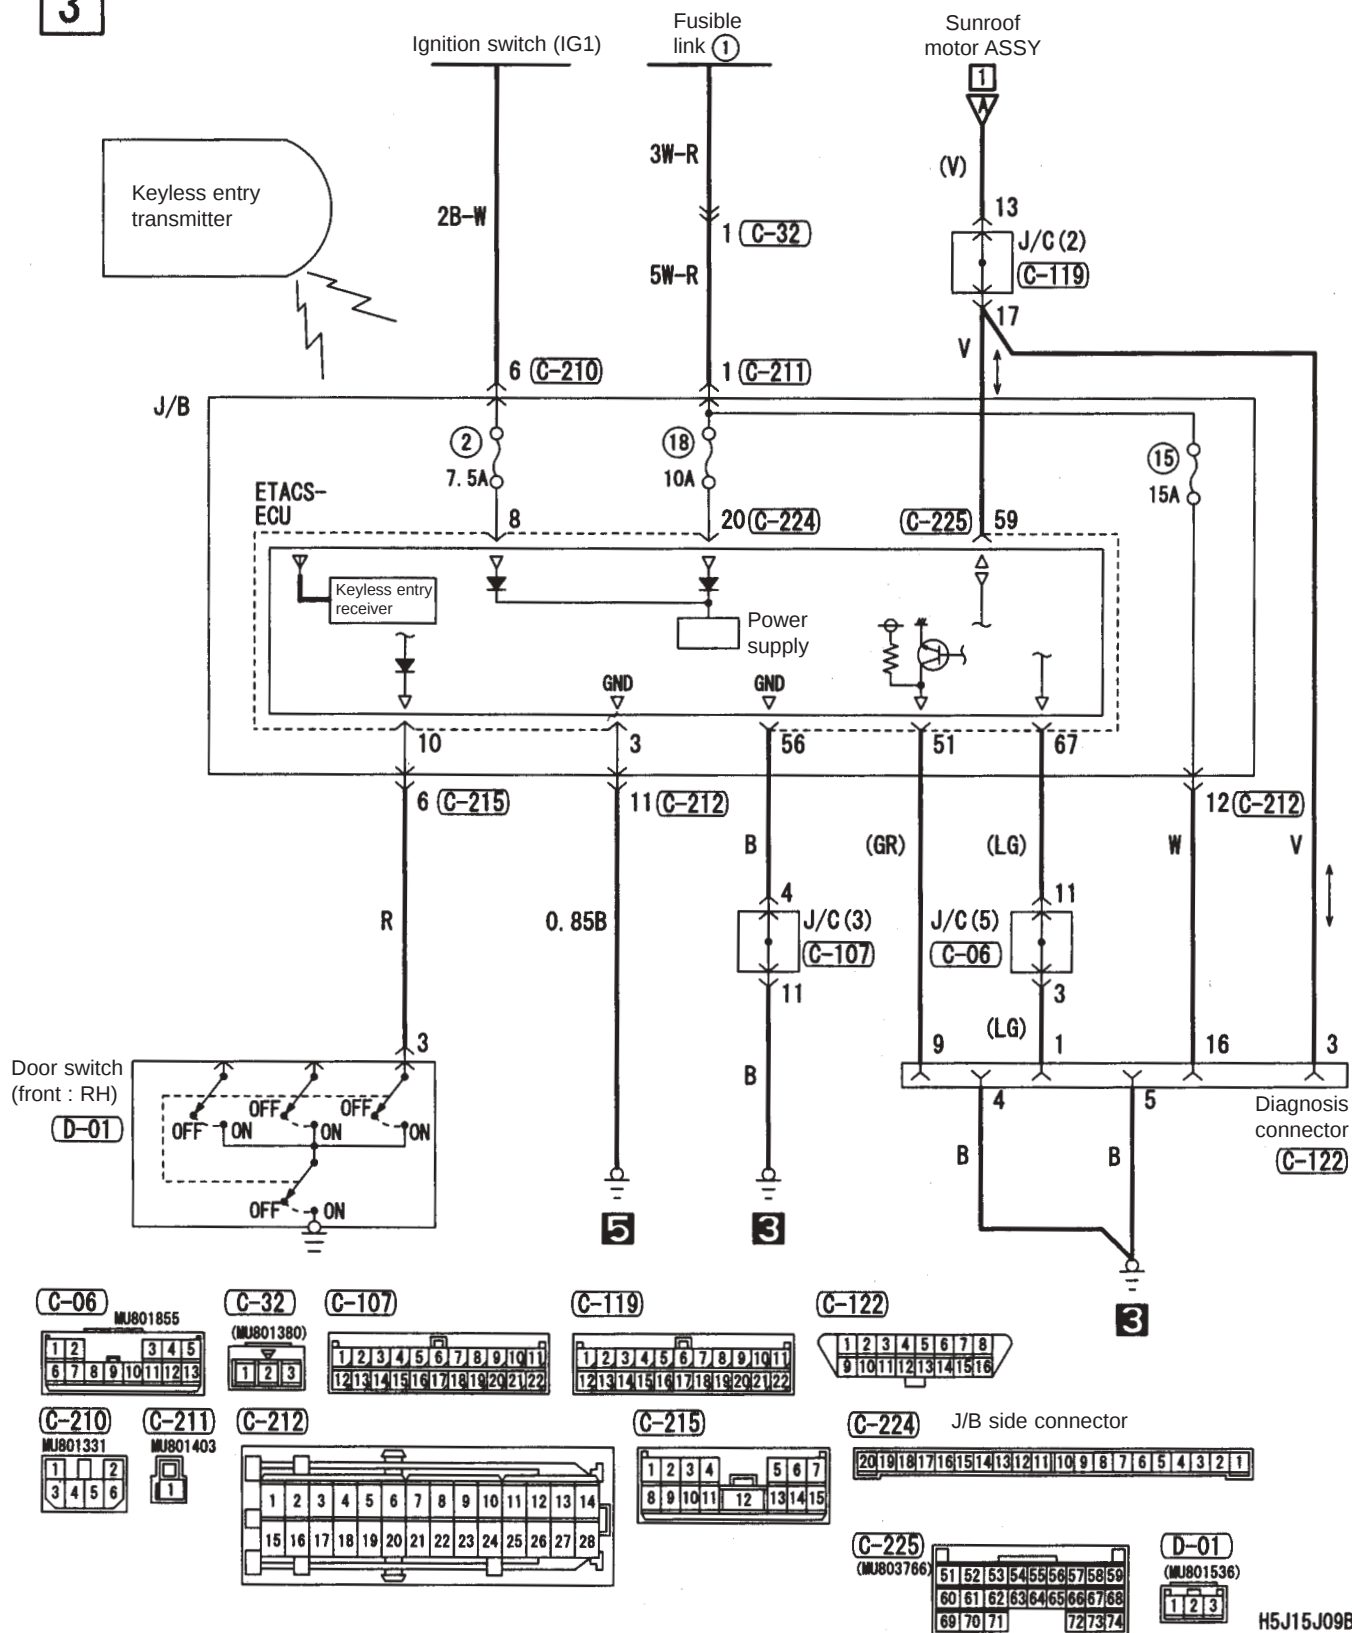

Ignition key reminder buzzer


M3030011300404

1

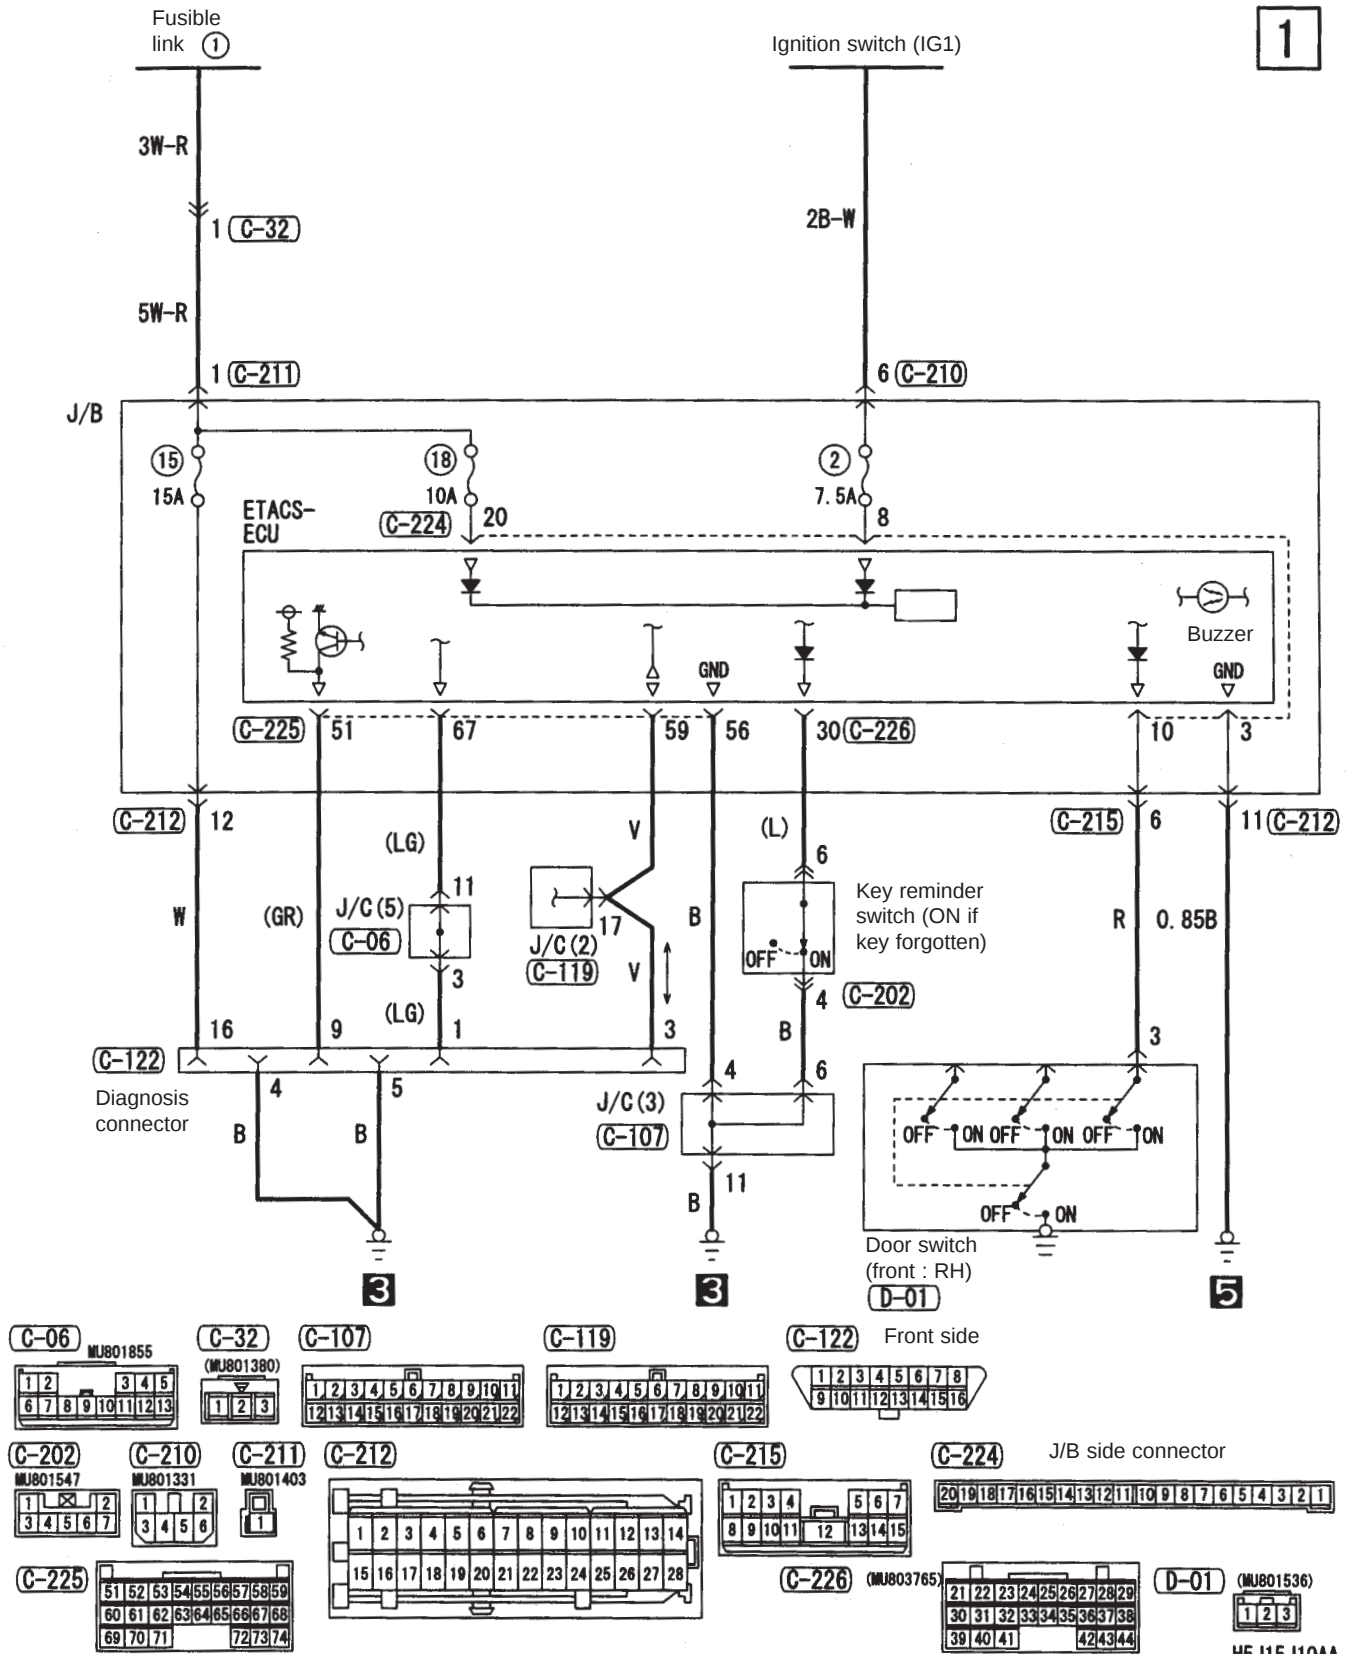


Intercooler water spray

M3030018900085

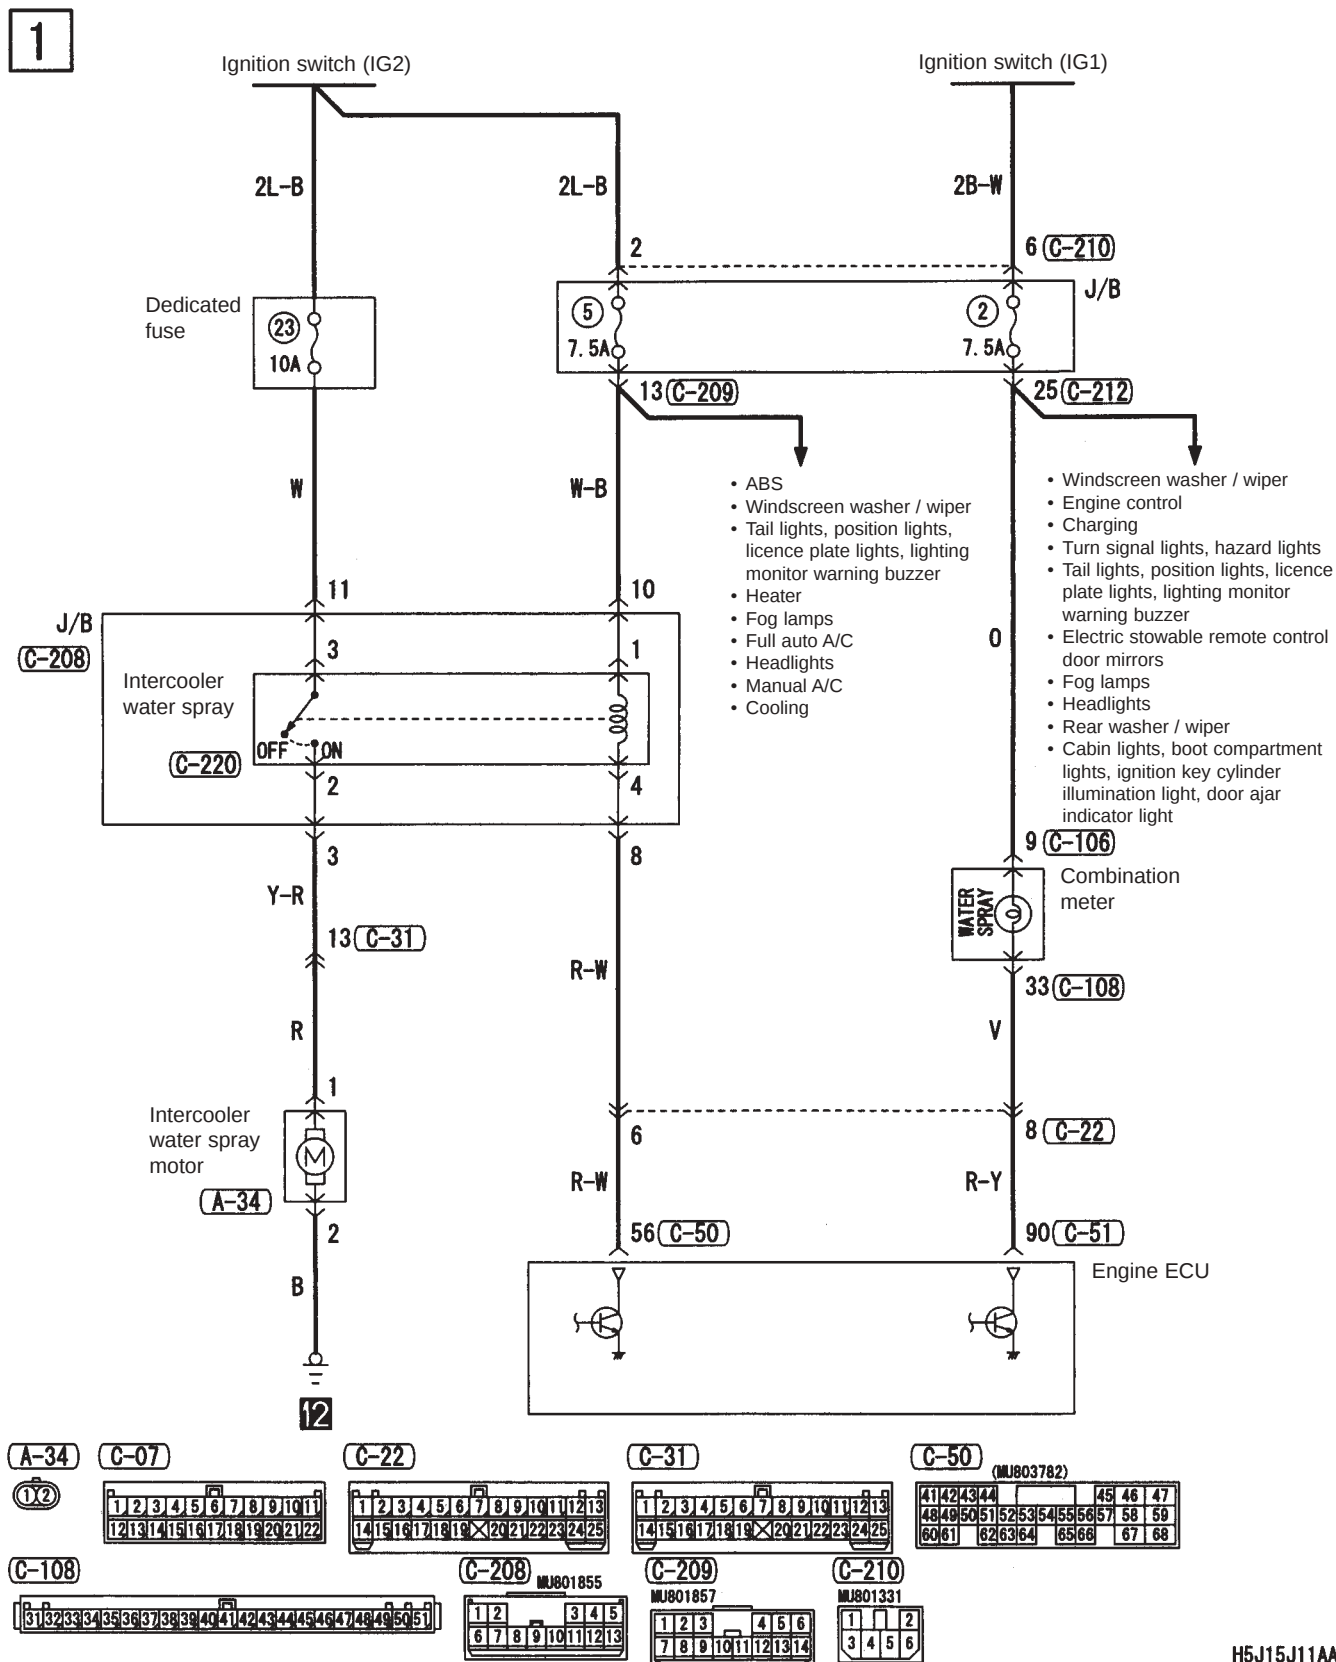

H5J15J11AA


2

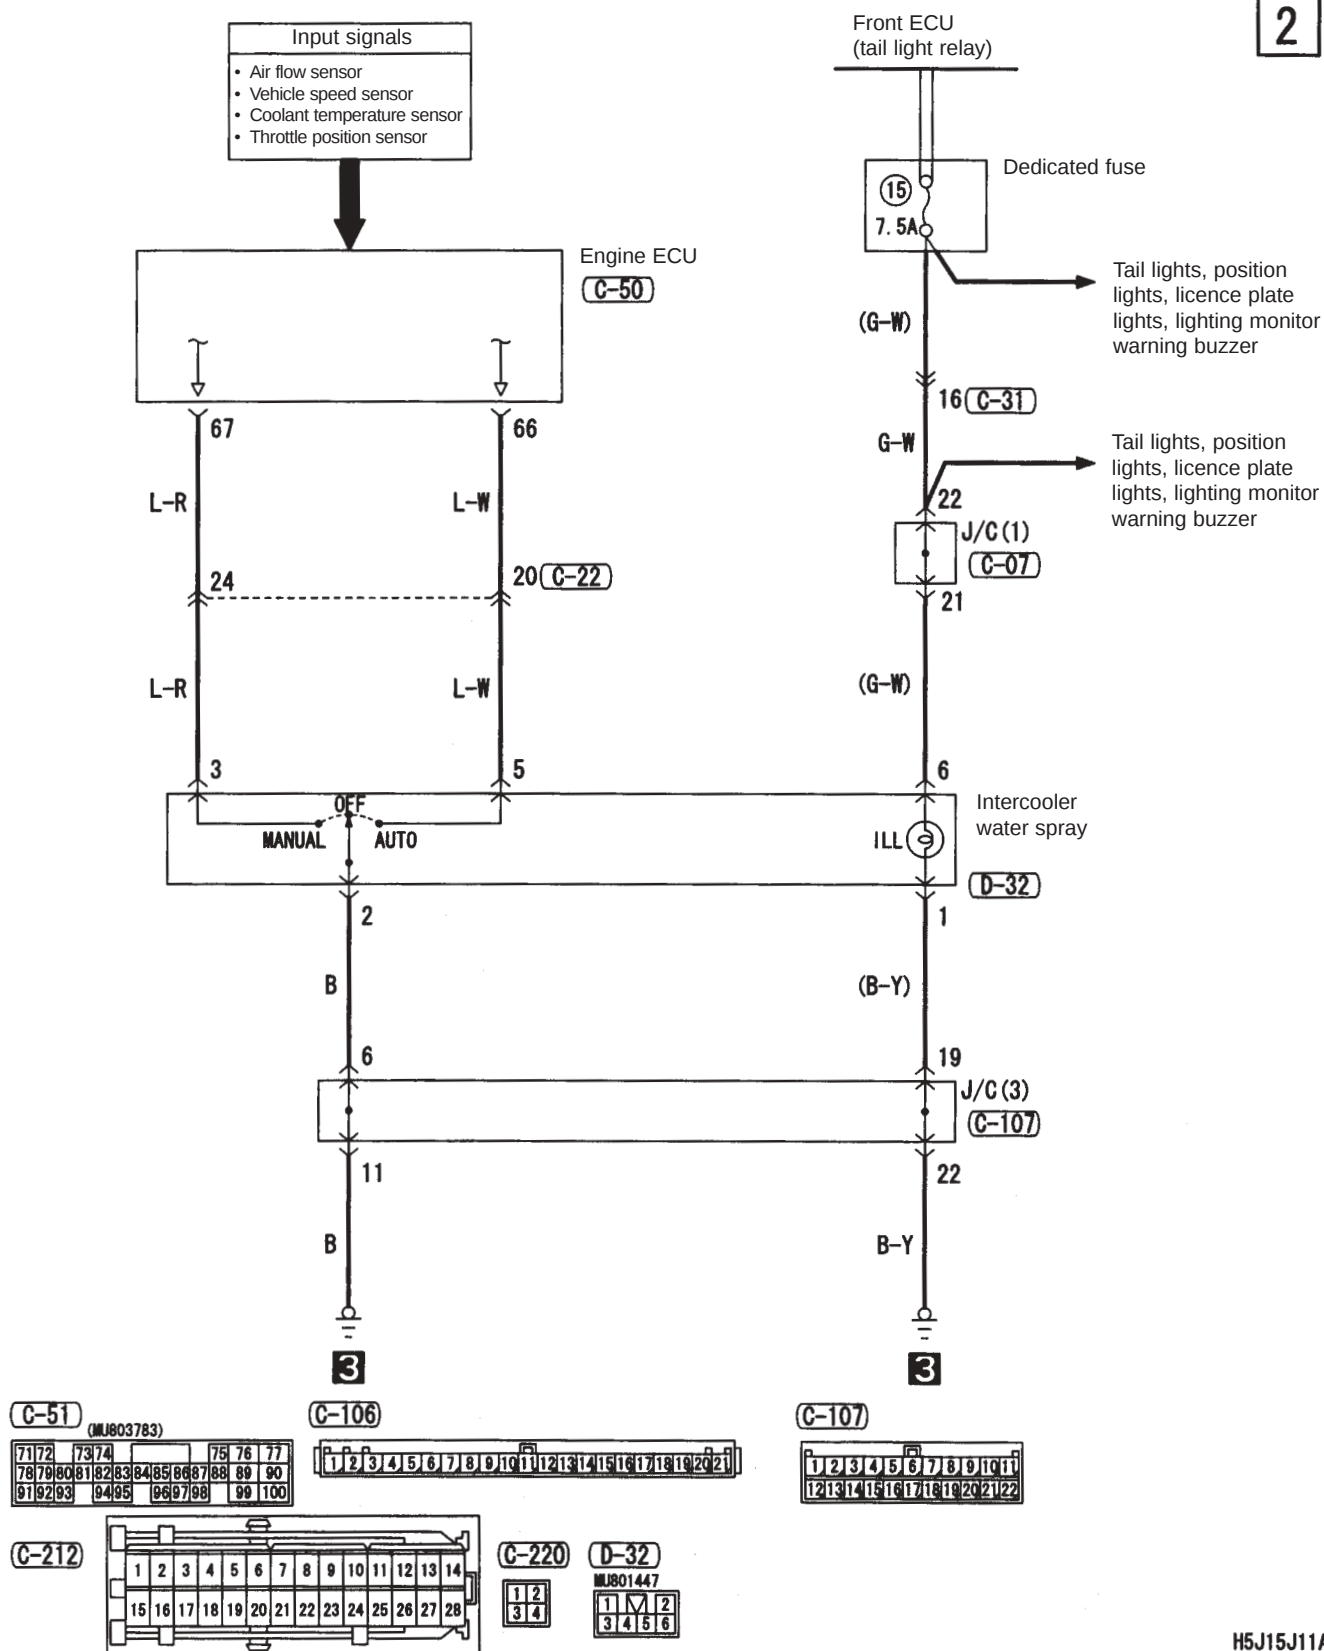

Engine Immobiliser System

M3030018600064


1

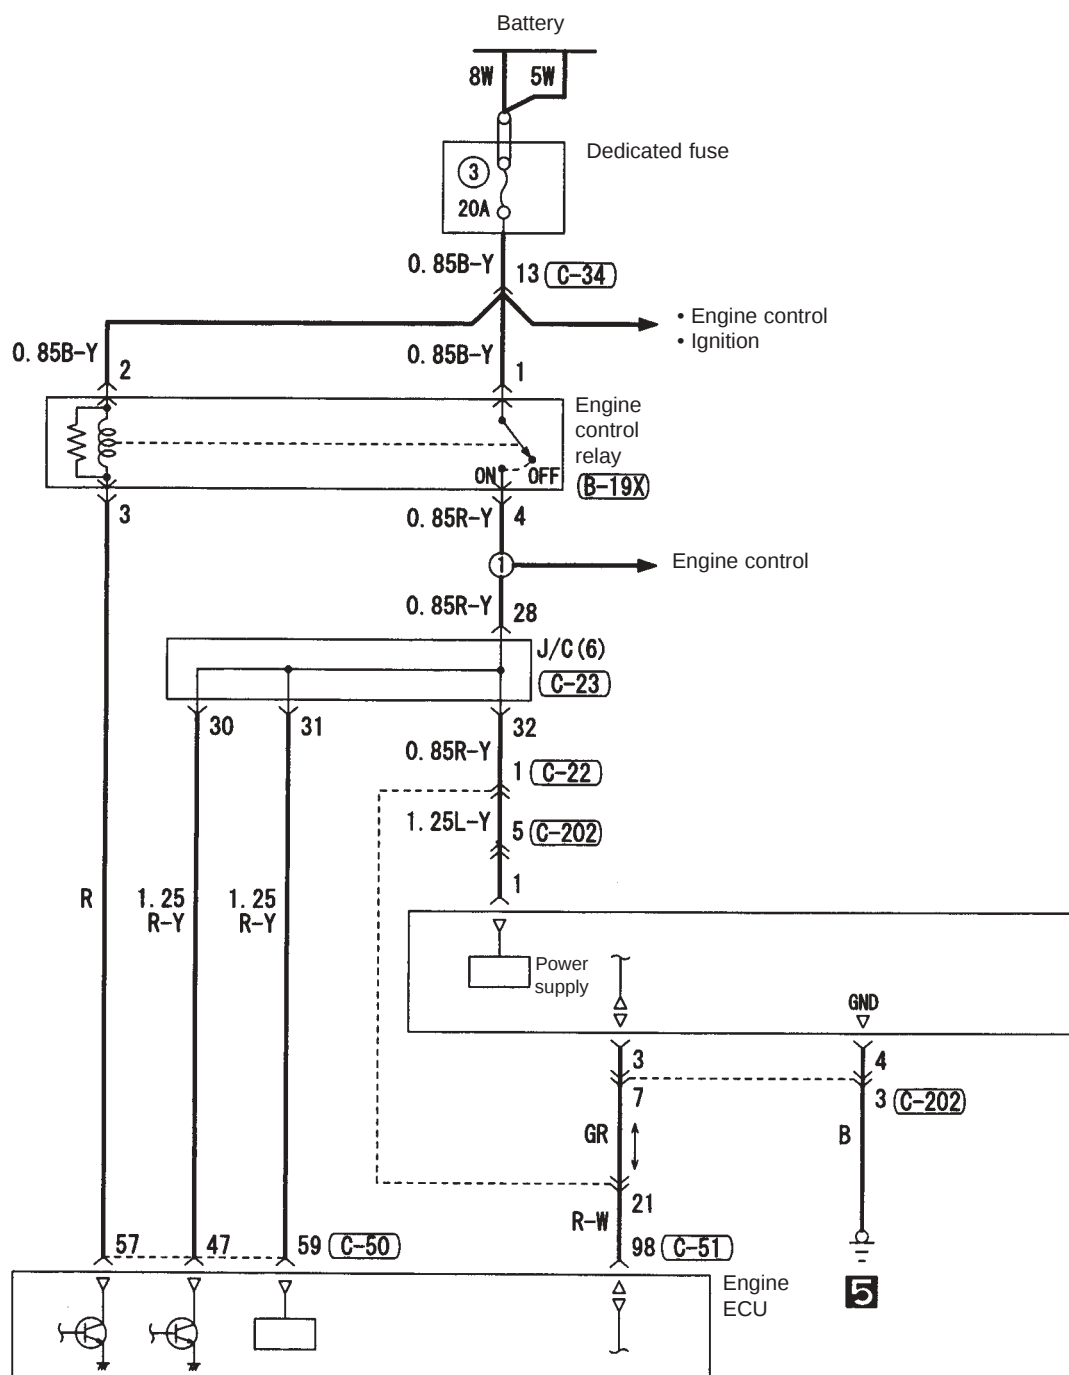

B-19X



C-22



C-23



C-122



C-202



(C-202-



C-211




C-212



C-32



2

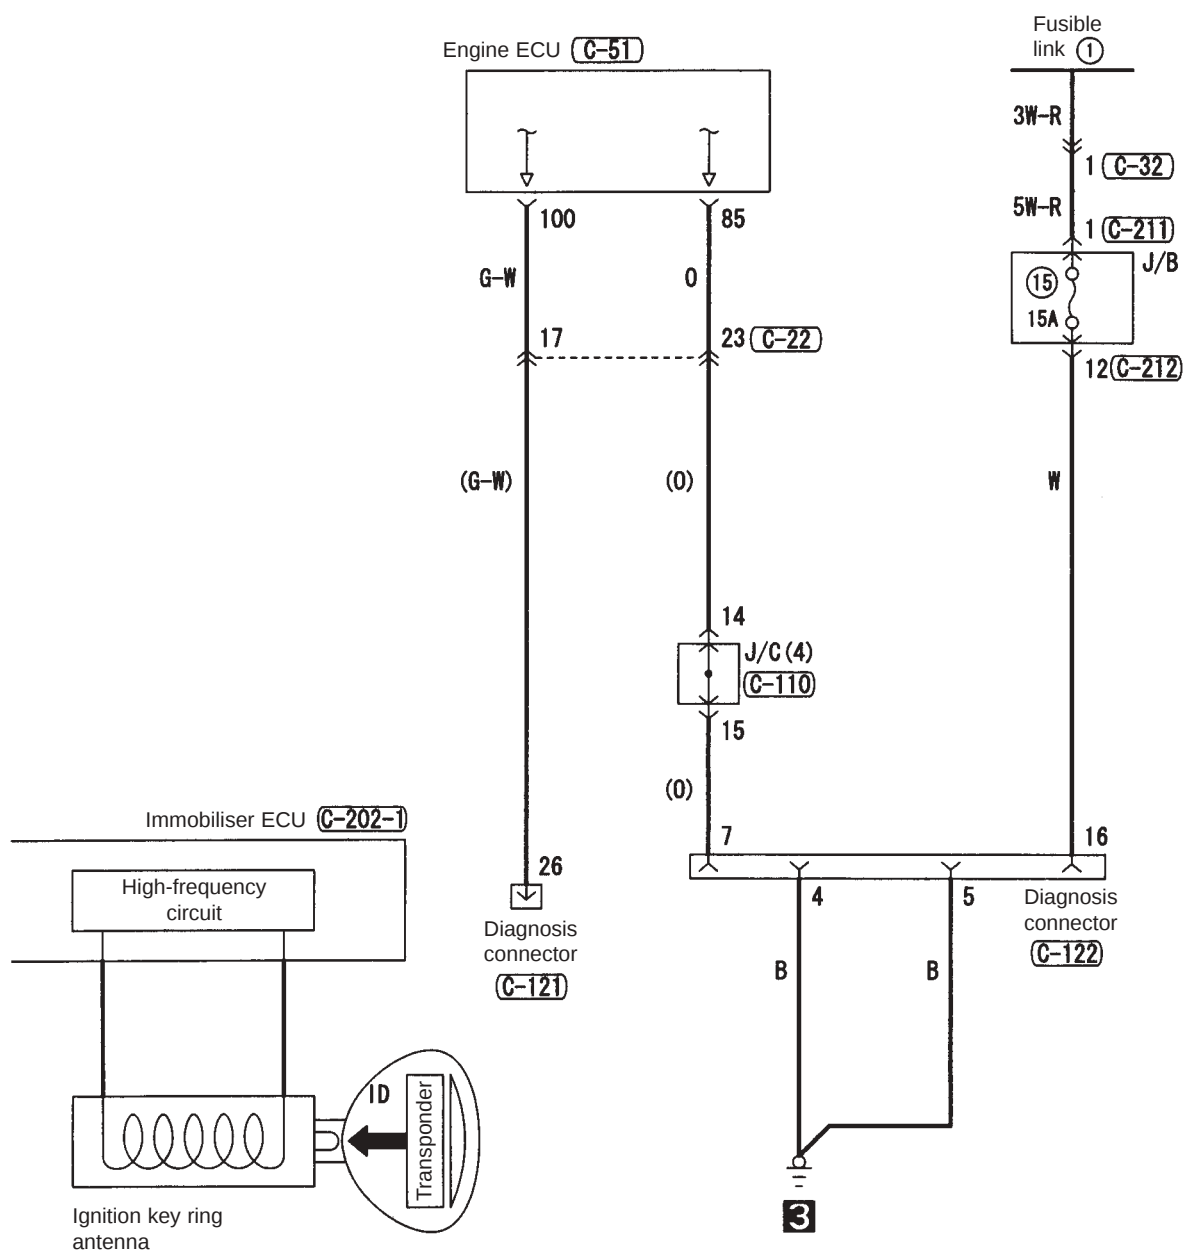

C-34

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

C-50

(MU803782)

41	42	43	44		45	46	47
48	49	50	51	52	53	54	55
56	57	58	59				
60	61	62	63	64	65	66	67
68							

C-51

(MU803783)

71	72	73	74		75	76	77
78	79	80	81	82	83	84	85
86	87	88	89	90			
91	92	93	94	95	96	97	98
99	100						

C-110

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22		





C-121

25	24		23	22	21
32	31	30	29	28	27
26					

Security Alarm


M3030020500268

1

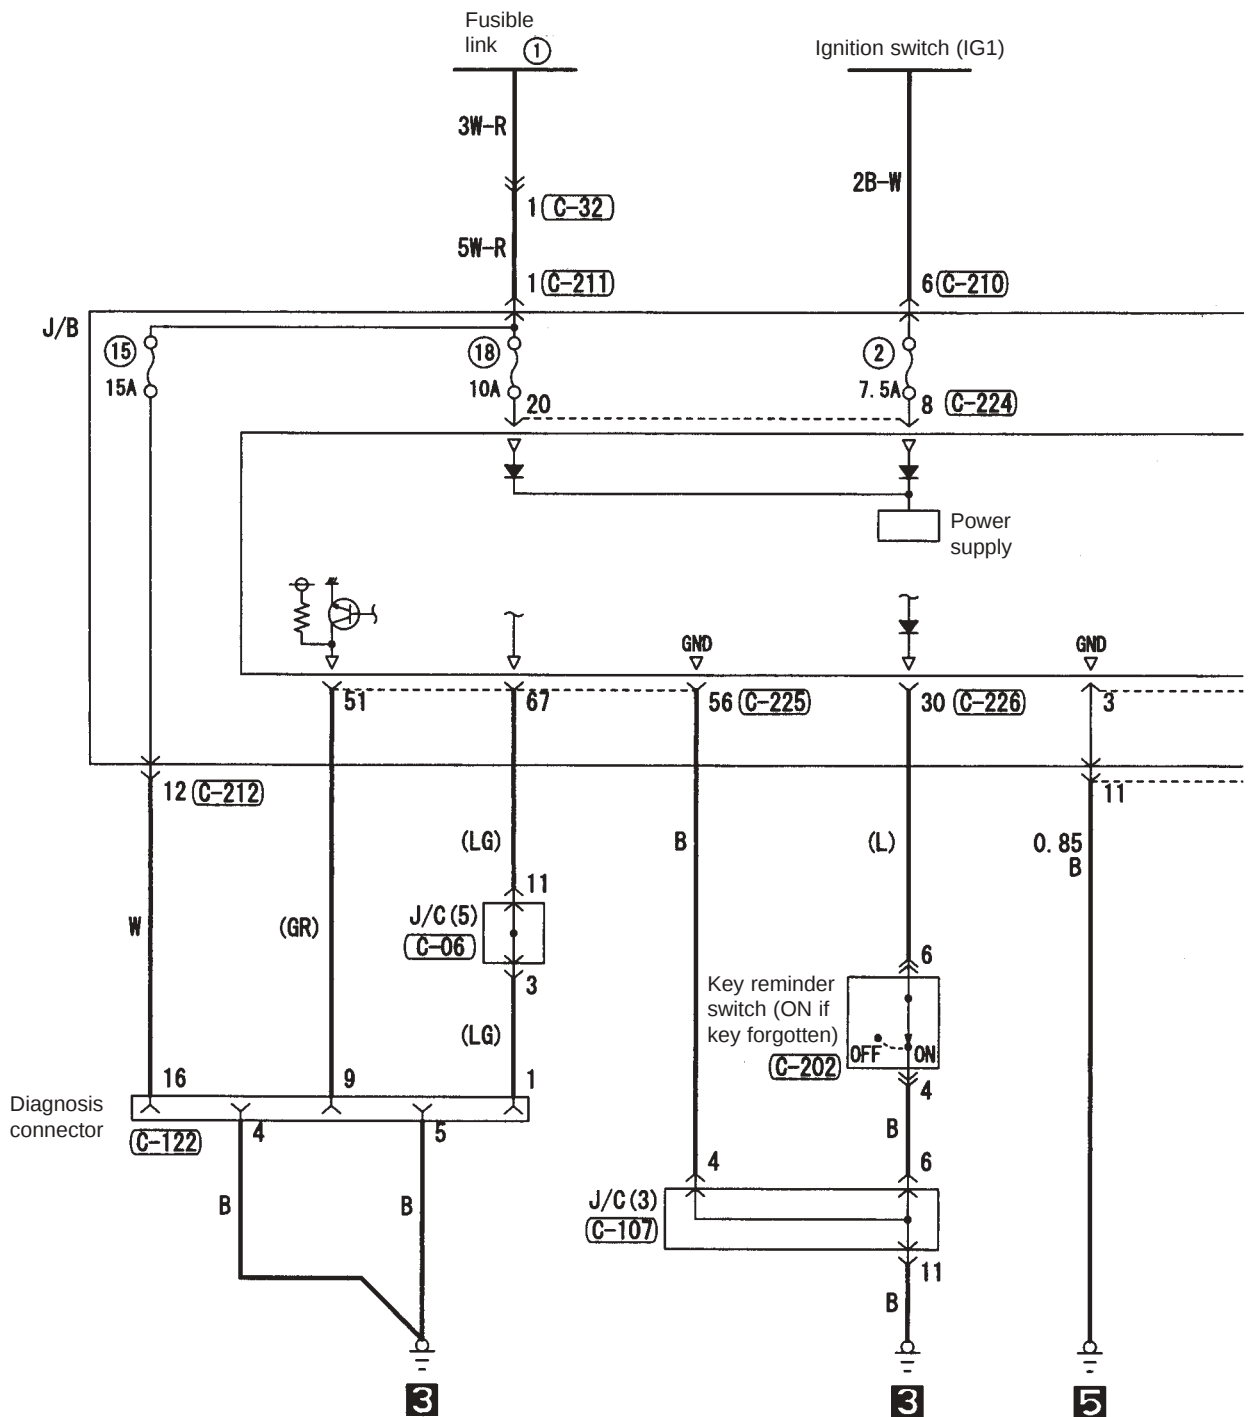



H5J15J13AA

2



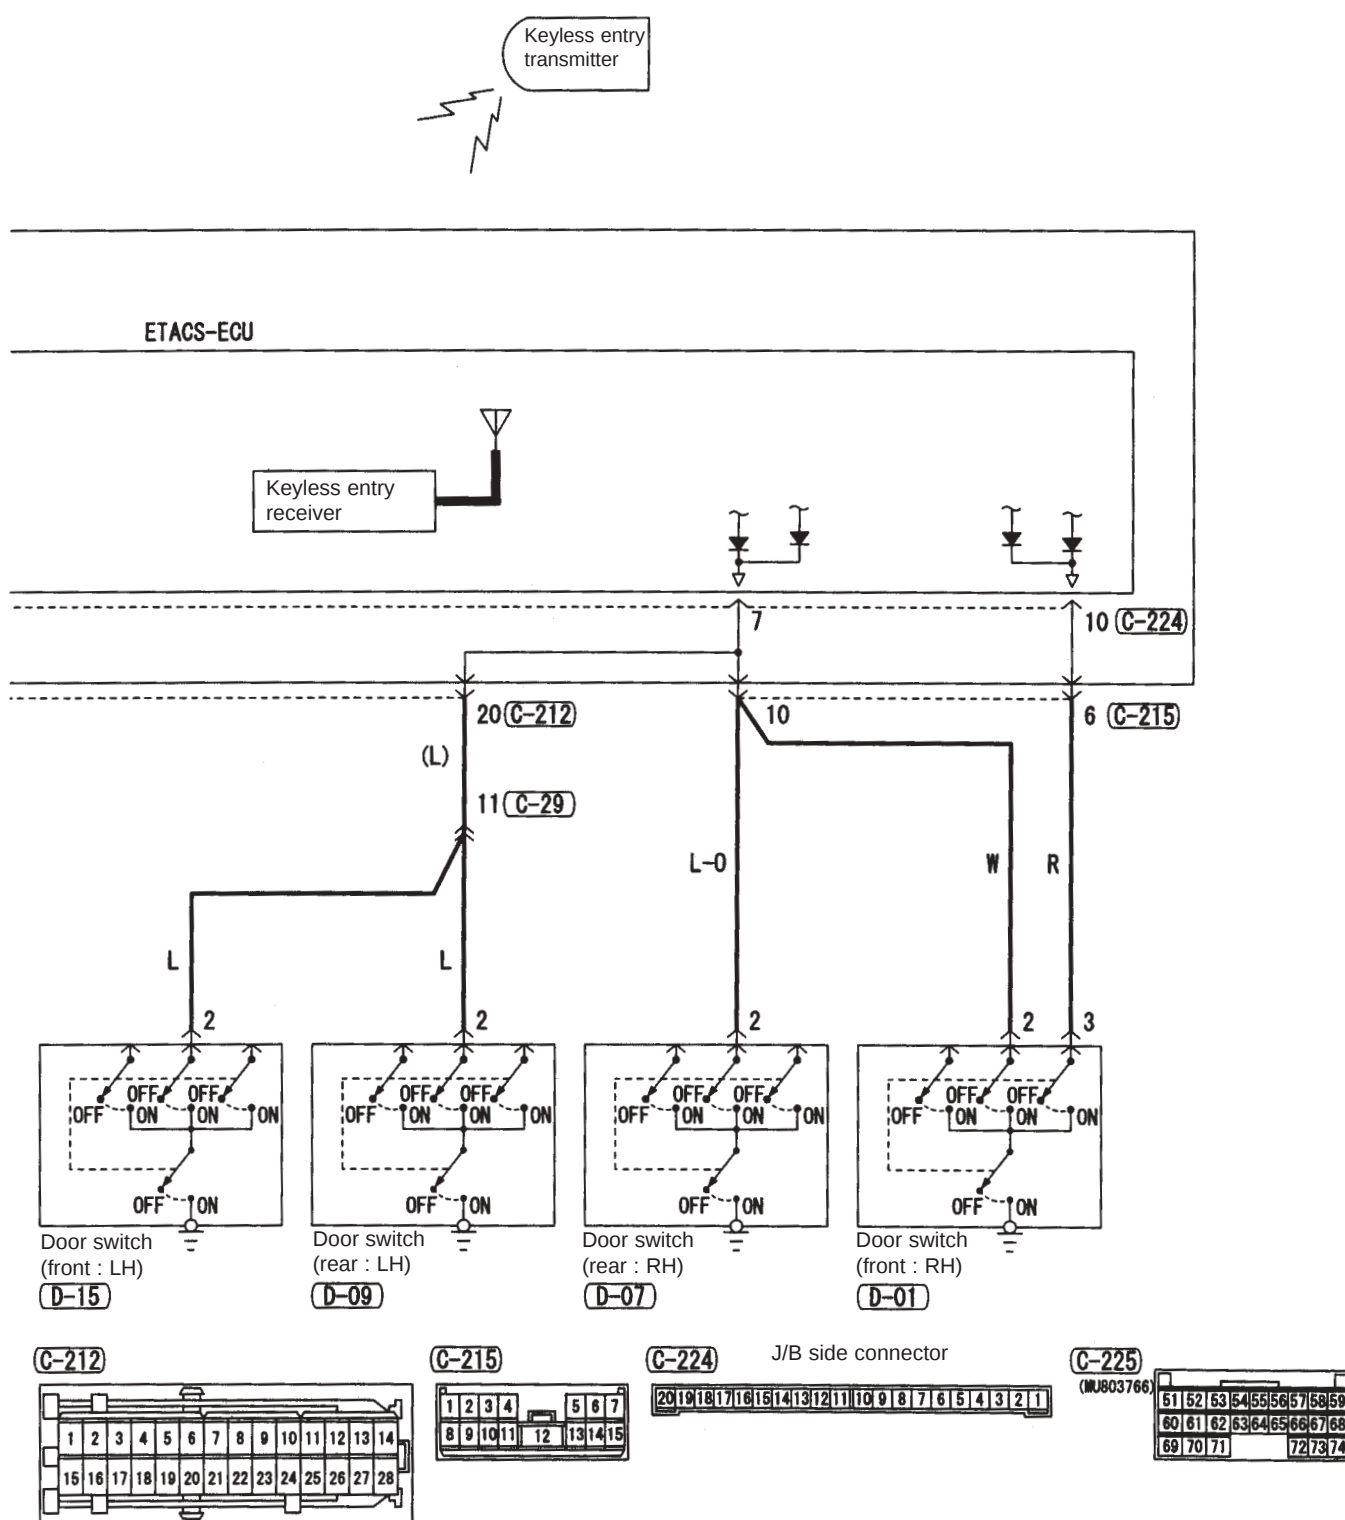


Security Alarm (cont'd)


3

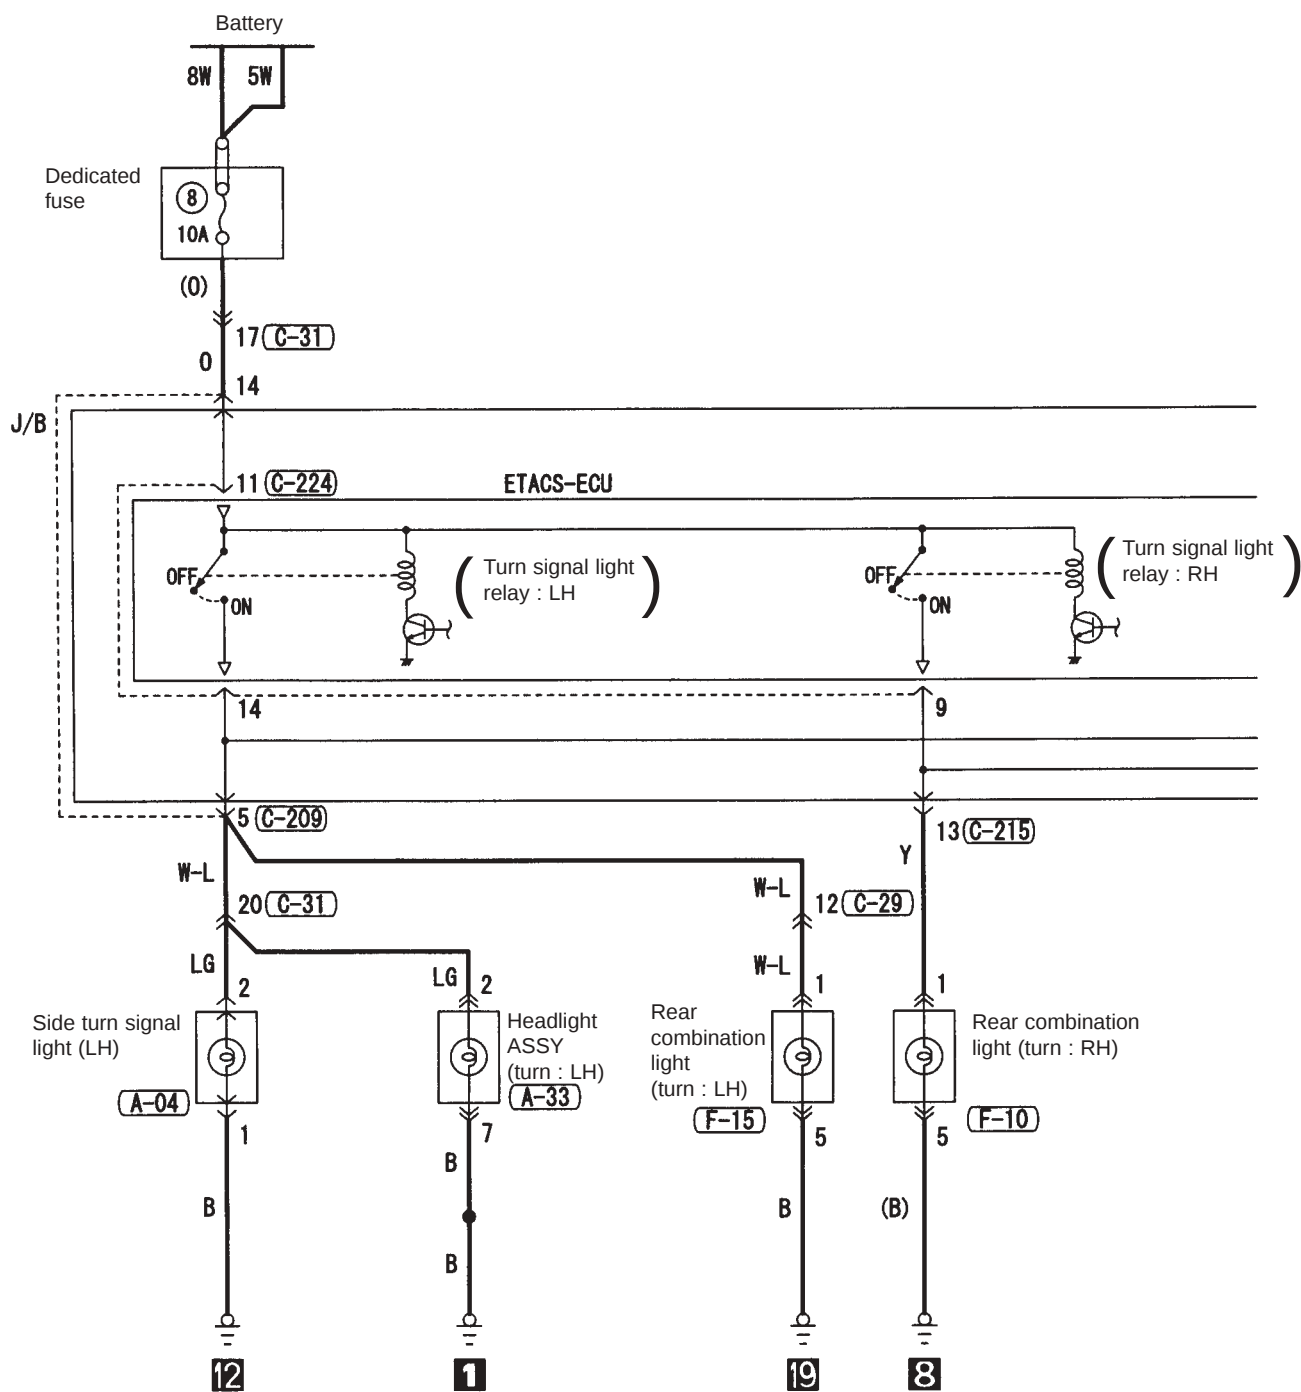

C-212

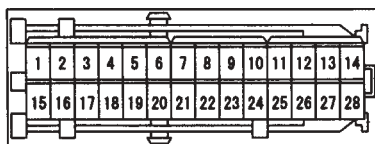

C-215




C-224

J/B side connector



H5J15J13BA

4

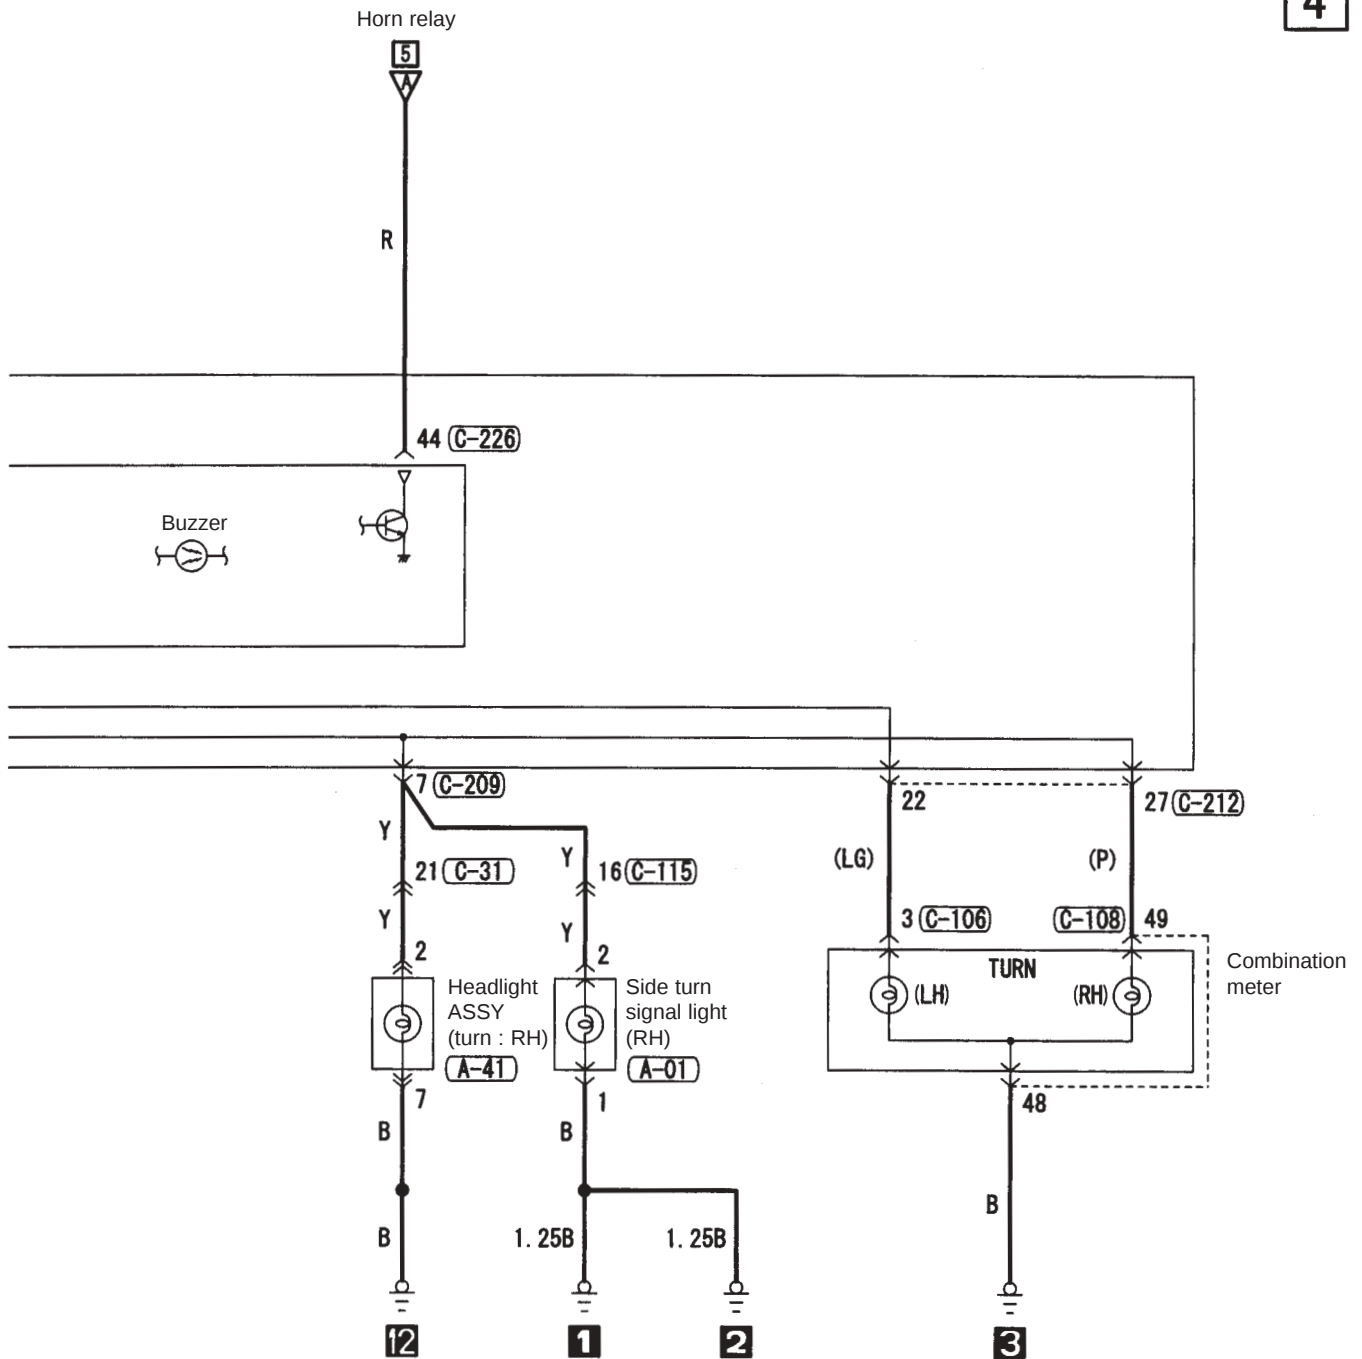

C-106

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----

C-108

31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

C-115

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	

C-226

(MU803765)

21	22	23	24	25	26	27	28	29
30	31	32	33	34	35	36	37	38
39	40	41		42	43	44		

F-10



1	2	3
4	5	6

F-15

1	2	3
4	5	6


Security Alarm (cont'd)

5

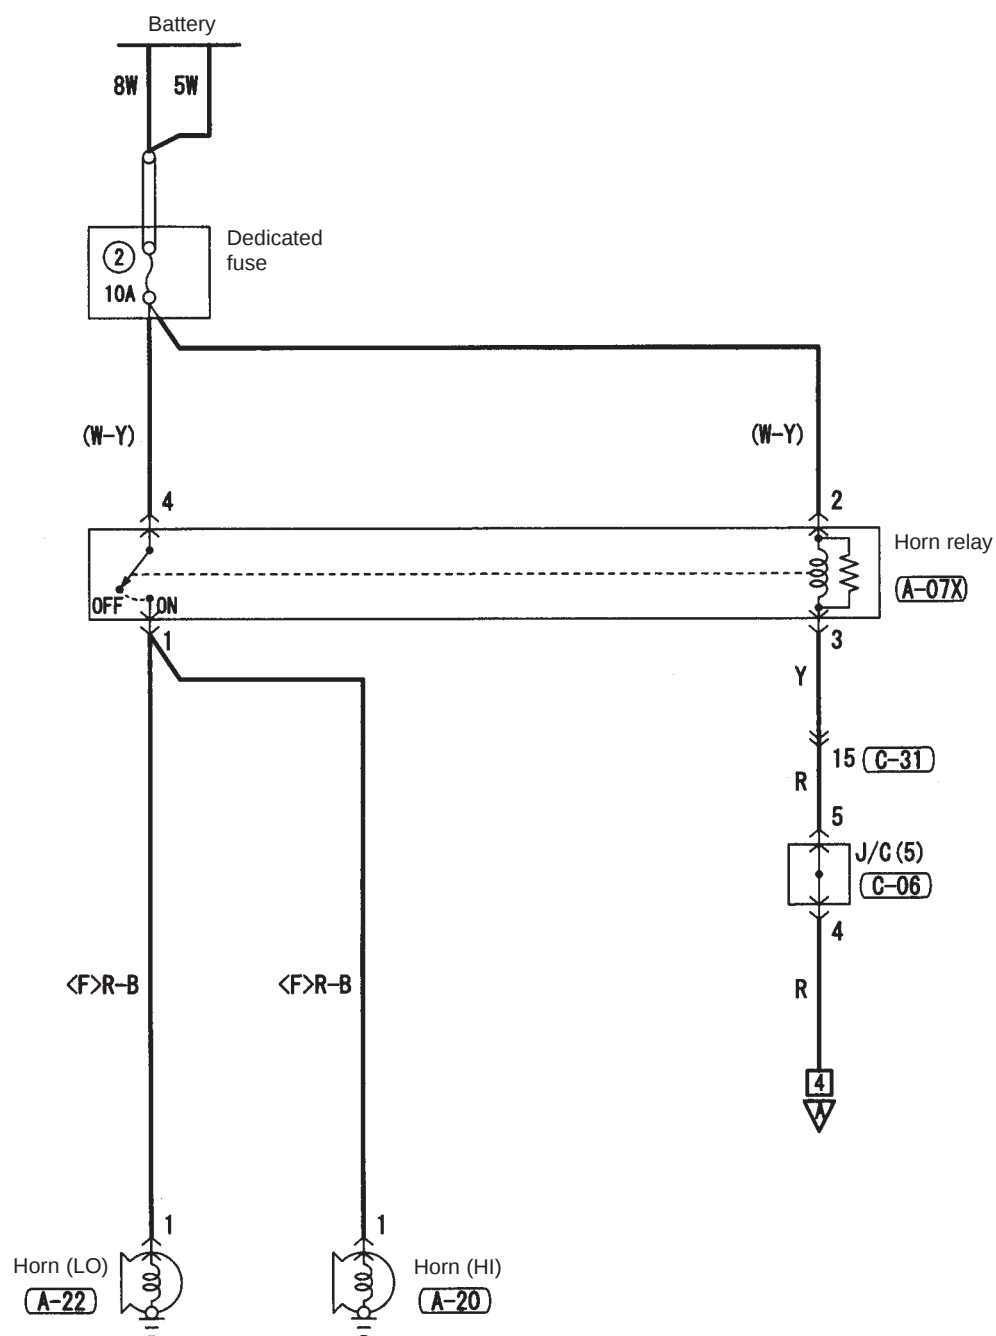

Spare connector for fog lamps

M3030001900278

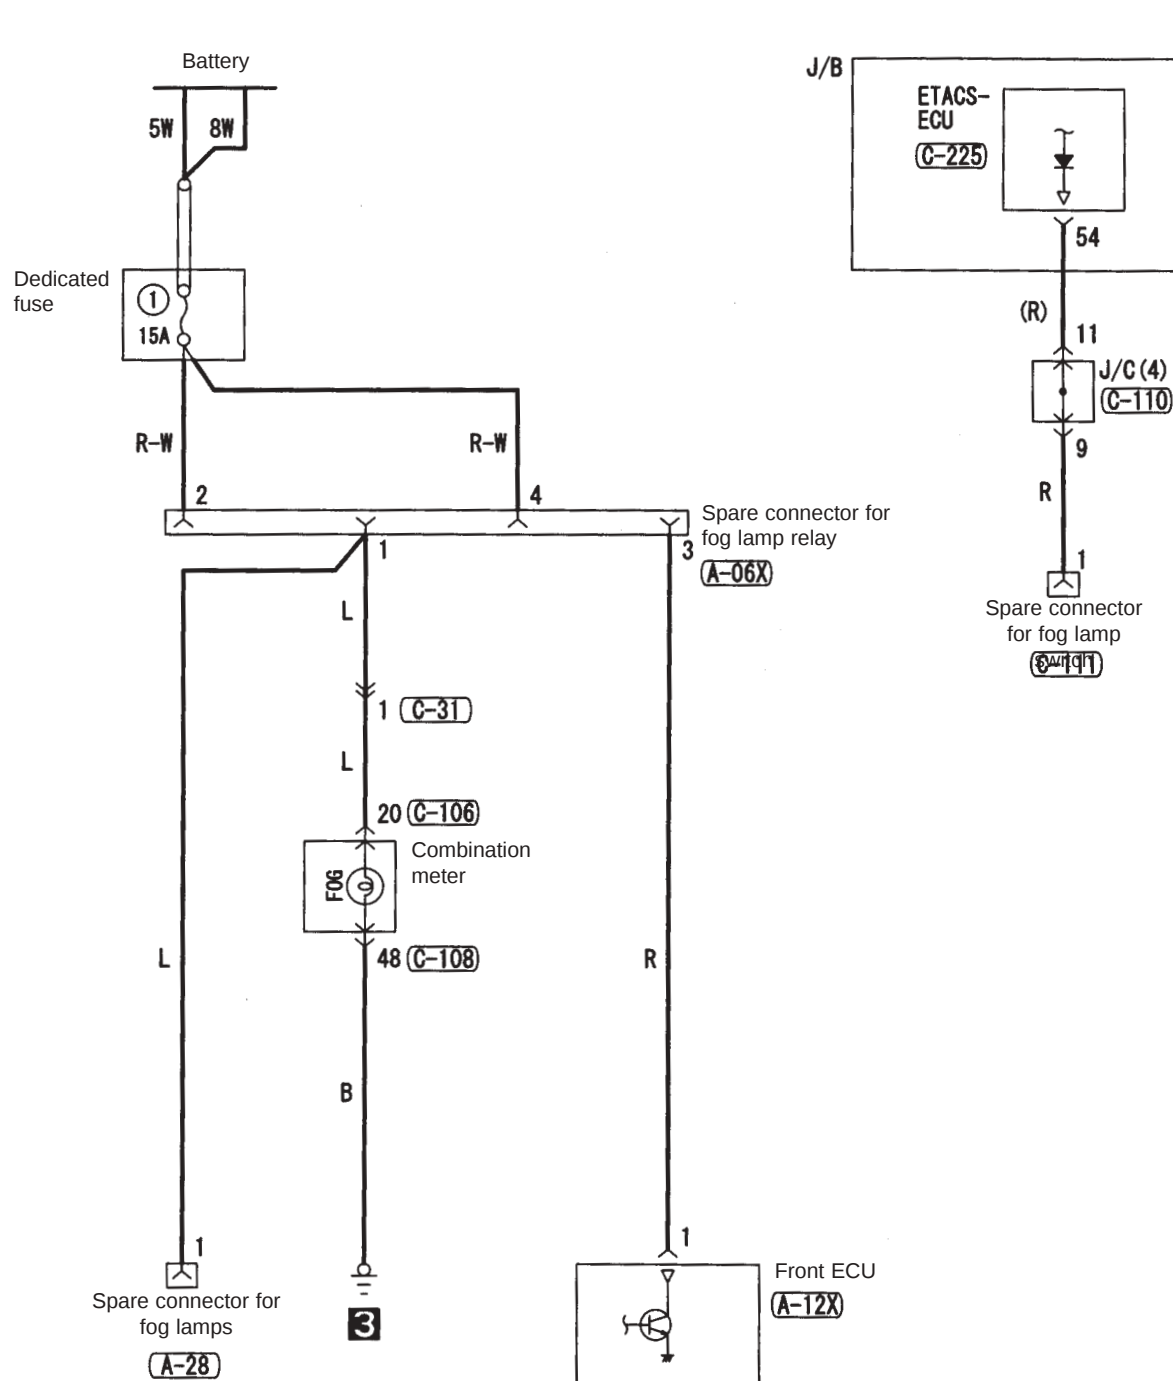

A-06X

A-12X

A-28

C-31

C-106

2	1
4	3

1	2	3	4	5	6	7	8	9	10	11
---	---	---	---	---	---	---	---	---	----	----

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----

C-108

C-110

C-111

C-225

31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

51	52	53	54	55	56	57	58	59
60	61	62	63	64	65	66	67	68
69	70	71	72	73	74			

H5J15J14AA

Generic spare connector

M3030024600201

